ZyWALL 2WG

Internet Security Appliance

User's Guide

Version 4.03
12/2007
Edition 1



www.zyxel.com

About This User's Guide

Intended Audience

This manual is intended for people who want to configure the ZyWALL using the web configurator or System Management Terminal (SMT). You should have at least a basic knowledge of TCP/IP networking concepts and topology.

Related Documentation

- Quick Start Guide
  The Quick Start Guide is designed to help you get up and running right away. It contains information on setting up your network and configuring for Internet access.
- Web Configurator Online Help
  Embedded web help for descriptions of individual screens and supplementary information.
- Supporting Disk
  Refer to the included CD for support documents.
- ZyXEL Web Site
  Please refer to www.zyxel.com for additional support documentation and product certifications.

User Guide Feedback

Help us help you. Send all User Guide-related comments, questions or suggestions for improvement to the following address, or use e-mail instead. Thank you!

The Technical Writing Team,
ZyXEL Communications Corp.,
6 Innovation Road II,
Science-Based Industrial Park,
Hsinchu, 300, Taiwan.

E-mail: techwriters@zyxel.com.tw

Document Conventions

Warnings and Notes

These are how warnings and notes are shown in this User's Guide.



Warnings tell you about things that could harm you or your device.




Notes tell you other important information (for example, other things you may need to configure or helpful tips) or recommendations.

Syntax Conventions

- The ZyWALL 2WG may be referred to as the "ZyWALL", the "device" or the "system" in this User's Guide.
- Product labels, screen names, field labels and field choices are all in **bold** font.
- A key stroke is denoted by square brackets and uppercase text, for example, [ENTER] means the "enter" or "return" key on your keyboard.
- "Enter" means for you to type one or more characters and then press the [ENTER] key. "Select" or "choose" means for you to use one of the predefined choices.
- A right angle bracket (>) within a screen name denotes a mouse click. For example, **Maintenance > Log > Log Setting** means you first click **Maintenance** in the navigation panel, then the **Log** sub menu and finally the **Log Setting** tab to get to that screen.
- Units of measurement may denote the "metric" value or the "scientific" value. For example, "k" for kilo may denote "1000" or "1024", "M" for mega may denote "1000000" or "1048576" and so on.
- "e.g.," is a shorthand for "for instance", and "i.e.," means "that is" or "in other words".

Icons Used in Figures

Figures in this User's Guide may use the following generic icons. The ZyWALL icon is not an exact representation of your device.

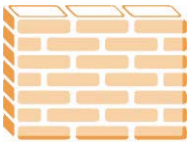ZyWALL 	Computer 	Notebook computer 
Server 	DSLAM 	Firewall 
Telephone 	Switch 	Router 

Safety Warnings



For your safety, be sure to read and follow all warning notices and instructions.

- Do NOT use this product near water, for example, in a wet basement or near a swimming pool.
- Do NOT expose your device to dampness, dust or corrosive liquids.
- Do NOT store things on the device.
- Do NOT install, use, or service this device during a thunderstorm. There is a remote risk of electric shock from lightning.
- Connect ONLY suitable accessories to the device.
- Do NOT open the device or unit. Opening or removing covers can expose you to dangerous high voltage points or other risks. ONLY qualified service personnel should service or disassemble this device. Please contact your vendor for further information.
- Make sure to connect the cables to the correct ports.
- Place connecting cables carefully so that no one will step on them or stumble over them.
- Always disconnect all cables from this device before servicing or disassembling.
- Use ONLY an appropriate power adaptor or cord for your device.
- Connect the power adaptor or cord to the right supply voltage (for example, 110V AC in North America or 230V AC in Europe).
- Do NOT remove the plug and connect it to a power outlet by itself; always attach the plug to the power adaptor first before connecting it to a power outlet.
- Do NOT allow anything to rest on the power adaptor or cord and do NOT place the product where anyone can walk on the power adaptor or cord.
- Do NOT use the device if the power adaptor or cord is damaged as it might cause electrocution.
- If the power adaptor or cord is damaged, remove it from the power outlet.
- Do NOT attempt to repair the power adaptor or cord. Contact your local vendor to order a new one.
- Do not use the device outside, and make sure all the connections are indoors. There is a remote risk of electric shock from lightning.
- CAUTION: RISK OF EXPLOSION IF BATTERY (on the motherboard) IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS. Dispose them at the applicable collection point for the recycling of electrical and electronic equipment. For detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the store where you purchased the product.
- Do NOT obstruct the device ventilation slots, as insufficient airflow may harm your device.

- Antenna Warning! This device meets ETSI and FCC certification requirements when using the included antenna(s). Only use the included antenna(s).
- If you wall mount your device, make sure that no electrical lines, gas or water pipes will be damaged.

This product is recyclable. Dispose of it properly.



Contents Overview

Introduction **51**

Getting to Know Your ZyWALL 53
Introducing the Web Configurator 57
Wizard Setup 81
Tutorial 101
Registration 141

Network and Wireless **145**

LAN Screens 147
Bridge Screens 159
WAN Screens 165
DMZ Screens 201
Wireless LAN 211

Security **237**

Firewall 239
Content Filtering Screens 271
Content Filtering Reports 293
IPSec VPN 301
Certificates 349
Authentication Server 379

Advanced **383**

Network Address Translation (NAT) 385
Static Route 401
Policy Route 405
Bandwidth Management 411
DNS 427
Remote Management 439
UPnP 461
Custom Application 471
ALG Screen 473

Logs and Maintenance **479**

Logs Screens 481
Maintenance 511

SMT 529

Introducing the SMT 531
SMT Menu 1 - General Setup 539
WAN and Dial Backup Setup 545
LAN Setup 559
Internet Access 565
DMZ Setup 571
Route Setup 575
Wireless Setup 579
Remote Node Setup 583
IP Static Route Setup 591
Network Address Translation (NAT) 595
Introducing the ZyWALL Firewall 615
Filter Configuration 617
SNMP Configuration 633
System Information & Diagnosis 635
Firmware and Configuration File Maintenance 647
System Maintenance Menus 8 to 10 661
Remote Management 669
IP Policy Routing 673
Call Scheduling 681

Troubleshooting and Specifications 685

Troubleshooting 687
Product Specifications 693

Appendices and Index 703

Table of Contents

About This User's Guide 3

Document Conventions 4

Safety Warnings 6

Contents Overview 9

Table of Contents 11

List of Figures 29

List of Tables 43

Part I: Introduction 51

Chapter 1
Getting to Know Your ZyWALL 53

1.1 ZyWALL Internet Security Appliance Overview 53
1.2 Ways to Manage the ZyWALL 53
1.3 Good Habits for Managing the ZyWALL 54
1.4 Applications for the ZyWALL 54
1.4.1 Secure Broadband Internet Access via Cable or DSL Modem 54
1.4.2 VPN Application 55
1.4.3 3G WAN Application 55
1.4.4 Front Panel Lights 56

Chapter 2
Introducing the Web Configurator 57

2.1 Web Configurator Overview 57
2.2 Accessing the ZyWALL Web Configurator 57
2.3 Resetting the ZyWALL 59
2.3.1 Procedure To Use The Reset Button 59
2.3.2 Uploading a Configuration File Via Console Port 59
2.4 Navigating the ZyWALL Web Configurator 60
2.4.1 Title Bar 60
2.4.2 Main Window 61
2.4.3 HOME Screen: Router Mode 61
2.4.4 HOME Screen: Bridge Mode 67

2.4.5 Navigation Panel 70
2.4.6 Port Statistics 74
2.4.7 Show Statistics: Line Chart 75
2.4.8 DHCP Table Screen 76
2.4.9 VPN Status 77
2.4.10 Bandwidth Monitor 78

Chapter 3
Wizard Setup 81

3.1 Wizard Setup Overview 81
3.2 Internet Access 81
3.2.1 ISP Parameters 82
3.2.2 Internet Access Wizard: Second Screen 86
3.2.3 Internet Access Wizard: Registration 87
3.2.4 Internet Access Wizard: Status 89
3.2.5 Internet Access Wizard: Service Activation 90
3.3 VPN Wizard Gateway Setting 90
3.4 VPN Wizard Network Setting 92
3.5 VPN Wizard IKE Tunnel Setting (IKE Phase 1) 93
3.6 VPN Wizard IPSec Setting (IKE Phase 2) 95
3.7 VPN Wizard Status Summary 96
3.8 VPN Wizard Setup Complete 99

Chapter 4
Tutorial 101

4.1 Security Settings for VPN Traffic 101
4.1.1 Firewall Rule for VPN Example 101
4.1.2 Configuring the VPN Rule 102
4.1.3 Configuring the Firewall Rules 105
4.2 Using NAT with Multiple Public IP Addresses 109
4.2.1 Example Parameters and Scenario 109
4.2.2 Configuring the WAN Connection with a Static IP Address 110
4.2.3 Public IP Address Mapping 113
4.2.4 Forwarding Traffic from the WAN to a Local Computer 118
4.2.5 Allow WAN-to-LAN Traffic through the Firewall 120
4.2.6 Testing the Connections 127
4.3 Using NAT with Multiple Game Players 127
4.4 How to Manage the ZyWALL's Bandwidth 128
4.4.1 Example Parameters and Scenario 128
4.4.2 Configuring Bandwidth Management Rules 129
4.5 Configuring Content Filtering 133
4.5.1 Enable Content Filtering 133
4.5.2 Block Categories of Web Content 134

4.5.3 Assign Bob's Computer a Specific IP Address 136
4.5.4 Create a Content Filter Policy for Bob 136
4.5.5 Set the Content Filter Schedule 137
4.5.6 Block Categories of Web Content for Bob 138

Chapter 5
Registration 141

5.1 myZyXEL.com overview 141
5.1.1 Content Filtering Subscription Service 141
5.2 Registration 142
5.3 Service 143

Part II: Network and Wireless 145

Chapter 6
LAN Screens 147

6.1 LAN, WAN and the ZyWALL 147
6.2 IP Address and Subnet Mask 147
6.2.1 Private IP Addresses 148
6.3 DHCP 149
6.3.1 IP Pool Setup 149
6.4 RIP Setup 149
6.5 Multicast 149
6.6 WINS 150
6.7 LAN 150
6.8 LAN Static DHCP 153
6.9 LAN IP Alias 154
6.10 LAN Port Roles 156

Chapter 7
Bridge Screens 159

7.1 Bridge Loop 159
7.2 Spanning Tree Protocol (STP) 160
7.2.1 Rapid STP 160
7.2.2 STP Terminology 160
7.2.3 How STP Works 160
7.2.4 STP Port States 161
7.3 Bridge 161
7.4 Bridge Port Roles 163

Chapter 8
WAN Screens 165

8.1 WAN Overview 165
8.2 Multiple WAN 165
8.3 Load Balancing Introduction 166
8.4 Load Balancing Algorithms 166
8.4.1 Least Load First 166
8.4.2 Weighted Round Robin 167
8.4.3 Spillover 168
8.5 WAN Interface to Local Host Mapping Timeout 169
8.6 TCP/IP Priority (Metric) 170
8.7 WAN General 170
8.8 Configuring Load Balancing 174
8.8.1 Least Load First 174
8.8.2 Weighted Round Robin 175
8.8.3 Spillover 176
8.9 WAN IP Address Assignment 177
8.10 DNS Server Address Assignment 177
8.11 WAN MAC Address 178
8.12 WAN 1 178
8.12.1 WAN Ethernet Encapsulation 178
8.12.2 PPPoE Encapsulation 181
8.12.3 PPTP Encapsulation 184
8.13 WAN 2 (3G WAN) 187
8.14 Traffic Redirect 193
8.15 Configuring Traffic Redirect 194
8.16 Configuring Dial Backup 195
8.17 Advanced Modem Setup 197
8.17.1 AT Command Strings 197
8.17.2 DTR Signal 198
8.17.3 Response Strings 198
8.18 Configuring Advanced Modem Setup 198

Chapter 9
DMZ Screens 201

9.1 DMZ 201
9.2 Configuring DMZ 201
9.3 DMZ Static DHCP 204
9.4 DMZ IP Alias 205
9.5 DMZ Public IP Address Example 207
9.6 DMZ Private and Public IP Address Example 208
9.7 DMZ Port Roles 209

Chapter 10
Wireless LAN 211

10.1 Wireless LAN Introduction 211
10.2 Configuring WLAN 212
10.3 WLAN Static DHCP 215
10.4 WLAN IP Alias 216
10.5 WLAN Port Roles 218
10.6 Wireless Security Overview 220
10.6.1 SSID 221
10.6.2 MAC Address Filter 221
10.6.3 User Authentication 221
10.6.4 Encryption 222
10.6.5 Additional Installation Requirements for Using 802.1x 223
10.7 Wireless Card 223
10.7.1 SSID Profile 226
10.8 Configuring Wireless Security 227
10.8.1 No Security 228
10.8.2 Static WEP 229
10.8.3 IEEE 802.1x Only 230
10.8.4 IEEE 802.1x + Static WEP 231
10.8.5 WPA, WPA2, WPA2-MIX 232
10.8.6 WPA-PSK, WPA2-PSK, WPA2-PSK-MIX 233
10.9 MAC Filter 235

Part III: Security 237

Chapter 11
Firewall 239

11.1 Firewall Overview 239
11.2 Packet Direction Matrix 240
11.3 Packet Direction Examples 242
11.3.1 To VPN Packet Direction 243
11.3.2 From VPN Packet Direction 244
11.3.3 From VPN To VPN Packet Direction 246
11.4 Security Considerations 248
11.5 Firewall Rules Example 248
11.6 Asymmetrical Routes 250
11.6.1 Asymmetrical Routes and IP Alias 250
11.7 Firewall Default Rule (Router Mode) 251
11.8 Firewall Default Rule (Bridge Mode) 253
11.9 Firewall Rule Summary 255
11.9.1 Firewall Edit Rule 257
11.10 Anti-Probing 260

11.11 Firewall Thresholds 261
11.11.1 Threshold Values 262
11.12 Threshold Screen 262
11.13 Service 264
11.13.1 Firewall Edit Custom Service 265
11.14 My Service Firewall Rule Example 266

Chapter 12
Content Filtering Screens 271

12.1 Content Filtering Overview 271
12.1.1 Restrict Web Features 271
12.1.2 Create a Filter List 271
12.1.3 Customize Web Site Access 271
12.2 Content Filtering with an External Database 271
12.3 Content Filter General Screen 272
12.4 Content Filter Policy 275
12.5 Content Filter Policy: General 277
12.6 Content Filter Policy: External Database 278
12.7 Content Filter Policy: Customization 285
12.8 Content Filter Policy: Schedule 287
12.9 Content Filter Object 288
12.10 Customizing Keyword Blocking URL Checking 290
12.10.1 Domain Name or IP Address URL Checking 290
12.10.2 Full Path URL Checking 291
12.10.3 File Name URL Checking 291
12.11 Content Filtering Cache 291

Chapter 13
Content Filtering Reports 293

13.1 Checking Content Filtering Activation 293
13.2 Viewing Content Filtering Reports 293
13.3 Web Site Submission 298

Chapter 14
IPSec VPN 301

14.1 IPSec VPN Overview 301
14.1.1 IKE SA Overview 302
14.2 VPN Rules (IKE) 303
14.3 IKE SA Setup 305
14.3.1 IKE SA Proposal 305
14.4 Additional IPSec VPN Topics 309
14.4.1 SA Life Time 310
14.4.2 IPSec High Availability 310

14.4.3 Encryption and Authentication Algorithms 311
14.5 VPN Rules (IKE) Gateway Policy Edit 312
14.6 IPSec SA Overview 318
14.6.1 Local and Remote Networks 318
14.6.2 Virtual Address Mapping 319
14.6.3 Active Protocol 320
14.6.4 Encapsulation 320
14.6.5 IPSec SA Proposal and Perfect Forward Secrecy 321
14.7 VPN Rules (IKE) Network Policy Edit 321
14.8 Network Policy Port Forwarding 326
14.9 Network Policy Move 328
14.10 Dialing the VPN Tunnel via Web Configurator 329
14.11 VPN Troubleshooting 330
14.11.1 VPN Log 330
14.12 IPSec Debug 331
14.13 IPSec SA Using Manual Keys 333
14.13.1 IPSec SA Proposal Using Manual Keys 333
14.13.2 Authentication and the Security Parameter Index (SPI) 333
14.14 VPN Rules (Manual) 333
14.15 VPN Rules (Manual) Edit 335
14.16 VPN SA Monitor 338
14.17 VPN Global Setting 338
14.17.1 Local and Remote IP Address Conflict Resolution 338
14.18 Telecommuter VPN/IPSec Examples 341
14.18.1 Telecommuters Sharing One VPN Rule Example 342
14.18.2 Telecommuters Using Unique VPN Rules Example 342
14.19 VPN and Remote Management 344
14.20 Hub-and-spoke VPN 344
14.20.1 Hub-and-spoke VPN Example 345
14.20.2 Hub-and-spoke Example VPN Rule Addresses 346
14.20.3 Hub-and-spoke VPN Requirements and Suggestions 346

Chapter 15
Certificates 349

15.1 Certificates Overview 349
15.1.1 Advantages of Certificates 350
15.2 Self-signed Certificates 350
15.3 Verifying a Certificate 350
15.3.1 Checking the Fingerprint of a Certificate on Your Computer 350
15.4 Configuration Summary 351
15.5 My Certificates 352
15.6 My Certificate Details 354
15.7 My Certificate Export 356

15.7.1 Certificate File Export Formats 356
15.8 My Certificate Import 357
15.8.1 Certificate File Formats 357
15.9 My Certificate Create 359
15.10 Trusted CAs 364
15.11 Trusted CA Details 366
15.12 Trusted CA Import 369
15.13 Trusted Remote Hosts 370
15.14 Trusted Remote Hosts Import 372
15.15 Trusted Remote Host Certificate Details 373
15.16 Directory Servers 375
15.17 Directory Server Add or Edit 376

Chapter 16
Authentication Server 379

16.1 Authentication Server Overview 379
16.1.1 Local User Database 379
16.1.2 RADIUS 379
16.2 Local User Database 379
16.3 RADIUS 381

Part IV: Advanced 383

Chapter 17
Network Address Translation (NAT) 385

17.1 NAT Overview 385
17.1.1 NAT Definitions 385
17.1.2 What NAT Does 386
17.1.3 How NAT Works 386
17.1.4 NAT Application 387
17.1.5 Port Restricted Cone NAT 388
17.1.6 NAT Mapping Types 388
17.2 Using NAT 389
17.2.1 SUA (Single User Account) Versus NAT 389
17.3 NAT Overview Screen 390
17.4 NAT Address Mapping 391
17.4.1 What NAT Does 391
17.4.2 NAT Address Mapping Edit 393
17.5 Port Forwarding 394
17.5.1 Default Server IP Address 394
17.5.2 Port Forwarding: Services and Port Numbers 395

17.5.3 Configuring Servers Behind Port Forwarding (Example) 395
17.5.4 NAT and Multiple WAN 396
17.5.5 Port Translation 396
17.6 Port Forwarding Screen 397
17.7 Port Triggering 399

Chapter 18
Static Route 401

18.1 IP Static Route 401
18.2 IP Static Route 402
18.2.1 IP Static Route Edit 403

Chapter 19
Policy Route 405

19.1 Policy Route 405
19.2 Benefits 405
19.3 Routing Policy 405
19.4 IP Routing Policy Setup 406
19.5 Policy Route Edit 407

Chapter 20
Bandwidth Management 411

20.1 Bandwidth Management Overview 411
20.2 Bandwidth Classes and Filters 411
20.3 Proportional Bandwidth Allocation 412
20.4 Application-based Bandwidth Management 412
20.5 Subnet-based Bandwidth Management 412
20.6 Application and Subnet-based Bandwidth Management 412
20.7 Scheduler 413
20.7.1 Priority-based Scheduler 413
20.7.2 Fairness-based Scheduler 413
20.7.3 Maximize Bandwidth Usage 413
20.7.4 Reserving Bandwidth for Non-Bandwidth Class Traffic 413
20.7.5 Maximize Bandwidth Usage Example 414
20.8 Bandwidth Borrowing 415
20.8.1 Bandwidth Borrowing Example 415
20.9 Maximize Bandwidth Usage With Bandwidth Borrowing 416
20.10 Over Allotment of Bandwidth 417
20.11 Configuring Summary 417
20.12 Configuring Class Setup 419
20.12.1 Bandwidth Manager Class Configuration 420
20.12.2 Bandwidth Management Statistics 423
20.13 Bandwidth Manager Monitor 424

Chapter 21
DNS 427

21.1 DNS Overview 427
21.2 DNS Server Address Assignment 427
21.3 DNS Servers 427
21.4 Address Record 428
21.4.1 DNS Wildcard 428
21.5 Name Server Record 428
21.5.1 Private DNS Server 428
21.6 System Screen 429
21.6.1 Adding an Address Record 431
21.6.2 Inserting a Name Server Record 432
21.7 DNS Cache 433
21.8 Configure DNS Cache 433
21.9 Configuring DNS DHCP 435
21.10 Dynamic DNS 436
21.10.1 DYNDNS Wildcard 436
21.10.2 High Availability 437
21.11 Configuring Dynamic DNS 437

Chapter 22
Remote Management 439

22.1 Remote Management Overview 439
22.1.1 Remote Management Limitations 440
22.1.2 System Timeout 440
22.2 WWW (HTTP and HTTPS) 440
22.3 WWW 441
22.4 HTTPS Example 443
22.4.1 Internet Explorer Warning Messages 443
22.4.2 Netscape Navigator Warning Messages 443
22.4.3 Avoiding the Browser Warning Messages 444
22.4.4 Login Screen 445
22.5 SSH 447
22.6 How SSH Works 447
22.7 SSH Implementation on the ZyWALL 448
22.7.1 Requirements for Using SSH 448
22.8 Configuring SSH 449
22.9 Secure Telnet Using SSH Examples 450
22.9.1 Example 1: Microsoft Windows 450
22.9.2 Example 2: Linux 450
22.10 Secure FTP Using SSH Example 451
22.11 Telnet 452
22.12 Configuring TELNET 452

22.13 FTP 453
22.14 SNMP 454
22.14.1 Supported MIBs 455
22.14.2 SNMP Traps 456
22.14.3 REMOTE MANAGEMENT: SNMP 456
22.15 DNS 457
22.16 Introducing Vantage CNM 458
22.17 Configuring CNM 458
22.17.1 Additional Configuration for Vantage CNM 460

Chapter 23
UPnP 461

23.1 Universal Plug and Play Overview 461
23.1.1 How Do I Know If I'm Using UPnP? 461
23.1.2 NAT Traversal 461
23.1.3 Cautions with UPnP 461
23.1.4 UPnP and ZyXEL 462
23.2 Configuring UPnP 462
23.3 Displaying UPnP Port Mapping 463
23.4 Installing UPnP in Windows Example 464
23.4.1 Installing UPnP in Windows Me 465
23.4.2 Installing UPnP in Windows XP 466
23.5 Using UPnP in Windows XP Example 466
23.5.1 Auto-discover Your UPnP-enabled Network Device 467
23.5.2 Web Configurator Easy Access 468

Chapter 24
Custom Application 471

24.1 Custom Applicaton 471
24.2 Custom Applicaton Configuration 471

Chapter 25
ALG Screen 473

25.1 ALG Introduction 473
25.1.1 ALG and NAT 473
25.1.2 ALG and the Firewall 473
25.1.3 ALG and Multiple WAN 474
25.2 FTP 474
25.3 H.323 474
25.4 RTP 474
25.4.1 H.323 ALG Details 474
25.5 SIP 476
25.5.1 STUN 476

25.5.2 SIP ALG Details 476
25.5.3 SIP Signaling Session Timeout 477
25.5.4 SIP Audio Session Timeout 477
25.6 ALG Screen 477

Part V: Logs and Maintenance 479

Chapter 26
Logs Screens 481

26.1 Configuring View Log 481
26.2 Log Description Example 482
26.2.1 About the Certificate Not Trusted Log 483
26.3 Configuring Log Settings 484
26.4 Configuring Reports 487
26.4.1 Viewing Web Site Hits 489
26.4.2 Viewing Host IP Address 489
26.4.3 Viewing Protocol/Port 490
26.4.4 System Reports Specifications 492
26.5 Log Descriptions 492
26.6 Syslog Logs 508

Chapter 27
Maintenance 511

27.1 Maintenance Overview 511
27.2 General Setup and System Name 511
27.2.1 General Setup 511
27.3 Configuring Password 512
27.4 Time and Date 513
27.5 Pre-defined NTP Time Server Pools 516
27.5.1 Resetting the Time 516
27.5.2 Time Server Synchronization 516
27.6 Introduction To Transparent Bridging 517
27.7 Transparent Firewalls 518
27.8 Configuring Device Mode (Router) 518
27.9 Configuring Device Mode (Bridge) 519
27.10 F/W Upload Screen 521
27.11 Backup and Restore 523
27.11.1 Backup Configuration 524
27.11.2 Restore Configuration 524
27.11.3 Back to Factory Defaults 525
27.12 Restart Screen 525

27.13 Diagnostics 526

Part VI: SMT 529

Chapter 28
Introducing the SMT 531

28.1 Introduction to the SMT 531
28.2 Accessing the SMT via the Console Port 531
28.2.1 Initial Screen 531
28.2.2 Entering the Password 532
28.3 Navigating the SMT Interface 532
28.3.1 Main Menu 533
28.3.2 SMT Menus Overview 535
28.4 Changing the System Password 537
28.5 Resetting the ZyWALL 538

Chapter 29
SMT Menu 1 - General Setup 539

29.1 Introduction to General Setup 539
29.2 Configuring General Setup 539
29.2.1 Configuring Dynamic DNS 541

Chapter 30
WAN and Dial Backup Setup 545

30.1 Introduction to WAN, 3G WAN and Dial Backup Setup 545
30.2 WAN Setup 545
30.3 Dial Backup 546
30.3.1 Configuring Dial Backup in Menu 2 546
30.3.2 Advanced WAN Setup 547
30.3.3 Remote Node Profile (Backup ISP) 549
30.3.4 Editing TCP/IP Options 551
30.3.5 Editing Login Script 552
30.3.6 Remote Node Filter 554
30.4 3G WAN 554
30.4.1 3G Modem Setup 554
30.4.2 Remote Node Profile (3G WAN) 556

Chapter 31
LAN Setup 559

31.1 Introduction to LAN Setup 559
31.2 Accessing the LAN Menus 559

31.3 LAN Port Filter Setup 559
31.4 TCP/IP and DHCP Ethernet Setup Menu 560
31.4.1 IP Alias Setup 563

Chapter 32
Internet Access 565

32.1 Introduction to Internet Access Setup 565
32.2 Ethernet Encapsulation 565
32.3 Configuring the PPTP Client 567
32.4 Configuring the PPPoE Client 568
32.5 Basic Setup Complete 569

Chapter 33
DMZ Setup 571

33.1 Configuring DMZ Setup 571
33.2 DMZ Port Filter Setup 571
33.3 TCP/IP Setup 572
33.3.1 IP Address 572
33.3.2 IP Alias Setup 573

Chapter 34
Route Setup 575

34.1 Configuring Route Setup 575
34.2 Route Assessment 575
34.3 Traffic Redirect 576
34.4 Route Failover 577

Chapter 35
Wireless Setup 579

35.1 TCP/IP Setup 579
35.1.1 IP Address 579
35.1.2 IP Alias Setup 580

Chapter 36
Remote Node Setup 583

36.1 Introduction to Remote Node Setup 583
36.2 Remote Node Setup 583
36.3 Remote Node Profile Setup 583
36.3.1 Ethernet Encapsulation 584
36.3.2 PPPoE Encapsulation 585
36.3.3 PPTP Encapsulation 586
36.4 Edit IP 587
36.5 Remote Node Filter 589

Chapter 37
IP Static Route Setup 591

37.1 IP Static Route Setup 591

Chapter 38
Network Address Translation (NAT) 595

38.1 Using NAT 595
38.1.1 SUA (Single User Account) Versus NAT 595
38.1.2 Applying NAT 595
38.2 NAT Setup 597
38.2.1 Address Mapping Sets 598
38.3 Configuring a Server behind NAT 602
38.4 General NAT Examples 605
38.4.1 Internet Access Only 605
38.4.2 Example 2: Internet Access with a Default Server 606
38.4.3 Example 3: Multiple Public IP Addresses With Inside Servers 607
38.4.4 Example 4: NAT Unfriendly Application Programs 610
38.5 Trigger Port Forwarding 612
38.5.1 Two Points To Remember About Trigger Ports 612

Chapter 39
Introducing the ZyWALL Firewall 615

39.1 Using ZyWALL SMT Menus 615
39.1.1 Activating the Firewall 615

Chapter 40
Filter Configuration 617

40.1 Introduction to Filters 617
40.1.1 The Filter Structure of the ZyWALL 618
40.2 Configuring a Filter Set 620
40.2.1 Configuring a Filter Rule 621
40.2.2 Configuring a TCP/IP Filter Rule 622
40.2.3 Configuring a Generic Filter Rule 624
40.3 Example Filter 626
40.4 Filter Types and NAT 628
40.5 Firewall Versus Filters 628
40.5.1 Packet Filtering: 628
40.5.2 Firewall 629
40.6 Applying a Filter 629
40.6.1 Applying LAN Filters 630
40.6.2 Applying DMZ Filters 630
40.6.3 Applying Remote Node Filters 631

Chapter 41
SNMP Configuration 633

41.1 SNMP Configuration 633
41.2 SNMP Traps 634

Chapter 42
System Information & Diagnosis 635

42.1 Introduction to System Status 635
42.2 System Status 635
42.3 System Information and Console Port Speed 637
42.3.1 System Information 637
42.3.2 Console Port Speed 638
42.4 Log and Trace 639
42.4.1 Viewing Error Log 639
42.4.2 Syslog Logging 640
42.4.3 Call-Triggering Packet 643
42.5 Diagnostic 644
42.5.1 WAN DHCP 645

Chapter 43
Firmware and Configuration File Maintenance 647

43.1 Introduction 647
43.2 Filename Conventions 647
43.3 Backup Configuration 648
43.3.1 Backup Configuration 648
43.3.2 Using the FTP Command from the Command Line 649
43.3.3 Example of FTP Commands from the Command Line 649
43.3.4 GUI-based FTP Clients 650
43.3.5 File Maintenance Over WAN 650
43.3.6 Backup Configuration Using TFTP 650
43.3.7 TFTP Command Example 651
43.3.8 GUI-based TFTP Clients 651
43.3.9 Backup Via Console Port 651
43.4 Restore Configuration 652
43.4.1 Restore Using FTP 653
43.4.2 Restore Using FTP Session Example 654
43.4.3 Restore Via Console Port 654
43.5 Uploading Firmware and Configuration Files 655
43.5.1 Firmware File Upload 655
43.5.2 Configuration File Upload 656
43.5.3 FTP File Upload Command from the DOS Prompt Example 657
43.5.4 FTP Session Example of Firmware File Upload 657
43.5.5 TFTP File Upload 657

43.5.6 TFTP Upload Command Example 658
43.5.7 Uploading Via Console Port 658
43.5.8 Uploading Firmware File Via Console Port 658
43.5.9 Example Xmodem Firmware Upload Using HyperTerminal 659
43.5.10 Uploading Configuration File Via Console Port 659
43.5.11 Example Xmodem Configuration Upload Using HyperTerminal 660

Chapter 44
System Maintenance Menus 8 to 10 661

44.1 Command Interpreter Mode 661
44.1.1 Command Syntax 662
44.1.2 Command Usage 662
44.2 Call Control Support 663
44.2.1 Budget Management 663
44.2.2 Call History 664
44.3 Time and Date Setting 665

Chapter 45
Remote Management 669

45.1 Remote Management 669
45.1.1 Remote Management Limitations 671

Chapter 46
IP Policy Routing 673

46.1 IP Routing Policy Summary 673
46.2 IP Routing Policy Setup 674
46.2.1 Applying Policy to Packets 676
46.3 IP Policy Routing Example 677

Chapter 47
Call Scheduling 681

47.1 Introduction to Call Scheduling 681

Part VII: Troubleshooting and Specifications 685

Chapter 48
Troubleshooting 687

48.1 Power, Hardware Connections, and LEDs 687
48.2 ZyWALL Access and Login 688
48.3 Internet Access 690

Chapter 49
Product Specifications 693

49.1 General ZyWALL Specifications 693
49.2 Compatible 3G Cards 696
49.3 3G Card Installation 697
49.4 Wall-mounting Instructions 697
49.5 Power Adaptor Specifications 699
49.6 Cable Pin Assignments 700

Part VIII: Appendices and Index 703

Appendix A Pop-up Windows, JavaScripts and Java Permissions 705
Appendix B Setting up Your Computer's IP Address 713
Appendix C IP Addresses and Subnetting 729
Appendix D Common Services 737
Appendix E Wireless LANs 741
Appendix F Importing Certificates 755
Appendix G Legal Information 765
Appendix H Customer Support 769
Index 775

List of Figures

Figure 1 Secure Internet Access via Cable or DSL Modem 54
Figure 2 VPN Application 55
Figure 3 3G WAN Application 55
Figure 4 Front Panel 56
Figure 5 Change Password Screen 58
Figure 6 Replace Certificate Screen 58
Figure 7 Example Xmodem Upload 59
Figure 8 HOME Screen 60
Figure 9 Web Configurator HOME Screen in Router Mode 61
Figure 10 Web Configurator HOME Screen in Bridge Mode 67
Figure 11 HOME > Show Statistics 74
Figure 12 HOME > Show Statistics > Line Chart 75
Figure 13 HOME > DHCP Table 76
Figure 14 HOME > VPN Status 77
Figure 15 Home > Bandwidth Monitor 78
Figure 16 Wizard Setup Welcome 81
Figure 17 ISP Parameters: Ethernet Encapsulation 82
Figure 18 ISP Parameters: PPPoE Encapsulation 83
Figure 19 ISP Parameters: PPTP Encapsulation 85
Figure 20 Internet Access Wizard: Second Screen 86
Figure 21 Internet Access Setup Complete 87
Figure 22 Internet Access Wizard: Registration 88
Figure 23 Internet Access Wizard: Registration in Progress 89
Figure 24 Internet Access Wizard: Status 89
Figure 25 Internet Access Wizard: Registration Failed 89
Figure 26 Internet Access Wizard: Registered Device 90
Figure 27 Internet Access Wizard: Activated Services 90
Figure 28 VPN Wizard: Gateway Setting 91
Figure 29 VPN Wizard: Network Setting 92
Figure 30 VPN Wizard: IKE Tunnel Setting 94
Figure 31 VPN Wizard: IPSec Setting 95
Figure 32 VPN Wizard: VPN Status 97
Figure 33 VPN Wizard Setup Complete 99
Figure 34 Firewall Rule for VPN 102
Figure 35 SECURITY > VPN > VPN Rules (IKE) 102
Figure 36 SECURITY > VPN > VPN Rules (IKE)> Add Gateway Policy 103
Figure 37 SECURITY > VPN > VPN Rules (IKE): With Gateway Policy Example 104
Figure 38 SECURITY > VPN > VPN Rules (IKE)> Add Network Policy 105

Figure 39 SECURITY > FIREWALL > Rule Summary 106
Figure 40 SECURITY > FIREWALL > Rule Summary > Edit: Allow 107
Figure 41 SECURITY > FIREWALL > Rule Summary: Allow 108
Figure 42 SECURITY > FIREWALL > Default Rule: Block From VPN To LAN 108
Figure 43 Tutorial Example: Using NAT with Static Public IP Addresses 109
Figure 44 Tutorial Example: WAN Connection with a Static Public IP Address 110
Figure 45 Tutorial Example: WAN 1 Screen 111
Figure 46 Tutorial Example: DNS > System 111
Figure 47 Tutorial Example: DNS > System Edit-1 112
Figure 48 Tutorial Example: DNS > System Edit-2 112
Figure 49 Tutorial Example: DNS > System: Done 113
Figure 50 Tutorial Example: Status 113
Figure 51 Tutorial Example: Mapping Multiple Public IP Addresses to Inside Servers 114
Figure 52 Tutorial Example: NAT > NAT Overview 115
Figure 53 Tutorial Example: NAT > Address Mapping 116
Figure 54 Tutorial Example: NAT Address Mapping Edit: One-to-One (1) 116
Figure 55 Tutorial Example: NAT Address Mapping Edit: One-to-One (2) 117
Figure 56 Tutorial Example: NAT Address Mapping Edit: Many-to-One 117
Figure 57 Tutorial Example: NAT Address Mapping Done 118
Figure 58 Tutorial Example: Forwarding Incoming FTP Traffic to a Local Computer 119
Figure 59 Tutorial Example: NAT Address Mapping Edit: Server 119
Figure 60 Tutorial Example: NAT Port Forwarding 120
Figure 61 Tutorial Example: Forwarding Incoming FTP Traffic to a Local Computer 120
Figure 62 Tutorial Example: Firewall Default Rule 121
Figure 63 Tutorial Example: Firewall Rule: WAN1 to LAN 121
Figure 64 Tutorial Example: Firewall Rule: WAN to LAN Address Edit for Web Server 122
Figure 65 Tutorial Example: Firewall Rule: WAN to LAN Service Edit for Web Server 123
Figure 66 Tutorial Example: Firewall Rule: WAN to LAN Address Edit for Mail Server 124
Figure 67 Tutorial Example: Firewall Rule: WAN to LAN Service Edit for Mail Server 124
Figure 68 Tutorial Example: Firewall Rule: WAN to LAN Address Edit for FTP Server 125
Figure 69 Tutorial Example: Firewall Rule: WAN to LAN Service Edit for FTP Server 126
Figure 70 Tutorial Example: Firewall Rule Summary 126
Figure 71 Tutorial Example: NAT Address Mapping Done: Game Playing 128
Figure 72 Tutorial Example: Bandwidth Management 129
Figure 73 Tutorial Example: Bandwidth Management Summary 130
Figure 74 Tutorial Example: Bandwidth Management Class Setup 130
Figure 75 Tutorial Example: Bandwidth Management Class Setup: VoIP 131
Figure 76 Tutorial Example: Bandwidth Management Class Setup: FTP 131
Figure 77 Tutorial Example: Bandwidth Management Class Setup: WWW 132
Figure 78 Tutorial Example: Bandwidth Management Class Setup Done 132
Figure 79 Tutorial Example: Bandwidth Management Monitor 133
Figure 80 SECURITY > CONTENT FILTER > General 134
Figure 81 SECURITY > CONTENT FILTER > Policy 135

Figure 82 SECURITY > CONTENT FILTER > Policy > External Database (Default) 135
Figure 83 HOME > DHCP Table 136
Figure 84 SECURITY > CONTENT FILTER > Policy 136
Figure 85 SECURITY > CONTENT FILTER > Policy > Insert 137
Figure 86 SECURITY > CONTENT FILTER > Policy 137
Figure 87 SECURITY > CONTENT FILTER > Policy > Schedule (Bob) 138
Figure 88 SECURITY > CONTENT FILTER > Policy 139
Figure 89 SECURITY > CONTENT FILTER > Policy > External Database (Bob) 139
Figure 90 REGISTRATION 142
Figure 91 REGISTRATION: Registered Device 143
Figure 92 REGISTRATION > Service 144
Figure 93 LAN and WAN 147
Figure 94 NETWORK > LAN 151
Figure 95 NETWORK > LAN > Static DHCP 154
Figure 96 Physical Network & Partitioned Logical Networks 155
Figure 97 NETWORK > LAN > IP Alias 155
Figure 98 NETWORK > LAN > Port Roles 157
Figure 99 Port Roles Change Complete 157
Figure 100 Bridge Loop: Bridge Connected to Wired LAN 159
Figure 101 NETWORK > Bridge 162
Figure 102 NETWORK > Bridge > Port Roles 164
Figure 103 Port Roles Change Complete 164
Figure 104 Least Load First Example 167
Figure 105 Weighted Round Robin Algorithm Example 168
Figure 106 Spillover Algorithm Example 168
Figure 107 Different WAN IP Addresses 169
Figure 108 NETWORK > WAN General 171
Figure 109 Load Balancing: Least Load First 174
Figure 110 Load Balancing: Weighted Round Robin 175
Figure 111 Load Balancing: Spillover 176
Figure 112 NETWORK > WAN > WAN 1 (Ethernet Encapsulation) 179
Figure 113 NETWORK > WAN > WAN 1 (PPPoE Encapsulation) 182
Figure 114 NETWORK > WAN > WAN 1 (PPTP Encapsulation) 185
Figure 115 NETWORK > WAN > WAN 2 (3G WAN) 190
Figure 116 Traffic Redirect WAN Setup 193
Figure 117 Traffic Redirect LAN Setup 194
Figure 118 NETWORK > WAN > Traffic Redirect 194
Figure 119 NETWORK > WAN > Dial Backup 195
Figure 120 NETWORK > WAN > Dial Backup > Edit 198
Figure 121 NETWORK > DMZ 202
Figure 122 NETWORK > DMZ > Static DHCP 205
Figure 123 NETWORK > DMZ > IP Alias 206
Figure 124 DMZ Public Address Example 208

Figure 125 DMZ Private and Public Address Example 209
Figure 126 NETWORK > DMZ > Port Roles 210
Figure 127 Example of a Wireless Network 211
Figure 128 NETWORK > WLAN 213
Figure 129 NETWORK > WLAN > Static DHCP 216
Figure 130 NETWORK > WLAN > IP Alias 217
Figure 131 WLAN Port Role Example 219
Figure 132 NETWORK > WLAN > Port Roles 220
Figure 133 NETWORK > WLAN > Port Roles: Change Complete 220
Figure 134 WIRELESS > Wi-Fi > Wireless Card 224
Figure 135 Configuring SSID 226
Figure 136 WIRELESS > Wi-Fi > Security 228
Figure 137 WIRELESS > Wi-Fi > Security: None 229
Figure 138 WIRELESS > Wi-Fi > Security: WEP 229
Figure 139 WIRELESS > Wi-Fi > Security: 802.1x Only 230
Figure 140 WIRELESS > Wi-Fi > Security: 802.1x + Static WEP 231
Figure 141 WIRELESS > Wi-Fi > Security: WPA, WPA2 or WPA2-MIX 232
Figure 142 WIRELESS > Wi-Fi > Security: WPA(2)-PSK 234
Figure 143 NETWORK > WIRELESS CARD > MAC Filter 235
Figure 144 Default Firewall Action 239
Figure 145 SECURITY > FIREWALL > Default Rule (Router Mode) 240
Figure 146 Default Block Traffic From WAN1 to DMZ Example 241
Figure 147 From LAN to VPN Example 243
Figure 148 Block DMZ to VPN Traffic by Default Example 244
Figure 149 From VPN to LAN Example 245
Figure 150 Block VPN to LAN Traffic by Default Example 246
Figure 151 From VPN to VPN Example 247
Figure 152 Block VPN to VPN Traffic by Default Example 247
Figure 153 Blocking All LAN to WAN IRC Traffic Example 248
Figure 154 Limited LAN to WAN IRC Traffic Example 249
Figure 155 Using IP Alias to Solve the Triangle Route Problem 251
Figure 156 SECURITY > FIREWALL > Default Rule (Router Mode) 251
Figure 157 SECURITY > FIREWALL > Default Rule (Bridge Mode) 254
Figure 158 SECURITY > FIREWALL > Rule Summary 256
Figure 159 SECURITY > FIREWALL > Rule Summary > Edit 258
Figure 160 SECURITY > FIREWALL > Anti-Probing 260
Figure 161 Three-Way Handshake 261
Figure 162 SECURITY > FIREWALL > Threshold 262
Figure 163 SECURITY > FIREWALL > Service 264
Figure 164 Firewall Edit Custom Service 265
Figure 165 My Service Firewall Rule Example: Service 266
Figure 166 My Service Firewall Rule Example: Edit Custom Service 267
Figure 167 My Service Firewall Rule Example: Rule Summary 267

Figure 168 My Service Firewall Rule Example: Rule Edit: Source and Destination Addresses 268
Figure 169 My Service Firewall Rule Example: Edit Rule: Service Configuration 269
Figure 170 My Service Firewall Rule Example: Rule Summary: Completed 270
Figure 171 Content Filtering Lookup Procedure 272
Figure 172 SECURITY > CONTENT FILTER > General 273
Figure 173 SECURITY > CONTENT FILTER > Policy 276
Figure 174 SECURITY > CONTENT FILTER > Policy > General 277
Figure 175 SECURITY > CONTENT FILTER > Policy > External Database 279
Figure 176 SECURITY > CONTENT FILTER > Policy > Customization 286
Figure 177 SECURITY > CONTENT FILTER > Policy > Schedule 288
Figure 178 SECURITY > CONTENT FILTER > Object 289
Figure 179 SECURITY > CONTENT FILTER > Cache 292
Figure 180 myZyXEL.com: Login 294
Figure 181 myZyXEL.com: Welcome 294
Figure 182 myZyXEL.com: Service Management 295
Figure 183 Blue Coat: Login 295
Figure 184 Content Filtering Reports Main Screen 296
Figure 185 Blue Coat: Report Home 296
Figure 186 Global Report Screen Example 297
Figure 187 Requested URLs Example 298
Figure 188 Web Page Review Process Screen 299
Figure 189 VPN: Example 301
Figure 190 VPN: IKE SA and IPSec SA 302
Figure 191 Gateway and Network Policies 303
Figure 192 IPSec Fields Summary 303
Figure 193 SECURITY > VPN > VPN Rules (IKE) 304
Figure 194 IKE SA: Main Negotiation Mode, Steps 1 - 2: IKE SA Proposal 305
Figure 195 IKE SA: Main Negotiation Mode, Steps 3 - 4: DH Key Exchange 306
Figure 196 IKE SA: Main Negotiation Mode, Steps 5 - 6: Authentication 306
Figure 197 VPN/NAT Example 309
Figure 198 IPSec High Availability 311
Figure 199 SECURITY > VPN > VPN Rules (IKE) > Edit Gateway Policy 313
Figure 200 Virtual Mapping of Local and Remote Network IP Addresses 319
Figure 201 VPN: Transport and Tunnel Mode Encapsulation 320
Figure 202 SECURITY > VPN > VPN Rules (IKE) > Edit Network Policy 322
Figure 203 SECURITY > VPN > VPN Rules (IKE) > Edit Network Policy > Port Forwarding 327
Figure 204 SECURITY > VPN > VPN Rules (IKE) > Move Network Policy 328
Figure 205 VPN Rule Configured 329
Figure 206 VPN Dial 329
Figure 207 VPN Tunnel Established 330
Figure 208 VPN Log Example 331
Figure 209 IKE/IPSec Debug Example 332
Figure 210 SECURITY > VPN > VPN Rules (Manual) 334

Figure 211 SECURITY > VPN > VPN Rules (Manual) > Edit 335
Figure 212 SECURITY > VPN > SA Monitor 338
Figure 213 Overlap in a Dynamic VPN Rule 339
Figure 214 Overlap in IP Alias and VPN Remote Networks 340
Figure 215 SECURITY > VPN > Global Setting 340
Figure 216 Telecommuters Sharing One VPN Rule Example 342
Figure 217 Telecommuters Using Unique VPN Rules Example 343
Figure 218 VPN for Remote Management Example 344
Figure 219 VPN Topologies 345
Figure 220 Hub-and-spoke VPN Example 346
Figure 221 Certificates on Your Computer 350
Figure 222 Certificate Details 351
Figure 223 Certificate Configuration Overview 351
Figure 224 SECURITY > CERTIFICATES > My Certificates 352
Figure 225 SECURITY > CERTIFICATES > My Certificates > Details 354
Figure 226 SECURITY > CERTIFICATES > My Certificates > Export 356
Figure 227 SECURITY > CERTIFICATES > My Certificates > Import 358
Figure 228 SECURITY > CERTIFICATES > My Certificates > Import: PKCS#12 359
Figure 229 SECURITY > CERTIFICATES > My Certificates > Create (Basic) 360
Figure 230 SECURITY > CERTIFICATES > My Certificates > Create (Advanced) 361
Figure 231 SECURITY > CERTIFICATES > Trusted CAs 365
Figure 232 SECURITY > CERTIFICATES > Trusted CAs > Details 367
Figure 233 SECURITY > CERTIFICATES > Trusted CAs > Import 370
Figure 234 SECURITY > CERTIFICATES > Trusted Remote Hosts 371
Figure 235 SECURITY > CERTIFICATES > Trusted Remote Hosts > Import 372
Figure 236 SECURITY > CERTIFICATES > Trusted Remote Hosts > Details 373
Figure 237 SECURITY > CERTIFICATES > Directory Servers 375
Figure 238 SECURITY > CERTIFICATES > Directory Server > Add 376
Figure 239 SECURITY > AUTH SERVER > Local User Database 380
Figure 240 SECURITY > AUTH SERVER > RADIUS 381
Figure 241 How NAT Works 387
Figure 242 NAT Application With IP Alias 387
Figure 243 Port Restricted Cone NAT Example 388
Figure 244 ADVANCED > NAT > NAT Overview 390
Figure 245 ADVANCED > NAT > Address Mapping 392
Figure 246 ADVANCED > NAT > Address Mapping > Edit 393
Figure 247 Multiple Servers Behind NAT Example 396
Figure 248 Port Translation Example 397
Figure 249 ADVANCED > NAT > Port Forwarding 398
Figure 250 Trigger Port Forwarding Process: Example 399
Figure 251 ADVANCED > NAT > Port Triggering 400
Figure 252 Example of Static Routing Topology 401
Figure 253 ADVANCED > STATIC ROUTE > IP Static Route 402

Figure 254 ADVANCED > STATIC ROUTE > IP Static Route > Edit 403
Figure 255 ADVANCED > POLICY ROUTE > Policy Route Summary 406
Figure 256 Edit IP Policy Route 408
Figure 257 Subnet-based Bandwidth Management Example 412
Figure 258 ADVANCED > BW MGMT > Summary 418
Figure 259 ADVANCED > BW MGMT > Class Setup 419
Figure 260 ADVANCED > BW MGMT > Class Setup > Add Sub-Class 421
Figure 261 ADVANCED > BW MGMT > Class Setup > Statistics 424
Figure 262 ADVANCED > BW MGMT > Monitor 425
Figure 263 Private DNS Server Example 429
Figure 264 ADVANCED > DNS > System DNS 430
Figure 265 ADVANCED > DNS > Add (Address Record) 431
Figure 266 ADVANCED > DNS > Insert (Name Server Record) 432
Figure 267 ADVANCED > DNS > Cache 434
Figure 268 ADVANCED > DNS > DHCP 435
Figure 269 ADVANCED > DNS > DDNS 437
Figure 270 Secure and Insecure Remote Management From the WAN 439
Figure 271 HTTPS Implementation 441
Figure 272 ADVANCED > REMOTE MGMT > WWW 442
Figure 273 Security Alert Dialog Box (Internet Explorer) 443
Figure 274 Security Certificate 1 (Netscape) 444
Figure 275 Security Certificate 2 (Netscape) 444
Figure 276 Example: Lock Denoting a Secure Connection 445
Figure 277 Replace Certificate 446
Figure 278 Device-specific Certificate 446
Figure 279 Common ZyWALL Certificate 447
Figure 280 SSH Communication Over the WAN Example 447
Figure 281 How SSH Works 448
Figure 282 ADVANCED > REMOTE MGMT > SSH 449
Figure 283 SSH Example 1: Store Host Key 450
Figure 284 SSH Example 2: Test 450
Figure 285 SSH Example 2: Log in 451
Figure 286 Secure FTP: Firmware Upload Example 452
Figure 287 ADVANCED > REMOTE MGMT > Telnet 452
Figure 288 ADVANCED > REMOTE MGMT > FTP 453
Figure 289 SNMP Management Model 455
Figure 290 ADVANCED > REMOTE MGMT > SNMP 456
Figure 291 ADVANCED > REMOTE MGMT > DNS 458
Figure 292 ADVANCED > REMOTE MGMT > CNM 459
Figure 293 ADVANCED > UPnP 462
Figure 294 ADVANCED > UPnP > Ports 463
Figure 295 ADVANCED > Custom APP 472
Figure 296 H.323 ALG Example 475

Figure 297 H.323 with Multiple WAN IP Addresses 475
Figure 298 H.323 Calls from the WAN with Multiple Outgoing Calls 476
Figure 299 SIP ALG Example 477
Figure 300 ADVANCED > ALG 478
Figure 301 LOGS > View Log 481
Figure 302 myZyXEL.com: Download Center 483
Figure 303 myZyXEL.com: Certificate Download 484
Figure 304 LOGS > Log Settings 485
Figure 305 LOGS > Reports 488
Figure 306 LOGS > Reports: Web Site Hits Example 489
Figure 307 LOGS > Reports: Host IP Address Example 490
Figure 308 LOGS > Reports: Protocol/Port Example 491
Figure 309 MAINTENANCE > General Setup 512
Figure 310 MAINTENANCE > Password 513
Figure 311 MAINTENANCE > Time and Date 514
Figure 312 Synchronization in Process 516
Figure 313 Synchronization is Successful 517
Figure 314 Synchronization Fail 517
Figure 315 MAINTENANCE > Device Mode (Router Mode) 519
Figure 316 MAINTENANCE > Device Mode (Bridge Mode) 520
Figure 317 MAINTENANCE > Firmware Upload 521
Figure 318 Firmware Upload In Process 522
Figure 319 Network Temporarily Disconnected 522
Figure 320 Firmware Upload Error 523
Figure 321 MAINTENANCE > Backup and Restore 523
Figure 322 Configuration Upload Successful 524
Figure 323 Network Temporarily Disconnected 524
Figure 324 Configuration Upload Error 525
Figure 325 Reset Warning Message 525
Figure 326 MAINTENANCE > Restart 526
Figure 327 MAINTENANCE > Diagnostics 527
Figure 328 Initial Screen 532
Figure 329 Password Screen 532
Figure 330 Main Menu (Router Mode) 534
Figure 331 Main Menu (Bridge Mode) 534
Figure 332 Menu 23: System Password 537
Figure 333 Menu 1: General Setup (Router Mode) 539
Figure 334 Menu 1: General Setup (Bridge Mode) 540
Figure 335 Menu 1.1: Configure Dynamic DNS 541
Figure 336 Menu 1.1.1: DDNS Host Summary 542
Figure 337 Menu 1.1.1: DDNS Edit Host 543
Figure 338 MAC Address Cloning in WAN Setup 545
Figure 339 Menu 2: Dial Backup Setup 547

Figure 340 Menu 2.1: Advanced WAN Setup 548
Figure 341 Menu 11.3: Remote Node Profile (Backup ISP) 549
Figure 342 Menu 11.3.2: Remote Node Network Layer Options 551
Figure 343 Menu 11.3.3: Remote Node Script 553
Figure 344 Menu 11.3.4: Remote Node Filter 554
Figure 345 3G Modem Setup in WAN Setup 555
Figure 346 Menu 11.2: Remote Node Profile (3G WAN) 556
Figure 347 Menu 3: LAN Setup 559
Figure 348 Menu 3.1: LAN Port Filter Setup 560
Figure 349 Menu 3: TCP/IP and DHCP Setup 560
Figure 350 Menu 3.2: TCP/IP and DHCP Ethernet Setup 561
Figure 351 Menu 3.2.1: IP Alias Setup 563
Figure 352 Menu 4: Internet Access Setup (Ethernet) 566
Figure 353 Internet Access Setup (PPTP) 568
Figure 354 Internet Access Setup (PPPoE) 569
Figure 355 Menu 5: DMZ Setup 571
Figure 356 Menu 5.1: DMZ Port Filter Setup 571
Figure 357 Menu 5: DMZ Setup 572
Figure 358 Menu 5.2: TCP/IP and DHCP Ethernet Setup 572
Figure 359 Menu 5.2.1: IP Alias Setup 573
Figure 360 Menu 6: Route Setup 575
Figure 361 Menu 6.1: Route Assessment 575
Figure 362 Menu 6.2: Traffic Redirect 576
Figure 363 Menu 6.3: Route Failover 577
Figure 364 Menu 7: WLAN Setup 579
Figure 365 Menu 7.2: TCP/IP and DHCP Ethernet Setup 580
Figure 366 Menu 7.2.1: IP Alias Setup 581
Figure 367 Menu 11: Remote Node Setup 583
Figure 368 Menu 11.1: Remote Node Profile for Ethernet Encapsulation 584
Figure 369 Menu 11.1: Remote Node Profile for PPPoE Encapsulation 585
Figure 370 Menu 11.1: Remote Node Profile for PPTP Encapsulation 587
Figure 371 Menu 11.1.2: Remote Node Network Layer Options for Ethernet Encapsulation 588
Figure 372 Menu 11.1.4: Remote Node Filter (Ethernet Encapsulation) 590
Figure 373 Menu 11.1.4: Remote Node Filter (PPPoE or PPTP Encapsulation) 590
Figure 374 Menu 12: IP Static Route Setup 592
Figure 375 Menu 12. 1: Edit IP Static Route 592
Figure 376 Menu 4: Applying NAT for Internet Access 596
Figure 377 Menu 11.1.2: Applying NAT to the Remote Node 596
Figure 378 Menu 15: NAT Setup 597
Figure 379 Menu 15.1: Address Mapping Sets 598
Figure 380 Menu 15.1.255: SUA Address Mapping Rules 598
Figure 381 Menu 15.1.1: First Set 600
Figure 382 Menu 15.1.1.1: Editing/Configuring an Individual Rule in a Set 601

Figure 383 Menu 15.2: NAT Server Sets 602
Figure 384 Menu 15.2.x: NAT Server Sets 603
Figure 385 15.2.x.x: NAT Server Configuration 603
Figure 386 Menu 15.2.1: NAT Server Setup 604
Figure 387 Server Behind NAT Example 605
Figure 388 NAT Example 1 605
Figure 389 Menu 4: Internet Access & NAT Example 606
Figure 390 NAT Example 2 606
Figure 391 Menu 15.2.1: Specifying an Inside Server 607
Figure 392 NAT Example 3 608
Figure 393 Example 3: Menu 11.1.2 608
Figure 394 Example 3: Menu 15.1.1.1 609
Figure 395 Example 3: Final Menu 15.1.1 609
Figure 396 Example 3: Menu 15.2.1 610
Figure 397 NAT Example 4 610
Figure 398 Example 4: Menu 15.1.1.1: Address Mapping Rule 611
Figure 399 Example 4: Menu 15.1.1: Address Mapping Rules 611
Figure 400 Menu 15.3.1: Trigger Port Setup 613
Figure 401 Menu 21: Filter and Firewall Setup 615
Figure 402 Menu 21.2: Firewall Setup 616
Figure 403 Outgoing Packet Filtering Process 617
Figure 404 Filter Rule Process 619
Figure 405 Menu 21: Filter and Firewall Setup 620
Figure 406 Menu 21.1: Filter Set Configuration 620
Figure 407 Menu 21.1.1.1: TCP/IP Filter Rule 622
Figure 408 Executing an IP Filter 624
Figure 409 Menu 21.1.1.1: Generic Filter Rule 625
Figure 410 Telnet Filter Example 626
Figure 411 Example Filter: Menu 21.1.3.1 627
Figure 412 Example Filter Rules Summary: Menu 21.1.3 627
Figure 413 Protocol and Device Filter Sets 628
Figure 414 Filtering LAN Traffic 630
Figure 415 Filtering DMZ Traffic 630
Figure 416 Filtering Remote Node Traffic 631
Figure 417 Menu 22: SNMP Configuration 633
Figure 418 Menu 24: System Maintenance 635
Figure 419 Menu 24.1: System Maintenance: Status 636
Figure 420 Menu 24.2: System Information and Console Port Speed 637
Figure 421 Menu 24.2.1: System Maintenance: Information 638
Figure 422 Menu 24.2.2: System Maintenance: Change Console Port Speed 639
Figure 423 Menu 24.3: System Maintenance: Log and Trace 639
Figure 424 Examples of Error and Information Messages 640
Figure 425 Menu 24.3.2: System Maintenance: Syslog Logging 640

Figure 426 Call-Triggering Packet Example 644
Figure 427 Menu 24.4: System Maintenance: Diagnostic 645
Figure 428 WAN & LAN DHCP 645
Figure 429 Telnet into Menu 24.5 649
Figure 430 FTP Session Example 649
Figure 431 System Maintenance: Backup Configuration 652
Figure 432 System Maintenance: Starting Xmodem Download Screen 652
Figure 433 Backup Configuration Example 652
Figure 434 Successful Backup Confirmation Screen 652
Figure 435 Telnet into Menu 24.6 653
Figure 436 Restore Using FTP Session Example 654
Figure 437 System Maintenance: Restore Configuration 654
Figure 438 System Maintenance: Starting Xmodem Download Screen 654
Figure 439 Restore Configuration Example 655
Figure 440 Successful Restoration Confirmation Screen 655
Figure 441 Telnet Into Menu 24.7.1: Upload System Firmware 656
Figure 442 Telnet Into Menu 24.7.2: System Maintenance 656
Figure 443 FTP Session Example of Firmware File Upload 657
Figure 444 Menu 24.7.1 As Seen Using the Console Port 659
Figure 445 Example Xmodem Upload 659
Figure 446 Menu 24.7.2 As Seen Using the Console Port 660
Figure 447 Example Xmodem Upload 660
Figure 448 Command Mode in Menu 24 661
Figure 449 Valid Commands 662
Figure 450 Call Control 663
Figure 451 Budget Management 664
Figure 452 Call History 665
Figure 453 Menu 24: System Maintenance 666
Figure 454 Menu 24.10 System Maintenance: Time and Date Setting 666
Figure 455 Menu 24.11 – Remote Management Control 670
Figure 456 Menu 25: Sample IP Routing Policy Summary 673
Figure 457 Menu 25.1: IP Routing Policy Setup 675
Figure 458 Menu 25.1.1: IP Routing Policy Setup 677
Figure 459 Example of IP Policy Routing 678
Figure 460 IP Routing Policy Example 1 678
Figure 461 IP Routing Policy Example 2 679
Figure 462 Schedule Setup 681
Figure 463 Schedule Set Setup 682
Figure 464 Applying Schedule Set(s) to a Remote Node (PPPoE) 683
Figure 465 Applying Schedule Set(s) to a Remote Node (PPTP) 684
Figure 466 Wall-mounting Example 698
Figure 467 Masonry Plug and M4 Tap Screw 698
Figure 468 Console/Dial Backup Cable DB-9 End Pin Layout 700

Figure 469 Pop-up Blocker 705
Figure 470 Internet Options: Privacy 706
Figure 471 Internet Options: Privacy 707
Figure 472 Pop-up Blocker Settings 707
Figure 473 Internet Options: Security 708
Figure 474 Security Settings - Java Scripting 709
Figure 475 Security Settings - Java 709
Figure 476 Java (Sun) 710
Figure 477 Mozilla Firefox: Tools > Options 711
Figure 478 Mozilla Firefox Content Security 711
Figure 479 WIndows 95/98/Me: Network: Configuration 714
Figure 480 Windows 95/98/Me: TCP/IP Properties: IP Address 715
Figure 481 Windows 95/98/Me: TCP/IP Properties: DNS Configuration 716
Figure 482 Windows XP: Start Menu 717
Figure 483 Windows XP: Control Panel 717
Figure 484 Windows XP: Control Panel: Network Connections: Properties 718
Figure 485 Windows XP: Local Area Connection Properties 718
Figure 486 Windows XP: Internet Protocol (TCP/IP) Properties 719
Figure 487 Windows XP: Advanced TCP/IP Properties 720
Figure 488 Windows XP: Internet Protocol (TCP/IP) Properties 721
Figure 489 Macintosh OS 8/9: Apple Menu 722
Figure 490 Macintosh OS 8/9: TCP/IP 722
Figure 491 Macintosh OS X: Apple Menu 723
Figure 492 Macintosh OS X: Network 724
Figure 493 Red Hat 9.0: KDE: Network Configuration: Devices 725
Figure 494 Red Hat 9.0: KDE: Ethernet Device: General 725
Figure 495 Red Hat 9.0: KDE: Network Configuration: DNS 726
Figure 496 Red Hat 9.0: KDE: Network Configuration: Activate 726
Figure 497 Red Hat 9.0: Dynamic IP Address Setting in ifconfig-eth0 727
Figure 498 Red Hat 9.0: Static IP Address Setting in ifconfig-eth0 727
Figure 499 Red Hat 9.0: DNS Settings in resolv.conf 727
Figure 500 Red Hat 9.0: Restart Ethernet Card 727
Figure 501 Red Hat 9.0: Checking TCP/IP Properties 728
Figure 502 Network Number and Host ID 730
Figure 503 Subnetting Example: Before Subnetting 732
Figure 504 Subnetting Example: After Subnetting 733
Figure 505 Peer-to-Peer Communication in an Ad-hoc Network 741
Figure 506 Basic Service Set 742
Figure 507 Infrastructure WLAN 743
Figure 508 RTS/CTS 744
Figure 509 WPA(2) with RADIUS Application Example 751
Figure 510 WPA(2)-PSK Authentication 752
Figure 511 Security Certificate 755

Figure 512 Login Screen 756
Figure 513 Certificate General Information before Import 756
Figure 514 Certificate Import Wizard 1 757
Figure 515 Certificate Import Wizard 2 757
Figure 516 Certificate Import Wizard 3 758
Figure 517 Root Certificate Store 758
Figure 518 Certificate General Information after Import 759
Figure 519 ZyWALL Trusted CA Screen 760
Figure 520 CA Certificate Example 761
Figure 521 Personal Certificate Import Wizard 1 761
Figure 522 Personal Certificate Import Wizard 2 762
Figure 523 Personal Certificate Import Wizard 3 762
Figure 524 Personal Certificate Import Wizard 4 763
Figure 525 Personal Certificate Import Wizard 5 763
Figure 526 Personal Certificate Import Wizard 6 763
Figure 527 Access the ZyWALL Via HTTPS 764
Figure 528 SSL Client Authentication 764
Figure 529 ZyWALL Secure Login Screen 764

List of Tables

Table 1 Front Panel Lights 56
Table 2 Title Bar: Web Configurator Icons 60
Table 3 Web Configurator HOME Screen in Router Mode 62
Table 4 Web Configurator HOME Screen in Bridge Mode 67
Table 5 Bridge and Router Mode Features Comparison 70
Table 6 Screens Summary 71
Table 7 HOME > Show Statistics 75
Table 8 HOME > Show Statistics > Line Chart 76
Table 9 HOME > DHCP Table 76
Table 10 HOME > VPN Status 77
Table 11 ADVANCED > BW MGMT > Monitor 78
Table 12 ISP Parameters: Ethernet Encapsulation 82
Table 13 ISP Parameters: PPPoE Encapsulation 84
Table 14 ISP Parameters: PPTP Encapsulation 85
Table 15 Internet Access Wizard: Registration 88
Table 16 VPN Wizard: Gateway Setting 91
Table 17 VPN Wizard: Network Setting 92
Table 18 VPN Wizard: IKE Tunnel Setting 94
Table 19 VPN Wizard: IPSec Setting 96
Table 20 VPN Wizard: VPN Status 97
Table 21 REGISTRATION 142
Table 22 REGISTRATION > Service 144
Table 23 NETWORK > LAN 151
Table 24 NETWORK > LAN > Static DHCP 154
Table 25 NETWORK > LAN > IP Alias 156
Table 26 NETWORK > LAN > Port Roles 157
Table 27 STP Path Costs 160
Table 28 STP Port States 161
Table 29 NETWORK > Bridge 162
Table 30 NETWORK > Bridge > Port Roles 164
Table 31 Least Load First: Example 1 167
Table 32 Least Load First: Example 2 167
Table 33 NETWORK > WAN General 172
Table 34 Load Balancing: Least Load First 174
Table 35 Load Balancing: Weighted Round Robin 175
Table 36 Load Balancing: Spillover 176
Table 37 Private IP Address Ranges 177
Table 38 NETWORK > WAN > WAN 1 (Ethernet Encapsulation) 179

Table 39 NETWORK > WAN > WAN 1 (PPPoE Encapsulation) 182
Table 40 NETWORK > WAN > WAN 1 (PPTP Encapsulation) 185
Table 41 2G, 2.5G, 2.75G, 3G and 3.5G Wireless Technologies 188
Table 42 NETWORK > WAN > WAN 2 (3G WAN) 190
Table 43 NETWORK > WAN > Traffic Redirect 194
Table 44 NETWORK > WAN > Dial Backup 195
Table 45 NETWORK > WAN > Dial Backup > Edit 199
Table 46 NETWORK > DMZ 202
Table 47 NETWORK > DMZ > Static DHCP 205
Table 48 NETWORK > DMZ > IP Alias 206
Table 49 NETWORK > DMZ > Port Roles 210
Table 50 NETWORK > WLAN 213
Table 51 NETWORK > WLAN > Static DHCP 216
Table 52 NETWORK > WLAN > IP Alias 217
Table 53 NETWORK > WLAN > Port Roles 220
Table 54 Types of Encryption for Each Type of Authentication 222
Table 55 WIRELESS > Wi-Fi > Wireless Card 224
Table 56 Configuring SSID 227
Table 57 Security Modes 227
Table 58 WIRELESS > Wi-Fi > Security 228
Table 59 WIRELESS > Wi-Fi > Security: None 229
Table 60 WIRELESS > Wi-Fi > Security: WEP 230
Table 61 WIRELESS > Wi-Fi > Security: 802.1x Only 230
Table 62 WIRELESS > Wi-Fi > Security: 802.1x + Static WEP 231
Table 63 WIRELESS > Wi-Fi > Security: WPA, WPA2 or WPA2-MIX 233
Table 64 WIRELESS > Wi-Fi > Security: WPA(2)-PSK 234
Table 65 WIRELESS > Wi-Fi > MAC Filter 235
Table 66 Blocking All LAN to WAN IRC Traffic Example 249
Table 67 Limited LAN to WAN IRC Traffic Example 249
Table 68 SECURITY > FIREWALL > Default Rule (Router Mode) 252
Table 69 SECURITY > FIREWALL > Default Rule (Bridge Mode) 254
Table 70 SECURITY > FIREWALL > Rule Summary 256
Table 71 SECURITY > FIREWALL > Rule Summary > Edit 259
Table 72 SECURITY > FIREWALL > Anti-Probing 261
Table 73 SECURITY > FIREWALL > Threshold 263
Table 74 SECURITY > FIREWALL > Service 264
Table 75 SECURITY > FIREWALL > Service > Add 266
Table 76 SECURITY > CONTENT FILTER > General 273
Table 77 SECURITY > CONTENT FILTER > Policy 276
Table 78 SECURITY > CONTENT FILTER > Policy > General 277
Table 79 SECURITY > CONTENT FILTER > Policy > External Database 279
Table 80 SECURITY > CONTENT FILTER > Policy > Customization 286
Table 81 SECURITY > CONTENT FILTER > Policy > Schedule 288

Table 82 SECURITY > CONTENT FILTER > Object 289
Table 83 SECURITY > CONTENT FILTER > Cache 292
Table 84 SECURITY > VPN > VPN Rules (IKE) 304
Table 85 VPN Example: Matching ID Type and Content 307
Table 86 VPN Example: Mismatching ID Type and Content 307
Table 87 SECURITY > VPN > VPN Rules (IKE) > Edit Gateway Policy 314
Table 88 SECURITY > VPN > VPN Rules (IKE) > Edit Network Policy 323
Table 89 SECURITY > VPN > VPN Rules (IKE) > Edit Network Policy > Port Forwarding 327
Table 90 SECURITY > VPN > VPN Rules (IKE) > Move Network Policy 328
Table 91 SECURITY > VPN > VPN Rules (Manual) 334
Table 92 SECURITY > VPN > VPN Rules (Manual) > Edit 335
Table 93 SECURITY > VPN > SA Monitor 338
Table 94 SECURITY > VPN > Global Setting 340
Table 95 Telecommuters Sharing One VPN Rule Example 342
Table 96 Telecommuters Using Unique VPN Rules Example 343
Table 97 SECURITY > CERTIFICATES > My Certificates 352
Table 98 SECURITY > CERTIFICATES > My Certificates > Details 354
Table 99 SECURITY > CERTIFICATES > My Certificates > Export 356
Table 100 SECURITY > CERTIFICATES > My Certificates > Import 358
Table 101 SECURITY > CERTIFICATES > My Certificates > Import: PKCS#12 359
Table 102 SECURITY > CERTIFICATES > My Certificates > Create 361
Table 103 SECURITY > CERTIFICATES > Trusted CAs 365
Table 104 SECURITY > CERTIFICATES > Trusted CAs > Details 367
Table 105 SECURITY > CERTIFICATES > Trusted CAs Import 370
Table 106 SECURITY > CERTIFICATES > Trusted Remote Hosts 371
Table 107 SECURITY > CERTIFICATES > Trusted Remote Hosts > Import 372
Table 108 SECURITY > CERTIFICATES > Trusted Remote Hosts > Details 374
Table 109 SECURITY > CERTIFICATES > Directory Servers 376
Table 110 SECURITY > CERTIFICATES > Directory Server > Add 377
Table 111 SECURITY > AUTH SERVER > Local User Database 381
Table 112 SECURITY > AUTH SERVER > RADIUS 381
Table 113 NAT Definitions 385
Table 114 NAT Mapping Types 389
Table 115 ADVANCED > NAT > NAT Overview 390
Table 116 ADVANCED > NAT > Address Mapping 392
Table 117 ADVANCED > NAT > Address Mapping > Edit 394
Table 118 Services and Port Numbers 395
Table 119 ADVANCED > NAT > Port Forwarding 398
Table 120 ADVANCED > NAT > Port Triggering 400
Table 121 ADVANCED > STATIC ROUTE > IP Static Route 403
Table 122 ADVANCED > STATIC ROUTE > IP Static Route > Edit 403
Table 123 ADVANCED > POLICY ROUTE > Policy Route Summary 407
Table 124 ADVANCED > POLICY ROUTE > Edit 408

Table 125 Application and Subnet-based Bandwidth Management Example 412
Table 126 Maximize Bandwidth Usage Example 414
Table 127 Priority-based Allotment of Unused and Unbudgeted Bandwidth Example 414
Table 128 Fairness-based Allotment of Unused and Unbudgeted Bandwidth Example 415
Table 129 Bandwidth Borrowing Example 416
Table 130 Over Allotment of Bandwidth Example 417
Table 131 ADVANCED > BW MGMT > Summary 418
Table 132 ADVANCED > BW MGMT > Class Setup 419
Table 133 ADVANCED > BW MGMT > Class Setup > Add Sub-Class 421
Table 134 Services and Port Numbers 423
Table 135 ADVANCED > BW MGMT > Class Setup > Statistics 424
Table 136 ADVANCED > BW MGMT > Monitor 425
Table 137 ADVANCED > DNS > System DNS 430
Table 138 ADVANCED > DNS > Add (Address Record) 432
Table 139 ADVANCED > DNS > Insert (Name Server Record) 433
Table 140 ADVANCED > DNS > Cache 434
Table 141 ADVANCED > DNS > DHCP 435
Table 142 ADVANCED > DNS > DDNS 437
Table 143 ADVANCED > REMOTE MGMT > WWW 442
Table 144 ADVANCED > REMOTE MGMT > SSH 449
Table 145 ADVANCED > REMOTE MGMT > Telnet 453
Table 146 ADVANCED > REMOTE MGMT > FTP 454
Table 147 SNMP Traps 456
Table 148 ADVANCED > REMOTE MGMT > SNMP 457
Table 149 ADVANCED > REMOTE MGMT > DNS 458
Table 150 ADVANCED > REMOTE MGMT > CNM 459
Table 151 ADVANCED > UPnP 462
Table 152 ADVANCED > UPnP > Ports 463
Table 153 ADVANCED > Custom APP 472
Table 154 ADVANCED > ALG 478
Table 155 LOGS > View Log 482
Table 156 Log Description Example 482
Table 157 LOGS > Log Settings 486
Table 158 LOGS > Reports 488
Table 159 LOGS > Reports: Web Site Hits Report 489
Table 160 LOGS > Reports: Host IP Address 490
Table 161 LOGS > Reports: Protocol/ Port 491
Table 162 Report Specifications 492
Table 163 System Maintenance Logs 492
Table 164 System Error Logs 494
Table 165 Access Control Logs 494
Table 166 TCP Reset Logs 495
Table 167 Packet Filter Logs 495

Table 168 ICMP Logs 495
Table 169 CDR Logs 496
Table 170 PPP Logs 496
Table 171 3G Logs 496
Table 172 UPnP Logs 498
Table 173 Content Filtering Logs 498
Table 174 Attack Logs 499
Table 175 Remote Management Logs 500
Table 176 IPSec Logs 500
Table 177 IKE Logs 501
Table 178 PKI Logs 504
Table 179 Certificate Path Verification Failure Reason Codes 505
Table 180 ACL Setting Notes 506
Table 181 ICMP Notes 506
Table 182 Syslog Logs 508
Table 183 RFC-2408 ISAKMP Payload Types 509
Table 184 MAINTENANCE > General Setup 512
Table 185 MAINTENANCE > Password 513
Table 186 MAINTENANCE > Time and Date 514
Table 187 MAC-address-to-port Mapping Table 517
Table 188 MAINTENANCE > Device Mode (Router Mode) 519
Table 189 MAINTENANCE > Device Mode (Bridge Mode) 520
Table 190 MAINTENANCE > Firmware Upload 522
Table 191 Restore Configuration 524
Table 192 MAINTENANCE > Diagnostics 527
Table 193 Main Menu Commands 533
Table 194 Main Menu Summary 534
Table 195 SMT Menus Overview 535
Table 196 Menu 1: General Setup (Router Mode) 539
Table 197 Menu 1: General Setup (Bridge Mode) 540
Table 198 Menu 1.1: Configure Dynamic DNS 541
Table 199 Menu 1.1.1: DDNS Host Summary 542
Table 200 Menu 1.1.1: DDNS Edit Host 543
Table 201 MAC Address Cloning in WAN Setup 546
Table 202 Menu 2: Dial Backup Setup 547
Table 203 Advanced WAN Port Setup: AT Commands Fields 548
Table 204 Advanced WAN Port Setup: Call Control Parameters 549
Table 205 Menu 11.3: Remote Node Profile (Backup ISP) 550
Table 206 Menu 11.3.2: Remote Node Network Layer Options 551
Table 207 Menu 11.3.3: Remote Node Script 553
Table 208 3G Modem Setup in WAN Setup 555
Table 209 Menu 11.2: Remote Node Profile (3G WAN) 556
Table 210 Menu 3.2: DHCP Ethernet Setup Fields 561

Table 211 Menu 3.2: LAN TCP/IP Setup Fields 562
Table 212 Menu 3.2.1: IP Alias Setup 563
Table 213 Menu 4: Internet Access Setup (Ethernet) 566
Table 214 New Fields in Menu 4 (PPTP) Screen 568
Table 215 New Fields in Menu 4 (PPPoE) screen 569
Table 216 Menu 6.1: Route Assessment 576
Table 217 Menu 6.2: Traffic Redirect 576
Table 218 Menu 6.3: Route Failover 577
Table 219 Menu 11.1: Remote Node Profile for Ethernet Encapsulation 584
Table 220 Fields in Menu 11.1 (PPPoE Encapsulation Specific) 586
Table 221 Menu 11.1: Remote Node Profile for PPTP Encapsulation 587
Table 222 Remote Node Network Layer Options Menu Fields 588
Table 223 Menu 12. 1: Edit IP Static Route 592
Table 224 Applying NAT in Menus 4 & 11.1.2 597
Table 225 SUA Address Mapping Rules 599
Table 226 Fields in Menu 15.1.1 600
Table 227 Menu 15.1.1.1: Editing/Configuring an Individual Rule in a Set 602
Table 228 15.2.x.x: NAT Server Configuration 604
Table 229 Menu 15.3.1: Trigger Port Setup 613
Table 230 Abbreviations Used in the Filter Rules Summary Menu 621
Table 231 Rule Abbreviations Used 621
Table 232 Menu 21.1.1.1: TCP/IP Filter Rule 622
Table 233 Generic Filter Rule Menu Fields 625
Table 234 SNMP Configuration Menu Fields 633
Table 235 SNMP Traps 634
Table 236 System Maintenance: Status Menu Fields 636
Table 237 Fields in System Maintenance: Information 638
Table 238 System Maintenance Menu Syslog Parameters 640
Table 239 System Maintenance Menu Diagnostic 646
Table 240 Filename Conventions 648
Table 241 General Commands for GUI-based FTP Clients 650
Table 242 General Commands for GUI-based TFTP Clients 651
Table 243 Valid Commands 662
Table 244 Budget Management 664
Table 245 Call History 665
Table 246 Menu 24.10 System Maintenance: Time and Date Setting 667
Table 247 Menu 24.11 – Remote Management Control 670
Table 248 Menu 25: Sample IP Routing Policy Summary 673
Table 249 IP Routing Policy Setup 674
Table 250 Menu 25.1: IP Routing Policy Setup 675
Table 251 Menu 25.1.1: IP Routing Policy Setup 677
Table 252 Schedule Set Setup 682
Table 253 Hardware Specifications 693

Table 254 Firmware Specifications 694
Table 255 Feature Specifications 695
Table 256 3G Features Supported By Compatible 3G Cards 696
Table 257 Console Cable Pin Assignments 700
Table 258 Console Cable Pin Assignments 700
Table 259 Ethernet Cable Pin Assignments 701
Table 260 IP Address Network Number and Host ID Example 730
Table 261 Subnet Masks 731
Table 262 Maximum Host Numbers 731
Table 263 Alternative Subnet Mask Notation 731
Table 264 Subnet 1 733
Table 265 Subnet 2 734
Table 266 Subnet 3 734
Table 267 Subnet 4 734
Table 268 Eight Subnets 734
Table 269 24-bit Network Number Subnet Planning 735
Table 270 16-bit Network Number Subnet Planning 735
Table 271 Commonly Used Services 737
Table 272 IEEE 802.11g 745
Table 273 Wireless Security Levels 746
Table 274 Comparison of EAP Authentication Types 749
Table 275 Wireless Security Relational Matrix 752

PART I
Introduction

Getting to Know Your ZyWALL (53)
Introducing the Web Configurator (57)
Wizard Setup (81)
Tutorial (101)
Registration (141)

1

Getting to Know Your ZyWALL

This chapter introduces the main features and applications of the ZyWALL.

1.1 ZyWALL Internet Security Appliance Overview

The ZyWALL is loaded with security features including VPN, firewall, content filtering and certificates. The ZyWALL's De-Militarized Zone (DMZ) increases LAN security by providing separate ports for connecting publicly accessible servers. The ZyWALL is designed for small and medium sized business that need the increased throughput and reliability of dual WAN interfaces and load balancing. The ZyWALL provides the option to change port roles from LAN to DMZ.

You can also deploy the ZyWALL as a transparent firewall in an existing network with minimal configuration.

The ZyWALL provides bandwidth management, NAT, port forwarding, policy routing, DHCP server and many other powerful features.

The ZyWALL has a built-in wireless card that allows IEEE 802.11a, IEEE 802.11b or IEEE 802.11g compatible clients to securely communicate with the ZyWALL and access the wired network behind it. You can use the wireless card as part of the LAN, DMZ or WLAN.

Note: Only use firmware for your ZyWALL's specific model.

See Chapter 49 on page 693 for a complete list of features.

1.2 Ways to Manage the ZyWALL

Use any of the following methods to manage the ZyWALL.

- Web Configurator. This is recommended for everyday management of the ZyWALL using a (supported) web browser.
- Command Line Interface. Line commands are mostly used for troubleshooting by service engineers.
- SMT. System Management Terminal is a text-based configuration menu that you can use to configure your device.
- FTP for firmware upgrades and configuration backup/restore.
- SNMP. The device can be monitored by an SNMP manager. See the SNMP chapter in this User's Guide.

- Vantage CNM (Centralized Network Management). The device can be remotely managed using a Vantage CNM server.

1.3 Good Habits for Managing the ZyWALL

Do the following things regularly to make the ZyWALL more secure and to manage the ZyWALL more effectively.

- Change the password. Use a password that's not easy to guess and that consists of different types of characters, such as numbers and letters.
- Write down the password and put it in a safe place.
- Back up the configuration (and make sure you know how to restore it). Restoring an earlier working configuration may be useful if the device becomes unstable or even crashes. If you forget your password, you will have to reset the ZyWALL to its factory default settings. If you backed up an earlier configuration file, you would not have to totally re-configure the ZyWALL. You could simply restore your last configuration.

1.4 Applications for the ZyWALL


Here are some examples of what you can do with your ZyWALL.

1.4.1 Secure Broadband Internet Access via Cable or DSL Modem

For Internet access, connect the WAN Ethernet port to your existing Internet access gateway (company network, or your cable or DSL modem for example). Connect computers or servers to the LAN, DMZ or WLAN ports for shared Internet access.

The ZyWALL guarantees not only high speed Internet access, but secure internal network protection and traffic management as well.


Figure 1 Secure Internet Access via Cable or DSL Modem

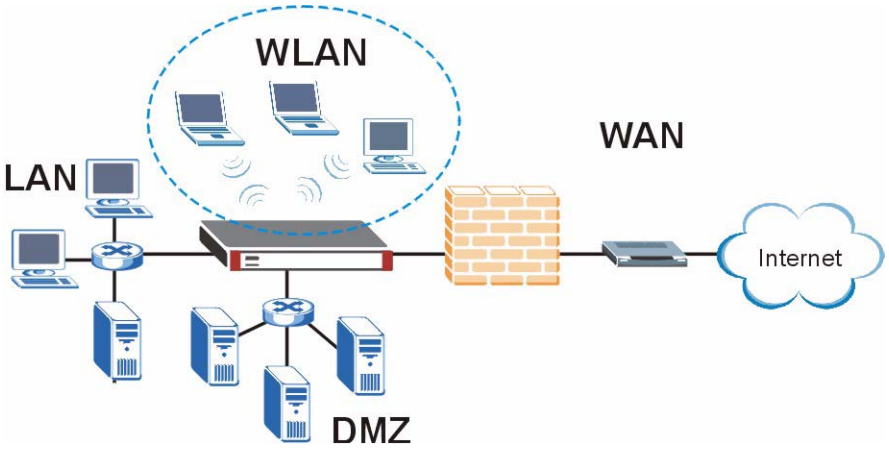

1.4.2 VPN Application

ZyWALL VPN is an ideal cost-effective way to securely connect branch offices, business partners and telecommuters over the Internet without the need (and expense) for leased lines between sites.

Figure 2 VPN Application

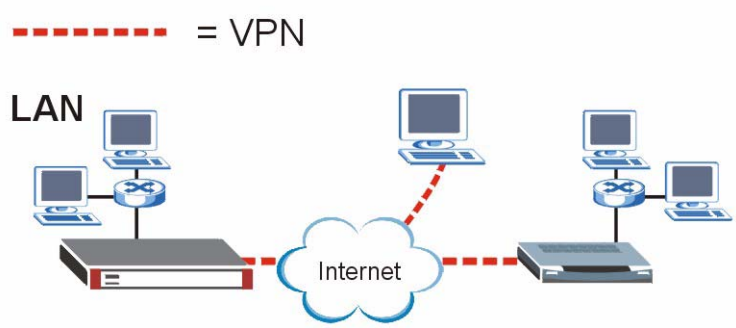


1.4.3 3G WAN Application

Insert a 3G card to have the ZyWALL (in router mode) wirelessly access the Internet via a 3G base station. See Section 8.13 on page 187 for more information about 3G.


With both the primary WAN (physical WAN port) and 3G WAN connections enabled, you can use load balancing to improve quality of service and maximize bandwidth utilization or set one of the WAN connections as a backup.

Figure 3 3G WAN Application

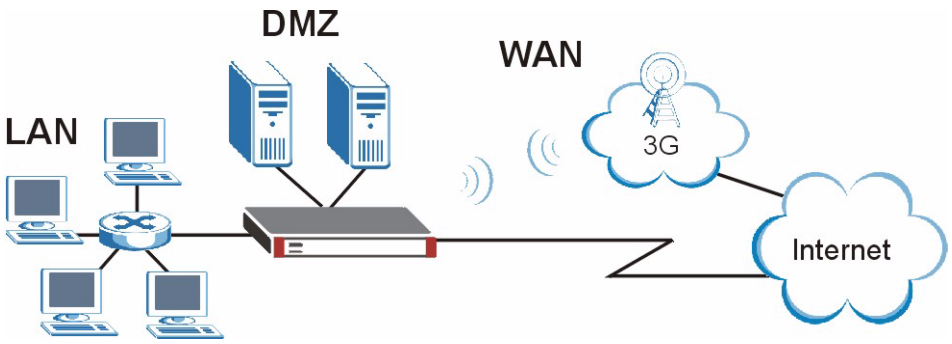

1.4.4 Front Panel Lights

Figure 4 Front Panel

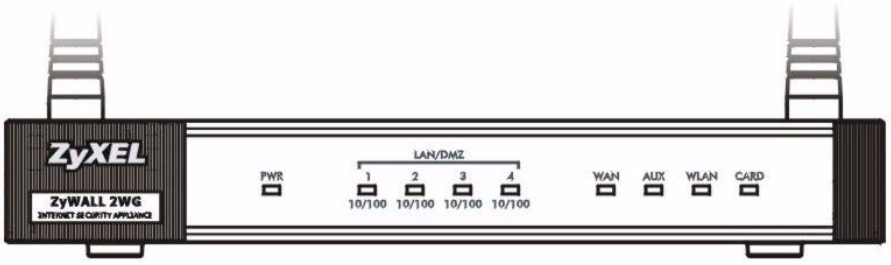

The following table describes the lights.

Table 1 Front Panel Lights

LED	COLOR	STATUS	DESCRIPTION
PWR		Off	The ZyWALL is turned off.
	Green	On	The ZyWALL is ready and running.
		Flashing	The ZyWALL is restarting.
	Red	On	The power to the ZyWALL is too low.
LAN/DMZ 10/ 100		Off	The LAN/DMZ is not connected.
	Green	On	The ZyWALL has a successful 10Mbps Ethernet connection.
		Flashing	The 10M LAN is sending or receiving packets.
	Orange	On	The ZyWALL has a successful 100Mbps Ethernet connection.
		Flashing	The 100M LAN is sending or receiving packets.
WAN		Off	The WAN connection is not ready, or has failed.
	Green	On	The ZyWALL has a successful 10Mbps WAN connection.
		Flashing	The 10M WAN is sending or receiving packets.
	Orange	On	The ZyWALL has a successful 100Mbps WAN connection.
		Flashing	The 100M WAN is sending or receiving packets.
AUX	Green	Off	The backup port is not connected.
		On	The backup port is connected.
		Flashing	The backup port is sending or receiving packets.
WLAN	Green	Off	The wireless LAN through the built-in wireless LAN card is not ready, or has failed.
		On	The wireless LAN through the built-in wireless LAN card is ready.
		Flashing	The wireless LAN through the built-in wireless LAN card is sending or receiving packets.
CARD		Off	There is no 3G card inserted in the ZyWALL.
	Green	On	A 3G card is inserted and detected by the ZyWALL.
	Orange	On	The 3G WAN connection is ready.
		Flashing	The 3G WAN is sending or receiving packets.

2

Introducing the Web Configurator

This chapter describes how to access the ZyWALL web configurator and provides an overview of its screens.

2.1 Web Configurator Overview

The web configurator is an HTML-based management interface that allows easy ZyWALL setup and management via Internet browser. Use Internet Explorer 6.0 and later or Netscape Navigator 7.0 and later versions. The recommended screen resolution is 1024 by 768 pixels.

In order to use the web configurator you need to allow:

- Web browser pop-up windows from your device. Web pop-up blocking is enabled by default in Windows XP SP (Service Pack) 2.
- JavaScripts (enabled by default).
- Java permissions (enabled by default).

See Appendix A on page 705 if you want to make sure these functions are allowed in Internet Explorer or Netscape Navigator.

2.2 Accessing the ZyWALL Web Configurator




By default, the packets from WLAN to WLAN/ZyWALL are dropped and users cannot configure the ZyWALL wirelessly.

1. Make sure your ZyWALL hardware is properly connected and prepare your computer/computer network to connect to the ZyWALL (refer to the Quick Start Guide).
2. Launch your web browser.
3. Type "192.168.1.1" as the URL.
4. Type "1234" (default) as the password and click **Login**. In some versions, the default password appears automatically - if this is the case, click **Login**.

5 You should see a screen asking you to change your password (highly recommended) as shown next. Type a new password (and retype it to confirm) and click **Apply** or click **Ignore**.

Figure 5 Change Password Screen

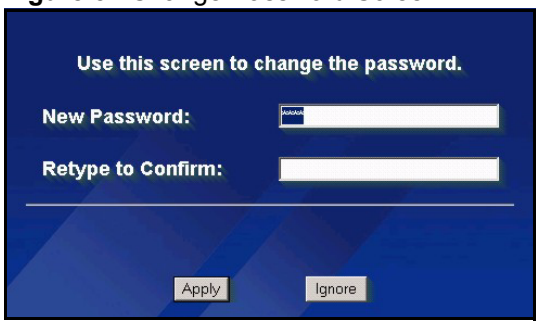

6 Click **Apply** in the **Replace Certificate** screen to create a certificate using your ZyWALL's MAC address that will be specific to this device.

If you do not replace the default certificate here or in the **CERTIFICATES** screen, this screen displays every time you access the web configurator.

Figure 6 Replace Certificate Screen



7 You should now see the **HOME** screen (see Figure 9 on page 61).

The management session automatically times out when the time period set in the **Administrator Inactivity Timer** field expires (default five minutes). Simply log back into the ZyWALL if this happens to you.

2.3 Resetting the ZyWALL

If you forget your password or cannot access the web configurator, you will need to reload the factory-default configuration file or use the **RESET** button on the back of the ZyWALL. Uploading this configuration file replaces the current configuration file with the factory-default configuration file. This means that you will lose all configurations that you had previously and the speed of the console port will be reset to the default of 9600bps with 8 data bit, no parity, one stop bit and flow control set to none. The password will be reset to 1234, also.

2.3.1 Procedure To Use The Reset Button


Make sure the **PWR** LED is on (not blinking) before you begin this procedure.

1. Press the **RESET** button for ten seconds, and then release it. If the **PWR** LED begins to blink, the defaults have been restored and the ZyWALL restarts. Otherwise, go to step 2.
2. Turn the ZyWALL off.
3. While pressing the **RESET** button, turn the ZyWALL on.
4. Continue to hold the **RESET** button. The **PWR** LED will begin to blink and flicker very quickly after about 20 seconds. This indicates that the defaults have been restored and the ZyWALL is now restarting.
5. Release the **RESET** button and wait for the ZyWALL to finish restarting.

2.3.2 Uploading a Configuration File Via Console Port

1. Download the default configuration file from the ZyXEL FTP site, unzip it and save it in a folder.
2. Turn off the ZyWALL, begin a terminal emulation software session and turn on the ZyWALL again. When you see the message "Press Any key to enter Debug Mode within 3 seconds", press any key to enter debug mode.
3. Enter "y" at the prompt below to go into debug mode.
4. Enter "atlc" after "Enter Debug Mode" message.
5. Wait for "Starting XMODEM upload" message before activating Xmodem upload on your terminal. This is an example Xmodem configuration upload using HyperTerminal.

Figure 7 Example Xmodem Upload

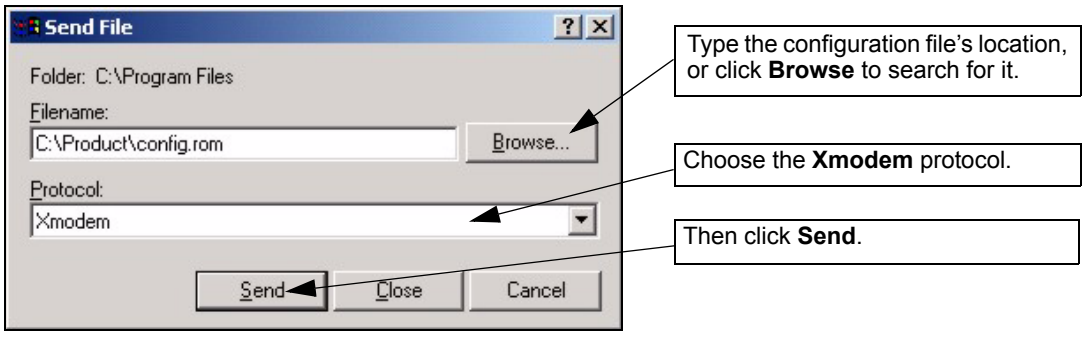


6. After successful firmware upload, enter "atgo" to restart the router.

2.4 Navigating the ZyWALL Web Configurator

The following summarizes how to navigate the web configurator from the **HOME** screen.

Figure 8 HOME Screen

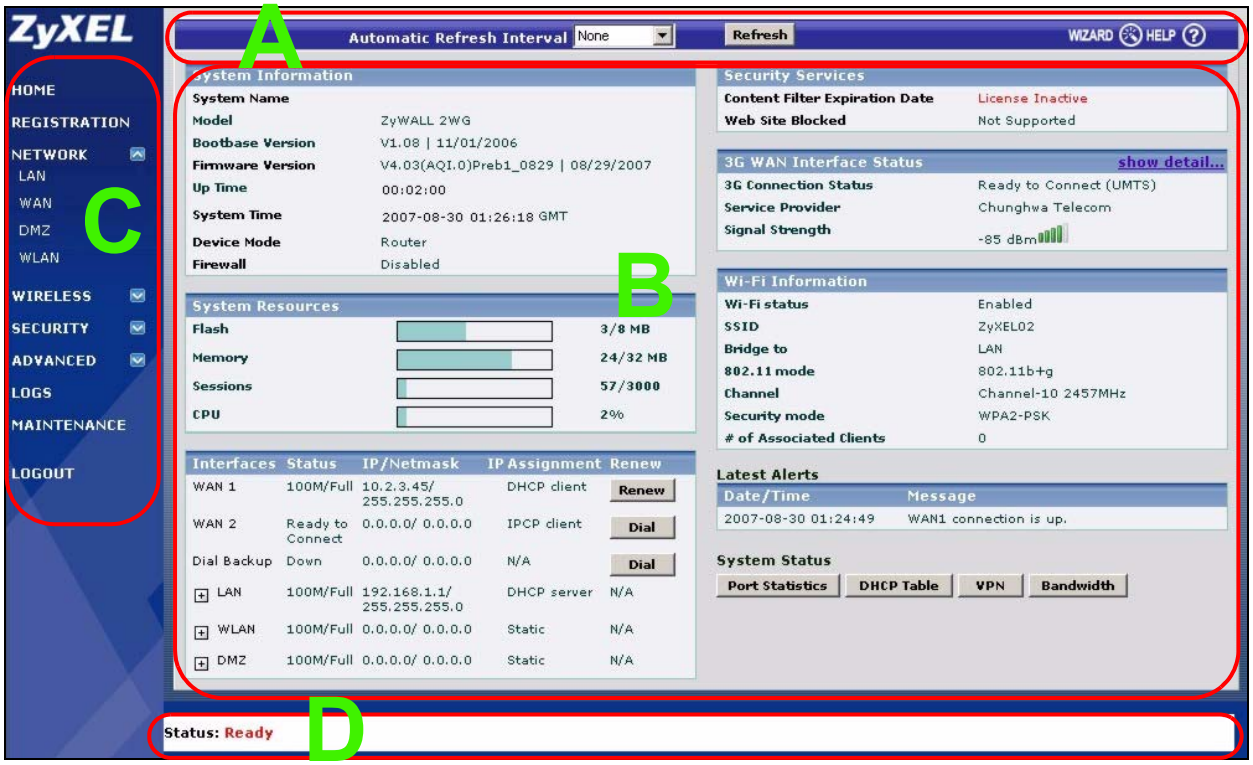

As illustrated above, the main screen is divided into these parts:

- **A** - title bar
- **B** - main window
- **C** - navigation panel
- **D** - status bar

2.4.1 Title Bar

The title bar provides some icons in the upper right corner.

The icons provide the following functions.

Table 2 Title Bar: Web Configurator Icons

ICON	DESCRIPTION
WIZARD	**Wizard**: Click this icon to open one of the web configurator wizards. See Chapter 3 on page 81 for more information.
HELP	**Help**: Click this icon to open the help page for the current screen.

2.4.2 Main Window

The main window shows the screen you select in the navigation panel. It is discussed in more detail in the rest of this document.


Right after you log in, the **HOME** screen is displayed. The screen varies according to the device mode you select in the **MAINTENANCE > Device Mode** screen.

2.4.3 HOME Screen: Router Mode

The following screen displays when the ZyWALL is set to router mode. This screen displays general status information about the ZyWALL. The ZyWALL is set to router mode by default.

WAN 2 refers to the 3G card on the supported ZyWALL in router mode.

Figure 9 Web Configurator HOME Screen in Router Mode

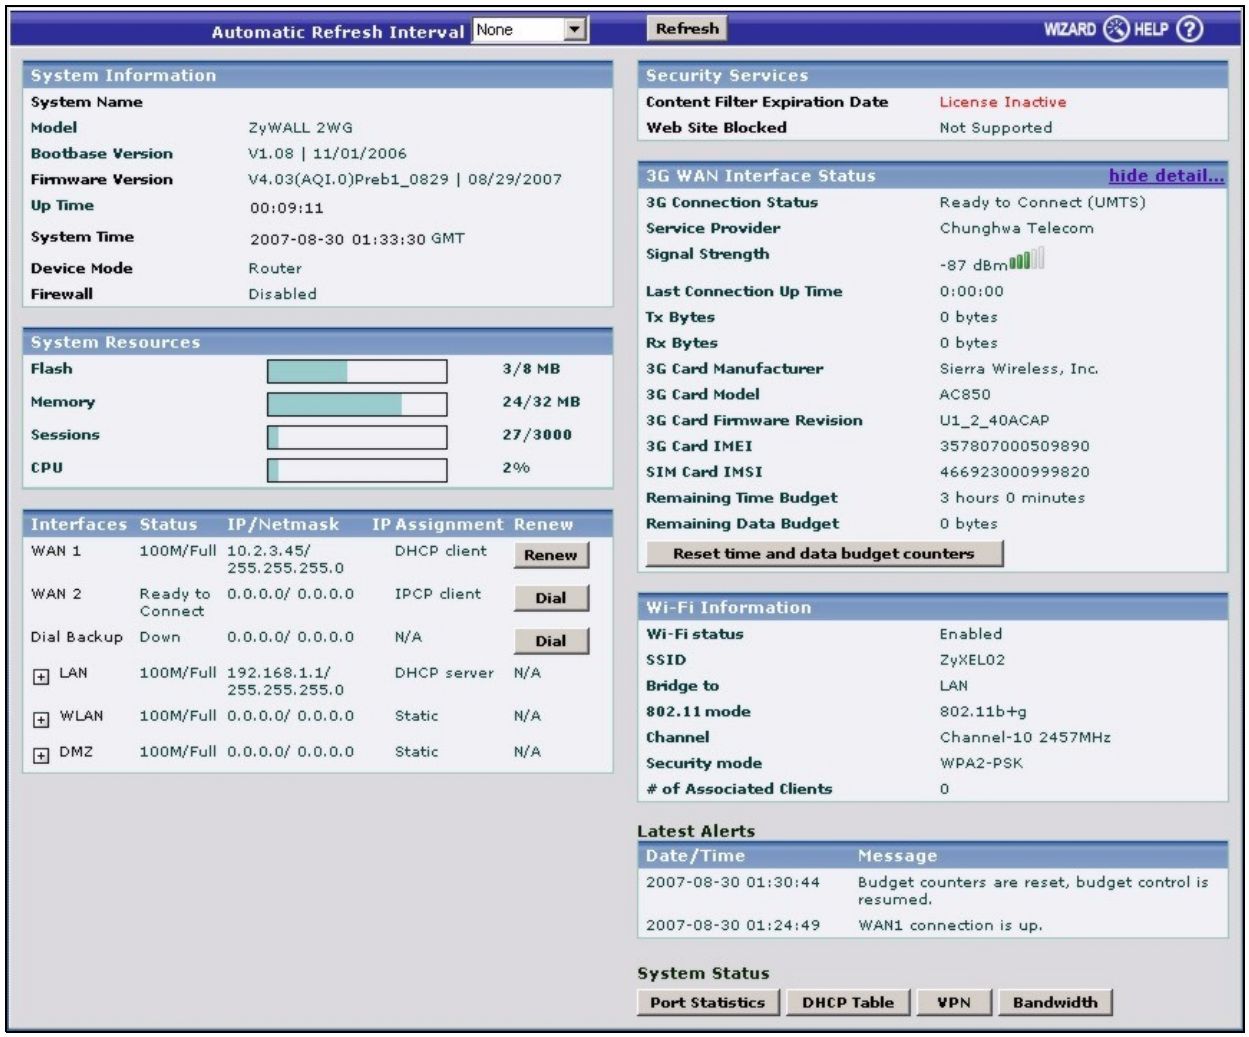

The following table describes the labels in this screen.

Table 3 Web Configurator HOME Screen in Router Mode

LABEL	DESCRIPTION
Automatic Refresh Interval	Select a number of seconds or **None** from the drop-down list box to update all screen statistics automatically at the end of every time interval or to not update the screen statistics.
Refresh	Click this button to update the status screen statistics immediately.
System Information	
System Name	This is the **System Name** you enter in the **MAINTENANCE > General** screen. It is for identification purposes. Click the field label to go to the screen where you can specify a name for this ZyWALL.
Model	This is the model name of your ZyWALL.
Bootbase Version	This is the bootbase version and the date created.
Firmware Version	This is the ZyNOS firmware version and the date created. ZyNOS is ZyXEL's proprietary Network Operating System design. Click the field label to go to the screen where you can upload a new firmware file.
Up Time	This field displays how long the ZyWALL has been running since it last started up. The ZyWALL starts up when you turn it on, when you restart it (**MAINTENANCE > Restart**), or when you reset it (see Section 2.3 on page 59).
System Time	This field displays your ZyWALL's present date (in yyyy-mm-dd format) and time (in hh:mm:ss format) along with the difference from the Greenwich Mean Time (GMT) zone. The difference from GMT is based on the time zone. It is also adjusted for Daylight Saving Time if you set the ZyWALL to use it. Click the field label to go to the screen where you can modify the ZyWALL's date and time settings.
Device Mode	This displays whether the ZyWALL is functioning as a router or a bridge. Click the field label to go to the screen where you can configure the ZyWALL as a router or a bridge.
Firewall	This displays whether or not the ZyWALL's firewall is activated. Click the field label to go to the screen where you can turn the firewall on or off.
System Resources	
Flash	The first number shows how many megabytes of the flash the ZyWALL is using.
Memory	The first number shows how many megabytes of the heap memory the ZyWALL is using. Heap memory refers to the memory that is not used by ZyNOS (ZyXEL Network Operating System) and is thus available for running processes like NAT, VPN and the firewall. The second number shows the ZyWALL's total heap memory (in megabytes). The bar displays what percent of the ZyWALL's heap memory is in use. The bar turns from green to red when the maximum is being approached.
Sessions	The first number shows how many sessions are currently open on the ZyWALL. This includes all sessions that are currently traversing the ZyWALL, terminating at the ZyWALL or Initiated from the ZyWALL The second number is the maximum number of sessions that can be open at one time. The bar displays what percent of the maximum number of sessions is in use. The bar turns from green to red when the maximum is being approached.
CPU	This field displays what percentage of the ZyWALL's processing ability is currently used. When this percentage is close to 100%, the ZyWALL is running at full load, and the throughput is not going to improve anymore. If you want some applications to have more throughput, you should turn off other applications (for example, using bandwidth management).

Table 3 Web Configurator HOME Screen in Router Mode (continued)

LABEL	DESCRIPTION
Interfaces	This is the port type. Click "+" to expand or "-" to collapse the IP alias drop-down lists. Hold your cursor over an interface's label to display the interface's MAC address. Click an interface's label to go to the screen where you can configure settings for that interface.
Status	For the LAN, DMZ and WLAN ports, this displays the port speed and duplex setting. Ethernet port connections can be in half-duplex or full-duplex mode. Full-duplex refers to a device's ability to send and receive simultaneously, while half-duplex indicates that traffic can flow in only one direction at a time. The Ethernet port must use the same speed or duplex mode setting as the peer Ethernet port in order to connect. For the WAN 1 and the Dial Backup ports, it displays the port speed and duplex setting if you're using Ethernet encapsulation or the remote node name (configured through the SMT) for a PPP connection and **Down** (line is down or not connected), **Idle** (line (ppp) idle), **Dial** (starting to trigger a call) or **Drop** (dropping a call) if you're using PPPoE encapsulation. For the WAN 2 interface, it displays **Connected** when the 3G connection is up, **Connecting** when the 3G card is trying to connect to a network but has not received a response from the base station, **Ready to Connect** when the 3G connection is idle, **Initializing** when the ZyWALL is configuring the 3G card with AT commands, **Disconnecting** when the ZyWALL is dropping the 3G connection or **Down** when the 3G connection is down.
IP/Netmask	This shows the port's IP address and subnet mask.
IP Assignment	For the WAN, if the ZyWALL gets its IP address automatically from an ISP, this displays **DHCP client** when you're using Ethernet encapsulation and **IPCP Client** when you're using PPPoE or PPTP encapsulation. **Static** displays if the WAN port is using a manually entered static (fixed) IP address. For the LAN, WLAN or DMZ, **DHCP server** displays when the ZyWALL is set to automatically give IP address information to the computers connected to the LAN. **DHCP relay** displays when the ZyWALL is set to forward IP address assignment requests to another DHCP server. Static displays if the LAN port is using a manually entered static (fixed) IP address. In this case, you must have another DHCP server on your LAN, or else the computers must be manually configured. For the dial backup port, this shows **N/A** when dial backup is disabled and **IPCP client** when dial backup is enabled.
Renew	If you are using Ethernet encapsulation and the WAN port is configured to get the IP address automatically from the ISP, click **Renew** to release the WAN port's dynamically assigned IP address and get the IP address afresh. Click **Dial** to dial up the PPTP, PPPoE, 3G WAN or dial backup connection. Click **Drop** to disconnect the PPTP, PPPoE, 3G WAN or dial backup connection.
Security Services	
Content Filter Expiration Date	This is the date the category-based content filtering service subscription expires. This displays **License Inactive** when the ZyWALL is not registered or the subscription service is not activated. Click the field label to go to the screen where you can update your service subscription.
Web Site Blocked	This displays how many web site hits the ZyWALL has blocked since it last started up. **Disable** displays when the feature is not activated. **Not Supported** displays when the ZyWALL is not registered. Click the field label to go to the screen where you can enable this feature.
3G WAN Interface Status	The fields below display when a 3G card is inserted and WAN 2 is enabled.
show detail.../hide detail...	Click **show detail...** to see more information about the 3G connection and 3G card. Click **hide detail...** to display less information about the 3G connection and 3G card.

Table 3 Web Configurator HOME Screen in Router Mode (continued)

LABEL	DESCRIPTION
3G Connection Status	This displays **Down** when the 3G connection is down or not activated. This displays **Initializing** when the ZyWALL is configuring the 3G card with AT commands. This displays **Ready to Connect** when the 3G connection is idle before the ZyWALL triggers a call. This displays **Connecting** when the 3G card is trying to connect to a network but has not received a response from the base station. This displays **Connected** when the 3G connection is up. This displays **Disconnecting** when the ZyWALL is dropping the 3G connection. This field also displays whether the ZyWALL is connected to a **UMTS/HSDPA** network or **GPRS/EDGE** network. This field also displays the type of the network to which the the ZyWALL is connected. The network type varies depending on the 3G card you inserted and could be **UMTS**, **HSDPA**, **GPRS** or **EDGE** when you insert a GSM 3G card, or **1xRTT**, **EVDO Rev.0** or **EVDO Rev.A** when you insert a CDMA 3G card.
Service Provider	This displays the name of your network service provider or **Limited Service** when the signal strength is too low or the ISP is limiting your access.
Roaming Network	This field is available only when you insert a 3G card that supports the roaming feature. This displays whether the card is able to connect to other ISPs' base stations.
Dormant State	This field is available only when you insert a 3G card that supports the dormant state. This displays whether the card is in dormant state. When there is no data transmitting, a card does not send a radio signal and is in dormant state to reduce bandwidth usage.
Signal Strength	This displays the signal strength of the wireless network in dBm. The status bar shows the strength of the signal. The signal strength mainly depends on the antenna output power and the distance between your ZyWALL and the service provider's base station. You can see a signal strength indication even when the ZyWALL does not have a 3G connection (because the signal is still there even when the ZyWALL is not using it).
Last Connection Up Time	This displays how long the 3G connection has been up.
Tx Bytes	This displays the total number of data frames transmitted.
Rx Bytes	This displays the total number of data frames received.
3G Card Manufacturer	This displays the manufacturer of your 3G card.
3G Card Model	This displays the model name of your 3G card.
3G Card Firmware Revision	This displays the version of the firmware currently used in the 3G card.
3G Card IMEI	This field is available only when you insert a GSM (Global System for Mobile Communications) or UMTS (Universal Mobile Telecommunications System) 3G card. This displays the International Mobile Equipment Identity (IMEI) which is the serial number of the GSM or UMTS 3G wireless card. The IMEI is a unique 15-digit number used to identify a mobile device.
SIM Card IMSI	This field is available only when you insert a GSM or UMTS 3G card. This displays the International Mobile Subscriber Identity (IMSI) stored in the SIM (Subscriber Identity Module) card. The SIM card is installed in a mobile device and used for authenticating a customer to the carrier network. The IMSI is a unique 15-digit number used to identify a user on a network.

Table 3 Web Configurator HOME Screen in Router Mode (continued)

LABEL	DESCRIPTION
3G Card ESN	This field is available only when you insert a CDMA (Code Division Multiple Access) 3G card. This shows the ESN (Electronic Serial Number) of the inserted CDMA 3G card. The ESN is the serial number of a CDMA 3G card and is similar to the IMEI on a GSM or UMTS 3G card.
Enter PIN code again	If the PIN code you specified in the **WAN 2** screen is not the right one for the card you inserted, this field displays allowing you to enter the correct PIN code. Enter the PIN code (four to eight digits) for the inserted 3G card.
Apply	Click **Apply** to save the correct PIN code and replace the one you specified in the **WAN 2** screen.
PUK Code	If you enter the PIN code incorrectly three times, the SIM card will be blocked by your ISP and you cannot use the account to access the Internet. You should get the PUK (Personal Unblocking Key) code (four to eight digits) from your ISP. Enter the PUK code to enable the SIM card. If an incorrect PUK code is entered 10 times, the SIM card will be disabled permanently. You then need to contact your ISP for a new SIM card.
New PIN Code	Configure a PIN code for the SIM card. You can specify any four to eight digits to have a new PIN code or enter the previous PIN code.
Confirm New PIN Code	Enter the PIN code again for confirmation.
Apply	Click **Apply** to save your changes in this section.
Reset budget counters, resume budget control	This field displays if you have enabled budget control but insert a 3G card with a different user account from the one for which you configured budget control. Select this option to have the ZyWALL do budget calculation starting from 0 but use the previous settings.
Resume budget control	This field displays if you have enabled budget control but insert a 3G card with a different user account from the one for which you configured budget control. Select this option to have the ZyWALL keep the existing statistics and continue counting.
Disable budget control	This field displays if you have enabled budget control but insert a 3G card with a different user account from the one for which you configured budget control. Select this option to disable budget control. If you want to enable and configure new budget control settings for the new user account, go to the **WAN 2** screen. The ZyWALL keeps the existing statistics if you do not change the budget control settings. You could reinsert the original card and enable budget control to have the ZyWALL continue counting the budget control statistics.
Apply	Click **Apply** to save your changes in this section.
Enter modem unlock code	This field only displays when you insert a 3G card and the internal modem on the 3G card is blocked. Enter a key to enable the internal modem on your 3G card. By default, the key is the last four digits of your phone number used to dial up the 3G connection. Otherwise, you need to get the key from your service provider.
Apply	Click **Apply** to save your changes in this section.
Remaining Time Budget	This field is available only when you enable budget control in the **3G (WAN 2)** screen. This shows the amount of time (in hours and minutes) the 3G connection can still be used before the ZyWALL takes the actions you specified in the **3G (WAN 2)** screen.

Table 3 Web Configurator HOME Screen in Router Mode (continued)

LABEL	DESCRIPTION
Remaining Data Budget	This field is available only when you enable budget control in the **Network > WAN > 3G (WAN 2)** screen. This shows how much data (in bytes) can still be transmitted through the 3G connection before the ZyWALL takes the actions you specified in the **3G (WAN 2)** screen. Note: The budget counters will not be reset when you restore the factory defaults. The budget counters are saved to the flash every hour or when the 3G connection is dropped. If you restart the ZyWALL within one hour, any change in the counters will not be saved.
Reset time and data budget counters	This button is available only when you enable budget control in the **3G (WAN 2)** screen. Click this button to reset the time and data budgets. The count starts over with the 3G connection's full configured monthly time and data budgets. This does not affect the normal monthly budget restart.
Wi-Fi Information	
Wi-Fi status	This displays whether or not the wireless LAN card is activated.
SSID	This displays a descriptive name used to identify the ZyWALL in the wireless LAN.
Bridge to	This displays whether the wireless LAN card is used as part of the LAN, DMZ or WLAN.
802.11 mode	This displays the wireless standard (**802.11a**, **802.11b**, **802.11g** or **802.11b+g**) of the wireless LAN.
Channel	This displays the radio channel the ZyWALL is currently using for the wireless LAN.
Security mode	This shows the type of wireless security the ZyWALL is using.
# of Associated Clients	This shows the number of the wireless client(s) connected to the ZyWALL.
Latest Alerts	This table displays the five most recent alerts recorded by the ZyWALL. You can see more information in the **View Log** screen, such as the source and destination IP addresses and port numbers of the incoming packets.
Date/Time	This is the date and time the alert was recorded.
Message	This is the reason for the alert.
System Status	
Port Statistics	Click **Port Statistics** to see router performance statistics such as the number of packets sent and number of packets received for each port.
DHCP Table	Click **DHCP Table** to show current DHCP client information.
VPN	Click **VPN** to display the active VPN connections.
Bandwidth	Click **Bandwidth** to view the ZyWALL's bandwidth usage and allotments.


2.4.4 HOME Screen: Bridge Mode

The following screen displays when the ZyWALL is set to bridge mode. In bridge mode, the ZyWALL functions as a transparent firewall (also known as a bridge firewall). The ZyWALL bridges traffic traveling between the ZyWALL's interfaces and still filters and inspects packets. You do not need to change the configuration of your existing network.

In bridge mode, the ZyWALL cannot get an IP address from a DHCP server. The LAN, WAN, DMZ and WLAN interfaces all have the same (static) IP address and subnet mask. You can configure the ZyWALL's IP address in order to access the ZyWALL for management. If you connect your computer directly to the ZyWALL, you also need to assign your computer a static IP address in the same subnet as the ZyWALL's IP address in order to access the ZyWALL.

You can use the firewall and VPN in bridge mode. See the user's guide for a list of other features that are available in bridge mode.

Figure 10 Web Configurator HOME Screen in Bridge Mode

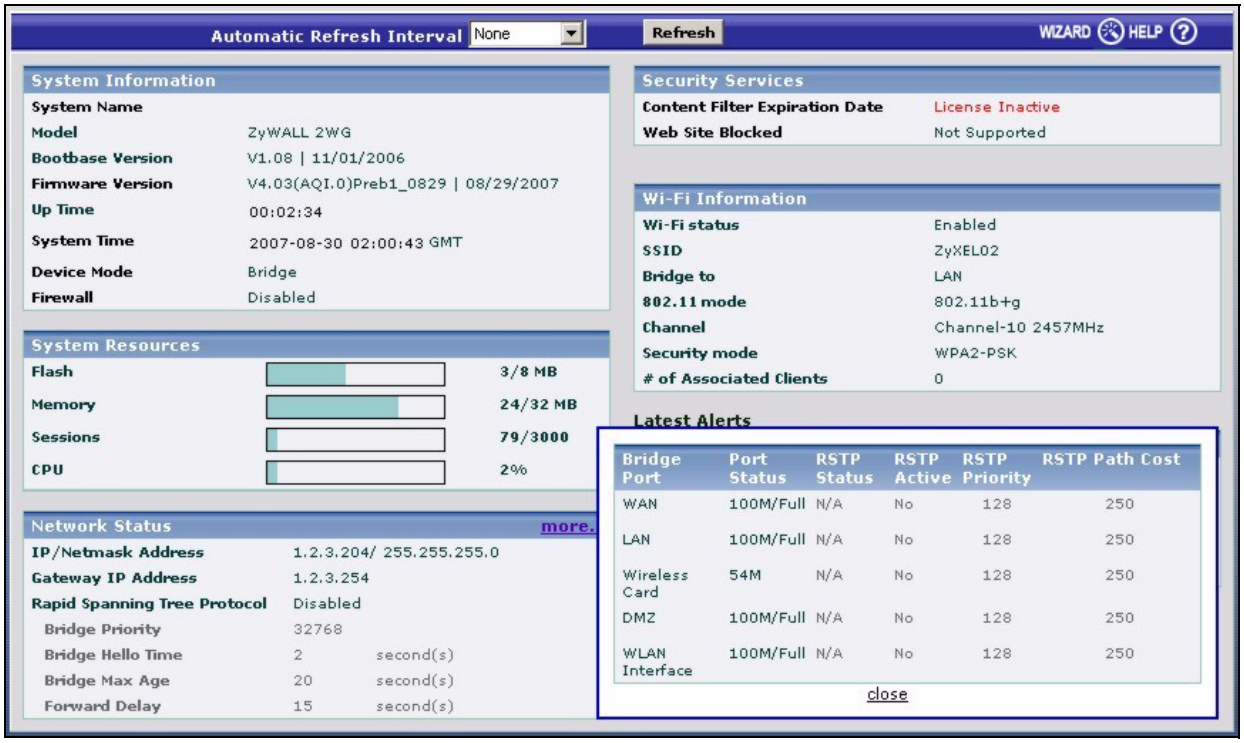

The following table describes the labels in this screen.

Table 4 Web Configurator HOME Screen in Bridge Mode

LABEL	DESCRIPTION
Automatic Refresh Interval	Select a number of seconds or **None** from the drop-down list box to update all screen statistics automatically at the end of every time interval or to not update the screen statistics.
Refresh	Click this button to update the screen's statistics immediately.
System Information	

Table 4 Web Configurator HOME Screen in Bridge Mode (continued)

LABEL	DESCRIPTION
System Name	This is the **System Name** you enter in the **MAINTENANCE > General** screen. It is for identification purposes. Click the field label to go to the screen where you can specify a name for this ZyWALL.
Model	This is the model name of your ZyWALL.
Bootbase Version	This is the bootbase version and the date created.
Firmware Version	This is the ZyNOS Firmware version and the date created. ZyNOS is ZyXEL's proprietary Network Operating System design. Click the field label to go to the screen where you can upload a new firmware file.
Up Time	This field displays how long the ZyWALL has been running since it last started up. The ZyWALL starts up when you turn it on, when you restart it (**MAINTENANCE > Restart**), or when you reset it (see Section 2.3 on page 59).
System Time	This field displays your ZyWALL's present date (in yyyy-mm-dd format) and time (in hh:mm:ss format) along with the difference from the Greenwich Mean Time (GMT) zone. The difference from GMT is based on the time zone. It is also adjusted for Daylight Saving Time if you set the ZyWALL to use it. Click the field label to go to the screen where you can modify the ZyWALL's date and time settings.
Device Mode	This displays whether the ZyWALL is functioning as a router or a bridge. Click the field label to go to the screen where you can configure the ZyWALL as a router or a bridge.
Firewall	This displays whether or not the ZyWALL's firewall is activated. Click the field label to go to the screen where you can turn the firewall on or off.
System Resources	
Flash	The first number shows how many megabytes of the flash the ZyWALL is using.
Memory	The first number shows how many megabytes of the heap memory the ZyWALL is using. Heap memory refers to the memory that is not used by ZyNOS (ZyXEL Network Operating System) and is thus available for running processes like NAT, VPN and the firewall. The second number shows the ZyWALL's total heap memory (in megabytes). The bar displays what percent of the ZyWALL's heap memory is in use. The bar turns from green to red when the maximum is being approached.
Sessions	The first number shows how many sessions are currently open on the ZyWALL. This includes all sessions that are currently traversing the ZyWALL, terminating at the ZyWALL or initiated from the ZyWALL The second number is the maximum number of sessions that can be open at one time. The bar displays what percent of the maximum number of sessions is in use. The bar turns from green to red when the maximum is being approached.
CPU	This field displays what percentage of the ZyWALL's processing ability is currently used. When this percentage is close to 100%, the ZyWALL is running at full load, and the throughput is not going to improve anymore. If you want some applications to have more throughput, you should turn off other applications (for example, using bandwidth management.
Network Status	
IP/Netmask Address	This is the IP address and subnet mask of your ZyWALL in dotted decimal notation.
Gateway IP Address	This is the gateway IP address.

Table 4 Web Configurator HOME Screen in Bridge Mode (continued)

LABEL	DESCRIPTION
Rapid Spanning Tree Protocol	This shows whether RSTP (Rapid Spanning Tree Protocol) is active or not. The following labels or values relative to RSTP do not apply when RSTP is disabled.
Bridge Priority	This is the bridge priority of the ZyWALL. The bridge (or switch) with the lowest bridge priority value in the network is the root bridge (the base of the spanning tree).
Bridge Hello Time	This is the interval of BPDUs (Bridge Protocol Data Units) from the root bridge.
Bridge Max Age	This is the predefined interval that a bridge waits to get a Hello message (BPDU) from the root bridge.
Forward Delay	This is the forward delay interval.
Bridge Port	This is the port type. Port types are: **WAN**, **LAN**, **Wireless Card**, **DMZ** and **WLAN Interface**.
Port Status	For the WAN, LAN, DMZ, and WLAN Interfaces, this displays the port speed and duplex setting. For the WAN port, it displays **Down** when the link is not ready or has failed. For the wireless card, it displays the maximum transmission rate when WLAN is enabled or **Down** when WLAN is disabled.
RSTP Status	This is the RSTP status of the corresponding port.
RSTP Active	This shows whether or not RSTP is active on the corresponding port.
RSTP Priority	This is the RSTP priority of the corresponding port.
RSTP Path Cost	This is the cost of transmitting a frame from the root bridge to the corresponding port.
Security Services	
Content Filter Expiration Date	This is the date the category-based content filtering service subscription expires. Click the field label to go to the screen where you can update your service subscription.
Web Site Blocked	This displays how many web site hits the ZyWALL has blocked since it last started up. N/A displays when the service subscription has expired.
Wi-Fi Information	
Wi-Fi status	This displays whether or not the wireless LAN card is activated.
SSID	This displays a descriptive name used to identify the ZyWALL in the wireless LAN.
Bridge to	This displays whether the wireless LAN card is used as part of the LAN, DMZ or WLAN.
802.11 mode	This displays the wireless standard (**802.11a**, **802.11b**, **802.11g** or **802.11b+g**) of the wireless LAN.
Channel	This displays the radio channel the ZyWALL is currently using for the wireless LAN.
Security mode	This shows the type of wireless security the ZyWALL is using.
# of Associated Clients	This shows the number of the wireless client(s) connected to the ZyWALL.
Latest Alerts	This table displays the five most recent alerts recorded by the ZyWALL. You can see more information in the **View Log** screen, such as the source and destination IP addresses and port numbers of the incoming packets.
Date/Time	This is the date and time the alert was recorded.
Message	This is the reason for the alert.
System Status	

Table 4 Web Configurator HOME Screen in Bridge Mode (continued)

LABEL	DESCRIPTION
Port Statistics	Click **Port Statistics** to see router performance statistics such as the number of packets sent and number of packets received for each port.
VPN	Click **VPN** to display the active VPN connections.
Bandwidth	Click **Bandwidth** to view the ZyWALL's bandwidth usage and allotments.

2.4.5 Navigation Panel

After you enter the password, use the sub-menus on the navigation panel to configure ZyWALL features.

The following table lists the features available for each device mode.

Table 5 Bridge and Router Mode Features Comparison

FEATURE	BRIDGE MODE	ROUTER MODE
Internet Access Setup Wizard		Y
VPN Setup Wizard	Y	Y
Port Statistics	Y	Y
DHCP Table		Y
Registration	Y	Y
LAN		Y
WAN		Y
DMZ		Y
Bridge	Y	
WLAN		Y
3G		Y
Wi-Fi	Y	Y
Firewall	Y	Y
Content Filter	Y	Y
VPN	Y	Y
Certificates	Y	Y
Authentication Server	Y	Y
NAT		Y
Static Route		Y
Policy Route		Y
Bandwidth Management	Y	Y
DNS		Y
Remote Management	Y	Y
UPnP		Y
Custom APP	Y	Y
ALG	Y	Y

Table 5 Bridge and Router Mode Features Comparison

FEATURE	BRIDGE MODE	ROUTER MODE
Logs	Y	Y
Maintenance	Y	Y

Table Key: A Y in a mode's column shows that the device mode has the specified feature. The information in this table was correct at the time of writing, although it may be subject to change.

The following table describes the sub-menus.

Table 6 Screens Summary

LINK	TAB	FUNCTION
HOME		This screen shows the ZyWALL's general device and network status information. Use this screen to access the wizards, statistics and DHCP table.
REGISTRATION	Registration	Use this screen to register your ZyWALL and activate the trial service subscriptions.
	Service	Use this to manage and update the service status and license information.
NETWORK		
LAN	LAN	Use this screen to configure LAN DHCP and TCP/IP settings.
	Static DHCP	Use this screen to assign fixed IP addresses on the LAN.
	IP Alias	Use this screen to partition your LAN interface into subnets.
	Port Roles	Use this screen to change the LAN/DMZ/WLAN port roles.
BRIDGE	Bridge	Use this screen to change the bridge settings on the ZyWALL.
	Port Roles	Use this screen to change the LAN/DMZ/WLAN port roles on the ZyWALL.
WAN	General	This screen allows you to configure load balancing, route priority and connection test.
	WAN1	Use this screen to configure the WAN1 connection for Internet access.
	3G (WAN 2)	Use this screen to configure the WAN2 connection for Internet access.
	Traffic Redirect	Use this screen to configure your traffic redirect properties and parameters.
	Dial Backup	Use this screen to configure the backup WAN dial-up connection.
DMZ	DMZ	Use this screen to configure your DMZ connection.
	Static DHCP	Use this screen to assign fixed IP addresses on the DMZ.
	IP Alias	Use this screen to partition your DMZ interface into subnets.
	Port Roles	Use this screen to change the LAN/DMZ/WLAN port roles on the ZyWALL.
WLAN	WLAN	Use this screen to configure your WLAN connection.
	Static DHCP	Use this screen to assign fixed IP addresses on the WLAN.
	IP Alias	Use this screen to partition your WLAN interface into subnets.
	Port Roles	Use this screen to change the LAN/DMZ/WLAN port roles on the ZyWALL.

Table 6 Screens Summary (continued)

LINK	TAB	FUNCTION
WIRELESS		
3G (WAN 2)	3G (WAN 2)	Use this screen to configure the WAN2 connection for Internet access.
Wi-Fi	Wireless Card	Use this screen to configure the wireless LAN settings.
	Security	Use this screen to configure the WLAN security settings.
	MAC Filter	Use this screen to change MAC filter settings on the ZyWALL
SECURITY		
FIREWALL	Default Rule	Use this screen to activate/deactivate the firewall and the direction of network traffic to which to apply the rule
	Rule Summary	This screen shows a summary of the firewall rules, and allows you to edit/add a firewall rule.
	Anti-Probing	Use this screen to change your anti-probing settings.
	Threshold	Use this screen to configure the threshold for DoS attacks.
	Service	Use this screen to configure custom services.
CONTENT FILTER	General	This screen allows you to enable content filtering and block certain web features.
	Categories	Use this screen to select which categories of web pages to filter out, as well as to register for external database content filtering and view reports.
	Customization	Use this screen to customize the content filter list.
	Cache	Use this screen to view and configure the ZyWALL's URL caching.
VPN	VPN Rules (IKE)	Use this screen to configure VPN connections using IKE key management and view the rule summary.
	VPN Rules (Manual)	Use this screen to configure VPN connections using manual key management and view the rule summary.
	SA Monitor	Use this screen to display and manage active VPN connections.
	Global Setting	Use this screen to configure the IPSec timer settings.
CERTIFICATES	My Certificates	Use this screen to view a summary list of certificates and manage certificates and certification requests.
	Trusted CAs	Use this screen to view and manage the list of the trusted CAs.
	Trusted Remote Hosts	Use this screen to view and manage the certificates belonging to the trusted remote hosts.
	Directory Servers	Use this screen to view and manage the list of the directory servers.
AUTH SERVER	Local User Database	Use this screen to configure the local user account(s) on the ZyWALL.
	RADIUS	Configure this screen to use an external server to authenticate wireless and/or VPN users.
ADVANCED		

Table 6 Screens Summary (continued)

LINK	TAB	FUNCTION
NAT	NAT Overview	Use this screen to enable NAT.
	Address Mapping	Use this screen to configure network address translation mapping rules.
	Port Forwarding	Use this screen to configure servers behind the ZyWALL.
	Port Triggering	Use this screen to change your ZyWALL's port triggering settings.
STATIC ROUTE	IP Static Route	Use this screen to configure IP static routes.
POLICY ROUTE	Policy Route Summary	Use this screen to view a summary list of all the policies and configure policies for use in IP policy routing.
BW MGMT	Summary	Use this screen to enable bandwidth management on an interface.
	Class Setup	Use this screen to set up the bandwidth classes.
	Monitor	Use this screen to view the ZyWALL's bandwidth usage and allotments.
DNS	System	Use this screen to configure the address and name server records.
	Cache	Use this screen to configure the DNS resolution cache.
	DHCP	Use this screen to configure LAN/DMZ/WLAN DNS information.
	DDNS	Use this screen to set up dynamic DNS.
REMOTE MGMT	WWW	Use this screen to configure through which interface(s) and from which IP address(es) users can use HTTPS or HTTP to manage the ZyWALL.
	SSH	Use this screen to configure through which interface(s) and from which IP address(es) users can use Secure Shell to manage the ZyWALL.
	TELNET	Use this screen to configure through which interface(s) and from which IP address(es) users can use Telnet to manage the ZyWALL.
	FTP	Use this screen to configure through which interface(s) and from which IP address(es) users can use FTP to access the ZyWALL.
	SNMP	Use this screen to configure your ZyWALL's settings for Simple Network Management Protocol management.
	DNS	Use this screen to configure through which interface(s) and from which IP address(es) users can send DNS queries to the ZyWALL.
	CNM	Use this screen to configure and allow your ZyWALL to be managed by the Vantage CNM server.
UPnP	UPnP	Use this screen to enable UPnP on the ZyWALL.
	Ports	Use this screen to view the NAT port mapping rules that UPnP creates on the ZyWALL.
Custom APP	Custom APP	Use this screen to specify port numbers for the ZyWALL to monitor for FTP, HTTP, SMTP, POP3, H323, and SIP traffic.
ALG	ALG	Use this screen to allow certain applications to pass through the ZyWALL.


Table 6 Screens Summary (continued)

LINK	TAB	FUNCTION
LOGS	View Log	Use this screen to view the logs for the categories that you selected.
	Log Settings	Use this screen to change your ZyWALL's log settings.
	Reports	Use this screen to have the ZyWALL record and display the network usage reports.
MAINTENANCE	General	This screen contains administrative.
	Password	Use this screen to change your password.
	Time and Date	Use this screen to change your ZyWALL's time and date.
	Device Mode	Use this screen to configure and have your ZyWALL work as a router or a bridge.
	F/W Upload	Use this screen to upload firmware to your ZyWALL
	Backup & Restore	Use this screen to backup and restore the configuration or reset the factory defaults to your ZyWALL.
	Restart	This screen allows you to reboot the ZyWALL without turning the power off.
	Diagnostics	Use this screen to have the ZyWALL generate and send diagnostic files by e-mail and/or the console port.
LOGOUT		Click this label to exit the web configurator.

2.4.6 Port Statistics

Click **Port Statistics** in the **HOME** screen. Read-only information here includes port status and packet specific statistics. The **Automatic Refresh Interval** field is configurable.

Figure 11 HOME > Show Statistics

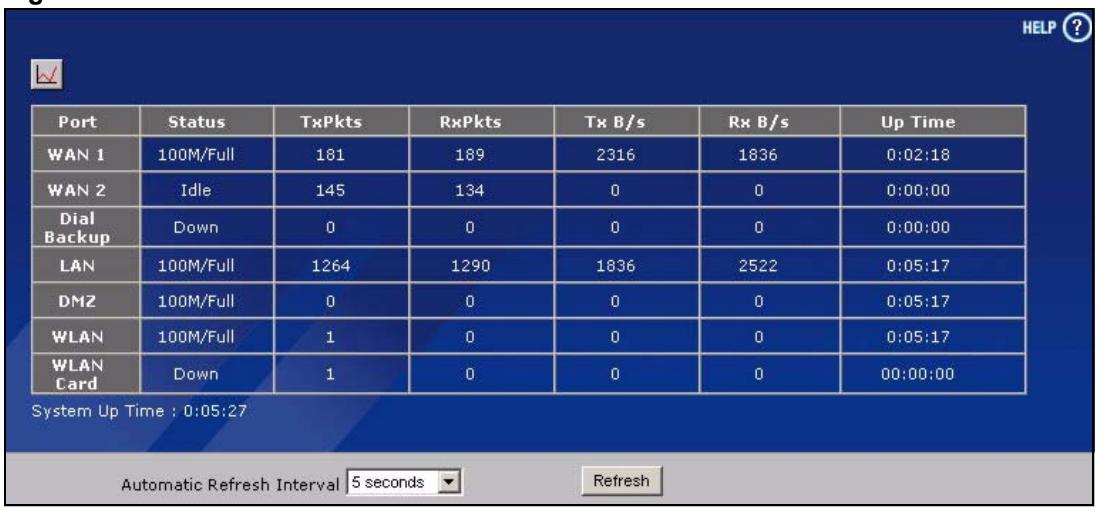

The following table describes the labels in this screen.


Table 7 HOME > Show Statistics

LABEL	DESCRIPTION
	Click the icon to display the chart of throughput statistics in router mode.
Port	These are the ZyWALL's interfaces.
Status	For the WAN interface(s) and the Dial Backup port, this displays the port speed and duplex setting if you're using Ethernet encapsulation or the remote node name for a PPP connection and **Down** (line is down or not connected), **Idle** (line (ppp) idle), **Dial** (starting to trigger a call) or **Drop** (dropping a call) if you're using PPPoE encapsulation. Dial backup is not available in bridge mode. For the LAN, DMZ and WLAN ports, this displays the port speed and duplex setting. For the WLAN card, this displays the transmission rate when WLAN is enabled or **Down** when WLAN is disabled.
TxPkts	This is the number of transmitted packets on this port.
RxPkts	This is the number of received packets on this port.
Collisions	This displays the number of collisions on this port in bridge mode.
Tx B/s	This displays the transmission speed in bytes per second on this port.
Rx B/s	This displays the reception speed in bytes per second on this port.
Up Time	This is the total amount of time the line has been up.
System Up Time	This is the total time the ZyWALL has been on.
Automatic Refresh Interval	Select a number of seconds or **None** from the drop-down list box to update all screen statistics automatically at the end of every time interval or to not update the screen statistics.
Refresh	Click this button to update the screen's statistics immediately.

2.4.7 Show Statistics: Line Chart

Click the icon in the **Show Statistics** screen when the ZyWALL is set to router mode. This screen shows you a line chart of each port's throughput statistics.

Figure 12 HOME > Show Statistics > Line Chart

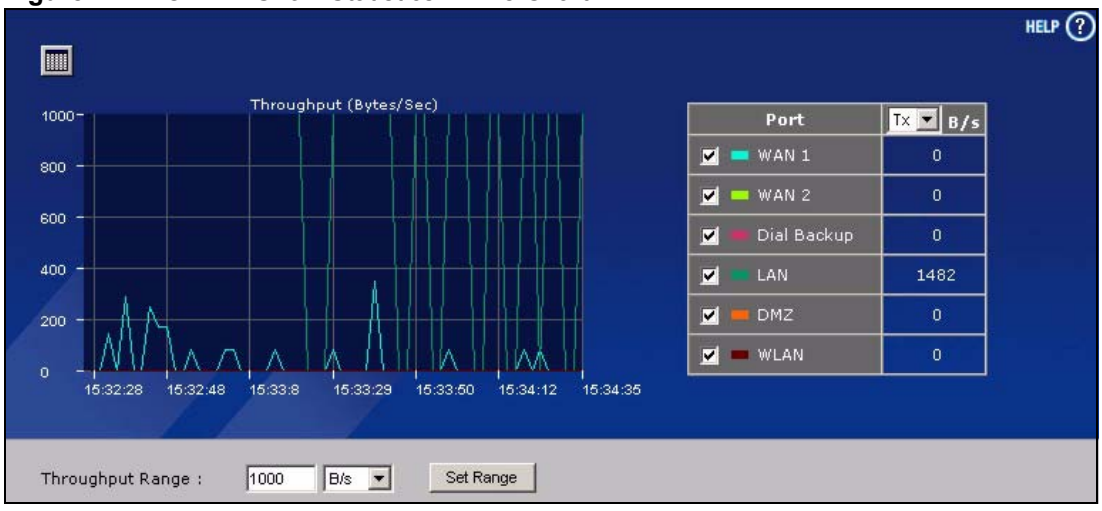

The following table describes the labels in this screen.

Table 8 HOME > Show Statistics > Line Chart


LABEL	DESCRIPTION
	Click the icon to go back to the **Show Statistics** screen.
Port	Select the check box(es) to display the throughput statistics of the corresponding interface(s).
B/s	Specify the direction of the traffic for which you want to show throughput statistics in this table. Select **Tx** to display transmitted traffic throughput statistics and the amount of traffic (in bytes). Select **Rx** to display received traffic throughput statistics and the amount of traffic (in bytes).
Throughput Range	Set the range of the throughput (in **B/s**, **KB/s** or **MB/s**) to display. Click **Set Range** to save this setting back to the ZyWALL.

2.4.8 DHCP Table Screen

DHCP (Dynamic Host Configuration Protocol, RFC 2131 and RFC 2132) allows individual clients to obtain TCP/IP configuration at start-up from a server. You can configure the ZyWALL as a DHCP server or disable it. When configured as a server, the ZyWALL provides the TCP/IP configuration for the clients. If DHCP service is disabled, you must have another DHCP server on your LAN, or else the computer must be manually configured.

Click **Show DHCP Table** in the **HOME** screen when the ZyWALL is set to router mode. Read-only information here relates to your DHCP status. The DHCP table shows current DHCP client information (including **IP Address**, **Host Name** and **MAC Address**) of all network clients using the ZyWALL's DHCP server.

Figure 13 HOME > DHCP Table

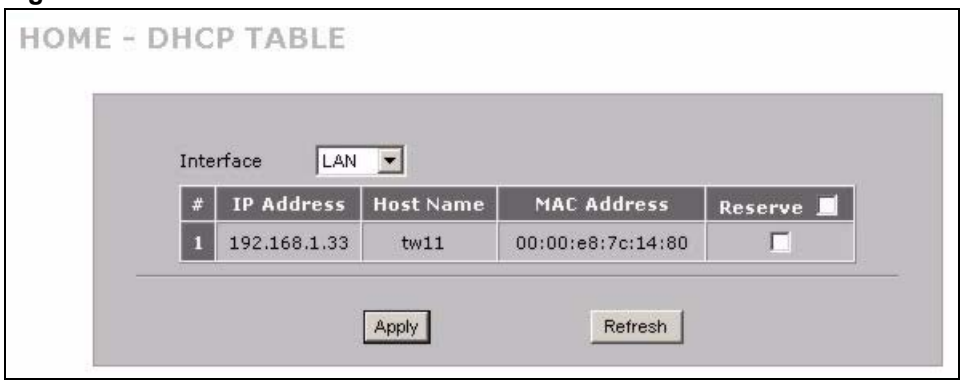

The following table describes the labels in this screen.

Table 9 HOME > DHCP Table

LABEL	DESCRIPTION
Interface	Select **LAN**, **DMZ** or **WLAN** to show the current DHCP client information for the specified interface.
#	This is the index number of the host computer.
IP Address	This field displays the IP address relative to the # field listed above.
Host Name	This field displays the computer host name.


Table 9 HOME > DHCP Table (continued)

LABEL	DESCRIPTION
MAC Address	The MAC (Media Access Control) or Ethernet address on a LAN (Local Area Network) is unique to your computer (six pairs of hexadecimal notation). A network interface card such as an Ethernet adapter has a hardwired address that is assigned at the factory. This address follows an industry standard that ensures no other adapter has a similar address.
Reserve	Select the check box in the heading row to automatically select all check boxes or select the check box(es) in each entry to have the ZyWALL always assign the selected entry(ies)'s IP address(es) to the corresponding MAC address(es) (and host name(s)). You can select up to 128 entries in this table. After you click **Apply**, the MAC address and IP address also display in the corresponding **LAN**, **DMZ** or **WLAN Static DHCP** screen (where you can edit them).
Refresh	Click **Refresh** to reload the DHCP table.

2.4.9 VPN Status

Click **VPN** in the **HOME** screen. This screen displays read-only information about the active VPN connections. The **Poll Interval(s)** field is configurable. A Security Association (SA) is the group of security settings related to a specific VPN tunnel.

Figure 14 HOME > VPN Status

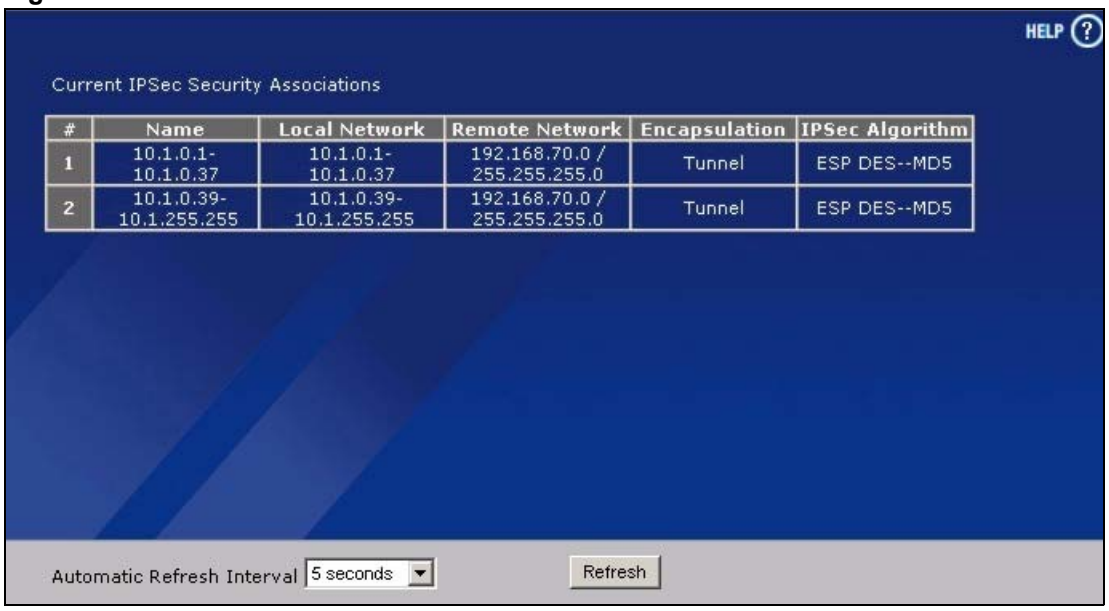

The following table describes the labels in this screen.

Table 10 HOME > VPN Status

LABEL	DESCRIPTION
#	This is the security association index number.
Name	This field displays the identification name for this VPN policy.
Local Network	This field displays the IP address of the computer using the VPN IPSec feature of your ZyWALL.
Remote Network	This field displays IP address (in a range) of computers on the remote network behind the remote IPSec router.
Encapsulation	This field displays **Tunnel** or **Transport** mode.


Table 10 HOME > VPN Status

LABEL	DESCRIPTION
IPSec Algorithm	This field displays the security protocols used for an SA. Both AH and ESP increase ZyWALL processing requirements and communications latency (delay).
Automatic Refresh Interval	Select a number of seconds or **None** from the drop-down list box to update all screen statistics automatically at the end of every time interval or to not update the screen statistics.
Refresh	Click this button to update the screen's statistics immediately.

2.4.10 Bandwidth Monitor

Click **Bandwidth** in the **HOME** screen to display the bandwidth monitor. This screen displays the device's bandwidth usage and allotments.

Figure 15 Home > Bandwidth Monitor

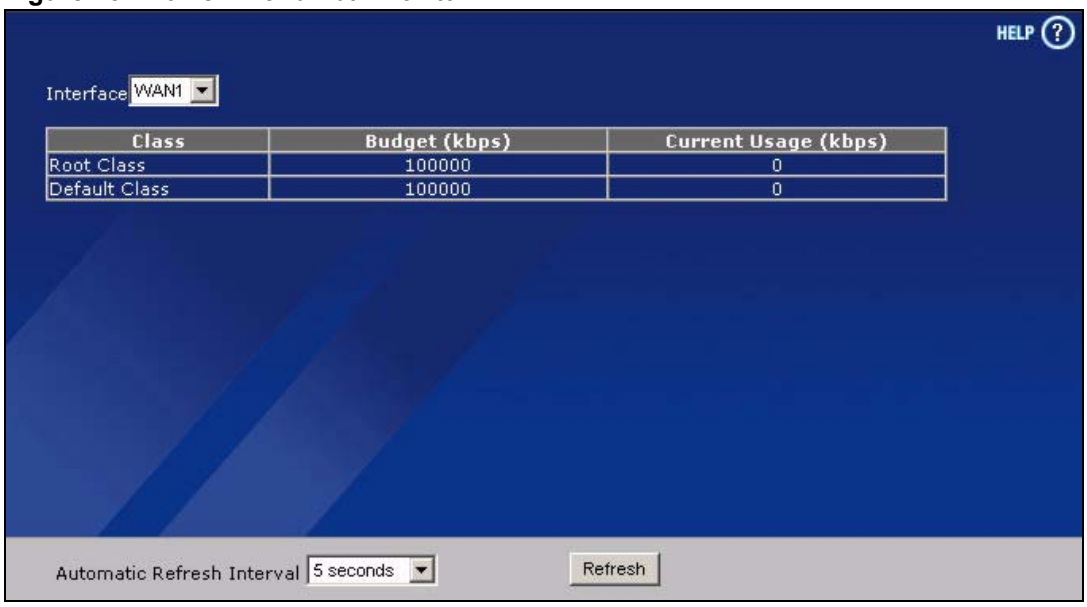

The following table describes the labels in this screen.

Table 11 ADVANCED > BW MGMT > Monitor

LABEL	DESCRIPTION
Interface	Select an interface from the drop-down list box to view the bandwidth usage of its bandwidth classes.
Class	This field displays the name of the bandwidth class. A **Default Class** automatically displays for all the bandwidth in the **Root Class** that is not allocated to bandwidth classes. If you do not enable maximize bandwidth usage on an interface, the ZyWALL uses the bandwidth in this default class to send traffic that does not match any of the bandwidth classes.[A]
Budget (kbps)	This field displays the amount of bandwidth allocated to the bandwidth class.
Current Usage (kbps)	This field displays the amount of bandwidth that each bandwidth class is using.

Table 11 ADVANCED > BW MGMT > Monitor

LABEL	DESCRIPTION
Automatic Refresh Interval	Select a number of seconds or **None** from the drop-down list box to update all screen statistics automatically at the end of every time interval or to not update the screen statistics.
Refresh	Click this button to update the screen's statistics immediately.

A. If you allocate all the root class's bandwidth to the bandwidth classes, the default class still displays a budget of 2 kbps (the minimum amount of bandwidth that can be assigned to a bandwidth class).

3

Wizard Setup

This chapter provides information on the **Wizard Setup** screens in the web configurator. The Internet access wizard is only applicable when the ZyWALL is in router mode.

3.1 Wizard Setup Overview

The web configurator's setup wizards help you configure Internet and VPN connection settings.

In the **HOME** screen, click the wizard icon  to open the **Wizard Setup Welcome** screen. The following summarizes the wizards you can select:

- **Internet Access Setup**
  Click this link to open a wizard to set up an Internet connection for **WAN 1** (the WAN port) on the ZyWALL (in router mode).
- **VPN Setup**
  Use **VPN SETUP** to configure a VPN connection that uses a pre-shared key. If you want to set the rule to use a certificate, please go to the VPN screens for configuration. See Section 3.3 on page 90.

Figure 16 Wizard Setup Welcome



3.2 Internet Access

The Internet access wizard screen has three variations depending on what encapsulation type you use. Refer to information provided by your ISP to know what to enter in each field. Leave a field blank if you don't have that information.

3.2.1 ISP Parameters

The ZyWALL offers three choices of encapsulation. They are **Ethernet**, **PPTP** or **PPPoE**.


The wizard screen varies according to the type of encapsulation that you select in the **Encapsulation** field.

3.2.1.1 Ethernet

For ISPs (such as Telstra) that send UDP heartbeat packets to verify that the customer is still online, please create a **WAN-to-WAN/ZyWALL** firewall rule for those packets. Contact your ISP to find the correct port number.

Choose **Ethernet** when the WAN port is used as a regular Ethernet.

Figure 17 ISP Parameters: Ethernet Encapsulation

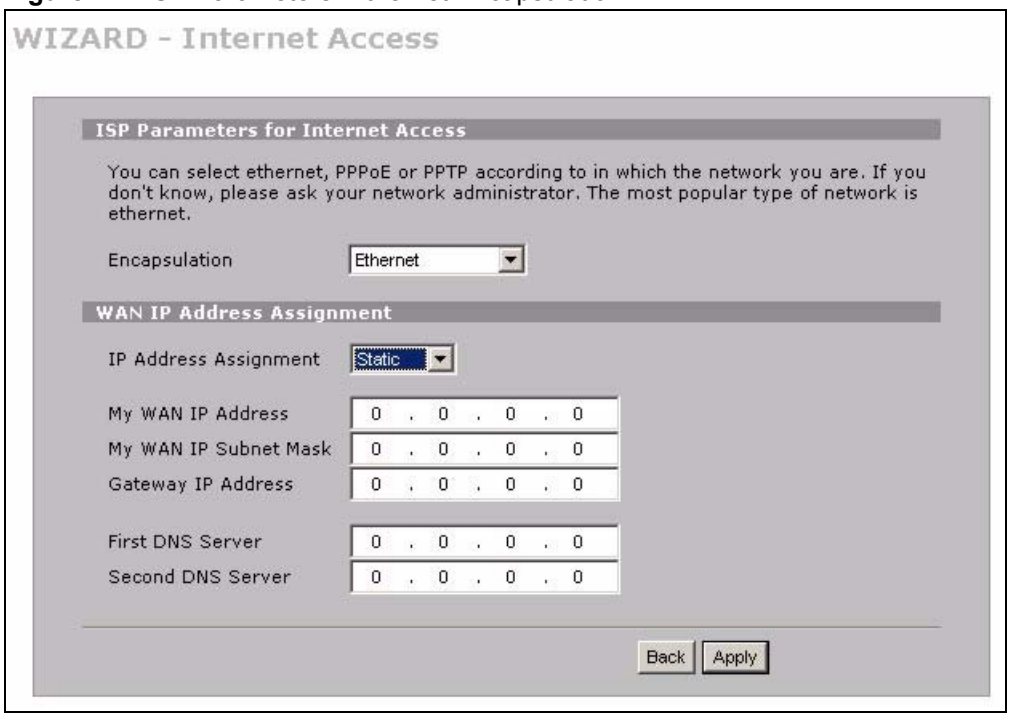

The following table describes the labels in this screen.

Table 12 ISP Parameters: Ethernet Encapsulation

LABEL	DESCRIPTION
ISP Parameters for Internet Access	
Encapsulation	You must choose the **Ethernet** option when the WAN port is used as a regular Ethernet. Otherwise, choose **PPPoE** or **PPTP** for a dial-up connection.
WAN IP Address Assignment	
IP Address Assignment	Select **Dynamic** If your ISP did not assign you a fixed IP address. This is the default selection. Select **Static** If the ISP assigned a fixed IP address. The fields below are available only when you select **Static**.


Table 12 ISP Parameters: Ethernet Encapsulation

LABEL	DESCRIPTION
My WAN IP Address	Enter your WAN IP address in this field.
My WAN IP Subnet Mask	Enter the IP subnet mask in this field.
Gateway IP Address	Enter the gateway IP address in this field.
First DNS Server Second DNS Server	Enter the DNS server's IP address(es) in the field(s) to the right. Leave the field as **0.0.0.0** if you do not want to configure DNS servers. If you do not configure a DNS server, you must know the IP address of a machine in order to access it.
Back	Click **Back** to return to the previous wizard screen.
Apply	Click **Apply** to save your changes and go to the next screen.

3.2.1.2 PPPoE Encapsulation

Point-to-Point Protocol over Ethernet (PPPoE) functions as a dial-up connection. PPPoE is an IETF (Internet Engineering Task Force) standard specifying how a host personal computer interacts with a broadband modem (for example DSL, cable, wireless, etc.) to achieve access to high-speed data networks.

Figure 18 ISP Parameters: PPPoE Encapsulation

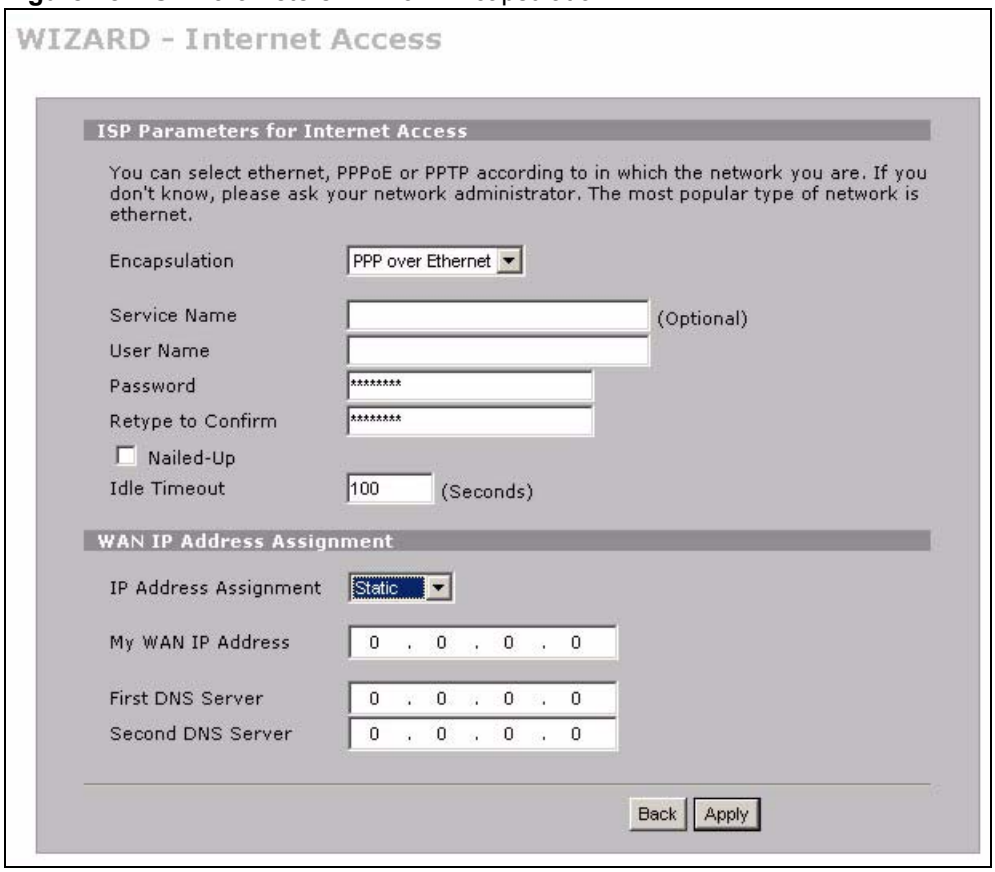

The following table describes the labels in this screen.

Table 13 ISP Parameters: PPPoE Encapsulation

LABEL	DESCRIPTION
ISP Parameter for Internet Access	
Encapsulation	Choose an encapsulation method from the pull-down list box. **PPP over Ethernet** forms a dial-up connection.
Service Name	Type the name of your service provider.
User Name	Type the user name given to you by your ISP.
Password	Type the password associated with the user name above.
Retype to Confirm	Type your password again for confirmation.
Nailed-Up	Select **Nailed-Up** if you do not want the connection to time out.
Idle Timeout	Type the time in seconds that elapses before the router automatically disconnects from the PPPoE server. The default time is **100** seconds.
WAN IP Address Assignment	
IP Address Assignment	Select **Dynamic** If your ISP did not assign you a fixed IP address. This is the default selection. Select **Static** If the ISP assigned a fixed IP address. The fields below are available only when you select **Static**.
My WAN IP Address	Enter your WAN IP address in this field.
First DNS Server Second DNS Server	Enter the DNS server's IP address(es) in the field(s) to the right. Leave the field as **0.0.0.0** if you do not want to configure DNS servers. If you do not configure a DNS server, you must know the IP address of a machine in order to access it.
Back	Click **Back** to return to the previous wizard screen.
Apply	Click **Apply** to save your changes and go to the next screen.

3.2.1.3 PPTP Encapsulation


Point-to-Point Tunneling Protocol (PPTP) is a network protocol that enables transfers of data from a remote client to a private server, creating a Virtual Private Network (VPN) using TCP/IP-based networks.

PPTP supports on-demand, multi-protocol, and virtual private networking over public networks, such as the Internet.



The ZyWALL supports one PPTP server connection at any given time.

Figure 19 ISP Parameters: PPTP Encapsulation

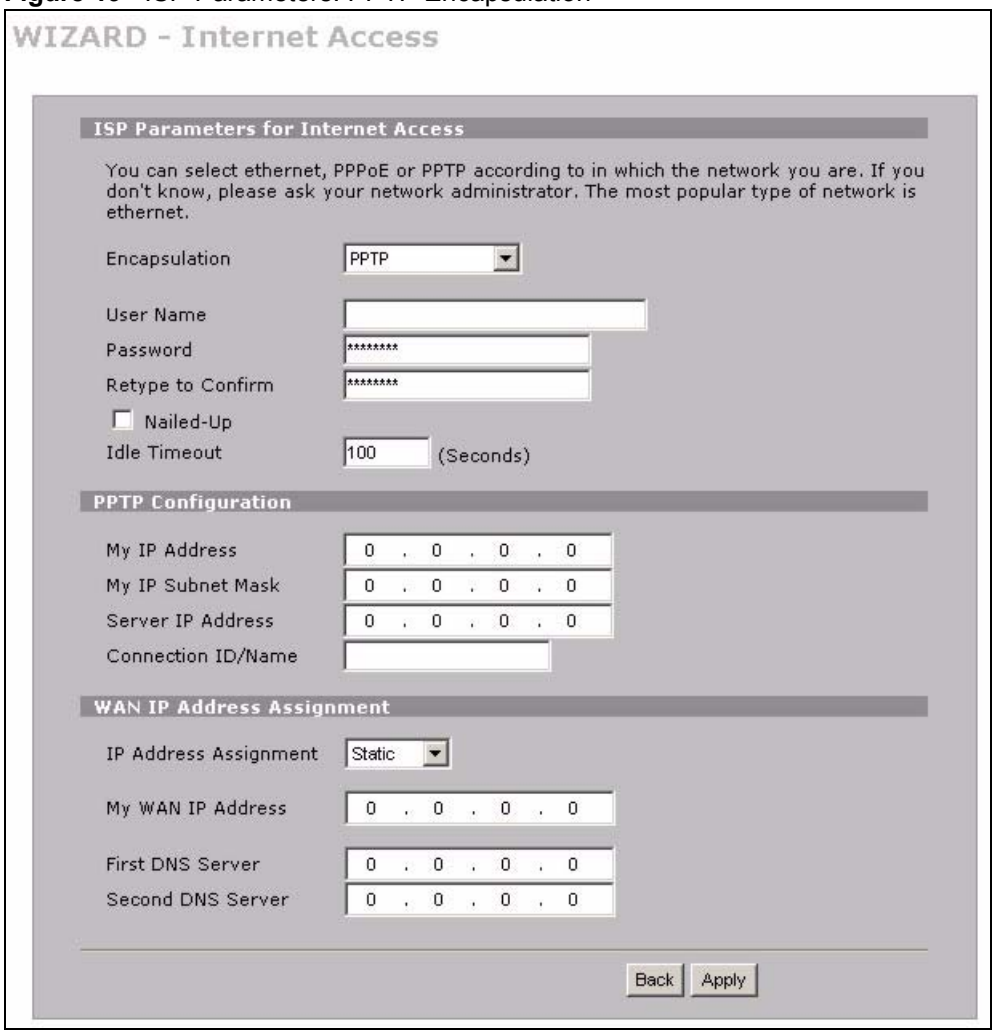

The following table describes the labels in this screen.

Table 14 ISP Parameters: PPTP Encapsulation

LABEL	DESCRIPTION
ISP Parameters for Internet Access	
Encapsulation	Select **PPTP** from the drop-down list box. To configure a PPTP client, you must configure the **User Name** and **Password** fields for a PPP connection and the PPTP parameters for a PPTP connection.
User Name	Type the user name given to you by your ISP.
Password	Type the password associated with the User Name above.
Retype to Confirm	Type your password again for confirmation.
Nailed-Up	Select **Nailed-Up** if you do not want the connection to time out.
Idle Timeout	Type the time in seconds that elapses before the router automatically disconnects from the PPTP server.
PPTP Configuration	
My IP Address	Type the (static) IP address assigned to you by your ISP.

Table 14 ISP Parameters: PPTP Encapsulation

LABEL	DESCRIPTION
My IP Subnet Mask	Type the subnet mask assigned to you by your ISP (if given).
Server IP Address	Type the IP address of the PPTP server.
Connection ID/ Name	Enter the connection ID or connection name in this field. It must follow the "c:id" and "n:name" format. For example, C:12 or N:My ISP. This field is optional and depends on the requirements of your xDSL modem.
WAN IP Address Assignment	
IP Address Assignment	Select **Dynamic** If your ISP did not assign you a fixed IP address. This is the default selection. Select **Static** If the ISP assigned a fixed IP address. The fields below are available only when you select **Static**.
My WAN IP Address	Enter your WAN IP address in this field.
First DNS Server Second DNS Server	Enter the DNS server's IP address(es) in the field(s) to the right. Leave the field as **0.0.0.0** if you do not want to configure DNS servers. If you do not configure a DNS server, you must know the IP address of a machine in order to access it.
Back	Click **Back** to return to the previous wizard screen.
Apply	Click **Apply** to save your changes and go to the next screen.


3.2.2 Internet Access Wizard: Second Screen

Click **Next** to go to the screen where you can register your ZyWALL and activate the free content filtering trial application. Otherwise, click **Skip** to display the congratulations screen and click **Close** to complete the Internet access setup.

Figure 20 Internet Access Wizard: Second Screen



Figure 21 Internet Access Setup Complete

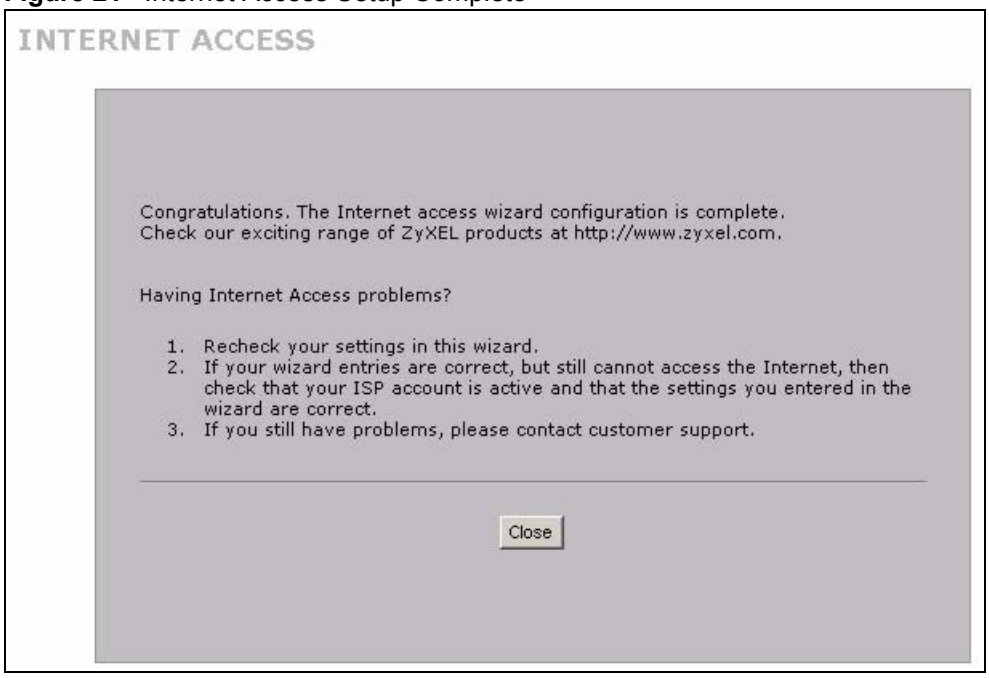

3.2.3 Internet Access Wizard: Registration

If you clicked **Next** in the previous screen (see Figure 20 on page 86), the following screen displays.

Use this screen to register the ZyWALL with myZyXEL.com. You must register your ZyWALL before you can activate trial applications of services like content filtering, anti-spam, anti-virus and IDP.

If you want to activate a standard service with your iCard's PIN number (license key), use the **REGISTRATION > Service** screen.

Figure 22 Internet Access Wizard: Registration



The following table describes the labels in this screen.

Table 15 Internet Access Wizard: Registration

LABEL	DESCRIPTION
Device Registration	If you select **Existing myZyXEL.com account**, only the **User Name** and **Password** fields are available.
New myZyXEL.com account	If you haven't created an account at myZyXEL.com, select this option and configure the following fields to create an account and register your ZyWALL.
Existing myZyXEL.com account	If you already have an account at myZyXEL.com, select this option and enter your user name and password in the fields below to register your ZyWALL.
User Name	Enter a user name for your myZyXEL.com account. The name should be from six to 20 alphanumeric characters (and the underscore). Spaces are not allowed.
Check	Click this button to check with the myZyXEL.com database to verify the user name you entered has not been used.
Password	Enter a password of between six and 20 alphanumeric characters (and the underscore). Spaces are not allowed.
Confirm Password	Enter the password again for confirmation.
E-Mail Address	Enter your e-mail address. You can use up to 80 alphanumeric characters (periods and the underscore are also allowed) without spaces.
Country	Select your country from the drop-down box list.
Back	Click **Back** to return to the previous screen.
Next	Click **Next** to continue.

After you fill in the fields and click **Next**, the following screen shows indicating the registration is in progress. Wait for the registration progress to finish.


Figure 23 Internet Access Wizard: Registration in Progress



3.2.4 Internet Access Wizard: Status

This screen shows your device registration and service subscription status. Click **Close** to leave the wizard screen when the registration and activation are done.

Figure 24 Internet Access Wizard: Status

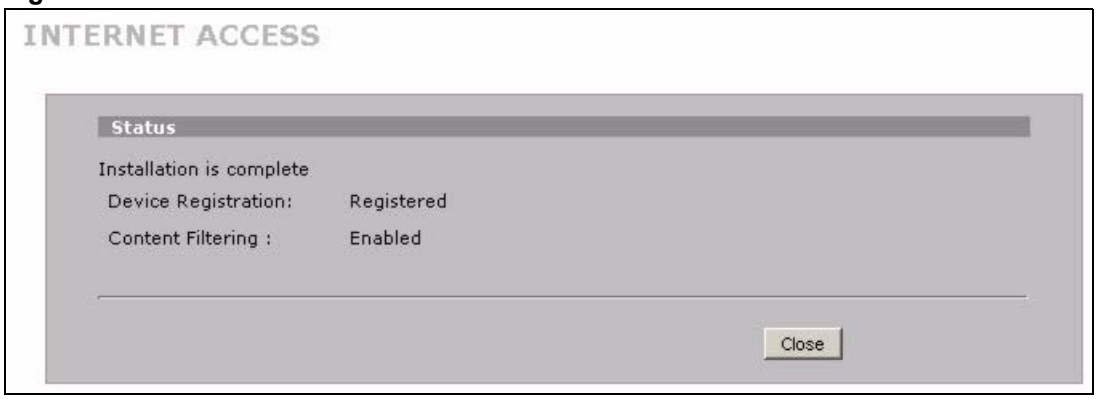

The following screen appears if the registration was not successful. Click **Return** to go back to the **Device Registration** screen and check your settings.

Figure 25 Internet Access Wizard: Registration Failed



3.2.5 Internet Access Wizard: Service Activation

If the ZyWALL has been registered, the **Device Registration** screen is read-only and the **Service Activation** screen appears indicating what trial applications are activated after you click **Next**.

Figure 26 Internet Access Wizard: Registered Device

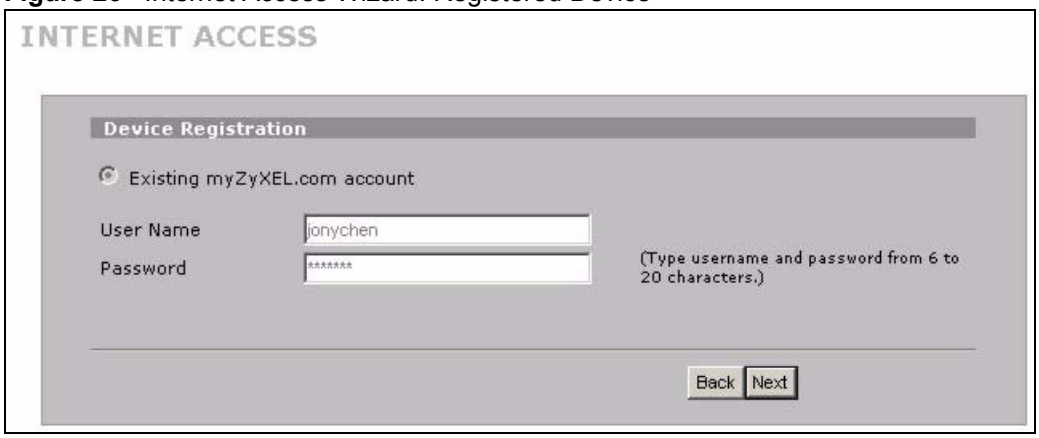


Figure 27 Internet Access Wizard: Activated Services




3.3 VPN Wizard Gateway Setting

Use this screen to name the VPN gateway policy (IKE SA) and identify the IPSec routers at either end of the VPN tunnel.

Click **VPN Setup** in the **Wizard Setup Welcome** screen (Figure 16 on page 81) to open the VPN configuration wizard. The first screen displays as shown next.

Figure 28 VPN Wizard: Gateway Setting

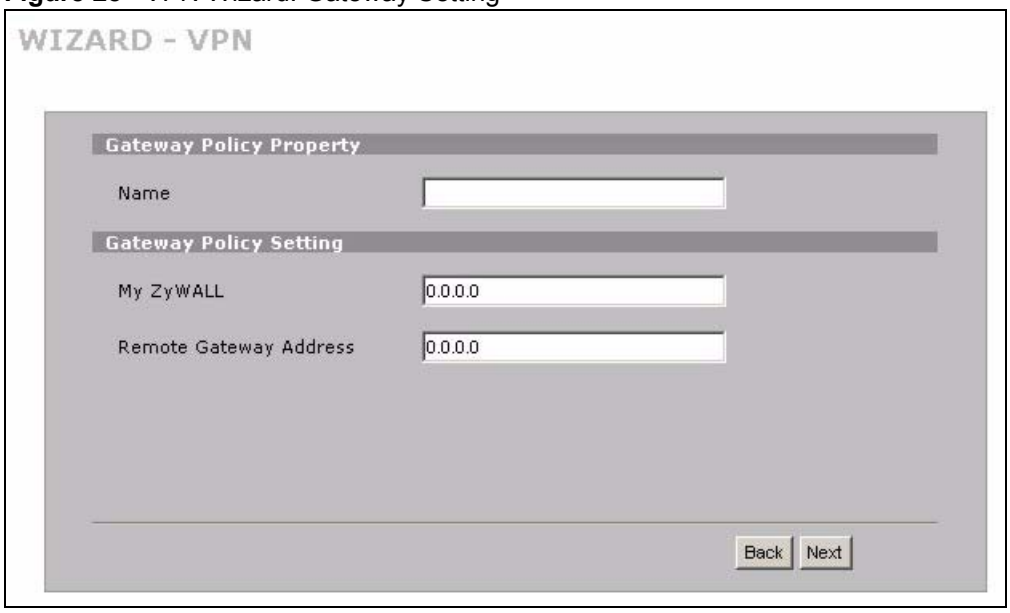

The following table describes the labels in this screen.

Table 16 VPN Wizard: Gateway Setting


LABEL	DESCRIPTION
Gateway Policy Property	
Name	Type up to 32 characters to identify this VPN gateway policy. You may use any character, including spaces, but the ZyWALL drops trailing spaces.
Gateway Policy Setting	
My ZyWALL	When the ZyWALL is in router mode, enter the WAN IP address or the domain name of your ZyWALL or leave the field set to **0.0.0.0**. The following applies if the **My ZyWALL** field is configured as **0.0.0.0**: • When the WAN interface operation mode is set to **Active/Passive**, the ZyWALL uses the IP address (static or dynamic) of the WAN interface that is in use. • When the WAN interface operation mode is set to **Active/Active**, the ZyWALL uses the IP address (static or dynamic) of the primary (highest priority) WAN interface to set up the VPN tunnel as long as the corresponding WAN1 or WAN2 connection is up. If the corresponding WAN1 or WAN2 connection goes down, the ZyWALL uses the IP address of the other WAN interface. • If both WAN connections go down, the ZyWALL uses the dial backup IP address for the VPN tunnel when using dial backup or the LAN IP address when using traffic redirect. See the chapter on WAN for details on dial backup and traffic redirect. When the ZyWALL is in bridge mode, this field is read-only and displays the ZyWALL's IP address.
Remote Gateway Address	Enter the WAN IP address or domain name of the remote IPSec router (secure gateway) in the field below to identify the remote IPSec router by its IP address or a domain name. Set this field to **0.0.0.0** if the remote IPSec router has a dynamic WAN IP address.
Back	Click **Back** to return to the previous screen.
Next	Click **Next** to continue.

3.4 VPN Wizard Network Setting

Use this screen to name the VPN network policy (IPSec SA) and identify the devices behind the IPSec routers at either end of a VPN tunnel.

Two active SAs cannot have the local and remote IP address(es) both the same. Two active SAs can have the same local or remote IP address, but not both. You can configure multiple SAs between the same local and remote IP addresses, as long as only one is active at any time.

Figure 29 VPN Wizard: Network Setting

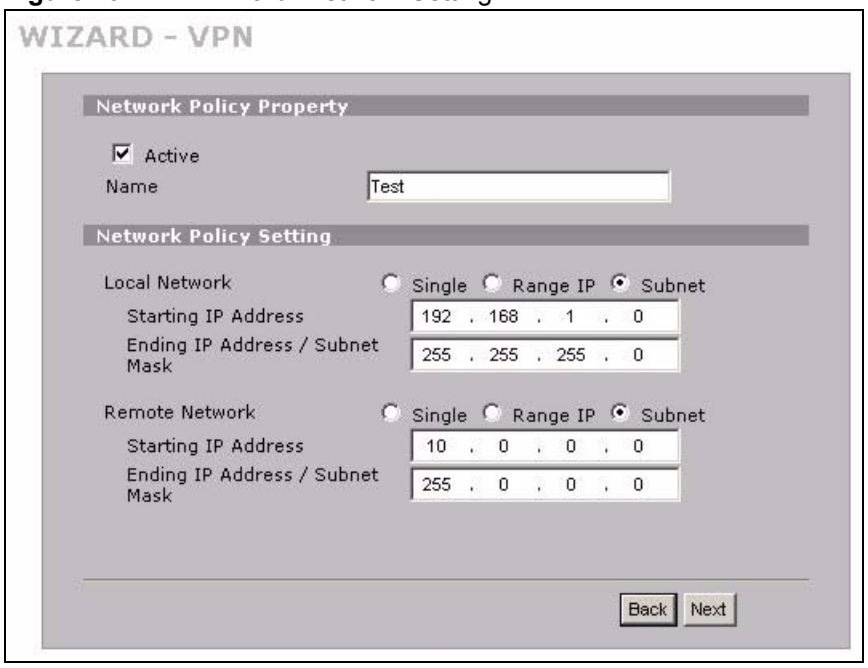

The following table describes the labels in this screen.

Table 17 VPN Wizard: Network Setting

LABEL	DESCRIPTION
Network Policy Property	
Active	If the **Active** check box is selected, packets for the tunnel trigger the ZyWALL to build the tunnel. Clear the **Active** check box to turn the network policy off. The ZyWALL does not apply the policy. Packets for the tunnel do not trigger the tunnel.
Name	Type up to 32 characters to identify this VPN network policy. You may use any character, including spaces, but the ZyWALL drops trailing spaces.
Network Policy Setting	
Local Network	Local IP addresses must be static and correspond to the remote IPSec router's configured remote IP addresses. Select **Single** for a single IP address. Select **Range IP** for a specific range of IP addresses. Select **Subnet** to specify IP addresses on a network by their subnet mask.


Table 17 VPN Wizard: Network Setting

LABEL	DESCRIPTION
Starting IP Address	When the **Local Network** field is configured to **Single**, enter a (static) IP address on the LAN behind your ZyWALL. When the **Local Network** field is configured to **Range IP**, enter the beginning (static) IP address, in a range of computers on the LAN behind your ZyWALL. When the **Local Network** field is configured to **Subnet**, this is a (static) IP address on the LAN behind your ZyWALL.
Ending IP Address/ Subnet Mask	When the **Local Network** field is configured to **Single**, this field is N/A. When the **Local Network** field is configured to **Range IP**, enter the end (static) IP address, in a range of computers on the LAN behind your ZyWALL. When the **Local Network** field is configured to **Subnet**, this is a subnet mask on the LAN behind your ZyWALL.
Remote Network	Remote IP addresses must be static and correspond to the remote IPSec router's configured local IP addresses. Select **Single** for a single IP address. Select **Range IP** for a specific range of IP addresses. Select **Subnet** to specify IP addresses on a network by their subnet mask.
Starting IP Address	When the **Remote Network** field is configured to **Single**, enter a (static) IP address on the network behind the remote IPSec router. When the **Remote Network** field is configured to **Range IP**, enter the beginning (static) IP address, in a range of computers on the network behind the remote IPSec router. When the **Remote Network** field is configured to **Subnet**, enter a (static) IP address on the network behind the remote IPSec router
Ending IP Address/ Subnet Mask	When the **Remote Network** field is configured to **Single**, this field is N/A. When the **Remote Network** field is configured to **Range IP**, enter the end (static) IP address, in a range of computers on the network behind the remote IPSec router. When the **Remote Network** field is configured to **Subnet**, enter a subnet mask on the network behind the remote IPSec router.
Back	Click **Back** to return to the previous screen.
Next	Click **Next** to continue.

3.5 VPN Wizard IKE Tunnel Setting (IKE Phase 1)

Use this screen to specify the authentication, encryption and other settings needed to negotiate a phase 1 IKE SA.

Figure 30 VPN Wizard: IKE Tunnel Setting

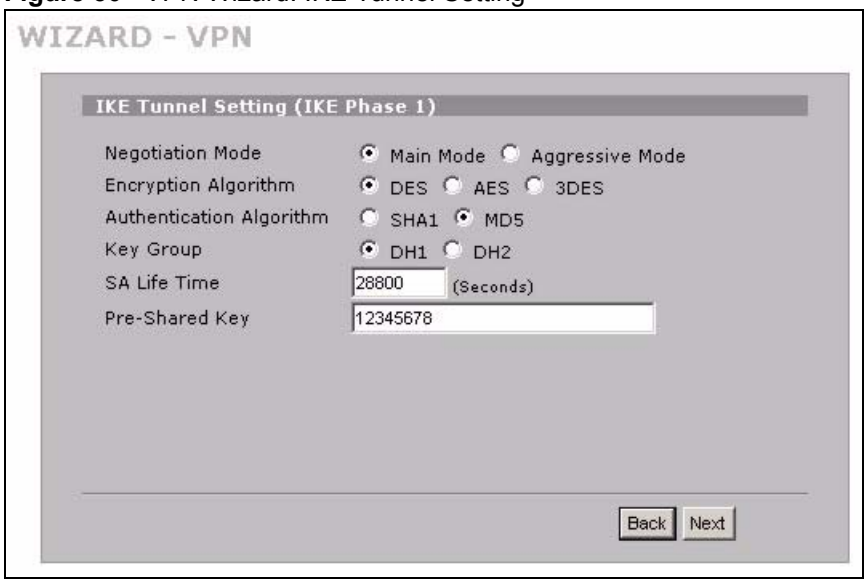

The following table describes the labels in this screen.

Table 18 VPN Wizard: IKE Tunnel Setting

LABEL	DESCRIPTION
Negotiation Mode	Select **Main Mode** for identity protection. Select **Aggressive Mode** to allow more incoming connections from dynamic IP addresses to use separate passwords. Note: Multiple SAs (security associations) connecting through a secure gateway must have the same negotiation mode.
Encryption Algorithm	When **DES** is used for data communications, both sender and receiver must know the same secret key, which can be used to encrypt and decrypt the message or to generate and verify a message authentication code. The **DES** encryption algorithm uses a 56-bit key. Triple DES (**3DES**) is a variation on **DES** that uses a 168-bit key. As a result, **3DES** is more secure than **DES**. It also requires more processing power, resulting in increased latency and decreased throughput. This implementation of **AES** uses a 128-bit key. **AES** is faster than **3DES**.
Authentication Algorithm	**MD5** (Message Digest 5) and **SHA1** (Secure Hash Algorithm) are hash algorithms used to authenticate packet data. The **SHA1** algorithm is generally considered stronger than **MD5**, but is slower. Select **MD5** for minimal security and **SHA-1** for maximum security.
Key Group	You must choose a key group for phase 1 IKE setup. **DH1** (default) refers to Diffie-Hellman Group 1 a 768 bit random number. **DH2** refers to Diffie-Hellman Group 2 a 1024 bit (1Kb) random number.
SA Life Time (Seconds)	Define the length of time before an IKE SA automatically renegotiates in this field. The minimum value is 180 seconds. A short SA Life Time increases security by forcing the two VPN gateways to update the encryption and authentication keys. However, every time the VPN tunnel renegotiates, all users accessing remote resources are temporarily disconnected.


Table 18 VPN Wizard: IKE Tunnel Setting (continued)

LABEL	DESCRIPTION
Pre-Shared Key	Type your pre-shared key in this field. A pre-shared key identifies a communicating party during a phase 1 IKE negotiation. It is called "pre-shared" because you have to share it with another party before you can communicate with them over a secure connection. Type from 8 to 31 case-sensitive ASCII characters or from 16 to 62 hexadecimal ("0-9", "A-F") characters. You must precede a hexadecimal key with a "0x (zero x), which is not counted as part of the 16 to 62 character range for the key. For example, in "0x0123456789ABCDEF", 0x denotes that the key is hexadecimal and 0123456789ABCDEF is the key itself. Both ends of the VPN tunnel must use the same pre-shared key. You will receive a PYLD_MALFORMED (payload malformed) packet if the same pre-shared key is not used on both ends.
Back	Click **Back** to return to the previous screen.
Next	Click **Next** to continue.

3.6 VPN Wizard IPSec Setting (IKE Phase 2)

Use this screen to specify the authentication, encryption and other settings needed to negotiate a phase 2 IPSec SA.

Figure 31 VPN Wizard: IPSec Setting

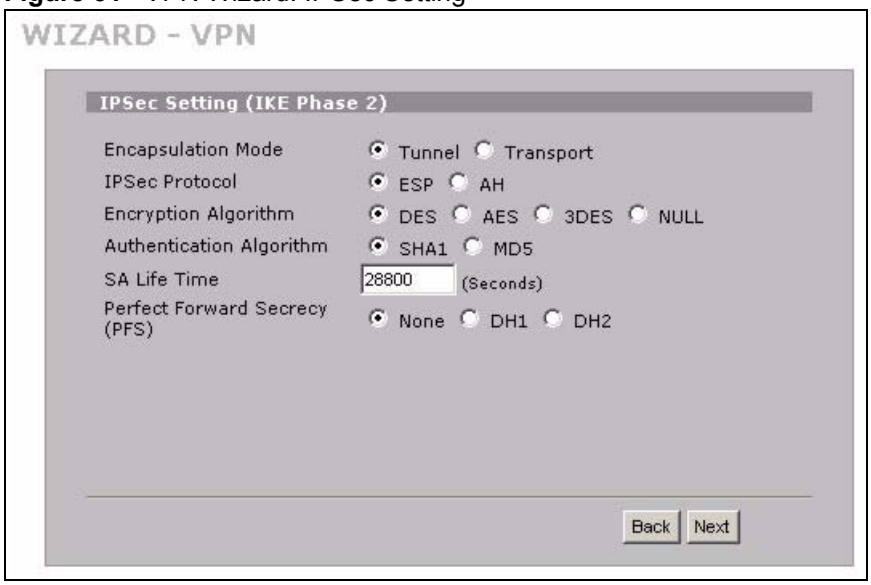

The following table describes the labels in this screen.


Table 19 VPN Wizard: IPSec Setting

LABEL	DESCRIPTION
Encapsulation Mode	**Tunnel** is compatible with NAT, **Transport** is not. Tunnel mode encapsulates the entire IP packet to transmit it securely. A Tunnel mode is required for gateway services to provide access to internal systems. Tunnel mode is fundamentally an IP tunnel with authentication and encryption. Transport mode is used to protect upper layer protocols and only affects the data in the IP packet. In Transport mode, the IP packet contains the security protocol (AH or ESP) located after the original IP header and options, but before any upper layer protocols contained in the packet (such as TCP and UDP).
IPSec Protocol	Select the security protocols used for an SA. Both **AH** and **ESP** increase ZyWALL processing requirements and communications latency (delay).
Encryption Algorithm	When **DES** is used for data communications, both sender and receiver must know the same secret key, which can be used to encrypt and decrypt the message or to generate and verify a message authentication code. The DES encryption algorithm uses a 56-bit key. Triple DES (**3DES**) is a variation on DES that uses a 168-bit key. As a result, **3DES** is more secure than **DES**. It also requires more processing power, resulting in increased latency and decreased throughput. This implementation of **AES** uses a 128-bit key. **AES** is faster than **3DES**. Select **NULL** to set up a tunnel without encryption. When you select **NULL**, you do not enter an encryption key.
Authentication Algorithm	**MD5** (Message Digest 5) and **SHA1** (Secure Hash Algorithm) are hash algorithms used to authenticate packet data. The **SHA1** algorithm is generally considered stronger than **MD5**, but is slower. Select **MD5** for minimal security and **SHA-1** for maximum security.
SA Life Time (Seconds)	Define the length of time before an IKE SA automatically renegotiates in this field. The minimum value is 180 seconds. A short SA Life Time increases security by forcing the two VPN gateways to update the encryption and authentication keys. However, every time the VPN tunnel renegotiates, all users accessing remote resources are temporarily disconnected.
Perfect Forward Secret (PFS)	Perfect Forward Secret (PFS) is disabled (**None**) by default in phase 2 IPSec SA setup. This allows faster IPSec setup, but is not so secure. Select **DH1** or **DH2** to enable PFS. **DH1** refers to Diffie-Hellman Group 1 a 768 bit random number. **DH2** refers to Diffie-Hellman Group 2 a 1024 bit (1Kb) random number (more secure, yet slower).
Back	Click **Back** to return to the previous screen.
Next	Click **Next** to continue.

3.7 VPN Wizard Status Summary

This read-only screen shows the status of the current VPN setting. Use the summary table to check whether what you have configured is correct.

Figure 32 VPN Wizard: VPN Status

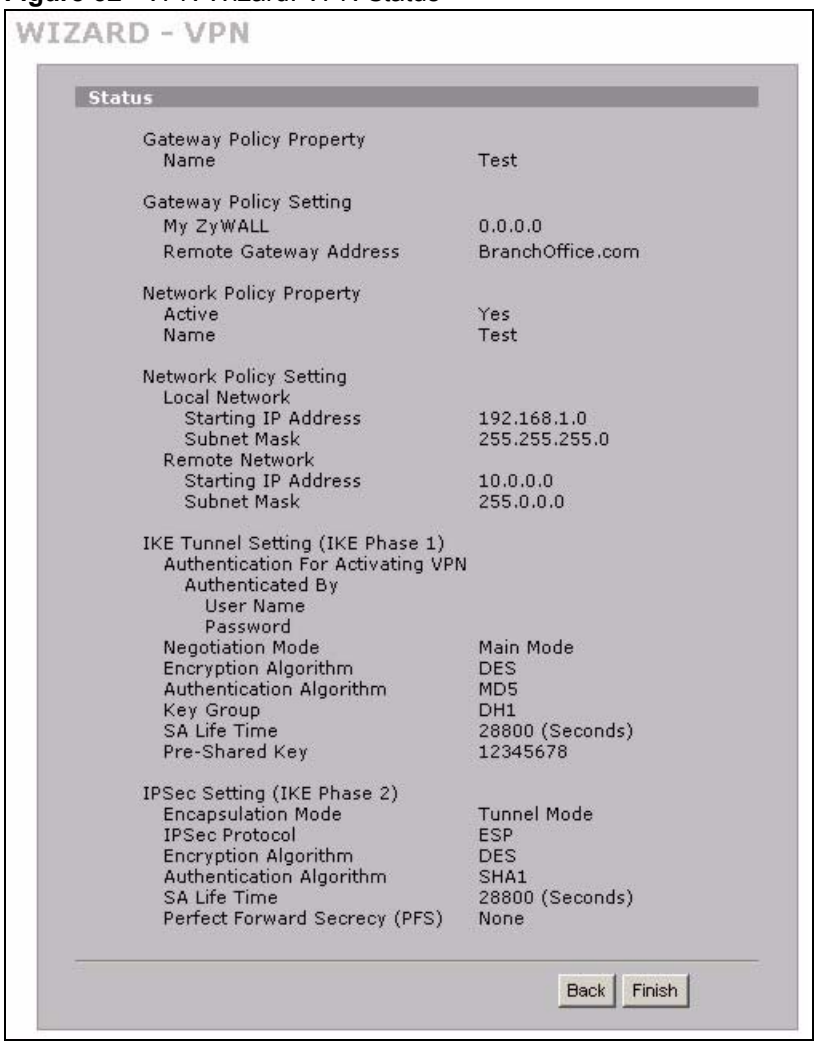

The following table describes the labels in this screen.

Table 20 VPN Wizard: VPN Status

LABEL	DESCRIPTION
Gateway Policy Property	
Name	This is the name of this VPN gateway policy.
Gateway Policy Setting	
My ZyWALL	This is the WAN IP address or the domain name of your ZyWALL in router mode or the ZyWALL's IP address in bridge mode.
Remote Gateway Address	This is the IP address or the domain name used to identify the remote IPSec router.
Network Policy Property	
Active	This displays whether this VPN network policy is enabled or not.
Name	This is the name of this VPN network policy.


Table 20 VPN Wizard: VPN Status (continued)

LABEL	DESCRIPTION
Network Policy Setting	
Local Network	
Starting IP Address	This is a (static) IP address on the LAN behind your ZyWALL.
Ending IP Address/ Subnet Mask	When the local network is configured for a single IP address, this field is N/A. When the local network is configured for a range IP address, this is the end (static) IP address, in a range of computers on the LAN behind your ZyWALL. When the local network is configured for a subnet, this is a subnet mask on the LAN behind your ZyWALL.
Remote Network	
Starting IP Address	This is a (static) IP address on the network behind the remote IPSec router.
Ending IP Address/ Subnet Mask	When the remote network is configured for a single IP address, this field is N/A. When the remote network is configured for a range IP address, this is the end (static) IP address, in a range of computers on the network behind the remote IPSec router. When the remote network is configured for a subnet, this is a subnet mask on the network behind the remote IPSec router.
IKE Tunnel Setting (IKE Phase 1)	
Negotiation Mode	This shows **Main Mode** or **Aggressive Mode**. Multiple SAs connecting through a secure gateway must have the same negotiation mode.
Encryption Algorithm	This is the method of data encryption. Options can be **DES**, **3DES** or **AES**.
Authentication Algorithm	**MD5** (Message Digest 5) and **SHA1** (Secure Hash Algorithm) are hash algorithms used to authenticate packet data.
Key Group	This is the key group you chose for phase 1 IKE setup.
SA Life Time (Seconds)	This is the length of time before an IKE SA automatically renegotiates.
Pre-Shared Key	This is a pre-shared key identifying a communicating party during a phase 1 IKE negotiation.
IPSec Setting (IKE Phase 2)	
Encapsulation Mode	This shows **Tunnel** mode or **Transport** mode.
IPSec Protocol	**ESP** or **AH** are the security protocols used for an SA.
Encryption Algorithm	This is the method of data encryption. Options can be **DES**, **3DES**, **AES** or **NULL**.
Authentication Algorithm	**MD5** (Message Digest 5) and **SHA1** (Secure Hash Algorithm) are hash algorithms used to authenticate packet data.
SA Life Time (Seconds)	This is the length of time before an IKE SA automatically renegotiates.
Perfect Forward Secret (PFS)	Perfect Forward Secret (PFS) is disabled (**None**) by default in phase 2 IPSec SA setup. Otherwise, **DH1** or **DH2** are selected to enable PFS.
Back	Click **Back** to return to the previous screen.
Finish	Click **Finish** to complete and save the wizard setup.

3.8 VPN Wizard Setup Complete

Congratulations! You have successfully set up the VPN rule for your ZyWALL. If you already had VPN rules configured, the wizard adds the new VPN rule after the last existing VPN rule.

Figure 33 VPN Wizard Setup Complete

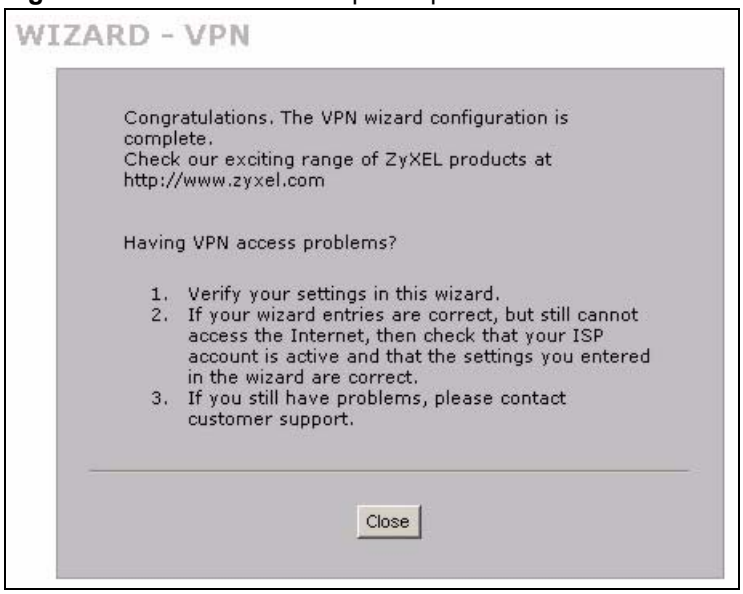

4

Tutorial

This chapter describes how to apply security settings to VPN traffic, how to set up your ZyWALL if you have more than one fixed (static) IP address from your ISP and how to allocate bandwidth and apply priorities to traffic that flows out through the ZyWALL's WAN port.

4.1 Security Settings for VPN Traffic

The ZyWALL can apply the firewall and content filtering to the traffic going to or from the ZyWALL's VPN tunnels. The ZyWALL applies the security settings to the traffic before encrypting VPN traffic that it sends out or after decrypting received VPN traffic.



The security settings apply to VPN traffic going to or from the ZyWALL's VPN tunnels. They do not apply to other VPN traffic for which the ZyWALL is not one of the gateways (VPN pass-through traffic).


You can turn on content filtering for all of the ZyWALL's VPN traffic (regardless of its direction of travel). You can apply firewall security to VPN traffic based on its direction of travel. The following examples show how you do this for the firewall.

4.1.1 Firewall Rule for VPN Example

The firewall provides even more fine-tuned control for VPN tunnels. You can configure default and custom firewall rules for VPN packets.

Take the following example. You have a LAN FTP server with IP address 192.168.1.4 behind device A. You could configure a VPN rule to allow the network behind device B to access your LAN FTP server through a VPN tunnel. Now, if you don't want other services like chat or e-mail going to the FTP server, you can configure firewall rules that allow only FTP traffic to come from VPN tunnels to the FTP server. Furthermore, you can configure the firewall rule so that only the network behind device B can access the FTP server through a VPN tunnel (not other remote networks that have VPN tunnels with the ZyWALL).

Figure 34 Firewall Rule for VPN

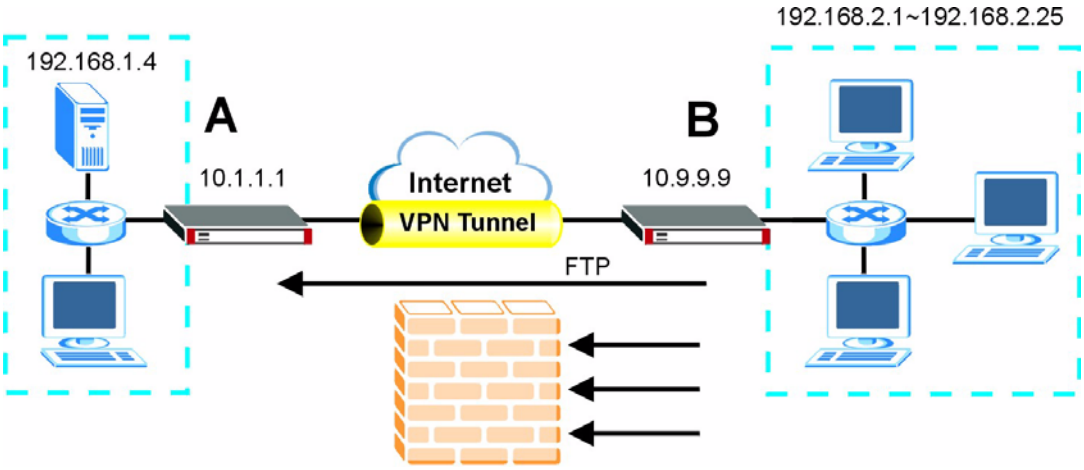


4.1.2 Configuring the VPN Rule

This section shows how to configure a VPN rule on device **A** to let the network behind **B** access the FTP server. You would also have to configure a corresponding rule on device **B**.


1 Click **Security > VPN** to open the following screen. Click the **Add Gateway Policy** icon.

Figure 35 SECURITY > VPN > VPN Rules (IKE)

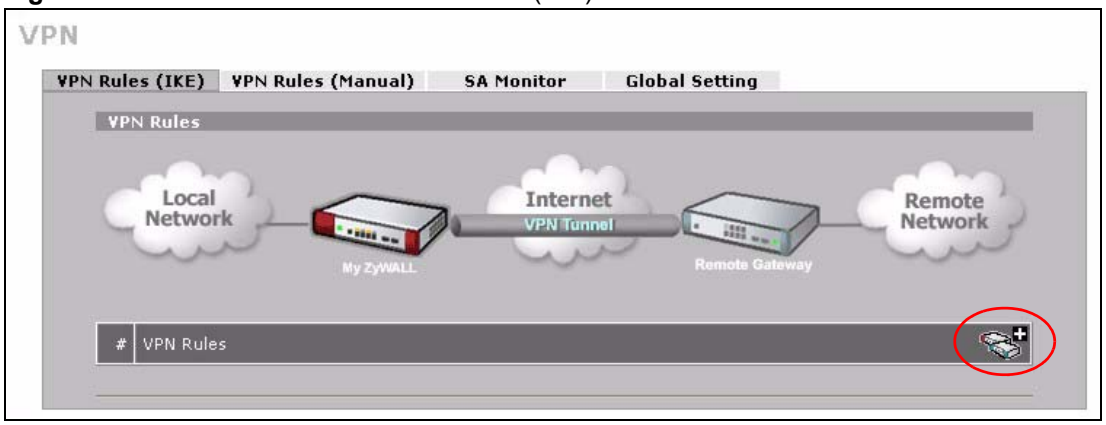


2 Use this screen to set up the connection between the routers. Configure the fields that are circled as follows and click **Apply**.

Figure 36 SECURITY > VPN > VPN Rules (IKE)> Add Gateway Policy

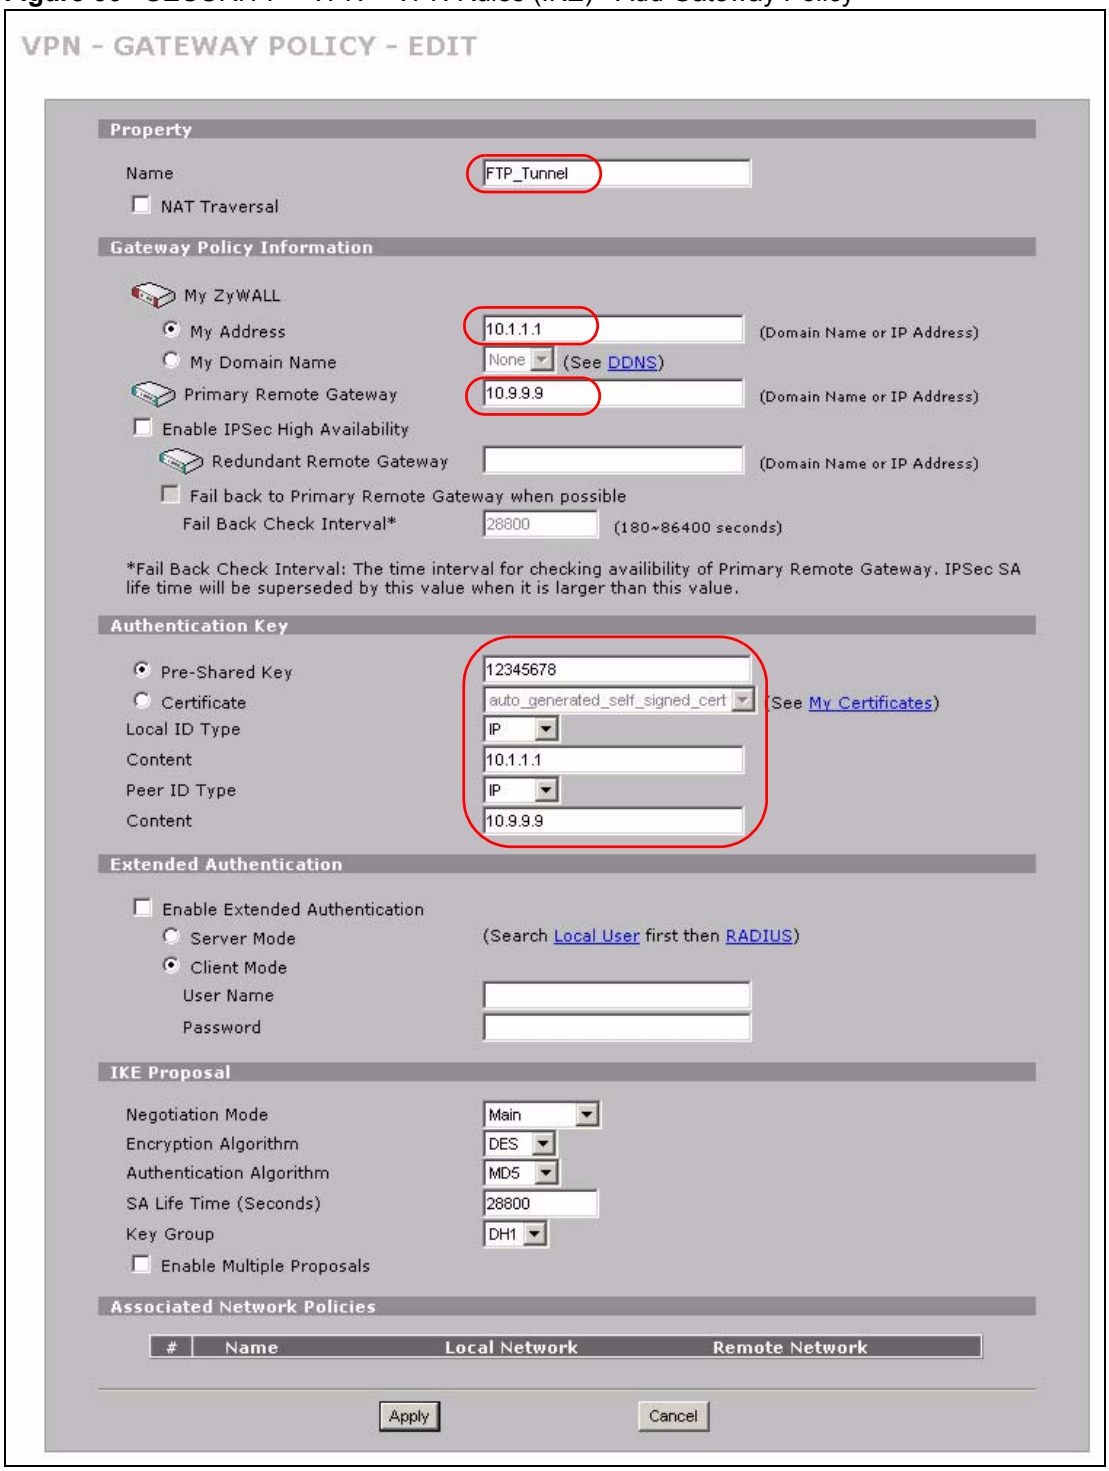

3 Click the **Add Network Policy** icon.


Figure 37 SECURITY > VPN > VPN Rules (IKE): With Gateway Policy Example

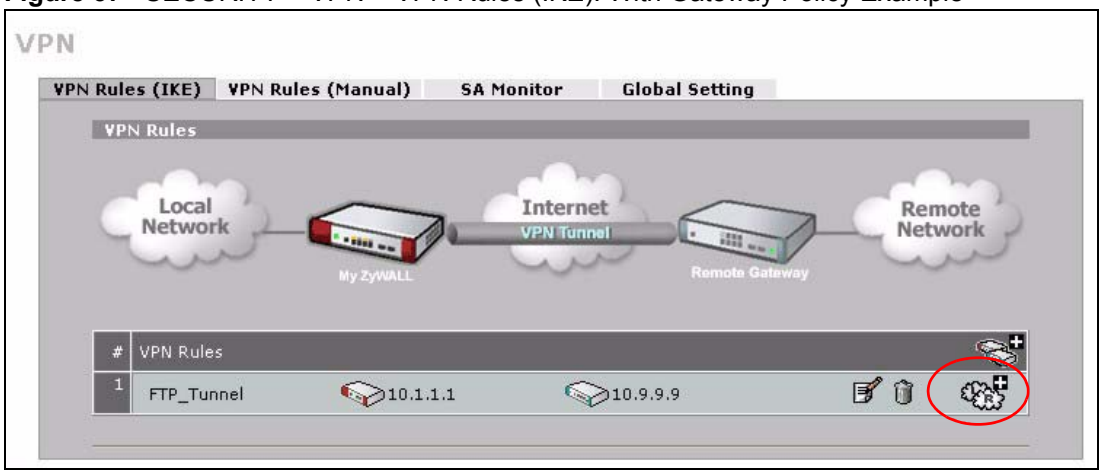

4 Use this screen to specify which computers behind the routers can use the VPN tunnel. Configure the fields that are circled as follows and click **Apply**. You may notice that the example does not specify the port numbers. This is due to the following reasons.

- While FTP uses a control session on port 20, the port for the data session is not fixed. So this example uses the firewall's FTP application layer gateway (ALG) to handle this instead of specifying port numbers in this VPN network policy.
- The firewall provides better security because it operates at layer 4 and checks traffic sessions. The VPN network policy only operates at layer 3 and just checks IP addresses and port numbers.

Figure 38 SECURITY > VPN > VPN Rules (IKE)> Add Network Policy

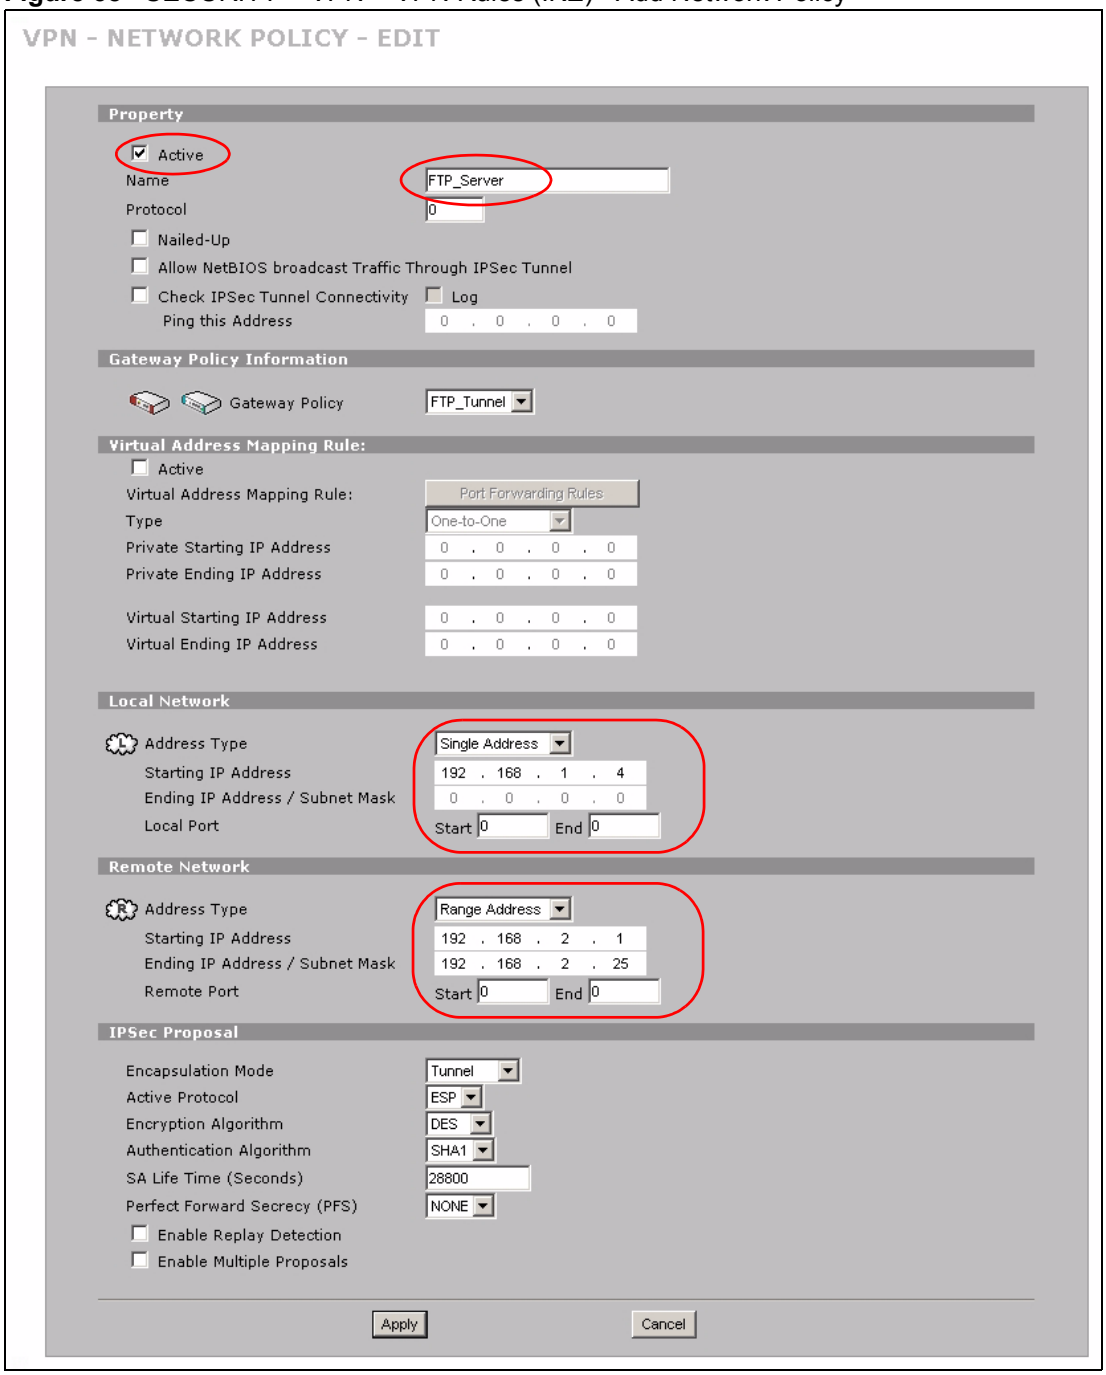

4.1.3 Configuring the Firewall Rules


Suppose you have several VPN tunnels but you only want to allow device **B**'s network to access the FTP server. You also only want FTP traffic to go to the FTP server, so you want to block all other traffic types (like chat, e-mail, web and so on). The following sections show how to configure firewall rules to enforce these restrictions.

4.1.3.1 Firewall Rule to Allow Access Example

Configure a firewall rule that allows FTP access from the VPN tunnel to the FTP server.


1. Click **Security > Firewall > Rule Summary**.
2. Select **VPN** to **LAN** as the packet direction and click **Refresh**.
3. Click the insert icon.

Figure 39 SECURITY > FIREWALL > Rule Summary

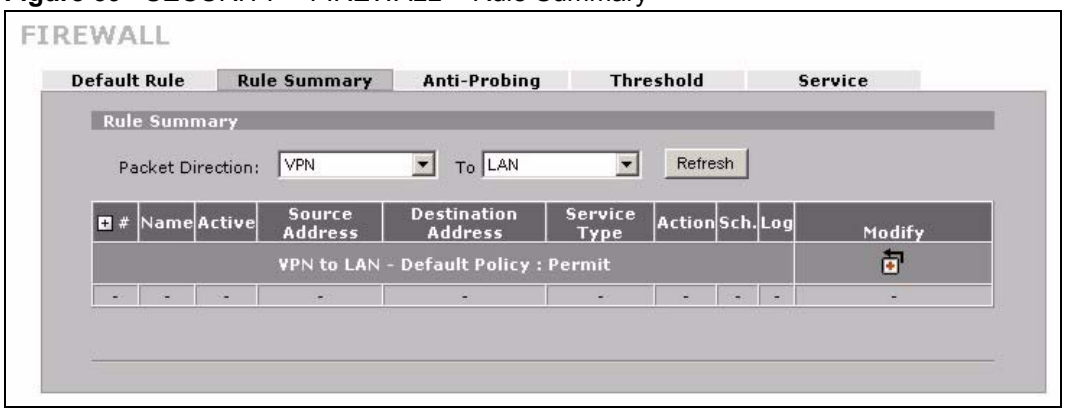


4. Configure the rule as follows and click **Apply**. The source addresses are the VPN rule's remote network and the destination address is the LAN FTP server.

Figure 40 SECURITY > FIREWALL > Rule Summary > Edit: Allow

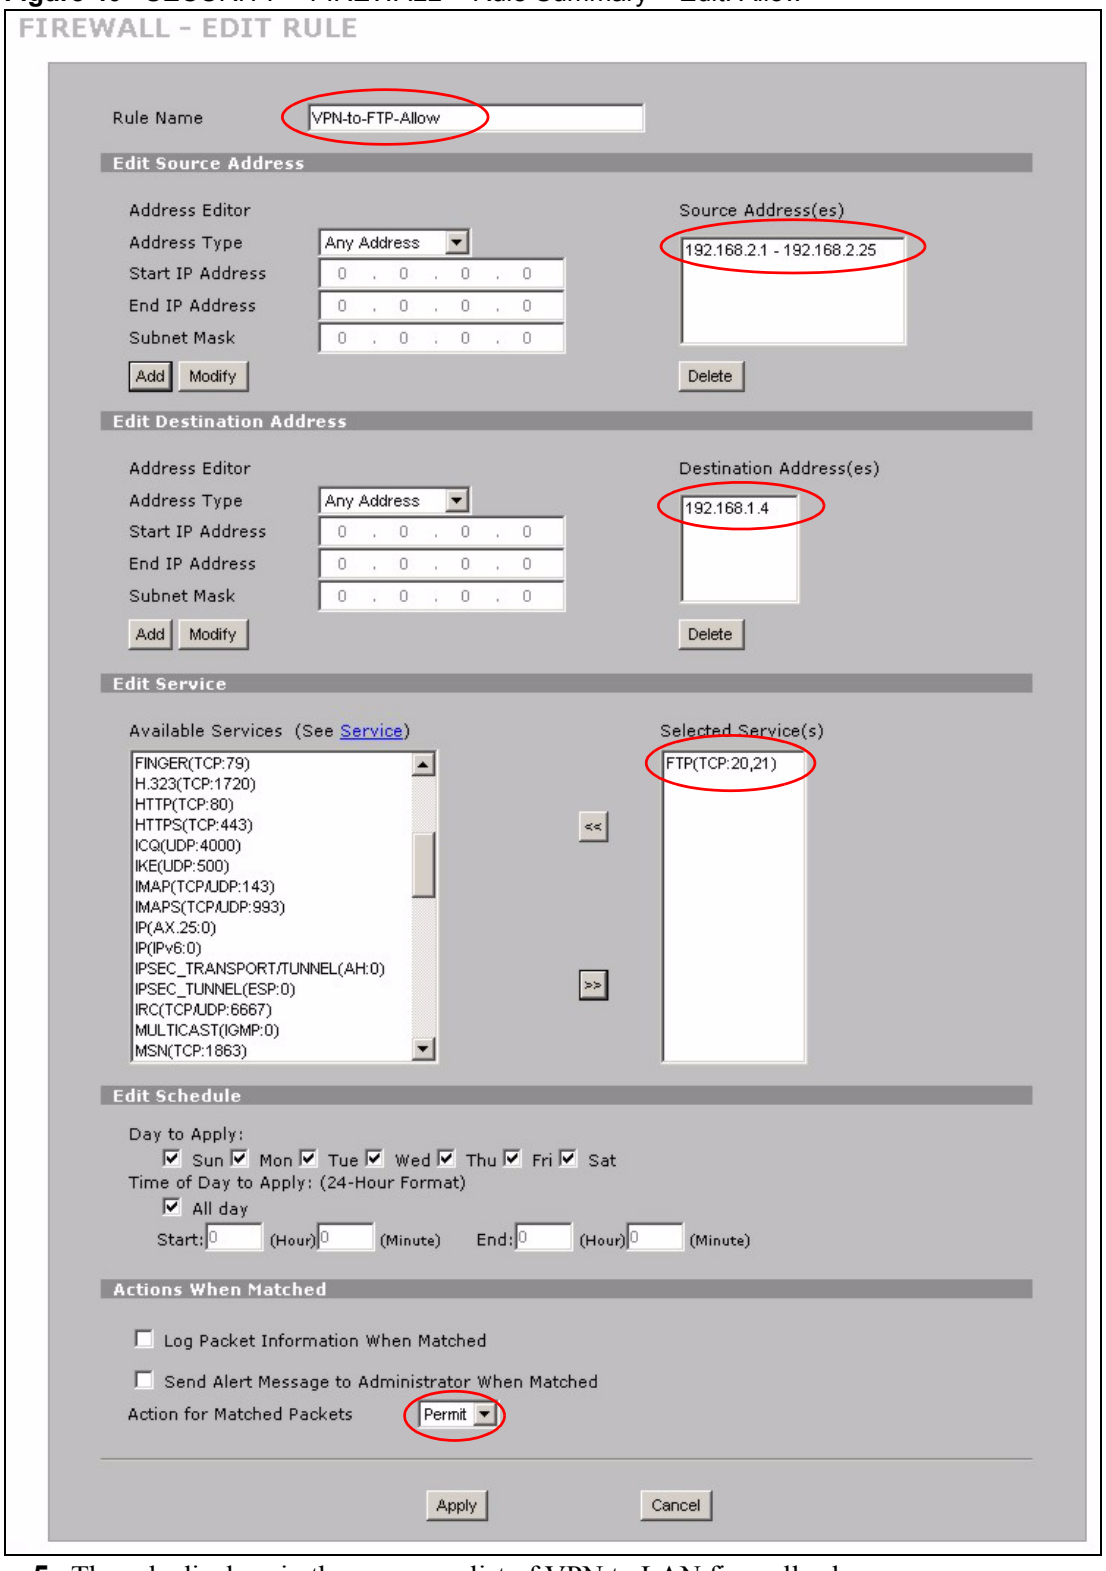

5 The rule displays in the summary list of VPN to LAN firewall rules.

Figure 41 SECURITY > FIREWALL > Rule Summary: Allow

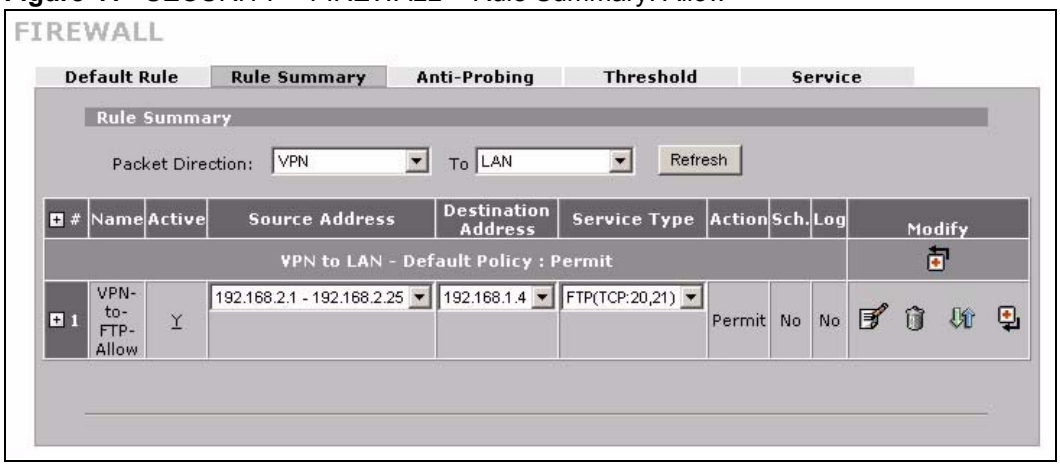


4.1.3.2 Default Firewall Rule to Block Other Access Example

Now you configure the default firewall rule to block all VPN to LAN traffic. This blocks any other types of access from VPN tunnels to the LAN FTP server. This means that you need to configure more firewall rules if you want to allow any other VPN tunnels to access the LAN.

1. Click **SECURITY > FIREWALL > Default Rule**.
2. Configure the screen as follows and click **Apply**.

Figure 42 SECURITY > FIREWALL > Default Rule: Block From VPN To LAN

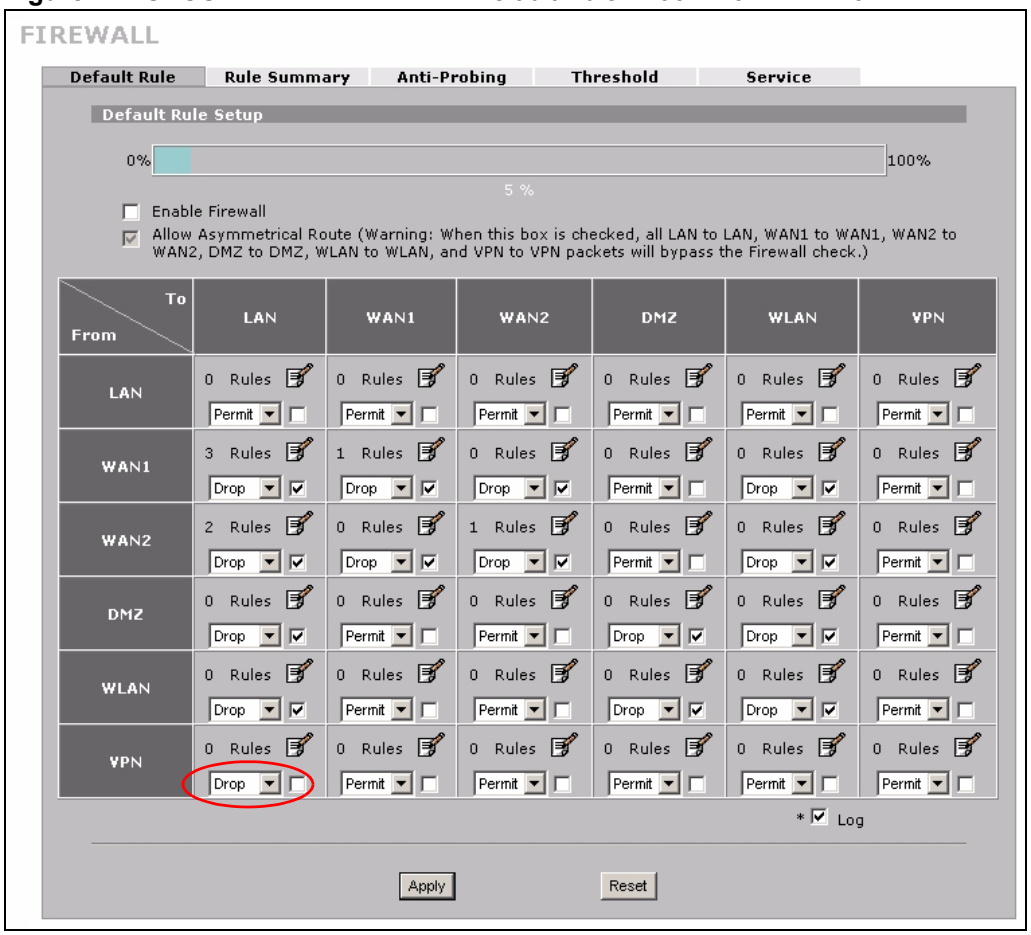

4.2 Using NAT with Multiple Public IP Addresses

This section shows you examples of how to set up your ZyWALL if you have more than one fixed (static) IP address from your ISP.

4.2.1 Example Parameters and Scenario


The following table shows the public IP addresses from your ISP and your ZyWALL's LAN IP address.

Public IP Addresses	1.2.3.4 to 1.2.3.7
ZyWALL's LAN IP Address	192.168.1.1

The following figure shows the network you want to set up in this example.

- Assign the first public address (1.2.3.4) to the ZyWALL's WAN 1 port.
- Map the second and third public IP addresses (1.2.3.5 and 1.2.3.6) to the web and mail servers (192.168.1.12 and 192.168.1.13) respectively for traffic in both directions.
- Map the first public address (1.2.3.4) to outgoing traffic from other local computers.
- Map the first public address (1.2.3.4) to incoming traffic from WAN 1.
- Forward FTP traffic using port 21 from WAN 1 to a specific local computer (192.168.1.39).
- The last public IP address (1.2.3.7) is not mapped to any device and is reserved for future use.

Figure 43 Tutorial Example: Using NAT with Static Public IP Addresses

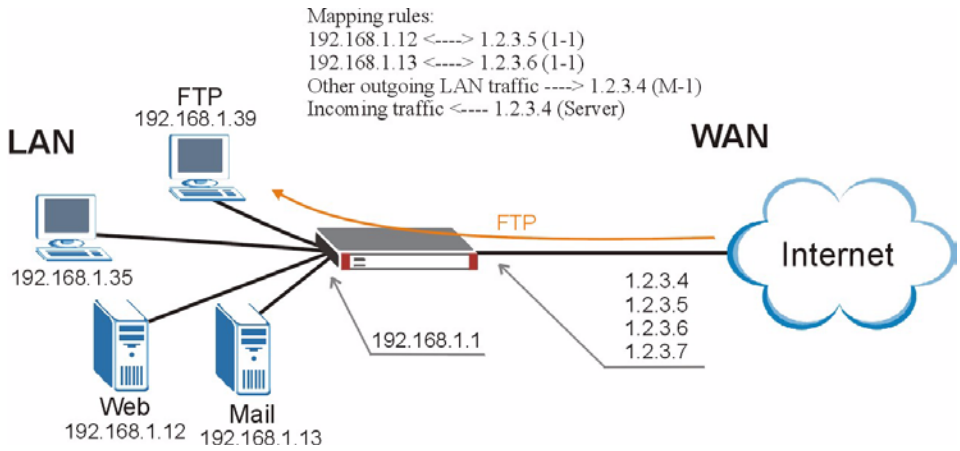

To set up this network, we are going to:

1. Configure the WAN 1 connection to use the first public IP address (1.2.3.4).
2. Configure NAT address mapping for other public IP addresses (1.2.3.5 and 1.2.3.6).
3. Configure NAT port forwarding to forward FTP traffic from WAN 1 to a specific computer on your local network.


4.2.2 Configuring the WAN Connection with a Static IP Address

The following table shows the information your ISP gave you for Internet connection.

Encapsulation	PPPoE
Public IP Addresses	1.2.3.4 1.2.3.5 1.2.3.6 1.2.3.7
Gateway IP Address	1.2.3.89
Subnet Mask	255.255.255.0
User Name	exampleuser
Password	abcd1234
DNS Server	1.2.1.1 1.2.1.2


Follow the steps below to configure your ZyWALL for Internet access using PPPoE in this example.

Figure 44 Tutorial Example: WAN Connection with a Static Public IP Address

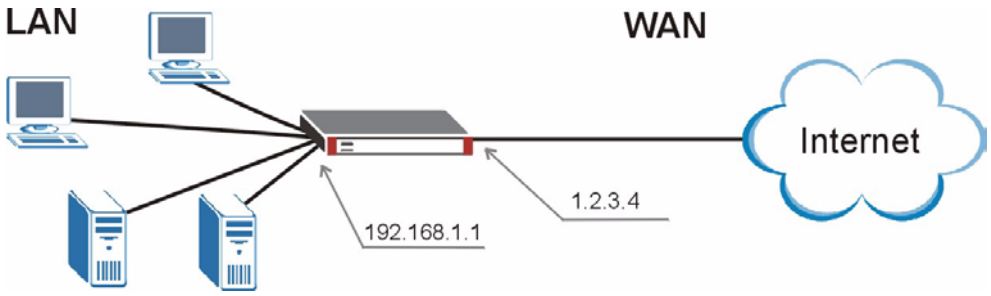

1. Click **NETWORK** > **WAN** > **WAN 1**.
2. Select **PPPoE** (**PPP over Ethernet**) from the **Encapsulation** drop-down list box.
3. In the **ISP Parameters for Internet Access** section, enter the information (such as the user name and password) provided by your ISP. If your ISP didn't give you the service name, leave the field blank.
4. In the **WAN IP Address Assignment** section, select **Use Fixed IP Address** and enter the first fixed public IP address (1.2.3.4 in this example).
5. Click **Apply**.


Figure 45 Tutorial Example: WAN 1 Screen

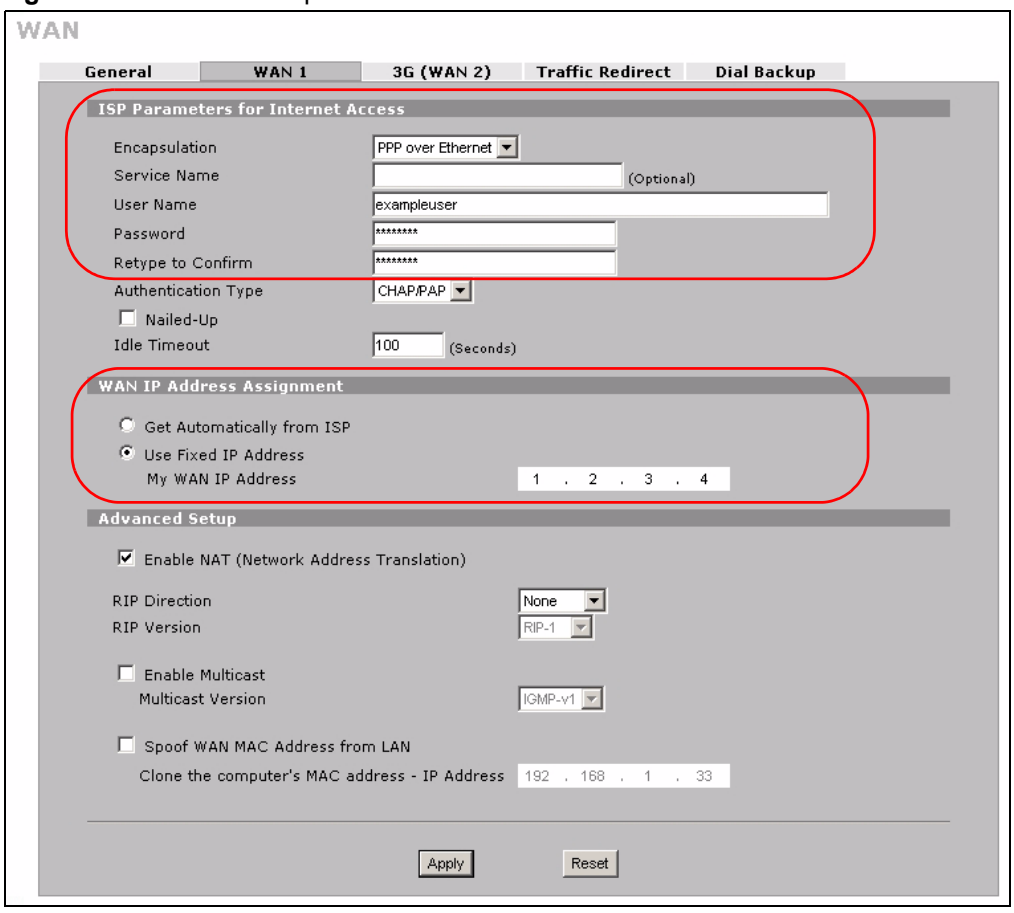

6 Click **ADVANCED > DNS**.


7 The **System** screen displays. Click the **Insert** button to configure the IP address of the DNS server the ZyWALL can query to resolve domain names.

Figure 46 Tutorial Example: DNS > System

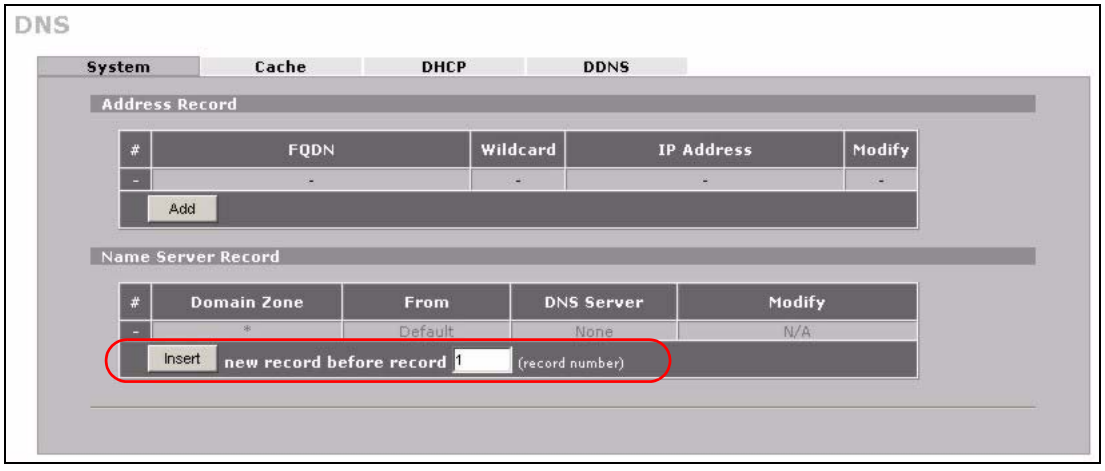

8 Select **Public DNS Server** and enter the first DNS server's IP address given by your ISP. Click **Apply**.


Figure 47 Tutorial Example: DNS > System Edit-1

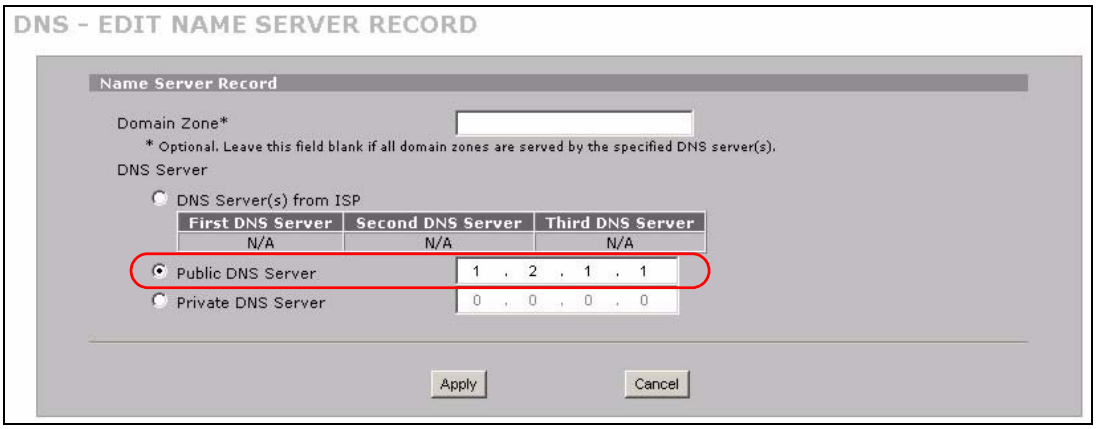

9 Enter the rule number (2) where you want to put the second record and click the **Insert** button to configure the second DNS server's IP address as follows. Click **Apply**.


To resolve a domain name, theZyWALL checks it against the name server record entries in the order that they appear in this list.

Figure 48 Tutorial Example: DNS > System Edit-2

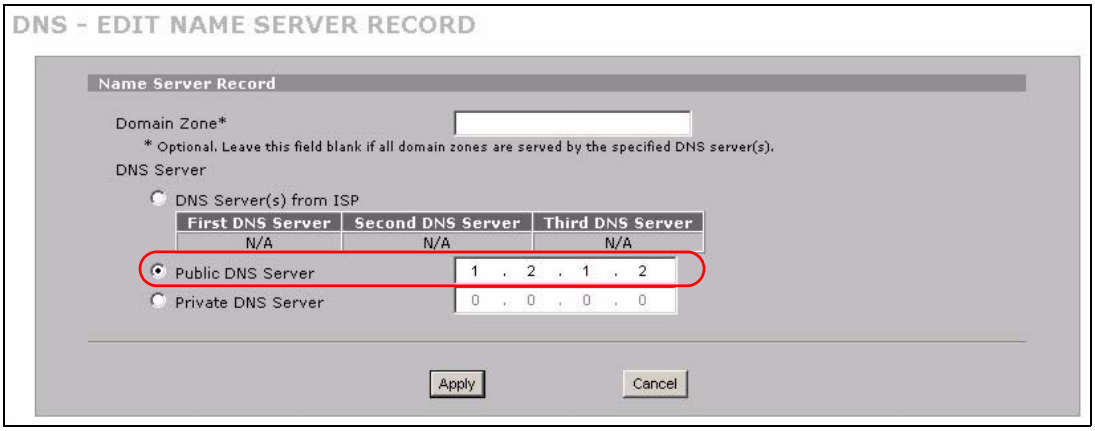


10 The **DNS > System** screen should look as shown.

Figure 49 Tutorial Example: DNS > System: Done

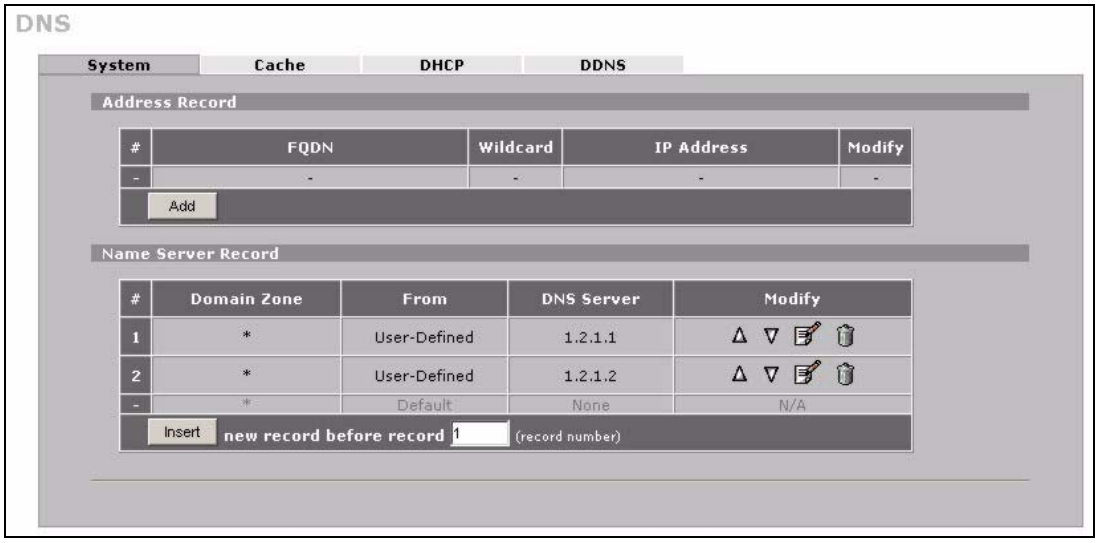

11 Go to the **Home** screen to check your WAN connection status. Make sure the status is not down.

Figure 50 Tutorial Example: Status

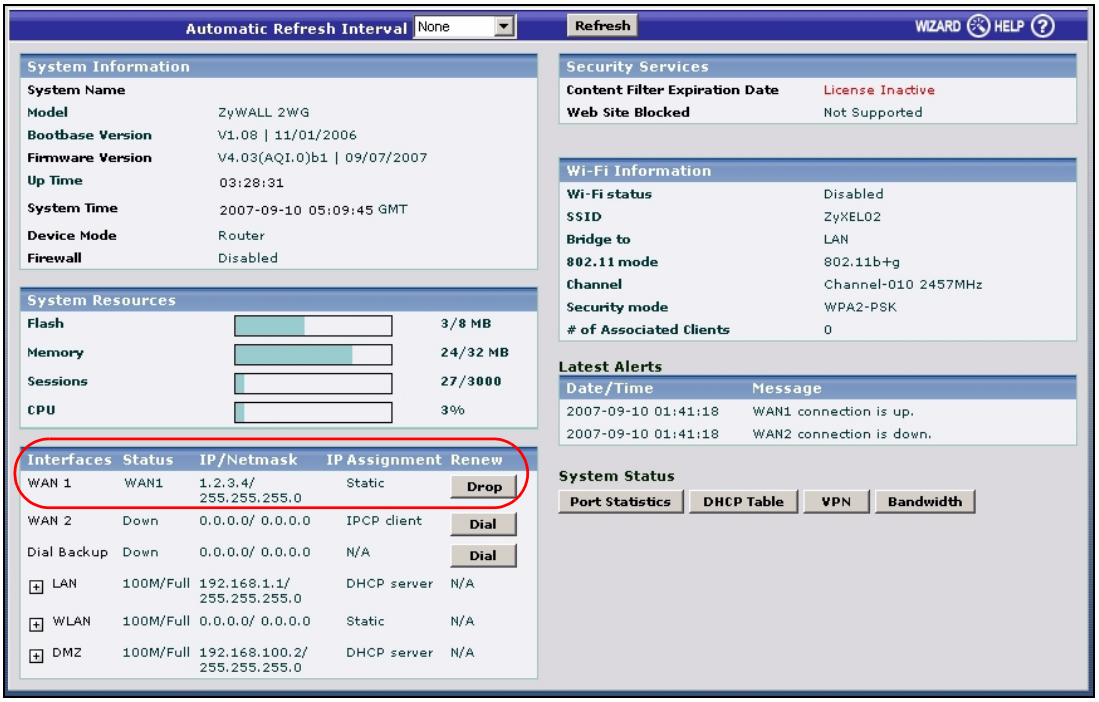

4.2.3 Public IP Address Mapping


To have the local computers and servers use specific WAN IP addresses, you need to map static public IP addresses to them.

The one-to-one NAT address mapping rules are for both incoming and outgoing connections. The ZyWALL forwards traffic that is initiated from either the LAN or the WAN to the destination IP address.

The many-to-one or many-to-many NAT address mapping rules are for outgoing connections only. That means only traffic initiated from the LAN or returned packets are allowed to go through the ZyWALL.

In this example, you create two one-to-one rules to map the internal web server (192.168.1.12) and mail server (192.168.1.13) to different static public IP addresses. The many-to-one rule maps a public IP address (1.2.3.4, that is, the ZyWALL's WAN 1 IP address) to outgoing LAN traffic. It allows other local computers on the same subnet as the ZyWALL's LAN IP address to use this IP address to access the Internet.


Figure 51 Tutorial Example: Mapping Multiple Public IP Addresses to Inside Servers

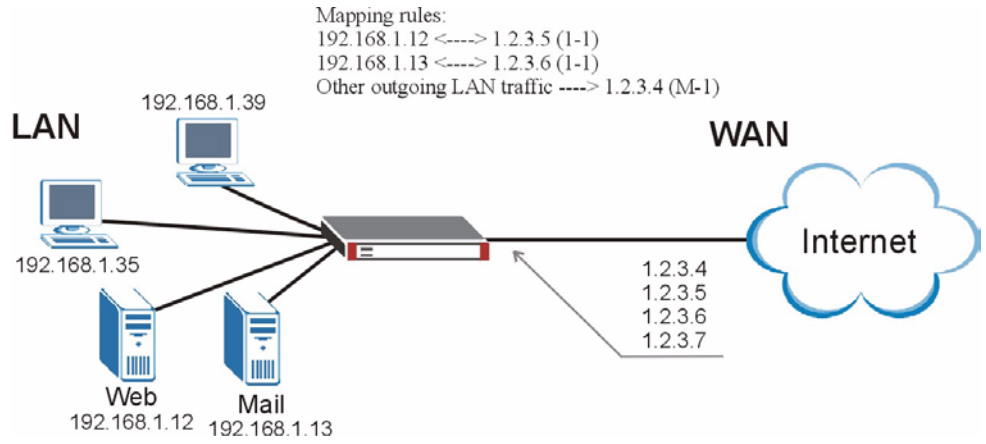

The ZyWALL applies the rules in the order that you specify. You should put any one-to-one rules before a many-to-one rule.

1. Click **ADVANCED** > **NAT**.
2. Enable NAT and select **Full Feature** for the WAN 1 interface as you have multiple public IP addresses to map to private IP addresses. Click **Apply**.

Figure 52 Tutorial Example: NAT > NAT Overview

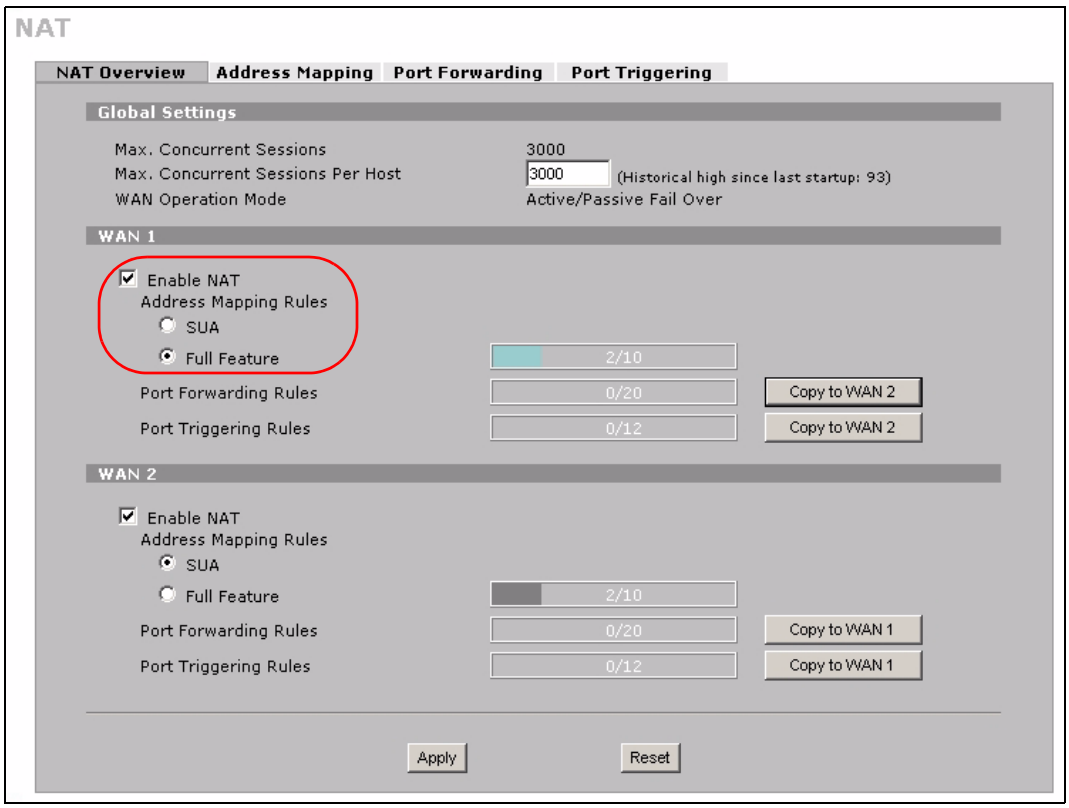


3 Click the **Address Mapping** tab.

4 Select **WAN 1**.

5 Click the first rule's **Edit** icon ( ) in the **Modify** column to display the **Address Mapping Rule** screen.


Figure 53 Tutorial Example: NAT > Address Mapping

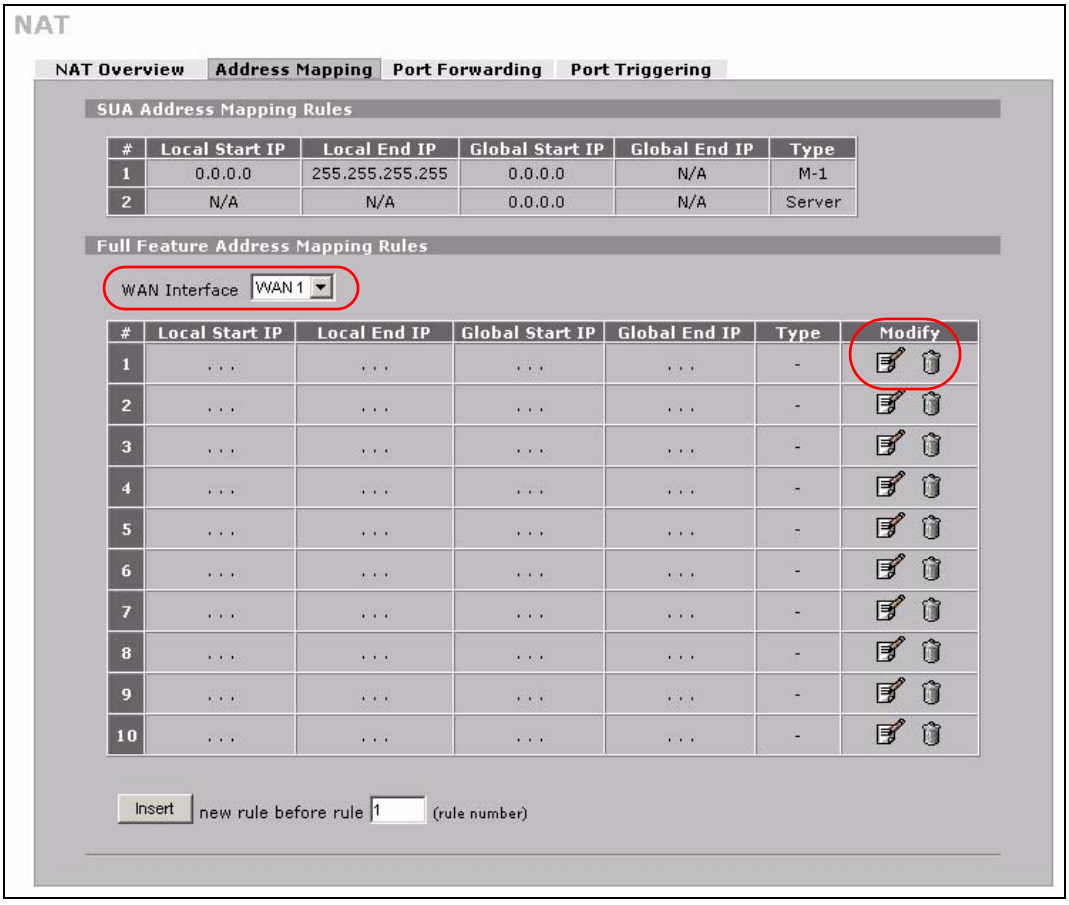

6 Map a public IP address to the web server.

Select the **One-to-One** type and enter 192.168.1.12 as the local start IP address and 1.2.3.5 as the global start IP address. Click **Apply**.

Figure 54 Tutorial Example: NAT Address Mapping Edit: One-to-One (1)

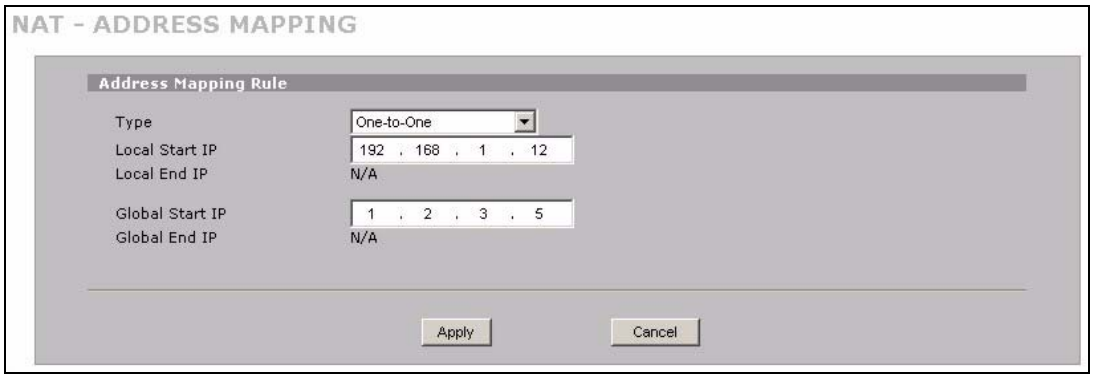


7 Click the second rule's **Edit** icon ( ).

8 Map a public IP address to the mail server.

Select the **One-to-One** type and enter 192.168.1.13 as the local start IP address and 1.2.3.6 as the global start IP address. Click **Apply**.

Figure 55 Tutorial Example: NAT Address Mapping Edit: One-to-One (2)

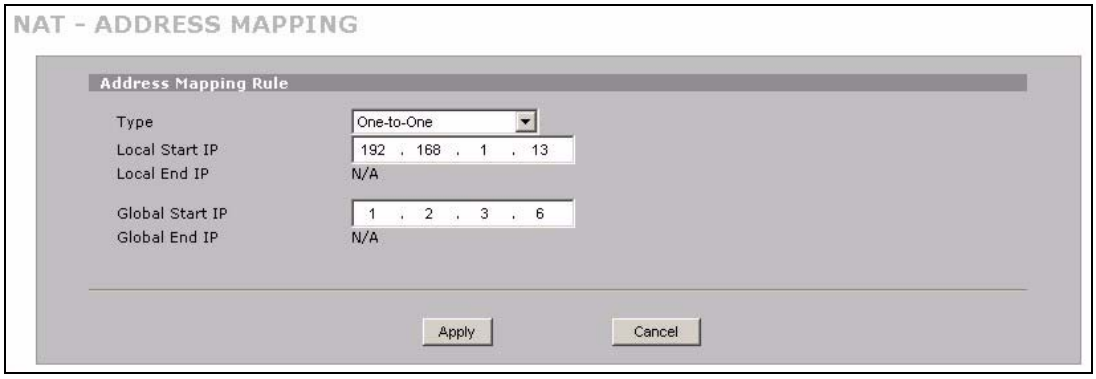


9 Click the third rule's **Edit** icon ( ).

10 Map a public IP address to other outgoing LAN traffic.


Select the **Many-to-One** type and enter 192.168.1.1 as the local start IP address, 192.168.1.254 as the local end IP address and 1.2.3.4 as the global start IP address. Click **Apply**.

Figure 56 Tutorial Example: NAT Address Mapping Edit: Many-to-One

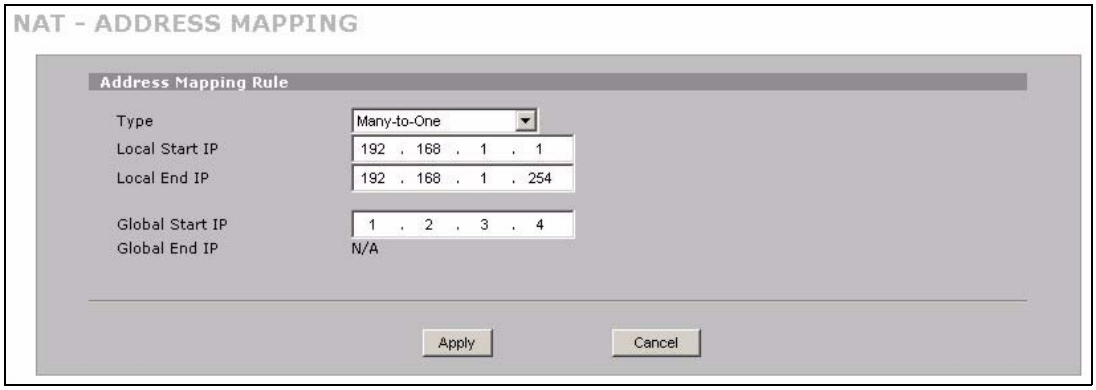

11 After the configurations, the **Address Mapping** screen looks as shown. You still have one IP address (1.2.3.7) that can be assigned to another internal server when you expand your network.

Figure 57 Tutorial Example: NAT Address Mapping Done

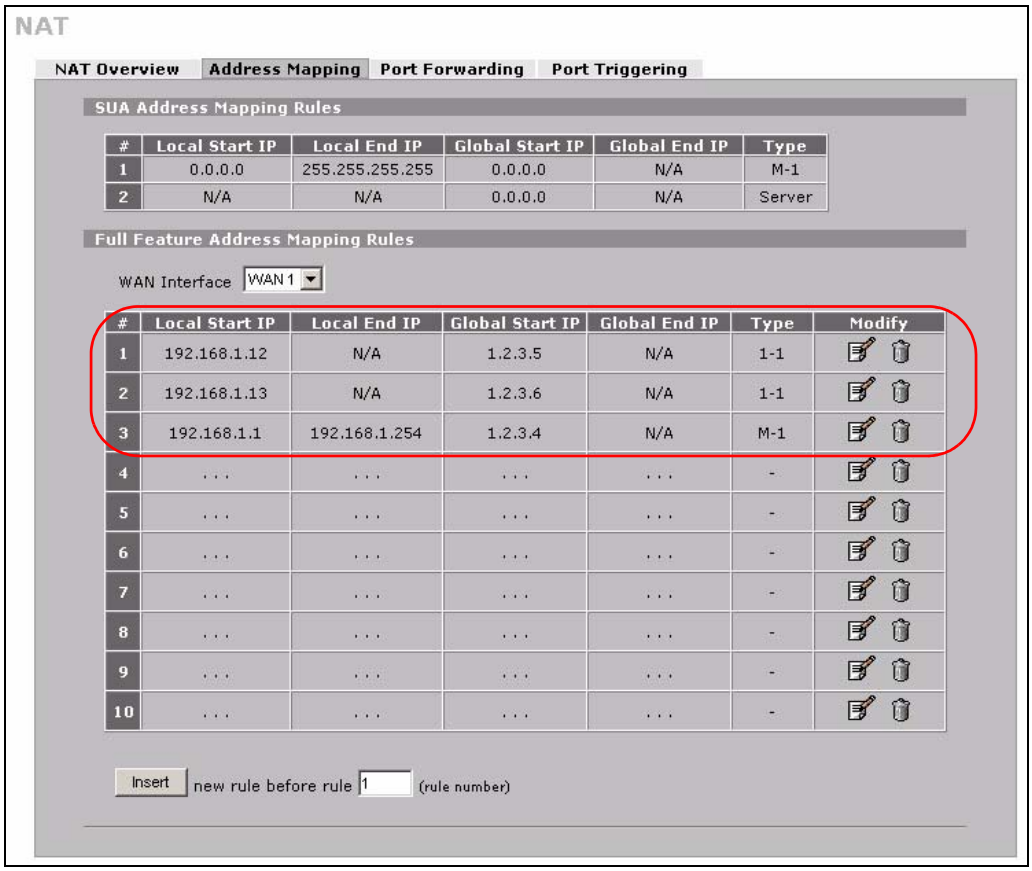


To allow traffic from the WAN to be forwarded through the ZyXEL Device, you must also create a firewall rule. Refer to Section 4.2.5 on page 120 for more information.

4.2.4 Forwarding Traffic from the WAN to a Local Computer

A server NAT address mapping rule allows computers behind the NAT be accessible to the outside world. To have the ZyWALL forward incoming traffic to a specific computer on your local network, you should also create a port forwarding (server mapping) rule.

In this example, you want to forward FTP traffic using port 21 to the computer with the IP address of 192.168.1.39.


Figure 58 Tutorial Example: Forwarding Incoming FTP Traffic to a Local Computer

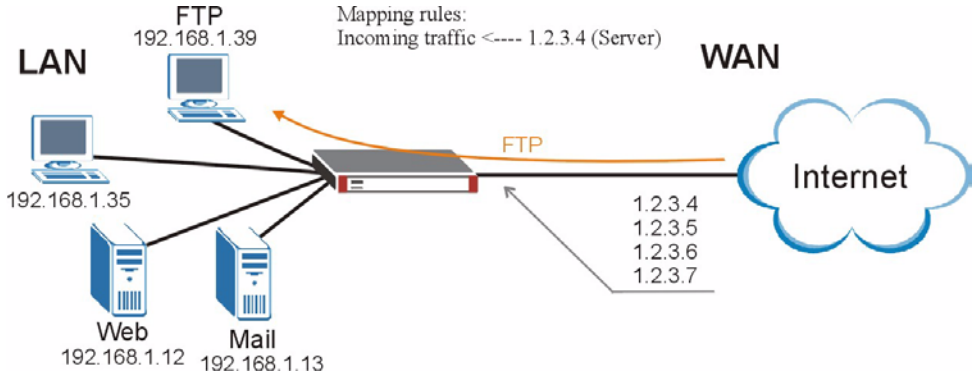

1 Click **ADVANCED** > **NAT** > **Address Mapping**.

2 Click the forth rule's **Edit** icon ( ) to configure a server rule.

Figure 59 Tutorial Example: NAT Address Mapping Edit: Server

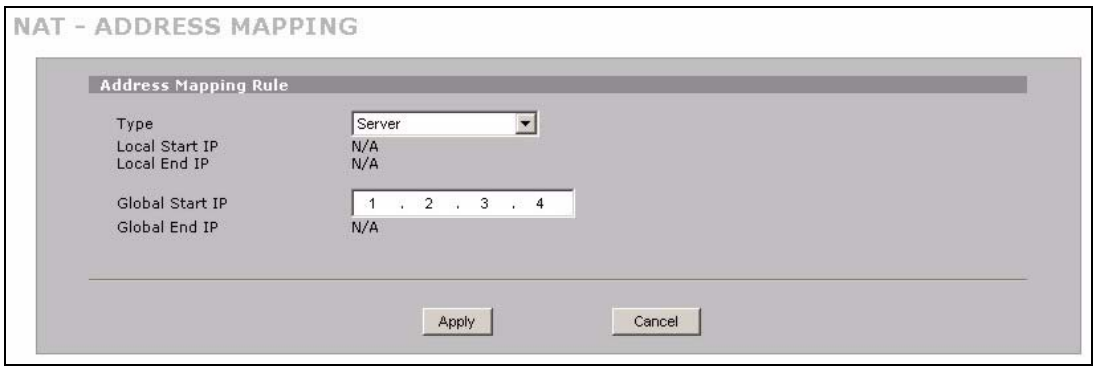


3 Click the **Port Forwarding** tab.

4 Select **WAN 1**.

5 Select the **Active** check box, enter a descriptive name (**FTP** for example), incoming port number (21) and 192.168.1.39 as the server IP address. Click **Apply**.

Figure 60 Tutorial Example: NAT Port Forwarding

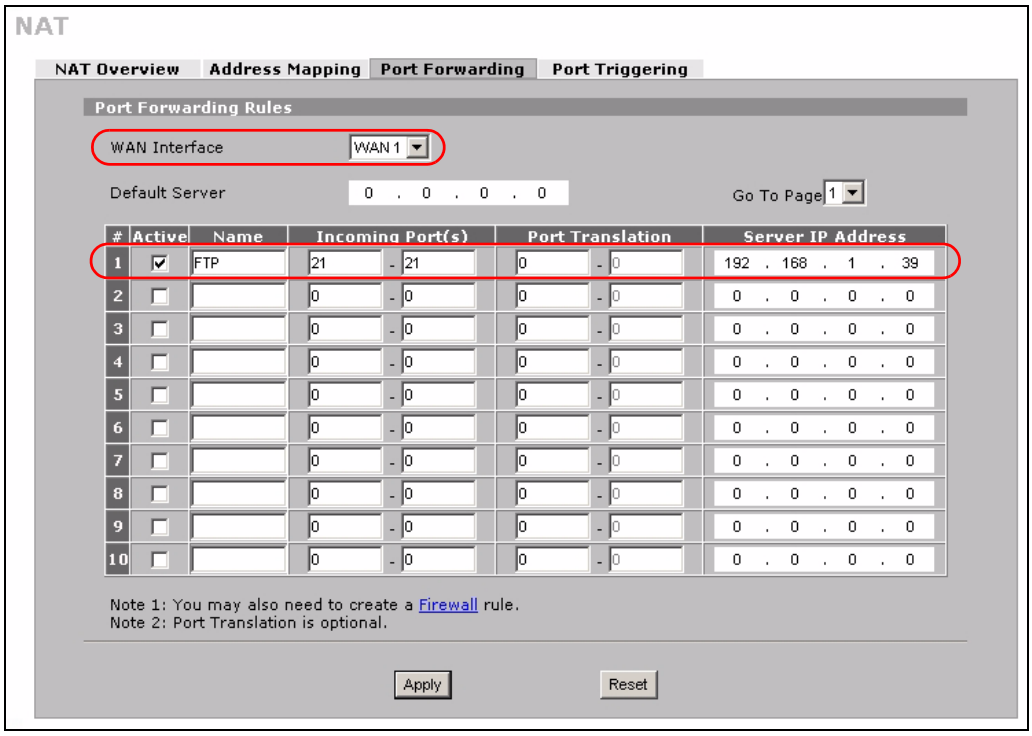


4.2.5 Allow WAN-to-LAN Traffic through the Firewall

By default, the ZyWALL blocks any traffic initiated from the WAN to the LAN. To have the ZyWALL forward traffic initiated from WAN 1 to a local computer or server on the LAN, you need to configure a firewall rule to allow it.

In this example, you create the firewall rules to allow traffic from the WAN to the following servers on the LAN:

- Web server
- Mail server
- FTP server


Figure 61 Tutorial Example: Forwarding Incoming FTP Traffic to a Local Computer

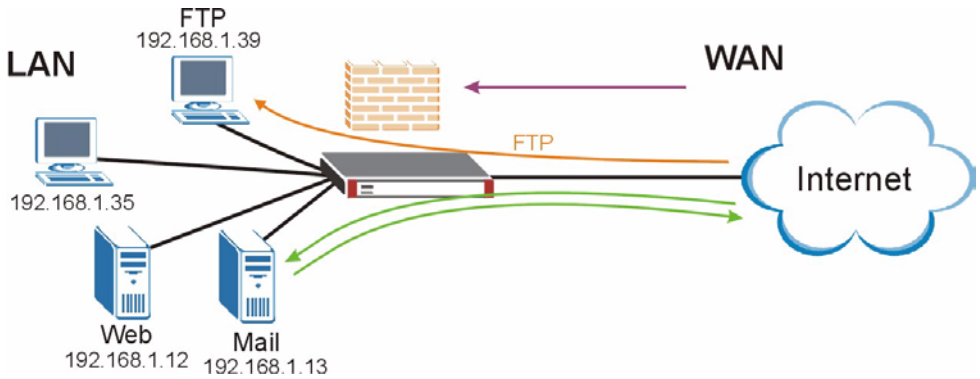

1 Click **SECURITY > FIREWALL**.

2 Make sure the firewall is enabled and traffic from WAN 1 to the LAN is dropped.

Figure 62 Tutorial Example: Firewall Default Rule

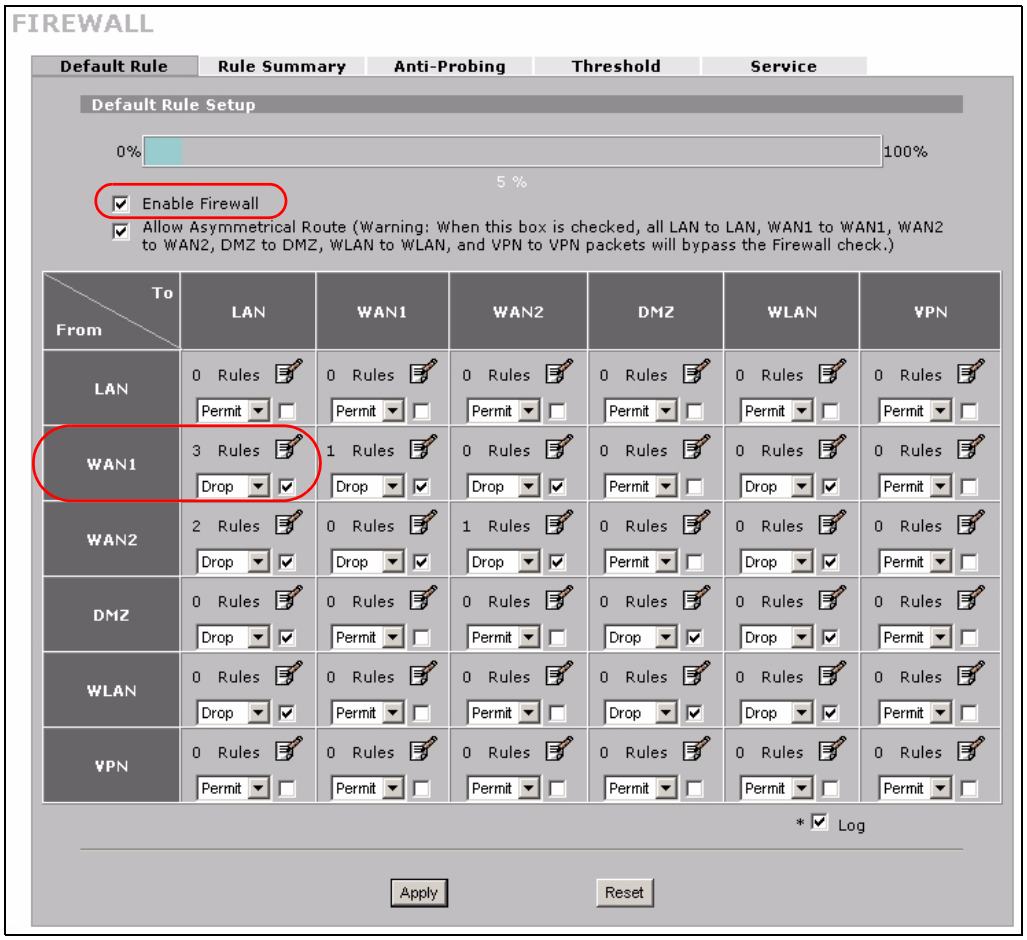


3 Go to the **Rule Summary** screen.

4 Select **WAN1** to **LAN** as the packet direction and click **Refresh**.

5 Click the insert icon to create a new firewall rule.


Figure 63 Tutorial Example: Firewall Rule: WAN1 to LAN

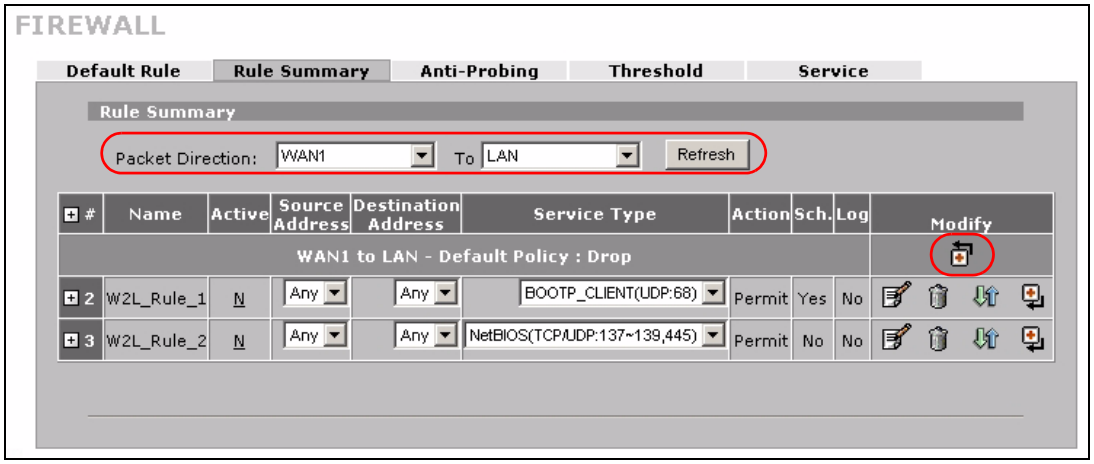

6 Configure a firewall rule to allow HTTP traffic from the WAN to the web server.


Enter a descriptive name (W-L_Web for example).
Select **Any** in the **Destination Address(es)** box and click **Delete**.
Select **Single Address** as the destination address type. Enter 192.168.1.12 and click **Add**.

Figure 64 Tutorial Example: Firewall Rule: WAN to LAN Address Edit for Web Server

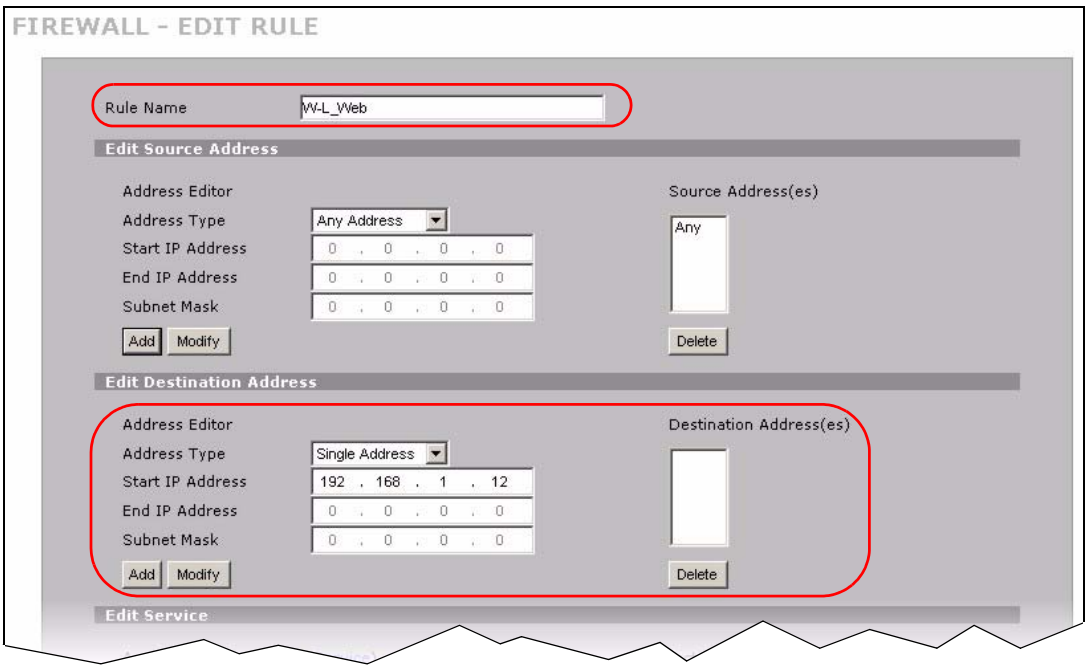

7 Select **HTTP(TCP:80)** and **HTTPS(TCP:443)** in the **Available Services** box on the left, and click **>>** to add them to the **Selected Service(s)** box on the right. Click **Apply**.


Figure 65 Tutorial Example: Firewall Rule: WAN to LAN Service Edit for Web Server

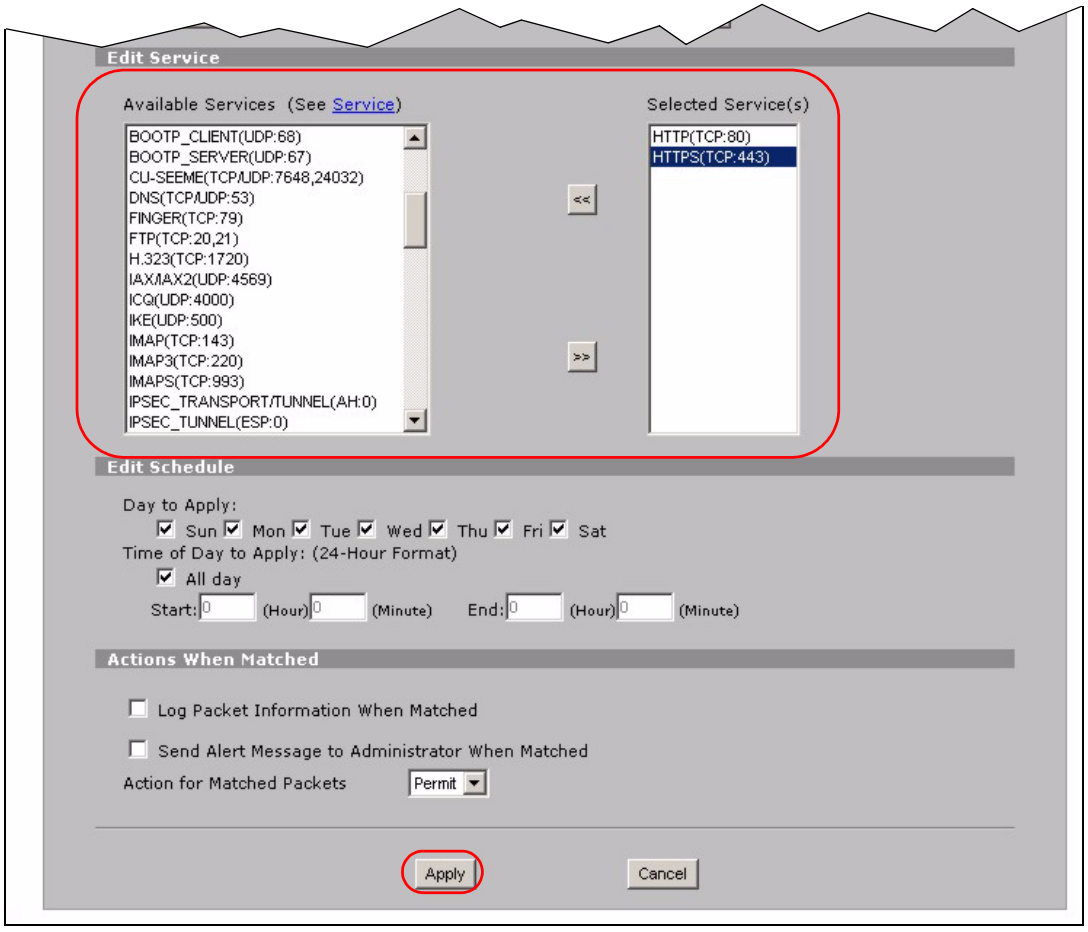

8 Click the insert icon to configure a firewall rule to allow traffic from the WAN to the mail server.


Enter a descriptive name (W-L_Mail for example).
Select **Any** in the **Destination Address(es)** box and click **Delete**.
Select **Single Address** as the destination address type. Enter 192.168.1.13 and click **Add**.

Figure 66 Tutorial Example: Firewall Rule: WAN to LAN Address Edit for Mail Server

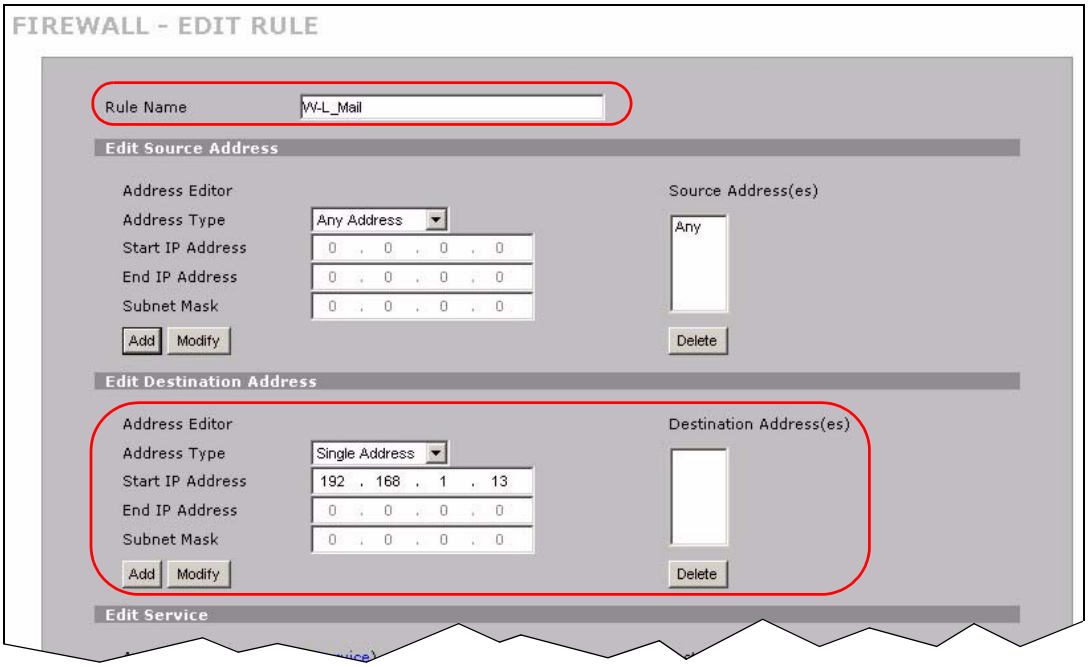

9 Select **Any(All)** in the **Available Services** box on the left, and click >> to add it to the **Selected Service(s)** box on the right. Click **Apply**.


Figure 67 Tutorial Example: Firewall Rule: WAN to LAN Service Edit for Mail Server

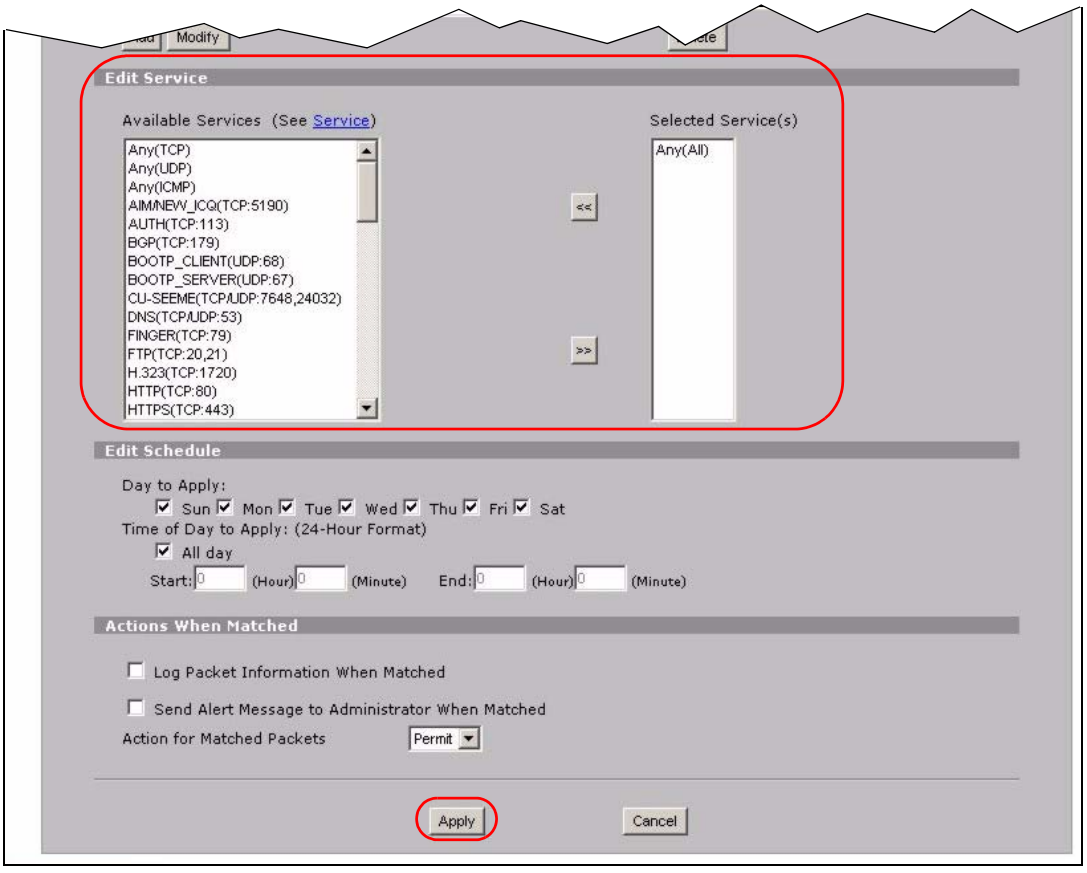

10 Click the insert icon to configure a firewall rule to allow FTP traffic from the WAN to the FTP server.


Enter a descriptive name (W-L_FTP for example).
Select **Any** in the **Destination Address(es)** box and click **Delete**.
Select **Single Address** as the destination address type. Enter 192.168.1.39 and click **Add**.

Figure 68 Tutorial Example: Firewall Rule: WAN to LAN Address Edit for FTP Server

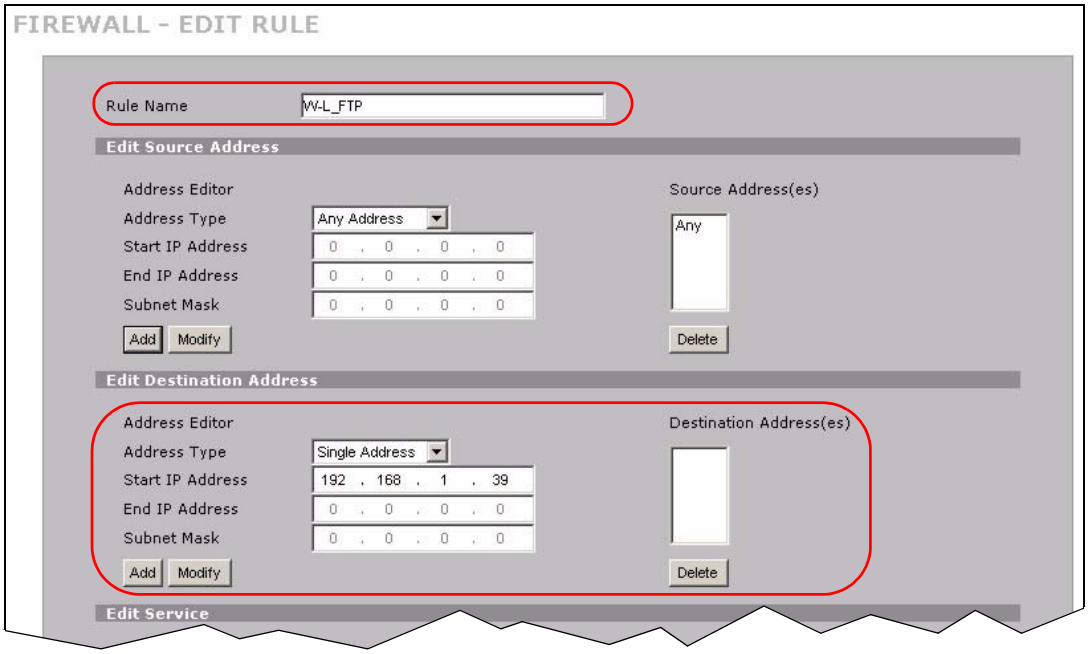


11 Select **FTP(TCP:20,21)** in the **Available Services** box on the left, and click **>>** to add it to the **Selected Service(s)** box on the right. Click **Apply**.

Figure 69 Tutorial Example: Firewall Rule: WAN to LAN Service Edit for FTP Server

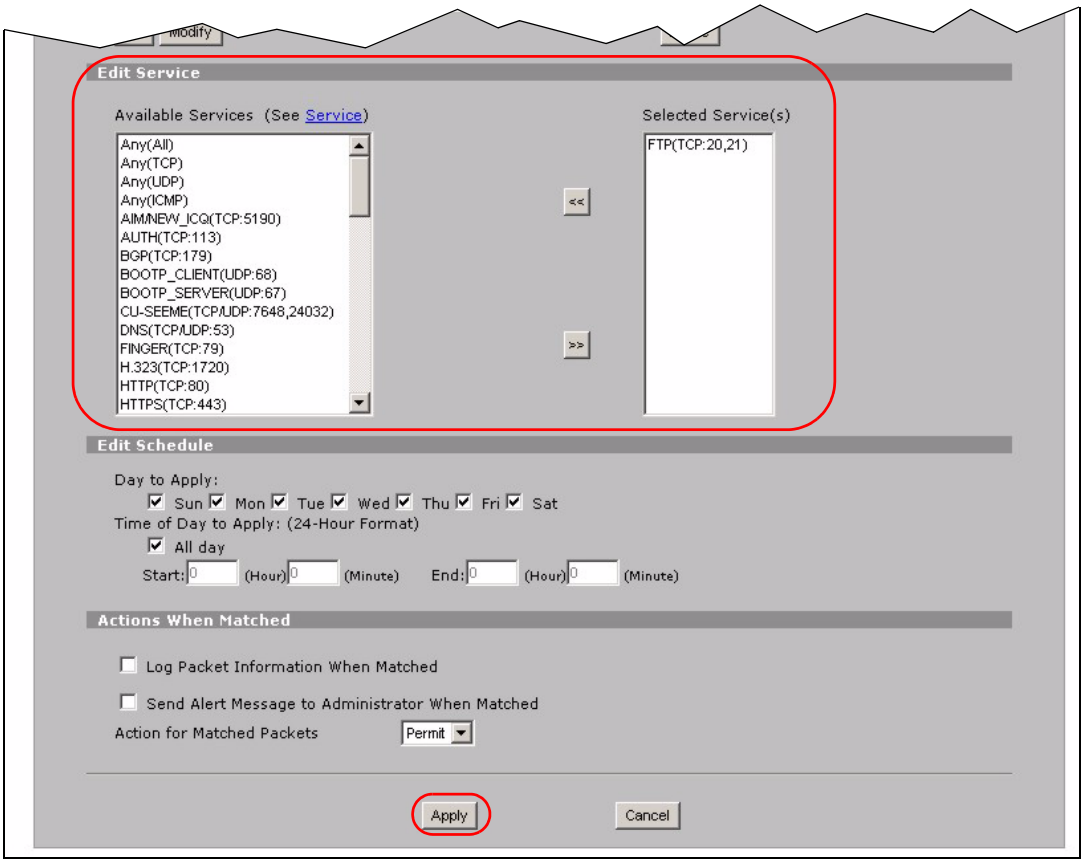

12When you are done, the **Rule Summary** screen looks as shown.

Figure 70 Tutorial Example: Firewall Rule Summary

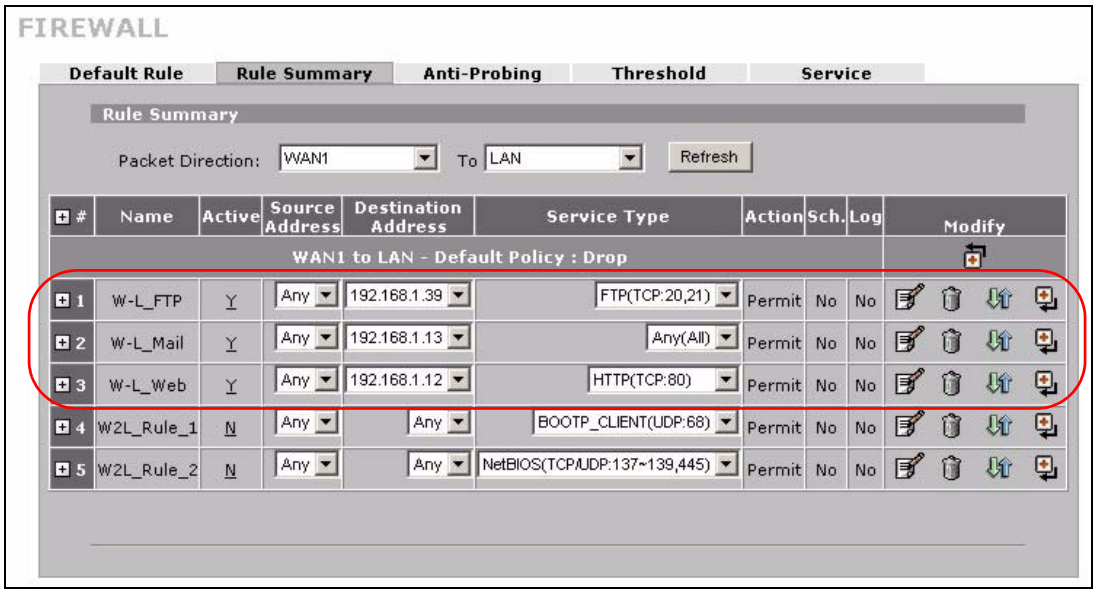

4.2.6 Testing the Connections

1. Open the web browser on one of the local computers and enter any web site's URL in the address bar. If you can access the web site, your WAN 1 connection and NAT address mapping are configured successfully. If you cannot access it, make sure you entered the correct information in the **WAN** and **NAT Address Mapping** screens. Also check that the Internet account is active and the computer's IP address is in the same subnet as the ZyWALL.
2. Open your web browser and try accessing the web server (1.2.3.5) from the outside network. If you cannot access the web server, make sure the NAT address mapping rule is configured correctly and there is a firewall rule to allow HTTP traffic from the WAN to the web server.
3. Try accessing the FTP server (1.2.3.4) from the outside network to send or retrieve a file. If you cannot access the FTP server, make sure the NAT port forwarding rule is active and there is a firewall rule to allow FTP traffic from the WAN to FTP server.


4.3 Using NAT with Multiple Game Players

If two users (behind the ZyWALL) want to connect to the same server to play online games at the same time, but the server does not allow more than one login from the same IP address, you can configure a many-to-many rule instead of a many-to-one rule.

In this example, you have four static IP addresses (1.2.3.4 to 1.2.3.7) from your ISP. After you set up your WAN connection (see Section 4.2.2 on page 110), use the **NAT > Address Mapping** screen to map the third and forth public IP addresses to the mail server (192.168.1.12) and web server (192.168.1.13) respectively. The first and second public IP addresses are mapped to other outgoing LAN traffic. See Section 4.2.3 on page 113 for more information about IP address mapping.

When you finish configuration, the screen looks as shown.

Figure 71 Tutorial Example: NAT Address Mapping Done: Game Playing

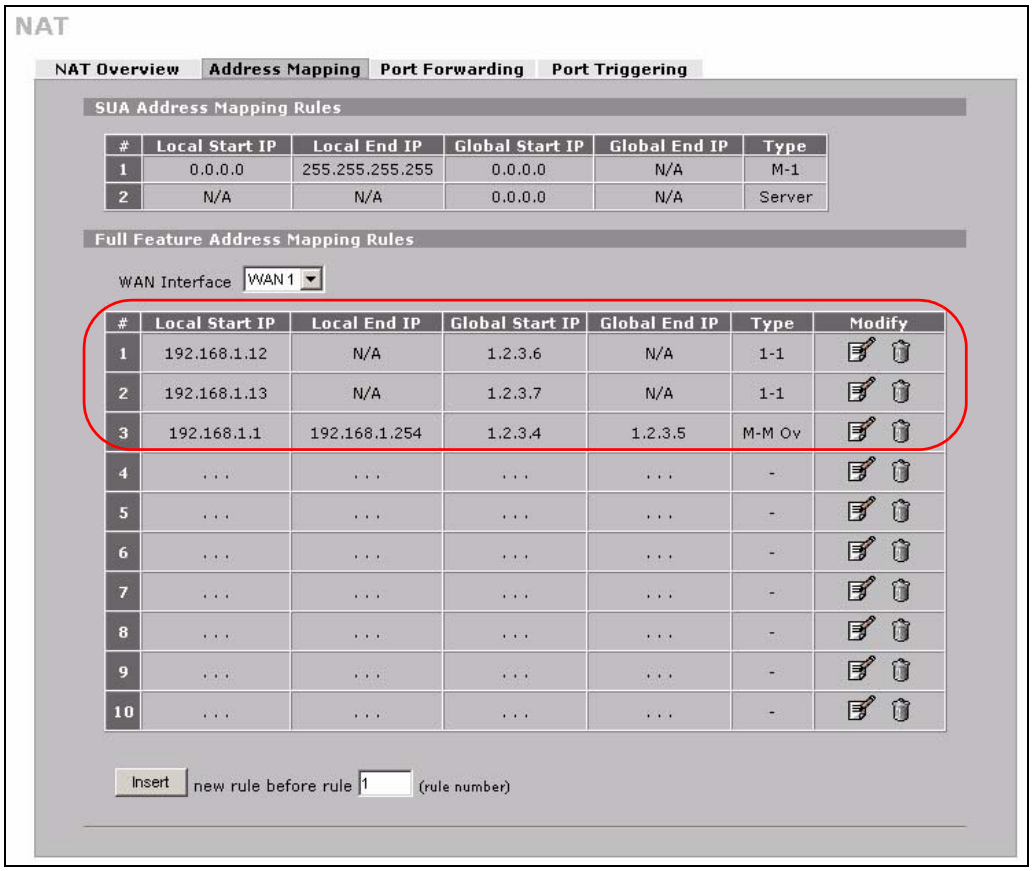

To allow traffic from the WAN to be forwarded through the ZyXEL Device, you must also create a firewall rule. Refer to Section 4.2.5 on page 120 for more information.


4.4 How to Manage the ZyWALL's Bandwidth

This section shows you examples of how to allocate bandwidth and apply priorities to traffic that flows out through the ZyWALL's WAN port.

4.4.1 Example Parameters and Scenario

The following figure shows the network you want to set up in this example. The WAN port has an upstream (outgoing) speed of 512 kbps. To prevent SIP-based VoIP (Voice over IP) traffic from getting delayed due to heavy WWW or FTP traffic, you reserve 128 Kbps of bandwidth for outgoing VoIP traffic (from LAN to WAN) and higher priority than FTP or WWW traffic.

Figure 72 Tutorial Example: Bandwidth Management

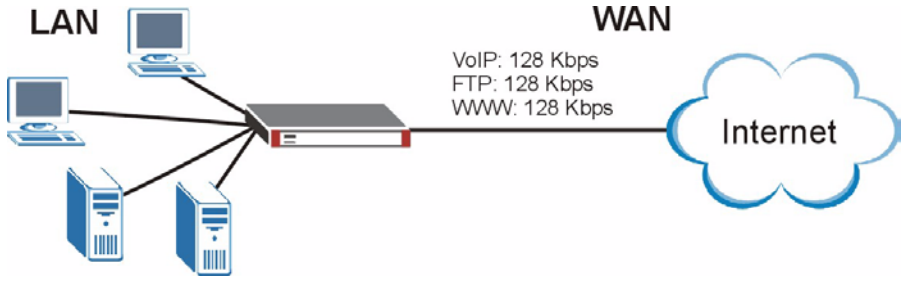

The following table shows the example information you configure in the bandwidth management screens.


Total Bandwidth Budget (WAN Upstream Speed)	512 Kbps
Bandwidth for VoIP Traffic	128 Kbps
Priority for VoIP Traffic	7
Bandwidth for FTP Traffic	128 Kbps
Priority for FTP Traffic	2
Bandwidth for WWW Traffic	128 Kbps
Priority for WWW Traffic	3

4.4.2 Configuring Bandwidth Management Rules

Follow the steps below to set up bandwidth management rules for different traffic.

1. Click **ADVANCED** > **BW MGMT**.
2. Select **Active** to apply bandwidth management to traffic that is forwarded out through the WAN 1 port.
3. Enter the WAN 1 port's upstream speed.
4. Select **Priority-Based** to have the ZyWALL give preference to bandwidth classes with higher priorities.
5. Deselect the **Maximize Bandwidth Usage** option to reserve bandwidth for traffic that is not defined in a bandwidth class.
6. Click **Apply**.


Figure 73 Tutorial Example: Bandwidth Management Summary

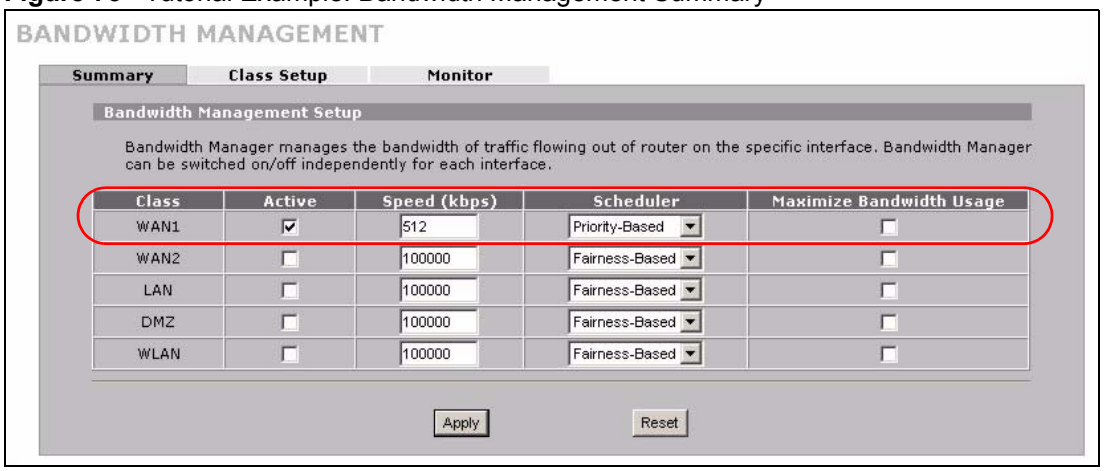

7 Click the **Class Setup** tab.

8 Select the **WAN1** interface and click the **Add Sub-Class** button to create a rule for VoIP traffic.

Figure 74 Tutorial Example: Bandwidth Management Class Setup

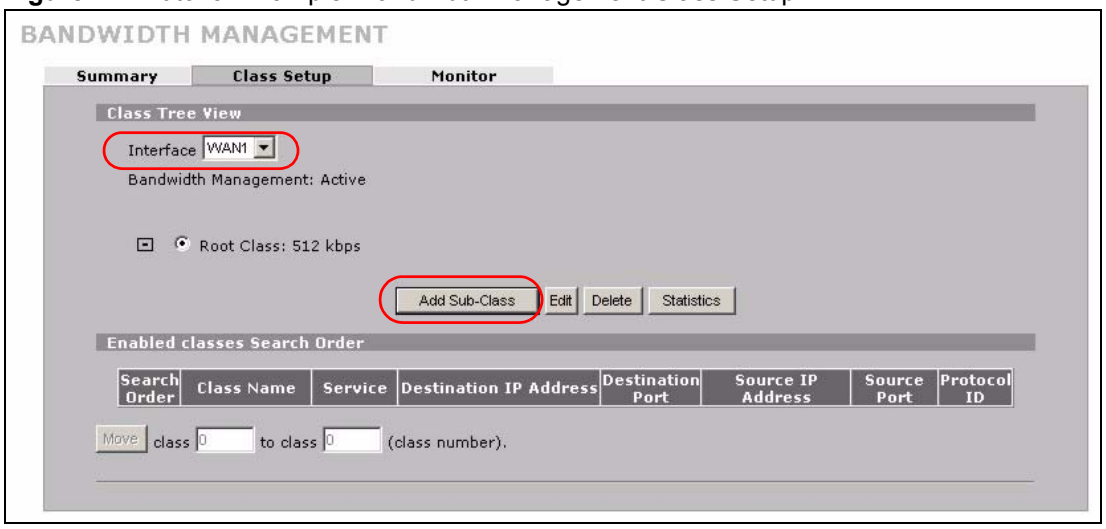


9 Enter a descriptive name (“WAN1_VoIP” for example), the maximum bandwidth allowed and a priority for VoIP traffic. The higher the number, the higher the priority.

10 Enable this filter and select the SIP service. Make sure you also use the **ALG** screen to turn on the SIP ALG.


11 Leave the IP address and subnet mask fields blank, so that the filter will be applied to any outgoing traffic through the WAN port. Click **Apply**.

Figure 75 Tutorial Example: Bandwidth Management Class Setup: VoIP

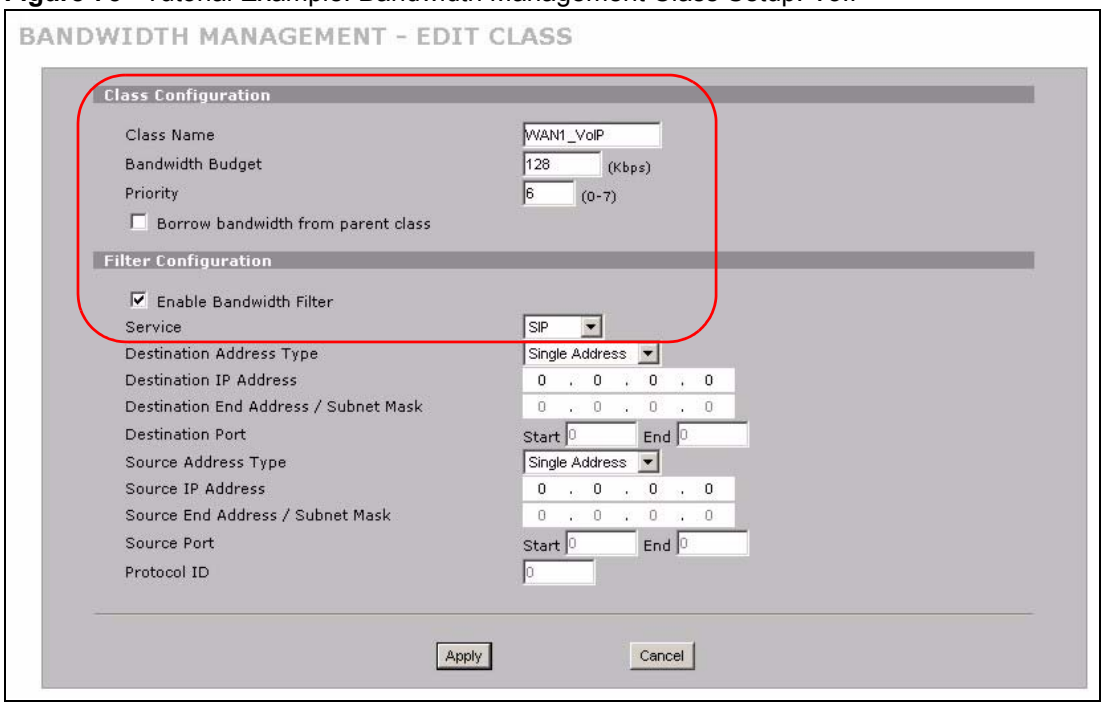


12Click the **Add Sub-Class** button to create a rule for FTP traffic as follows. Click **Apply**.

Figure 76 Tutorial Example: Bandwidth Management Class Setup: FTP

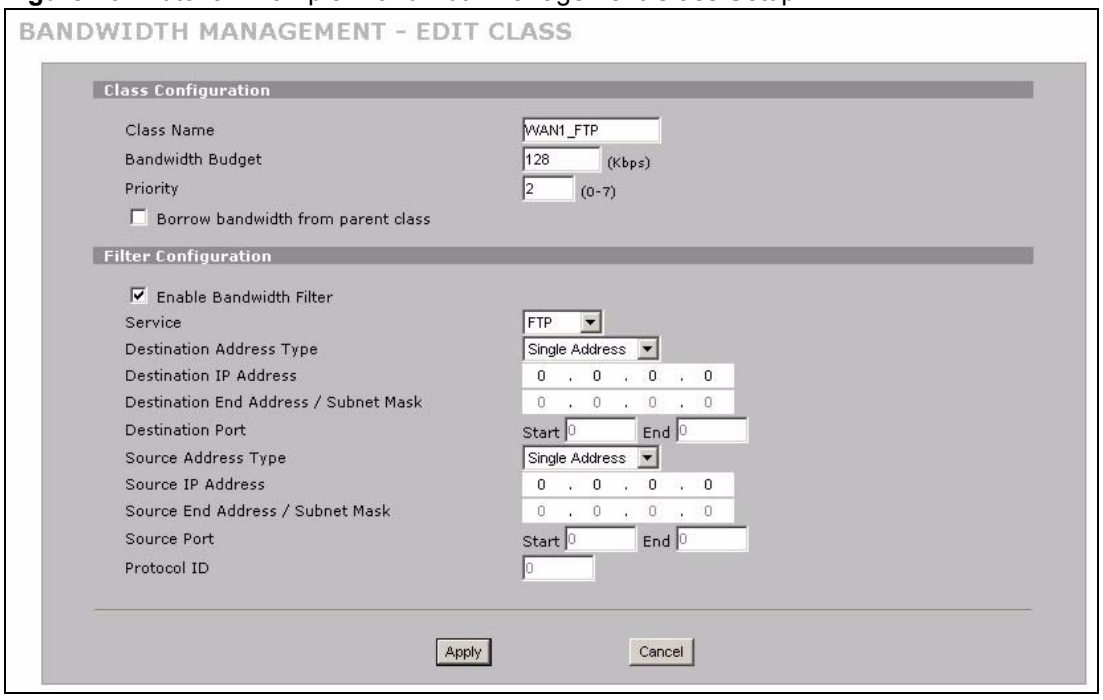


13Click the **Add Sub-Class** button to create a rule for WWW traffic as follows. Click **Apply**.

Figure 77 Tutorial Example: Bandwidth Management Class Setup: WWW

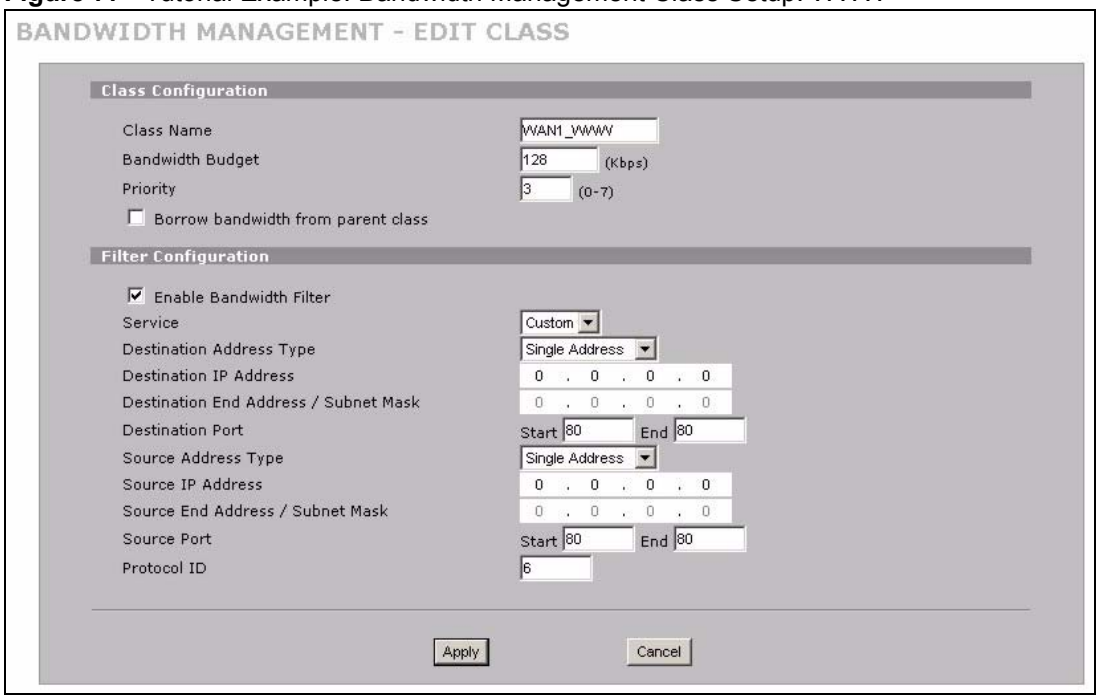


14When you are finished, the **Class Setup** screen looks as shown.

Figure 78 Tutorial Example: Bandwidth Management Class Setup Done

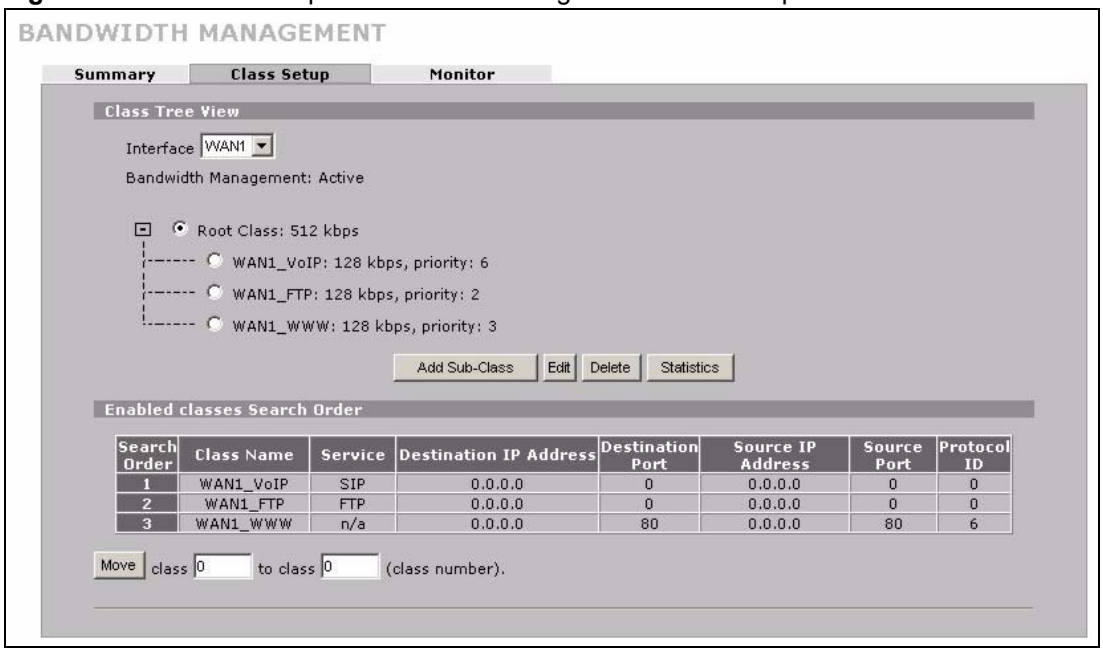

15Use the **Monitor** screen to view the bandwidth usage and allotments for the WAN interface.

Figure 79 Tutorial Example: Bandwidth Management Monitor

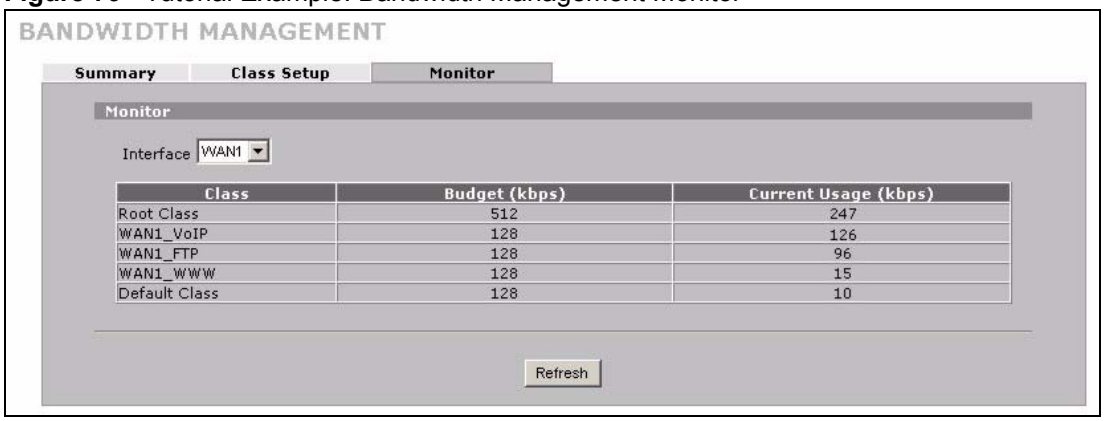

4.5 Configuring Content Filtering

You can use the ZyWALL's content filtering policies to apply specific content filtering settings to specific users. You can even filter certain things at certain times. For example, you decide to set the default policy to block access to several categories of web content including things like pornography, hacking, nudity, and arts and entertainment, and so on. Now, suppose you want to allow an employee named Bob to access arts and entertainment web pages during lunch. You can create another policy for traffic from Bob's computer.

The ordering of your policies is very important as the ZyWALL applies policies in the order they are listed.

The ZyWALL applies the content filter policies based on the source address and the schedule. So for this example, when the ZyWALL receives a request from the LAN for a web page, it checks the request against the first policy. If the traffic matches (that is if it is from Bob's computer and the time is between 12:00 and 13:00), the ZyWALL applies the first policy. Any traffic that does not match the first policy will match the default policy and the ZyWALL treats it based on the default policy.

4.5.1 Enable Content Filtering


Do the following to turn on content filtering and have the ZyWALL use the external content filtering service.

You must register for external content filtering before you can use it.

Use the **REGISTRATION** screens (see Chapter 5 on page 141) to create a myZyXEL.com account, register your device and activate the external content filtering service.

1 Click **SECURITY** > **CONTENT FILTER**.
2 Enable the content filter and external database content filtering.
3 Click **Apply**.

Figure 80 SECURITY > CONTENT FILTER > General

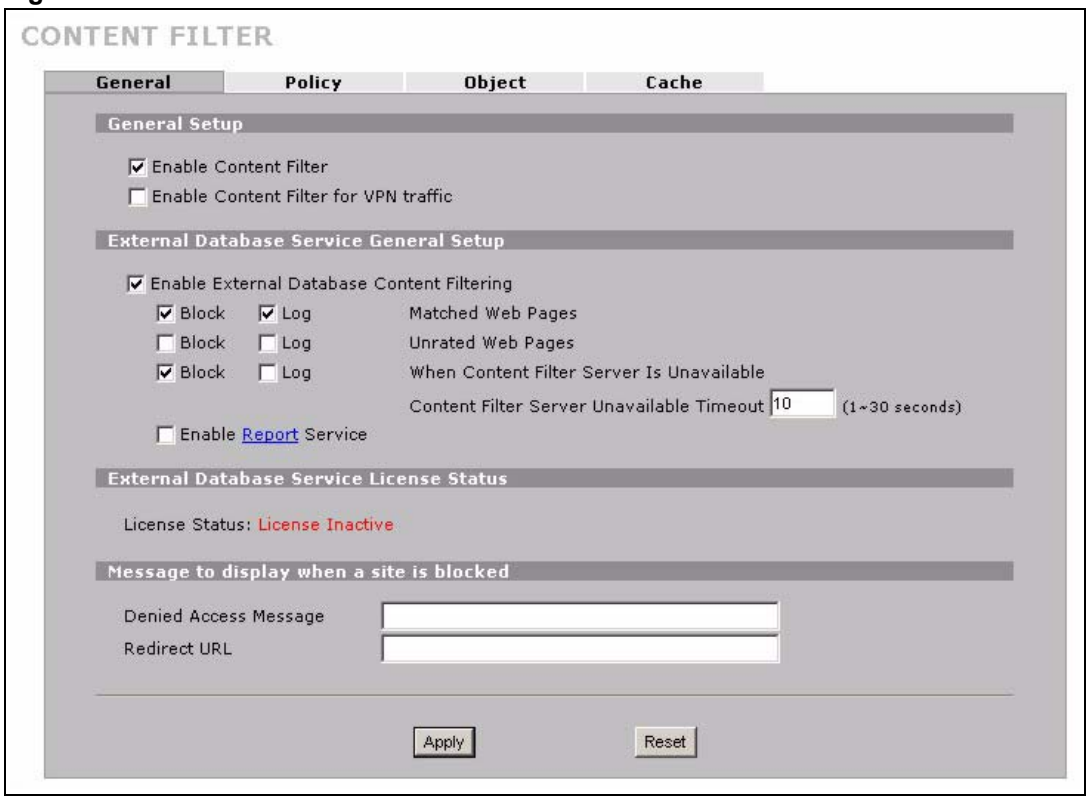


4.5.2 Block Categories of Web Content

Here is how to block access to web pages by category of content.

1 Click **SECURITY** > **CONTENT FILTER** > **Policy** and then the external database icon next to the default policy.

Figure 81 SECURITY > CONTENT FILTER > Policy

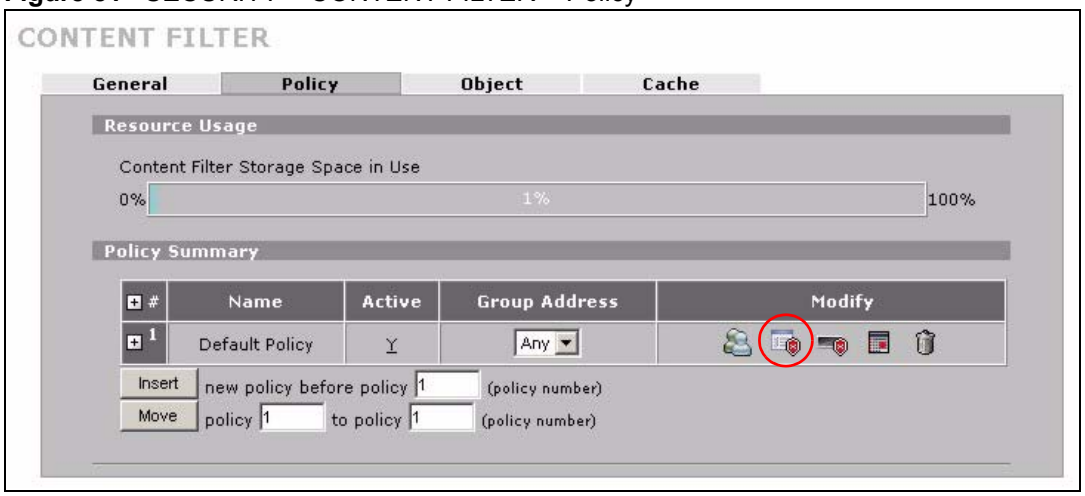


2 Select **Active**.

3 Select the categories to block.

4 Click **Apply**.

Figure 82 SECURITY > CONTENT FILTER > Policy > External Database (Default)

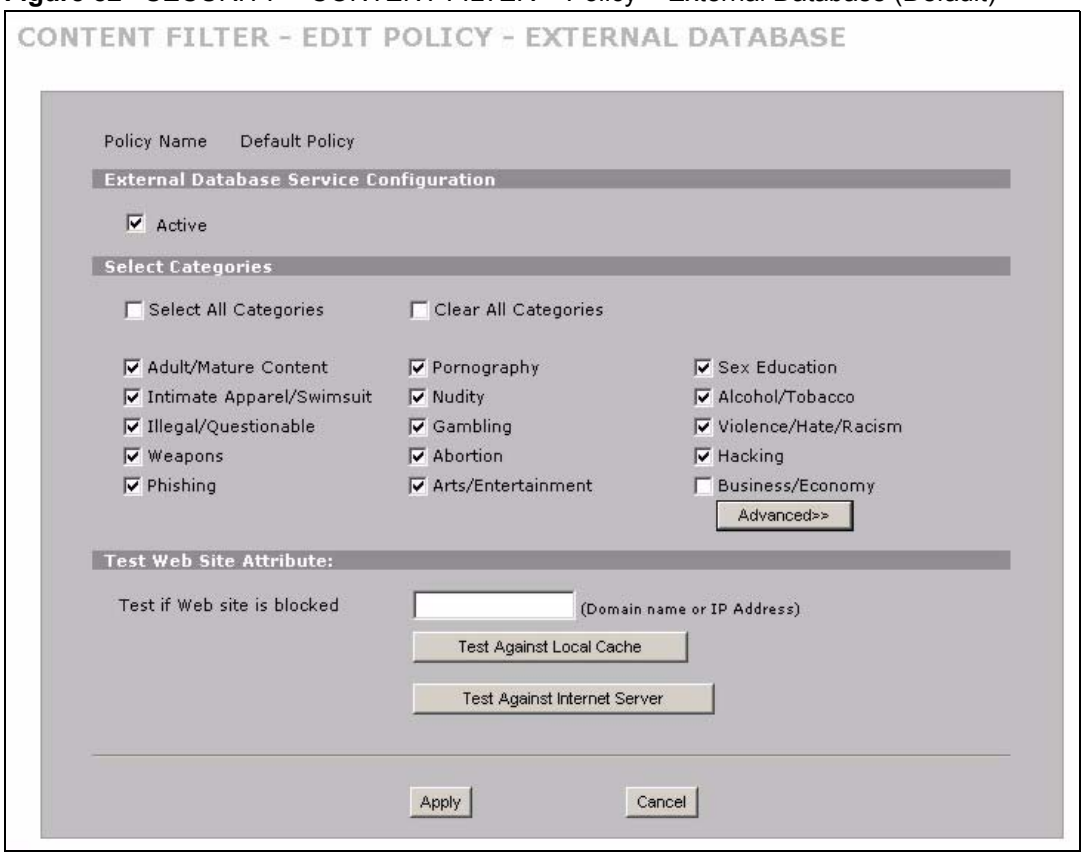


4.5.3 Assign Bob's Computer a Specific IP Address

You will configure a content filtering policy for traffic from Bob's computer's IP address. Do the following to have the ZyWALL always give Bob's computer the same IP address (192.168.1.33 in this example).

1. Click **HOME > DHCP Table**.
2. Find the entry for Bob's computer and select the **Reserve** check box as shown next.
3. Click **Apply**.

Figure 83 HOME > DHCP Table

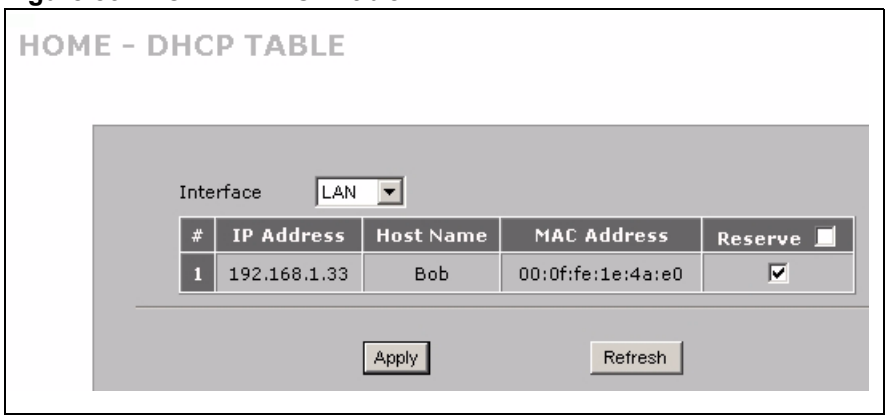


4.5.4 Create a Content Filter Policy for Bob

Do the following to create a content filtering policy for traffic from Bob's computer.

1. Click **SECURITY** > **CONTENT FILTER** > **Policy** and then the **Insert** button. The ZyWALL applies the content filter policies in order, so make sure you add the new policy before the default policy.


Figure 84 SECURITY > CONTENT FILTER > Policy

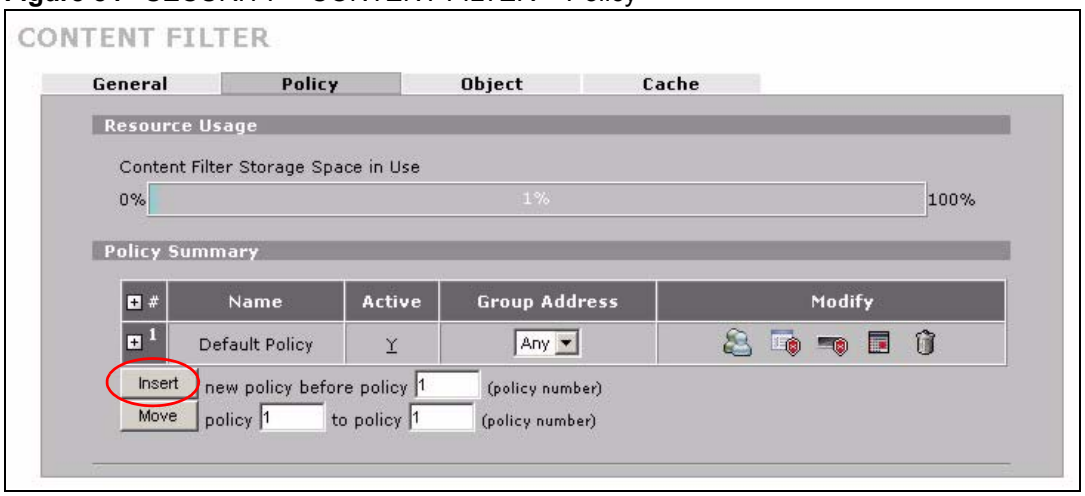

2. Select **Active**.
3. Give the policy a name.
4. Configure a single address of 192.168.1.33.

5 Click **Apply**.

Figure 85 SECURITY > CONTENT FILTER > Policy > Insert

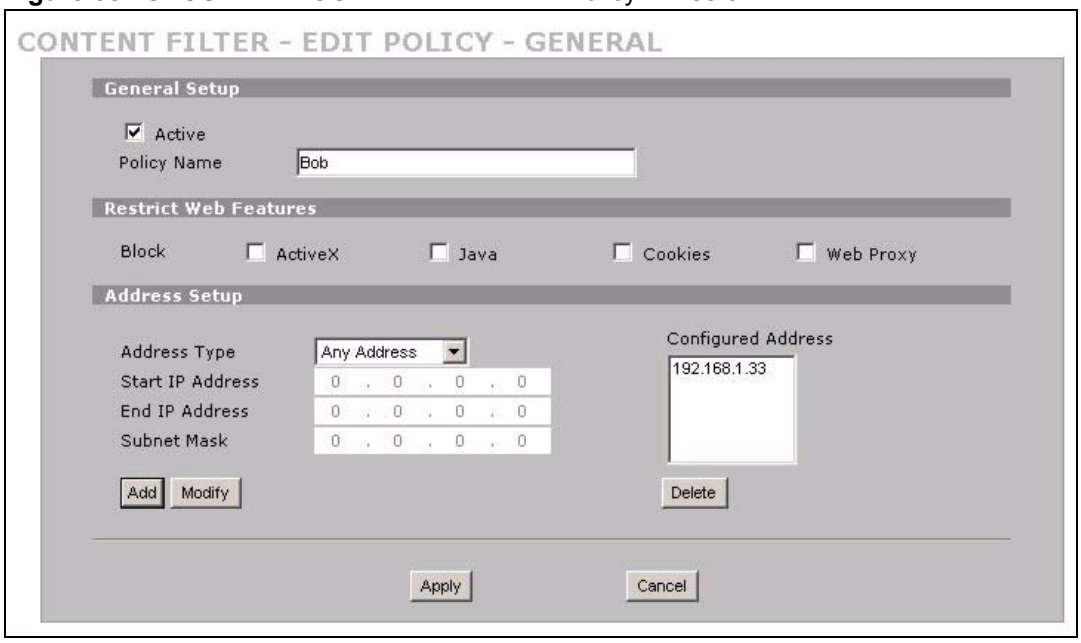


4.5.5 Set the Content Filter Schedule

You want to let Bob access arts and entertainment web pages, but only during lunch. So you configure a schedule to only apply the Bob policy from 12:00 to 13:00. For the rest of the time, the ZyWALL applies the default content filter policy (which blocks access to arts and entertainment web pages).

1 Click **SECURITY** > **CONTENT FILTER** > **Policy** and then the Bob policy's schedule icon.

Figure 86 SECURITY > CONTENT FILTER > Policy

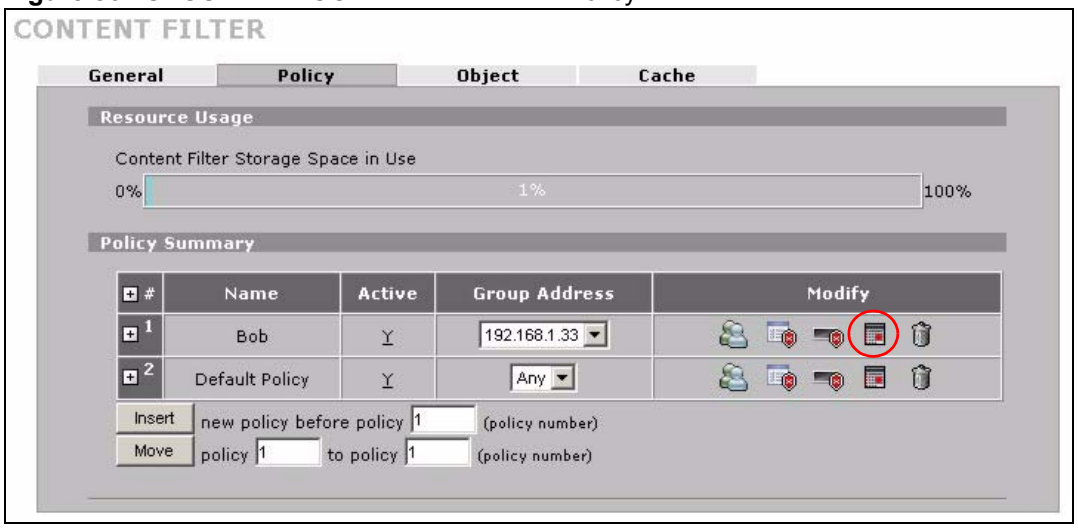


2 Select **Active**.

3 Select **Everyday** and enter 12:00 to 13:00.

4 Click **Apply**.

Figure 87 SECURITY > CONTENT FILTER > Policy > Schedule (Bob)

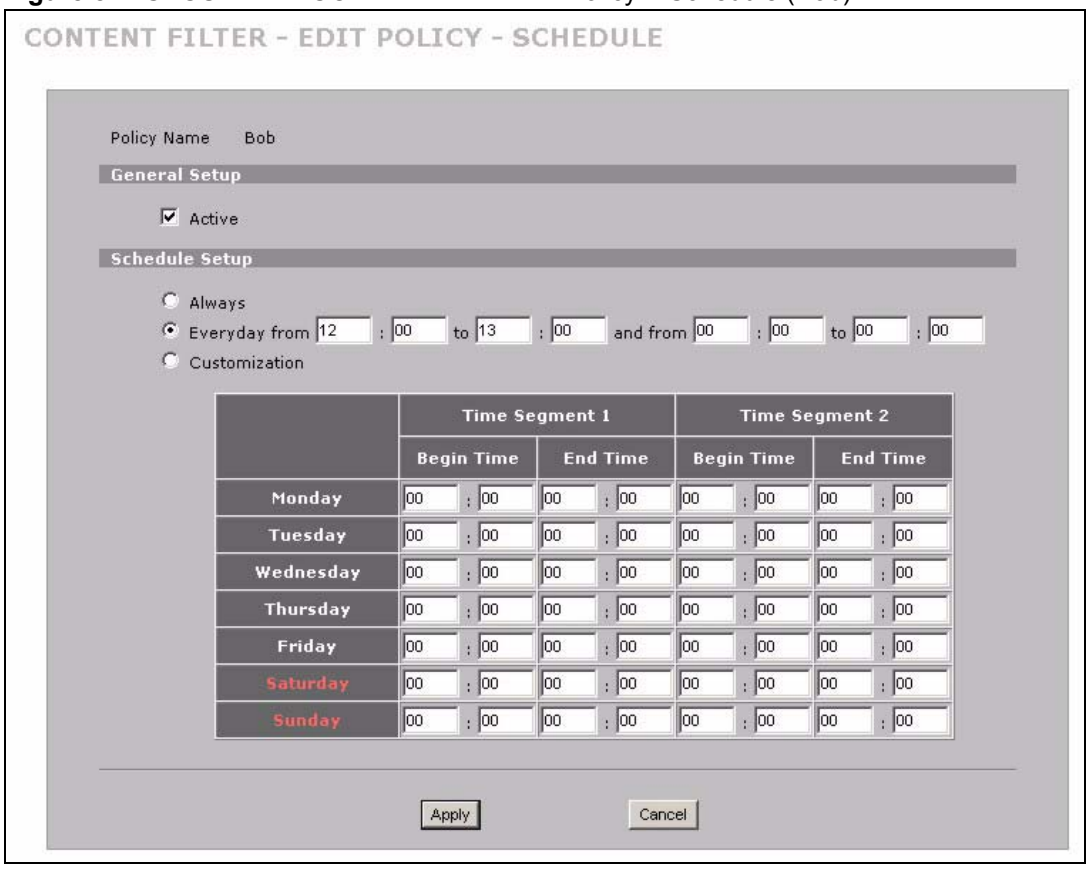


4.5.6 Block Categories of Web Content for Bob

Now you select the categories of web pages to block Bob from accessing.

1 Click **SECURITY** > **CONTENT FILTER** > **Policy** and then the Bob policy's external database icon.

Figure 88 SECURITY > CONTENT FILTER > Policy

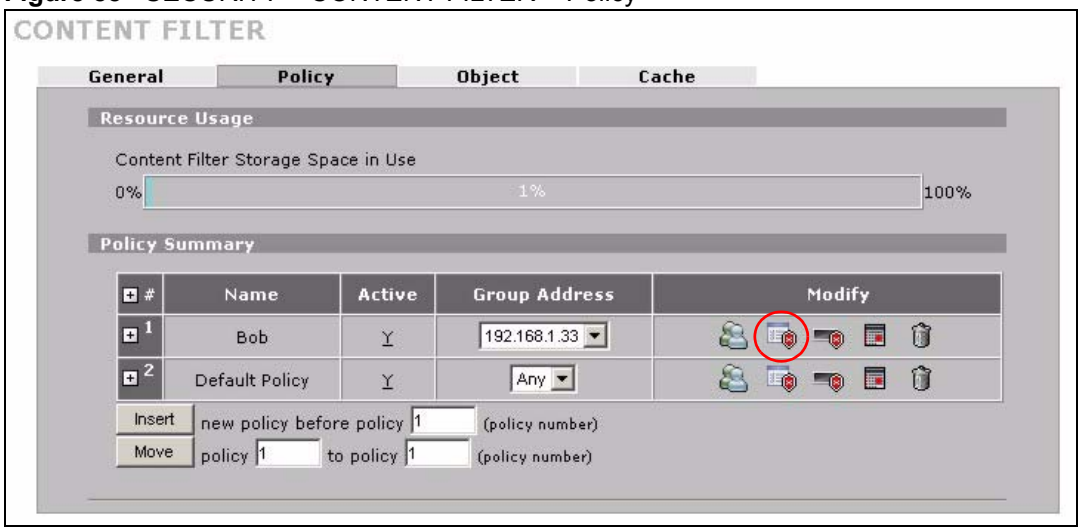


2 Select **Active**.

3 Select the categories to block. This is very similar to Section 4.5.2 on page 134, except you do not select the arts and entertainment category.

4 Click **Apply**.

Figure 89 SECURITY > CONTENT FILTER > Policy > External Database (Bob)

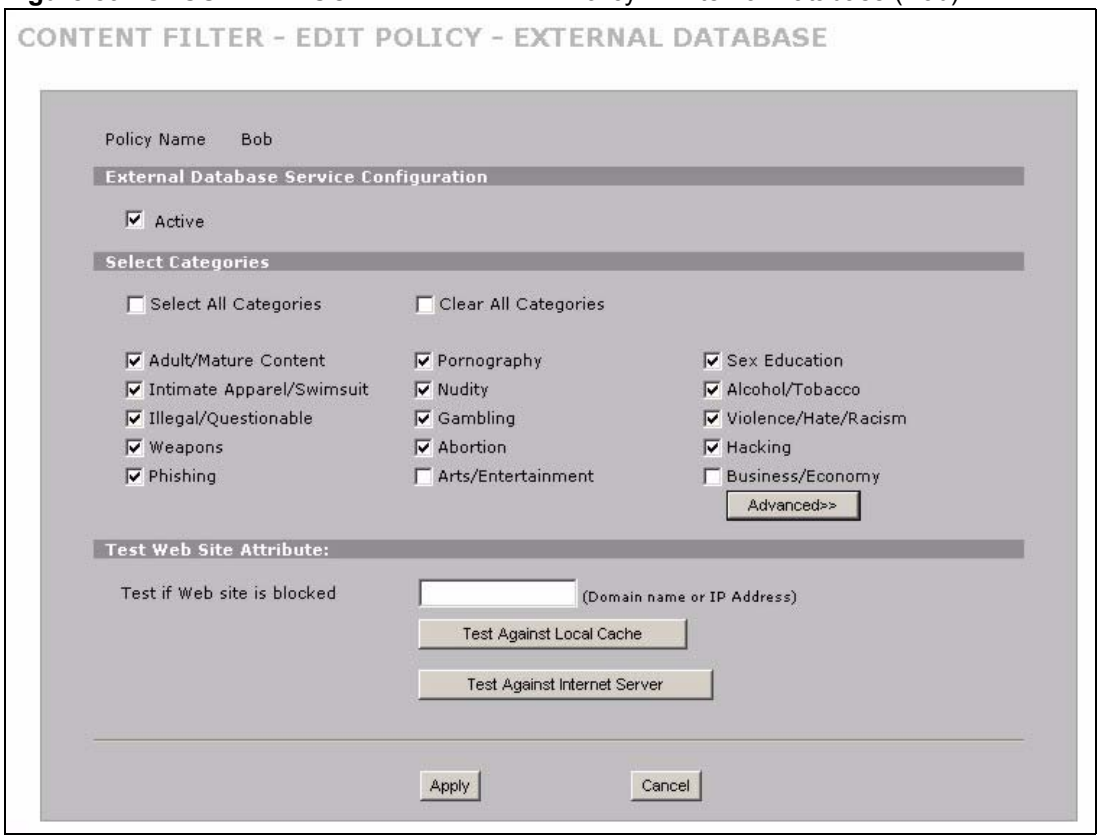

5

Registration

5.1 myZyXEL.com overview

myZyXEL.com is ZyXEL's online services center where you can register your ZyWALL and manage subscription services available for the ZyWALL.



You need to create an account before you can register your device and activate the services at myZyXEL.com.

You can directly create a myZyXEL.com account, register your ZyWALL and activate a service using the **REGISTRATION** screen. Alternatively, go to http://www.myZyXEL.com with the ZyWALL's serial number and LAN MAC address to register it. Refer to the web site's on-line help for details.



To activate a service on a ZyWALL, you need to access myZyXEL.com via that ZyWALL.

5.1.1 Content Filtering Subscription Service

The ZyWALL can use the content filtering subscription service. Content filtering allows or blocks access to web sites. Subscribe to category-based content filtering to block access to categories of web sites based on content. Your ZyWALL accesses an external database that has millions of web sites categorized based on content. You can have the ZyWALL block, block and/or log access to web sites based on these categories. See the chapter about content filtering for more information.




To use a subscription service, you have to register and activate the corresponding service at myZyXEL.com (through the ZyWALL).

5.2 Registration

To register your ZyWALL with myZyXEL.com and activate the content filtering service, click **REGISTRATION** in the navigation panel to open the screen as shown next.

Figure 90 REGISTRATION

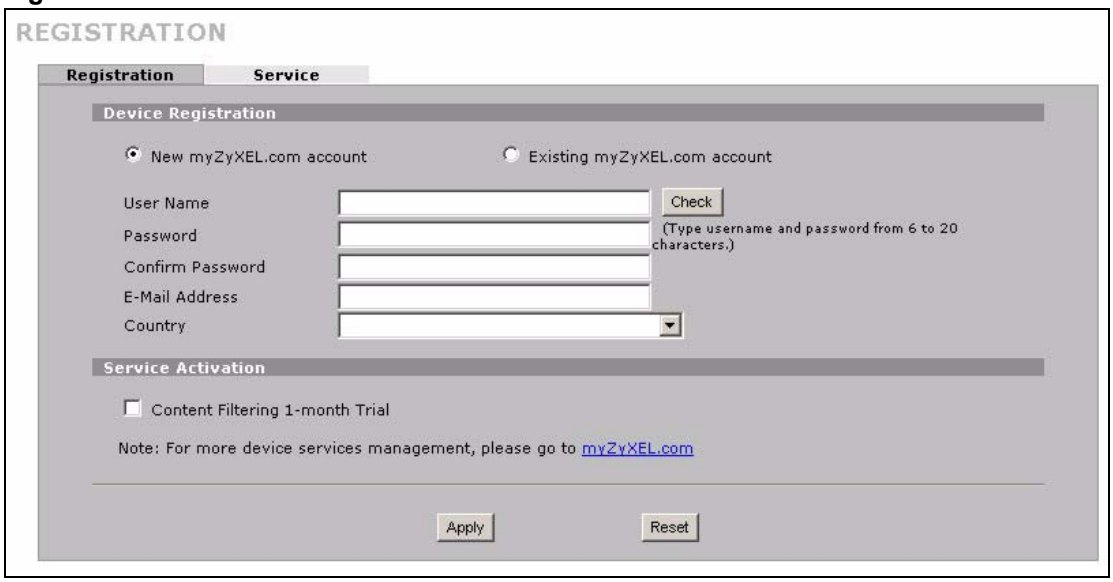

The following table describes the labels in this screen.

Table 21 REGISTRATION


LABEL	DESCRIPTION
Device Registration	If you select **Existing myZyXEL.com account**, only the **User Name** and **Password** fields are available.
New myZyXEL.com account	If you haven't created an account at myZyXEL.com, select this option and configure the following fields to create an account and register your ZyWALL.
Existing myZyXEL.com account	If you already have an account at myZyXEL.com, select this option and enter your user name and password in the fields below to register your ZyWALL.
User Name	Enter a user name for your myZyXEL.com account. The name should be from six to 20 alphanumeric characters (and the underscore). Spaces are not allowed.
Check	Click this button to check with the myZyXEL.com database to verify the user name you entered has not been used.
Password	Enter a password of between six and 20 alphanumeric characters (and the underscore). Spaces are not allowed.
Confirm Password	Enter the password again for confirmation.
E-Mail Address	Enter your e-mail address. You can use up to 80 alphanumeric characters (periods and the underscore are also allowed) without spaces.
Country	Select your country from the drop-down box list.
Service Activation	You can try trial service subscription. After the trial expires, you can buy an iCard and enter the license key in the **REGISTRATION Service** screen to extend the service.
Content Filtering 1-month Trial	Select the check box to activate a trial. The trial period starts the day you activate the trial.

Table 21 REGISTRATION

LABEL	DESCRIPTION
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

If the ZyWALL is registered already, this screen is read-only and indicates whether trial services are activated. Use the **Service** screen to update your service subscription status.

Figure 91 REGISTRATION: Registered Device

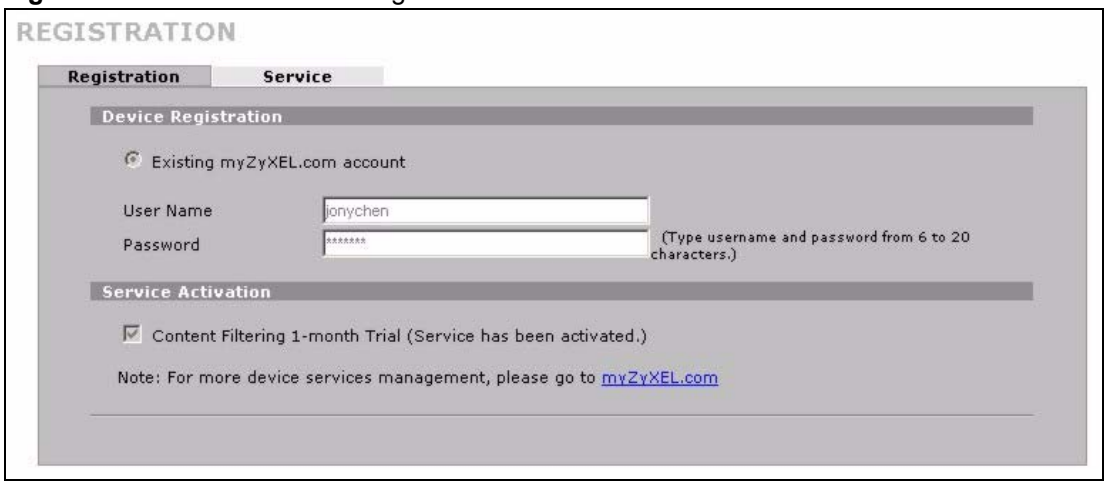


5.3 Service

After you activate a trial, you can also use the **Service** screen to register and enter your iCard's PIN number (license key). Click **REGISTRATION** > **Service** to open the screen as shown next.

If you restore the ZyWALL to the default configuration file or upload a different configuration file after you register, click the **Service License Refresh** button to update license information.

Figure 92 REGISTRATION > Service

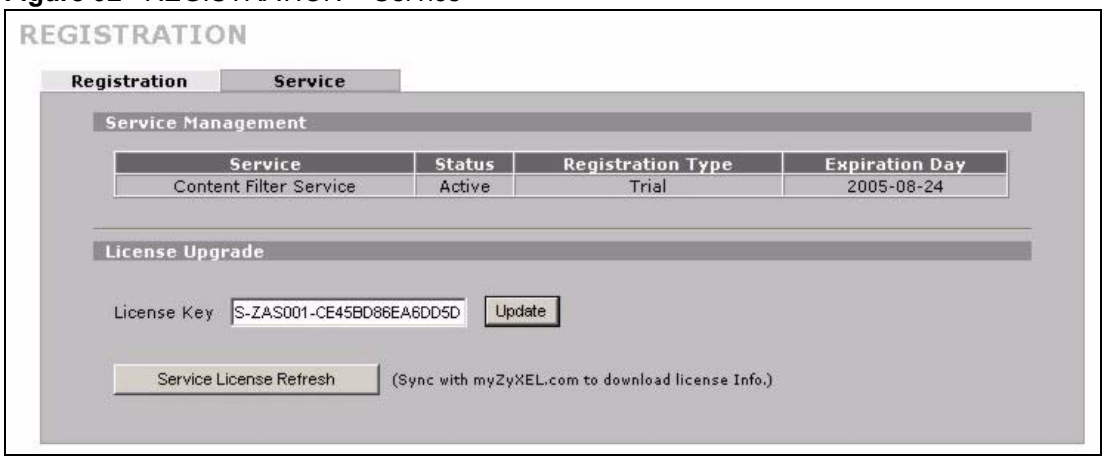

The following table describes the labels in this screen.

Table 22 REGISTRATION > Service

LABEL	DESCRIPTION
Service Management	
Service	This field displays the service name available on the ZyWALL.
Status	This field displays whether a service is activated (**Active**) or not (**Inactive**).
Registration Type	This field displays whether you applied for a trial application (**Trial**) or registered a service with your iCard's PIN number (**Standard**).
Expiration Day	This field displays the date your service expires.
License Upgrade	
License Key	Enter your iCard's PIN number and click **Update** to activate or extend a standard service subscription. If a standard service subscription runs out, you need to buy a new iCard (specific to your ZyWALL) and enter the new PIN number to extend the service.
Service License Refresh	Click this button to renew service license information (such as the license key, registration status and expiration day).

PART II
Network and Wireless

LAN Screens (147)
Bridge Screens (159)
WAN Screens (165)
DMZ Screens (201)
Wireless LAN (211)

6

LAN Screens

This chapter describes how to configure LAN settings. This chapter is only applicable when the ZyWALL is in router mode.

6.1 LAN, WAN and the ZyWALL


A network is a shared communication system to which many computers are attached.

The Local Area Network (LAN) includes the computers and networking devices in your home or office that you connect to the ZyWALL's LAN ports.

The Wide Area Network (WAN) is another network (most likely the Internet) that you connect to the ZyWALL's WAN port. See Chapter 8 on page 165 for how to use the WAN screens to set up your WAN connection.

The LAN and the WAN are two separate networks. The ZyWALL controls the traffic that goes between them. The following graphic gives an example.

Figure 93 LAN and WAN

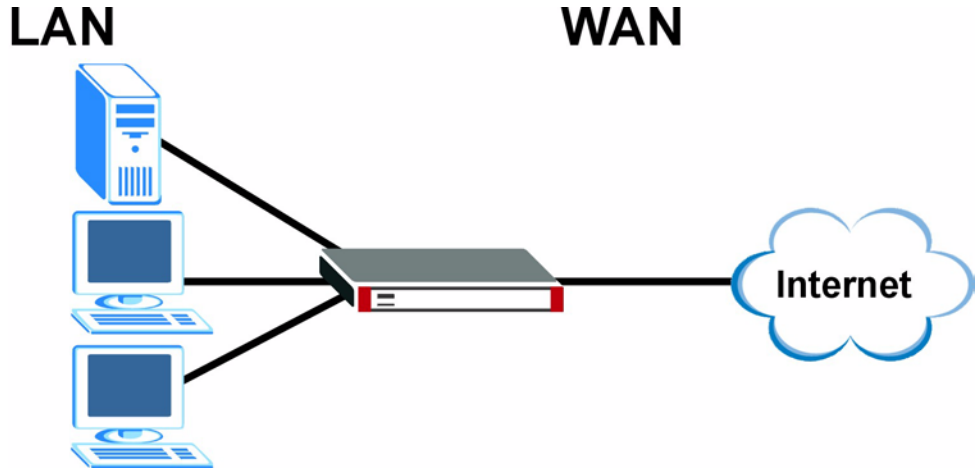

6.2 IP Address and Subnet Mask

Similar to the way houses on a street share a common street name, so too do computers on a LAN share one common network number.

Where you obtain your network number depends on your particular situation. If the ISP or your network administrator assigns you a block of registered IP addresses, follow their instructions in selecting the IP addresses and the subnet mask.

If the ISP did not explicitly give you an IP network number, then most likely you have a single user account and the ISP will assign you a dynamic IP address when the connection is established. If this is the case, it is recommended that you select a network number from 192.168.0.0 to 192.168.255.0 and you must enable the Network Address Translation (NAT) feature of the ZyWALL. The Internet Assigned Number Authority (IANA) reserved this block of addresses specifically for private use; please do not use any other number unless you are told otherwise. If you select 192.168.1.0 as the network number; it covers 254 individual addresses, from 192.168.1.1 to 192.168.1.254 (zero and 255 are reserved). In other words, the first three numbers specify the network number while the last number identifies an individual computer on that network.

Once you have decided on the network number, pick an IP address that is easy to remember, for instance, 192.168.1.1, for your ZyWALL, but make sure that no other device on your network is using that IP address.

The subnet mask specifies the network number portion of an IP address. Your ZyWALL will compute the subnet mask automatically based on the IP address that you entered. You don't need to change the subnet mask computed by the ZyWALL unless you are instructed to do otherwise.

6.2.1 Private IP Addresses

Every machine on the Internet must have a unique address. If your networks are isolated from the Internet, for example, only between your two branch offices, you can assign any IP addresses to the hosts without problems. However, the Internet Assigned Numbers Authority (IANA) has reserved the following three blocks of IP addresses specifically for private networks:

- 10.0.0.0 — 10.255.255.255
- 172.16.0.0 — 172.31.255.255
- 192.168.0.0 — 192.168.255.255

You can obtain your IP address from the IANA, from an ISP or it can be assigned from a private network. If you belong to a small organization and your Internet access is through an ISP, the ISP can provide you with the Internet addresses for your local networks. On the other hand, if you are part of a much larger organization, you should consult your network administrator for the appropriate IP addresses.



Regardless of your particular situation, do not create an arbitrary IP address; always follow the guidelines above. For more information on address assignment, please refer to RFC 1597, *Address Allocation for Private Internets* and RFC 1466, *Guidelines for Management of IP Address Space.*

6.3 DHCP

The ZyWALL can use DHCP (Dynamic Host Configuration Protocol, RFC 2131 and RFC 2132) to automatically assign IP addresses subnet masks, gateways, and some network information like the IP addresses of DNS servers to the computers on your LAN. You can alternatively have the ZyWALL relay DHCP information from another DHCP server. If you disable the ZyWALL's DHCP service, you must have another DHCP server on your LAN, or else the computers must be manually configured.

6.3.1 IP Pool Setup

The ZyWALL is pre-configured with a pool of IP addresses for the computers on your LAN. See Chapter 49 on page 693 for the default IP pool range. Do not assign your LAN computers static IP addresses that are in the DHCP pool.

6.4 RIP Setup

RIP (Routing Information Protocol, RFC 1058 and RFC 1389) allows a router to exchange routing information with other routers. **RIP Direction** controls the sending and receiving of RIP packets. When set to **Both** or **Out Only**, the ZyWALL will broadcast its routing table periodically. When set to **Both** or **In Only**, it will incorporate the RIP information that it receives; when set to **None**, it will not send any RIP packets and will ignore any RIP packets received.

RIP Version controls the format and the broadcasting method of the RIP packets that the ZyWALL sends (it recognizes both formats when receiving). **RIP-1** is universally supported; but **RIP-2** carries more information. RIP-1 is probably adequate for most networks, unless you have an unusual network topology.

Both **RIP-2B** and **RIP-2M** send routing data in RIP-2 format; the difference being that **RIP-2B** uses subnet broadcasting while **RIP-2M** uses multicasting. Multicasting can reduce the load on non-router machines since they generally do not listen to the RIP multicast address and so will not receive the RIP packets. However, if one router uses multicasting, then all routers on your network must use multicasting, also.

By default, **RIP Direction** is set to **Both** and **RIP Version** to **RIP-1**.

6.5 Multicast

Traditionally, IP packets are transmitted in one of either two ways - Unicast (1 sender - 1 recipient) or Broadcast (1 sender - everybody on the network). Multicast delivers IP packets to a group of hosts on the network - not everybody and not just 1.

IGMP (Internet Group Multicast Protocol) is a network-layer protocol used to establish membership in a Multicast group - it is not used to carry user data. IGMP version 2 (RFC 2236) is an improvement over version 1 (RFC 1112) but IGMP version 1 is still in wide use. If you would like to read more detailed information about interoperability between IGMP version 2 and version 1, please see sections 4 and 5 of RFC 2236. The class D IP address is used to identify host groups and can be in the range 224.0.0.0 to 239.255.255.255. The address

224.0.0.0 is not assigned to any group and is used by IP multicast computers. The address 224.0.0.1 is used for query messages and is assigned to the permanent group of all IP hosts (including gateways). All hosts must join the 224.0.0.1 group in order to participate in IGMP. The address 224.0.0.2 is assigned to the multicast routers group.

The ZyWALL supports both IGMP version 1 (**IGMP-v1**) and IGMP version 2 (**IGMP-v2**). At start up, the ZyWALL queries all directly connected networks to gather group membership. After that, the ZyWALL periodically updates this information. IP multicasting can be enabled/disabled on the ZyWALL LAN and/or WAN interfaces in the web configurator (**LAN**; **WAN**). Select **None** to disable IP multicasting on these interfaces.


6.6 WINS

WINS (Windows Internet Naming Service) is a Windows implementation of NetBIOS Name Server (NBNS) on Windows. It keeps track of NetBIOS computer names. It stores a mapping table of your network's computer names and IP addresses. The table is dynamically updated for IP addresses assigned by DHCP. This helps reduce broadcast traffic since computers can query the server instead of broadcasting a request for a computer name's IP address. In this way WINS is similar to DNS, although WINS does not use a hierarchy (unlike DNS). A network can have more than one WINS server. Samba can also serve as a WINS server.

6.7 LAN

Click **NETWORK** > **LAN** to open the **LAN** screen. Use this screen to configure the ZyWALL's IP address and other LAN TCP/IP settings as well as the built-in DHCP server capability that assigns IP addresses and DNS servers to systems that support DHCP client capability.

Figure 94 NETWORK > LAN

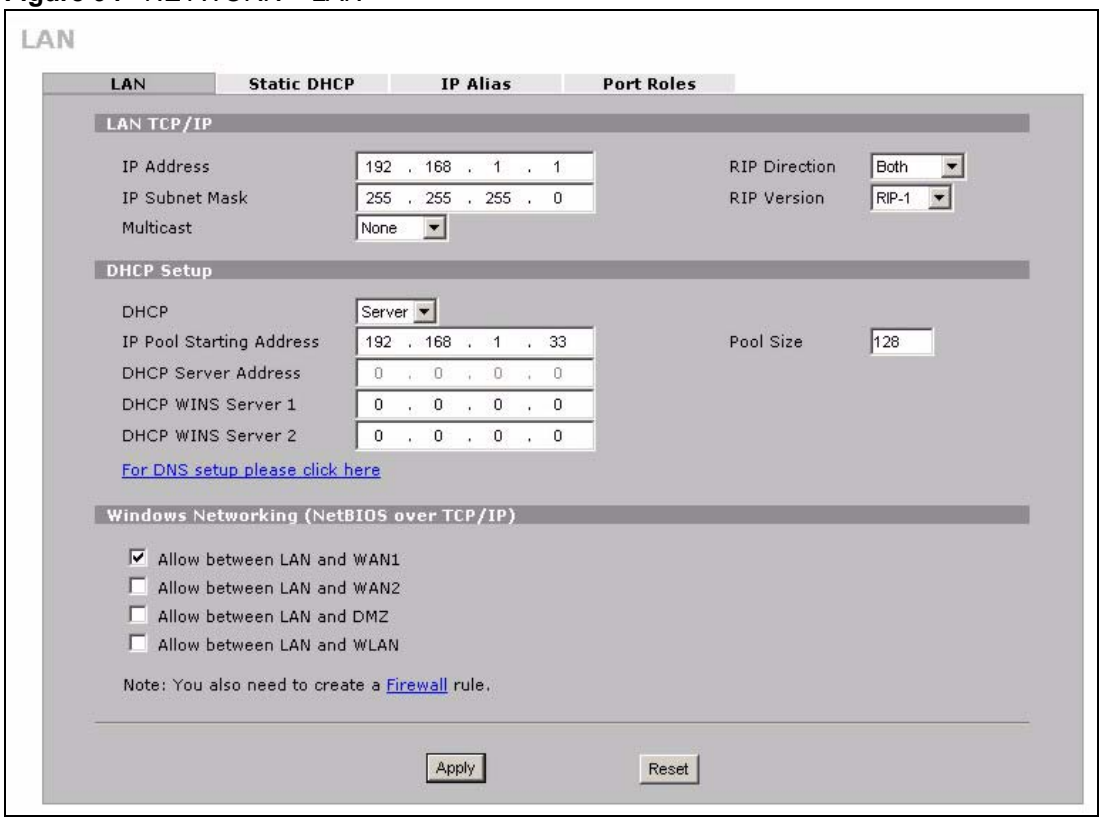

The following table describes the labels in this screen.

Table 23 NETWORK > LAN

LABEL	DESCRIPTION
LAN TCP/IP	
IP Address	Type the IP address of your ZyWALL in dotted decimal notation. 192.168.1.1 is the factory default. Alternatively, click the right mouse button to copy and/or paste the IP address.
IP Subnet Mask	The subnet mask specifies the network number portion of an IP address. Your ZyWALL automatically calculates the subnet mask based on the IP address that you assign. Unless you are implementing subnetting, use the subnet mask computed by the ZyWALL.
RIP Direction	RIP (Routing Information Protocol, RFC1058 and RFC 1389) allows a router to exchange routing information with other routers. The **RIP Direction** field controls the sending and receiving of RIP packets. Select the RIP direction from **Both**/**In Only**/**Out Only**/**None**. When set to **Both** or **Out Only**, the ZyWALL will broadcast its routing table periodically. When set to **Both** or **In Only**, it will incorporate the RIP information that it receives; when set to **None**, it will not send any RIP packets and will ignore any RIP packets received. **Both** is the default.

Table 23 NETWORK > LAN (continued)

LABEL	DESCRIPTION
RIP Version	The **RIP Version** field controls the format and the broadcasting method of the RIP packets that the ZyWALL sends (it recognizes both formats when receiving). **RIP-1** is universally supported but RIP-2 carries more information. RIP-1 is probably adequate for most networks, unless you have an unusual network topology. Both **RIP-2B** and **RIP-2M** sends the routing data in RIP-2 format; the difference being that **RIP-2B** uses subnet broadcasting while **RIP-2M** uses multicasting. Multicasting can reduce the load on non-router machines since they generally do not listen to the RIP multicast address and so will not receive the RIP packets. However, if one router uses multicasting, then all routers on your network must use multicasting, also. By default, RIP direction is set to **Both** and the Version set to **RIP-1**.
Multicast	Select **IGMP V-1** or **IGMP V-2** or **None**. IGMP (Internet Group Multicast Protocol) is a network-layer protocol used to establish membership in a Multicast group - it is not used to carry user data. IGMP version 2 (RFC 2236) is an improvement over version 1 (RFC 1112) but IGMP version 1 is still in wide use. If you would like to read more detailed information about interoperability between IGMP version 2 and version 1, please see *sections 4 and 5 of RFC 2236*.
DHCP Setup	
DHCP	DHCP (Dynamic Host Configuration Protocol, RFC 2131 and RFC 2132) allows individual clients (workstations) to obtain TCP/IP configuration at startup from a server. Unless you are instructed by your ISP, leave this field set to **Server**. When configured as a server, the ZyWALL provides TCP/IP configuration for the clients. When set as a server, fill in the **IP Pool Starting Address** and **Pool Size** fields. Select **Relay** to have the ZyWALL forward DHCP requests to another DHCP server. When set to **Relay**, fill in the **DHCP Server Address** field. Select **None** to stop the ZyWALL from acting as a DHCP server. When you select **None**, you must have another DHCP server on your LAN, or else the computers must be manually configured.
IP Pool Starting Address	This field specifies the first of the contiguous addresses in the IP address pool.
Pool Size	This field specifies the size, or count of the IP address pool.
DHCP Server Address	Type the IP address of the DHCP server to which you want the ZyWALL to relay DHCP requests. Use dotted decimal notation. Alternatively, click the right mouse button to copy and/or paste the IP address.
DHCP WINS Server 1, 2	Type the IP address of the WINS (Windows Internet Naming Service) server that you want to send to the DHCP clients. The WINS server keeps a mapping table of the computer names on your network and the IP addresses that they are currently using.
Windows Networking (NetBIOS over TCP/IP)	NetBIOS (Network Basic Input/Output System) are TCP or UDP packets that enable a computer to connect to and communicate with a LAN. For some dial-up services such as PPPoE or PPTP, NetBIOS packets cause unwanted calls. However it may sometimes be necessary to allow NetBIOS packets to pass through to the WAN in order to find a computer on the WAN.
Allow between LAN and WAN1	Select this check box to forward NetBIOS packets from the LAN to WAN 1and from WAN 1 to the LAN. If your firewall is enabled with the default policy set to block WAN 1 to LAN traffic, you also need to enable the default WAN 1 to LAN firewall rule that forwards NetBIOS traffic. Clear this check box to block all NetBIOS packets going from the LAN to WAN 1 and from WAN 1 to the LAN.

Table 23 NETWORK > LAN (continued)

LABEL	DESCRIPTION
Allow between LAN and WAN2	Select this check box to forward NetBIOS packets from the LAN to WAN 2 and from WAN 2 to the LAN. If your firewall is enabled with the default policy set to block WAN 2 to LAN traffic, you also need to enable the default WAN 2 to LAN firewall rule that forwards NetBIOS traffic. Clear this check box to block all NetBIOS packets going from the LAN to WAN 2 and from WAN 2 to the LAN.
Allow between LAN and DMZ	Select this check box to forward NetBIOS packets from the LAN to the DMZ and from the DMZ to the LAN. If your firewall is enabled with the default policy set to block DMZ to LAN traffic, you also need to enable the default DMZ to LAN firewall rule that forwards NetBIOS traffic. Clear this check box to block all NetBIOS packets going from the LAN to the DMZ and from the DMZ to the LAN.
Allow between LAN and WLAN	Select this check box to forward NetBIOS packets from the LAN to the WLAN and from the WLAN to the LAN. Clear this check box to block all NetBIOS packets going from the LAN to the WLAN and from the WLAN to the LAN.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.


6.8 LAN Static DHCP

This table allows you to assign IP addresses on the LAN to specific individual computers based on their MAC Addresses.

Every Ethernet device has a unique MAC (Media Access Control) address. The MAC address is assigned at the factory and consists of six pairs of hexadecimal characters, for example, 00:A0:C5:00:00:02.

To change your ZyWALL's static DHCP settings, click **NETWORK** > **LAN** > **Static DHCP**. The screen appears as shown.

Figure 95 NETWORK > LAN > Static DHCP

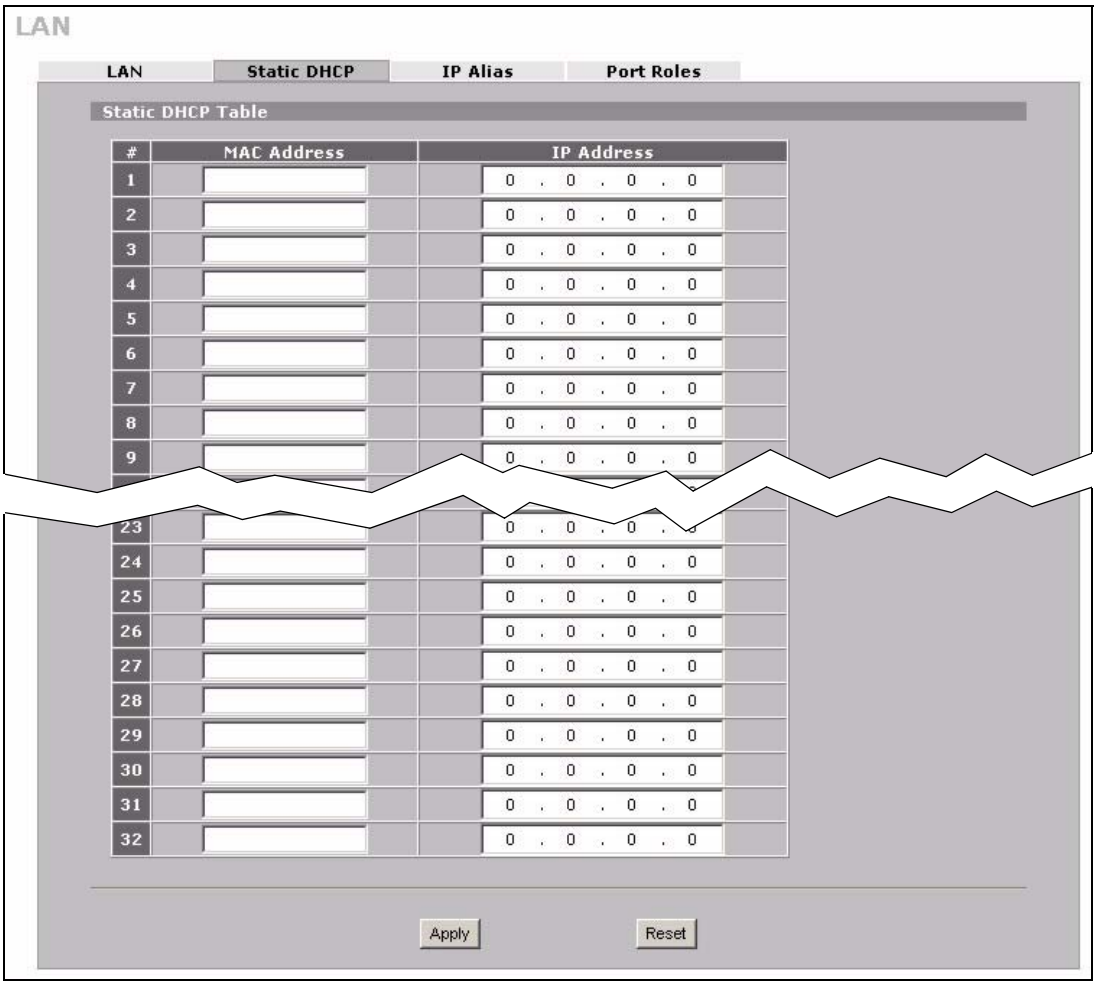

The following table describes the labels in this screen.

Table 24 NETWORK > LAN > Static DHCP

LABEL	DESCRIPTION
#	This is the index number of the Static IP table entry (row).
MAC Address	Type the MAC address of a computer on your LAN.
IP Address	Type the IP address that you want to assign to the computer on your LAN. Alternatively, click the right mouse button to copy and/or paste the IP address.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

6.9 LAN IP Alias

IP alias allows you to partition a physical network into different logical networks over the same Ethernet interface.

The ZyWALL has a single LAN interface. Even though more than one of ports 1~4 may be in the LAN port role, they are all still part of a single physical Ethernet interface and all use the same IP address.

The ZyWALL supports three logical LAN interfaces via its single physical LAN Ethernet interface. The ZyWALL itself is the gateway for each of the logical LAN networks.

When you use IP alias, you can also configure firewall rules to control access between the LAN's logical networks (subnets).

Make sure that the subnets of the logical networks do not overlap.


The following figure shows a LAN divided into subnets A, B, and C.

Figure 96 Physical Network & Partitioned Logical Networks



To change your ZyWALL's IP alias settings, click **NETWORK** > **LAN** > **IP Alias**. The screen appears as shown.

Figure 97 NETWORK > LAN > IP Alias

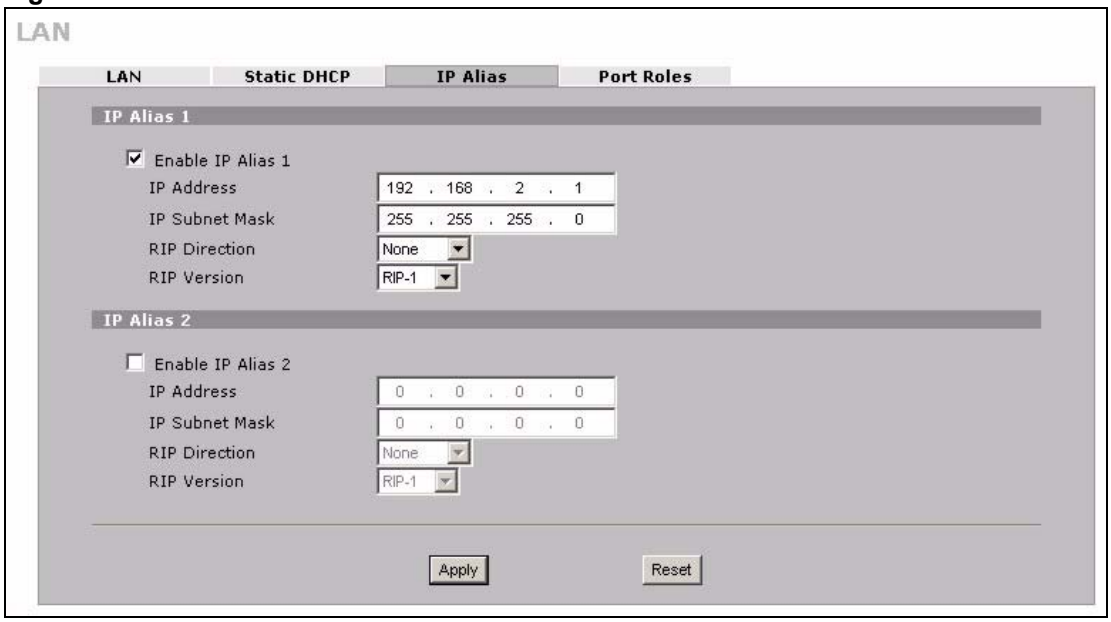

The following table describes the labels in this screen.

Table 25 NETWORK > LAN > IP Alias

LABEL	DESCRIPTION
Enable IP Alias 1, 2	Select the check box to configure another LAN network for the ZyWALL.
IP Address	Enter the IP address of your ZyWALL in dotted decimal notation. Alternatively, click the right mouse button to copy and/or paste the IP address.
IP Subnet Mask	Your ZyWALL will automatically calculate the subnet mask based on the IP address that you assign. Unless you are implementing subnetting, use the subnet mask computed by the ZyWALL.
RIP Direction	RIP (Routing Information Protocol, RFC 1058 and RFC 1389) allows a router to exchange routing information with other routers. The **RIP Direction** field controls the sending and receiving of RIP packets. Select the RIP direction from **Both**/**In Only**/**Out Only**/**None**. When set to **Both** or **Out Only**, the ZyWALL will broadcast its routing table periodically. When set to **Both** or **In Only**, it will incorporate the RIP information that it receives; when set to **None**, it will not send any RIP packets and will ignore any RIP packets received.
RIP Version	The **RIP Version** field controls the format and the broadcasting method of the RIP packets that the ZyWALL sends (it recognizes both formats when receiving). **RIP-1** is universally supported but RIP-2 carries more information. RIP-1 is probably adequate for most networks, unless you have an unusual network topology. Both **RIP-2B** and **RIP-2M** sends the routing data in RIP-2 format; the difference being that **RIP-2B** uses subnet broadcasting while **RIP-2M** uses multicasting. Multicasting can reduce the load on non-router machines since they generally do not listen to the RIP multicast address and so will not receive the RIP packets. However, if one router uses multicasting, then all routers on your network must use multicasting, also. By default, RIP direction is set to **Both** and the Version set to **RIP-1**.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

6.10 LAN Port Roles

Use the **Port Roles** screen to set ports as part of the LAN, DMZ and/or WLAN interface.

Ports 1~4 on the ZyWALL can be part of the LAN, DMZ or WLAN interface.



Do the following if you are configuring from a computer connected to a LAN, DMZ or WLAN port and changing the port's role:


1. A port's IP address varies as its role changes, make sure your computer's IP address is in the same subnet as the ZyWALL's LAN, DMZ or WLAN IP address.
2. Use the appropriate LAN, DMZ or WLAN IP address to access the ZyWALL.

To change your ZyWALL's port role settings, click **NETWORK** > **LAN** > **Port Roles**. The screen appears as shown.

The radio buttons correspond to Ethernet ports on the front panel of the ZyWALL. On the ZyWALL, ports 1 to 4 are all LAN ports by default.

Your changes are also reflected in the **DMZ Port Roles** and **WLAN Port Roles** screens.

Figure 98 NETWORK > LAN > Port Roles

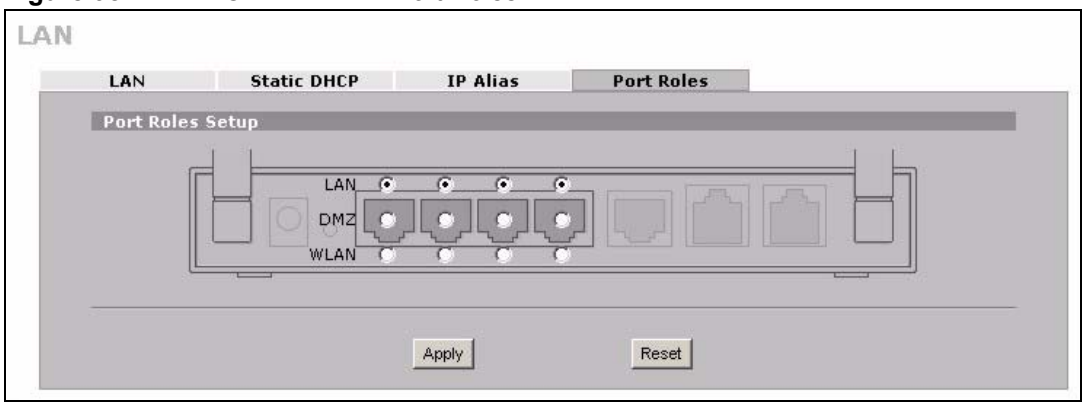

The following table describes the labels in this screen.

Table 26 NETWORK > LAN > Port Roles

LABEL	DESCRIPTION
LAN	Select a port's LAN radio button to use the port as part of the LAN. The port will use the ZyWALL's LAN IP address and MAC address.
DMZ	Select a port's DMZ radio button to use the port as part of the DMZ. The port will use the ZyWALL's DMZ IP address and MAC address.
WLAN	Select a port's WLAN radio button to use the port as part of the WLAN. The port will use the ZyWALL's WLAN IP address and MAC address.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

After you change the LAN/DMZ/WLAN port roles and click **Apply**, please wait for few seconds until the following screen appears. Click **Return** to go back to the **Port Roles** screen.

Figure 99 Port Roles Change Complete



7

Bridge Screens

This chapter describes how to configure bridge settings. This chapter is only applicable when the ZyWALL is in bridge mode.


7.1 Bridge Loop

The ZyWALL can act as a bridge between a switch and a wired LAN or between two routers.

Be careful to avoid bridge loops when you enable bridging in the ZyWALL. Bridge loops cause broadcast traffic to circle the network endlessly, resulting in possible throughput degradation and disruption of communications. The following example shows the network topology that can lead to this problem:

- If your ZyWALL (in bridge mode) is connected to a wired LAN while communicating with another bridge or a switch that is also connected to the same wired LAN as shown next.

Figure 100 Bridge Loop: Bridge Connected to Wired LAN

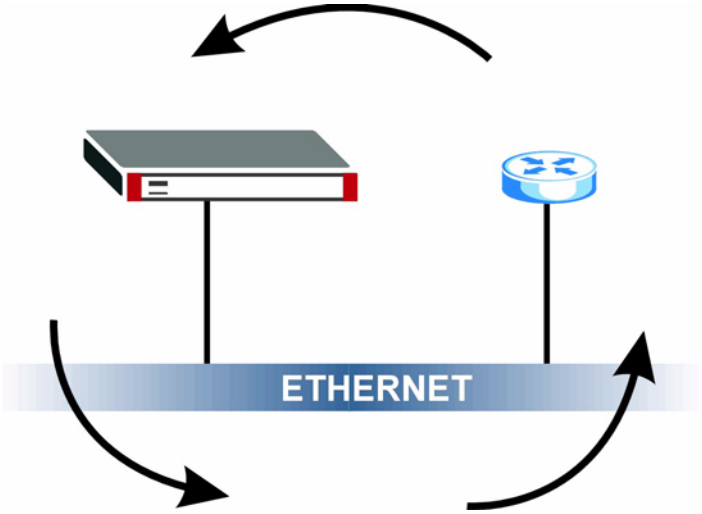

To prevent bridge loops, ensure that your ZyWALL is not set to bridge mode while connected to two wired segments of the same LAN or you enable RSTP in the **Bridge** screen.

7.2 Spanning Tree Protocol (STP)

STP detects and breaks network loops and provides backup links between switches, bridges or routers. It allows a bridge to interact with other STP-compliant bridges in your network to ensure that only one route exists between any two stations on the network.

7.2.1 Rapid STP

The ZyWALL uses IEEE 802.1w RSTP (Rapid Spanning Tree Protocol) that allow faster convergence of the spanning tree (while also being backwards compatible with STP-only aware bridges). Using RSTP, topology change information does not have to propagate to the root bridge and unwanted learned addresses are flushed from the filtering database. In RSTP, the port states are Discarding, Learning, and Forwarding.

7.2.2 STP Terminology

The root bridge is the base of the spanning tree.

Path cost is the cost of transmitting a frame from the root bridge to that port. It is assigned according to the speed of the link to which a port is attached. The slower the media, the higher the cost - see the next table.

Table 27 STP Path Costs

	LINK SPEED	RECOMMENDED VALUE	RECOMMENDED RANGE	ALLOWED RANGE
Path Cost	4Mbps	250	100 to 1000	1 to 65535
Path Cost	10Mbps	100	50 to 600	1 to 65535
Path Cost	16Mbps	62	40 to 400	1 to 65535
Path Cost	100Mbps	19	10 to 60	1 to 65535
Path Cost	1Gbps	4	3 to 10	1 to 65535
Path Cost	10Gbps	2	1 to 5	1 to 65535

On each bridge, the root port is the port through which this bridge communicates with the root. It is the port on this switch with the lowest path cost to the root (the root path cost). If there is no root port, then this bridge has been accepted as the root bridge of the spanning tree network.

For each LAN segment, a designated bridge is selected. This bridge has the lowest cost to the root among the bridges connected to the LAN.

7.2.3 How STP Works

After a bridge determines the lowest cost-spanning tree with STP, it enables the root port and the ports that are the designated ports for connected LANs, and disables all other ports that participate in STP. Network packets are therefore only forwarded between enabled ports, eliminating any possible network loops.

STP-aware bridges exchange Bridge Protocol Data Units (BPDUs) periodically. When the bridged LAN topology changes, a new spanning tree is constructed.

Once a stable network topology has been established, all bridges listen for Hello BPDUs (Bridge Protocol Data Units) transmitted from the root bridge. If a bridge does not get a Hello BPDU after a predefined interval (Max Age), the bridge assumes that the link to the root bridge is down. This bridge then initiates negotiations with other bridges to reconfigure the network to re-establish a valid network topology.

7.2.4 STP Port States

STP assigns five port states (see next table) to eliminate packet looping. A bridge port is not allowed to go directly from blocking state to forwarding state so as to eliminate transient loops.

Table 28 STP Port States

PORT STATE	DESCRIPTION
Disabled	STP is disabled (default).
Blocking	Only configuration and management BPDUs are received and processed.
Listening	All BPDUs are received and processed.
Learning	All BPDUs are received and processed. Information frames are submitted to the learning process but not forwarded.
Forwarding	All BPDUs are received and processed. All information frames are received and forwarded.

7.3 Bridge


Select **Bridge** and click **Apply** in the **MAINTENANCE Device Mode** screen to have the ZyWALL function as a bridge.

In bridge mode, the ZyWALL functions as a transparent firewall (also known as a bridge firewall). The ZyWALL bridges traffic traveling between the ZyWALL's interfaces and still filters and inspects packets. You do not need to change the configuration of your existing network.

You can use the firewall and VPN in bridge mode. See the user’s guide for a list of other features that are available in bridge mode.

Click **NETWORK** > **BRIDGE** to display the screen shown next. Use this screen to configure bridge and RSTP (Rapid Spanning Tree Protocol) settings.

Figure 101 NETWORK > Bridge

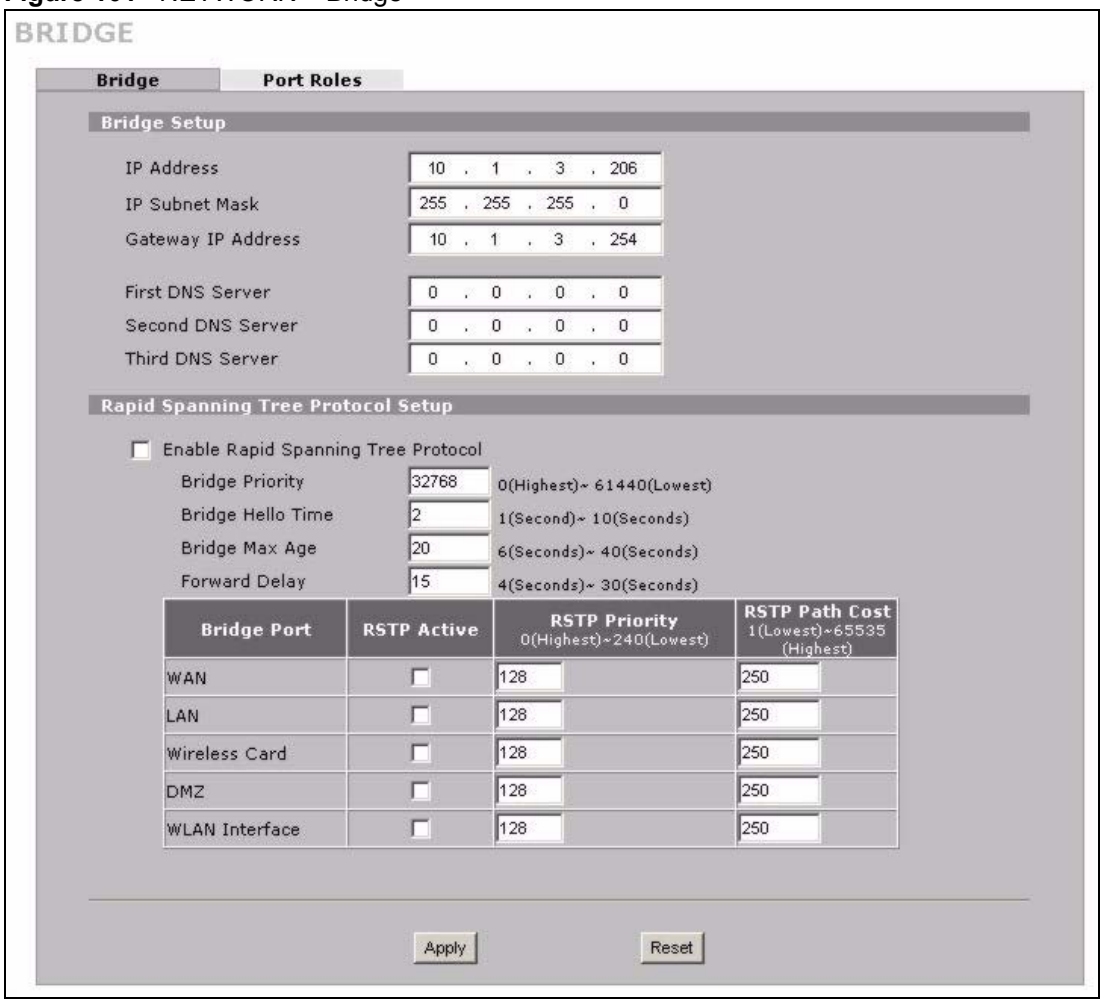

The following table describes the labels in this screen.

Table 29 NETWORK > Bridge

LABEL	DESCRIPTION
Bridge IP Address Setup	
IP Address	Type the IP address of your ZyWALL in dotted decimal notation.
IP Subnet Mask	The subnet mask specifies the network number portion of an IP address.
Gateway IP Address	Enter the gateway IP address.
First/Second/Third DNS Server	DNS (Domain Name System) is for mapping a domain name to its corresponding IP address and vice versa. The DNS server is extremely important because without it, you must know the IP address of a machine before you can access it. The ZyWALL uses a system DNS server (in the order you specify here) to resolve domain names for content filtering, the time server, etc. If you have the IP address(es) of the DNS server(s), enter the DNS server's IP address(es) in the field(s) to the right.
Rapid Spanning Tree Protocol Setup	
Enable Rapid Spanning Tree Protocol	Select the check box to activate RSTP on the ZyWALL.

Table 29 NETWORK > Bridge (continued)

LABEL	DESCRIPTION
Bridge Priority	Enter a number between 0 and 61440 as bridge priority of the ZyWALL. Bridge priority is used in determining the root switch, root port and designated port. The switch with the highest priority (lowest numeric value) becomes the root. If multiple devices have the lowest priority, the device with the lowest MAC address becomes the root. The lower the numeric value you assign, the higher the priority for this bridge. Bridge Priority determines the root bridge, which in turn determines Hello Time, Max Age and Forward Delay.
Bridge Hello Time	Enter an interval (between 1 and 10) in seconds that the root bridge waits before sending a hello packet.
Bridge Max Age	Enter an interval (between 6 and 40) in seconds that a bridge waits to get a Hello BPDU from the root bridge.
Forward Delay	Enter the length of time (between 4 and 30) in seconds that a bridge remains in the listening and learning port states. The default is 15 seconds.
Bridge Port	This is the bridge port type.
RSTP Active	Select the check box to enable RSTP on the corresponding port.
RSTP Priority 0(Highest)~240(Lowest)	Enter a number between 0 and 240 as RSTP priority for the corresponding port. 0 is the highest.
RSTP Path Cost 1(Lowest)~65535(Highest)	Enter a number between 1 and 65535 as RSTP path cost for the corresponding port. 65535 is the highest.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

7.4 Bridge Port Roles


Use the **Port Roles** screen to set ports as part of the LAN, DMZ and/or WLAN interface.

Ports 1~4 on the ZyWALL can be part of the LAN, DMZ or WLAN interface.

To change your ZyWALL's port role settings, click **NETWORK** > **BRIDGE** > **Port Roles**. The screen appears as shown.

The radio buttons correspond to Ethernet ports on the front panel of the ZyWALL. On the ZyWALL, ports 1 to 4 are all LAN ports by default.

Figure 102 NETWORK > Bridge > Port Roles

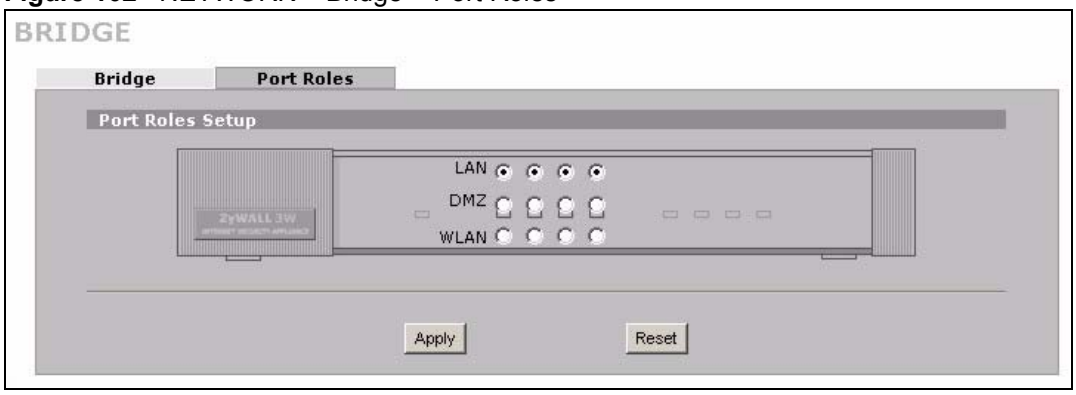

The following table describes the labels in this screen.

Table 30 NETWORK > Bridge > Port Roles

LABEL	DESCRIPTION
LAN	Select a port's LAN radio button to use the port as part of the LAN.
DMZ	Select a port's DMZ radio button to use the port as part of the DMZ.
WLAN	Select a port's WLAN radio button to use the port as part of the WLAN.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

After you change the LAN/DMZ/WLAN port roles and click **Apply**, please wait for few seconds until the following screen appears. Click **Return** to go back to the **Port Roles** screen.

Figure 103 Port Roles Change Complete



8

WAN Screens

This chapter describes how to configure WAN settings.



WAN 2 refers to the 3G card on the supported ZyWALL in router mode.

8.1 WAN Overview

- Use the **WAN General** screen to configure load balancing, route priority and connection test for the ZyWALL.
- Use the **WAN 1** screen to configure the WAN1 interface for Internet access on the ZyWALL.
- Use the **WAN 2** screen to configure the WAN2 interface for Internet access on the ZyWALL.
- Use the **Traffic Redirect** screen to configure an alternative gateway.
- Use the **Dial Backup** screen to configure the backup WAN dial-up connection.

8.2 Multiple WAN

You can use a second connection for load sharing to increase overall network throughput or as a backup to enhance network reliability.

The ZyWALL has one WAN port. When the ZyWALL is in router mode, you can optionally insert a 3G card to add a second WAN interface. You can connect one interface to one ISP (or network) and connect the other to a second ISP (or network).

The ZyWALL can balance the load between the two WAN interfaces (see Section 8.3 on page 166).

You can use policy routing to specify the WAN interface that specific services go through. An ISP may give traffic from certain (more expensive) connections priority over the traffic from other accounts. You could route delay intolerant traffic (like voice over IP calls) through this kind of connection. Other traffic could be routed through a cheaper broadband Internet connection that does not provide priority service. If one WAN interface's connection goes down, the ZyWALL can automatically send its traffic through the other WAN interface. See Chapter 19 on page 405 for details.

The ZyWALL's NAT feature allows you to configure sets of rules for one WAN interface and separate sets of rules for the other WAN interface. Refer to Chapter 17 on page 385 for details.

You can select through which WAN interface you want to send out traffic from UPnP-enabled applications (see Chapter 23 on page 461).

The ZyWALL's DDNS lets you select which WAN interface you want to use for each individual domain name. The DDNS high availability feature lets you have the ZyWALL use the other WAN interface for a domain name if the configured WAN interface's connection goes down. See Section 21.10.2 on page 437 for details.

When configuring a VPN rule, you have the option of selecting one of the ZyWALL's domain names in the **My Address** field.

8.3 Load Balancing Introduction

On the ZyWALL, load balancing is the process of dividing traffic loads between the two WAN interfaces (or ports). This allows you to improve quality of services and maximize bandwidth utilization.

See also policy routing to provide quality of service by dedicating a route for a specific traffic type and bandwidth management to specify a set amount of bandwidth for a specific traffic type on an interface.

8.4 Load Balancing Algorithms

The ZyWALL uses three load balancing methods (least load first, weighted round robin and spillover) to decide which WAN interface the traffic for a session[1] (from the LAN) uses.

The following sections describe each load balancing method. The available bandwidth you configure on the ZyWALL refers to the actual bandwidth provided by the ISP and the measured bandwidth refers to the bandwidth an interface is currently using.

8.4.1 Least Load First


The least load first algorithm uses the current (or recent) outbound and/or inbound bandwidth utilization of each WAN interface as the load balancing criteria for making decisions on how how to route traffic. The outbound bandwidth utilization is defined as the measured outbound throughput over the available outbound bandwidth. The inbound bandwidth utilization is defined as the measured inbound throughput over the available inbound bandwidth. The two ratios are indexes used to calculate which WAN interface is less utilized at the time. A new LAN-originated session is distributed to the less utilized WAN interface.

8.4.1.1 Example 1

The following figure depicts an example where both the WAN interfaces on the ZyWALL are connected to the Internet. The configured available outbound bandwidths for WAN 1 and WAN 2 are 512K and 256K respectively.

1. In the load balancing section, a session may refer to normal connection-oriented, UDP and SNMP2 traffic.

Figure 104 Least Load First Example

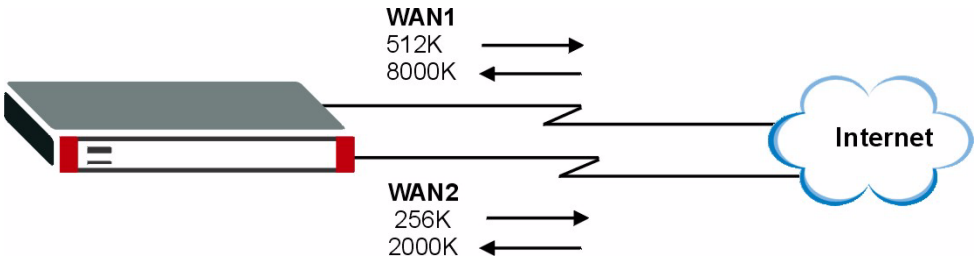

If the outbound bandwidth utilization is used as the load balancing index and the measured outbound throughput of WAN 1 is 412K and WAN 2 is 198K, the ZyWALL calculates the load balancing index as shown in the table below.

Since WAN 2 has a smaller load balancing index (meaning that it is less utilized than WAN 1), the ZyWALL will send the subsequent new session traffic through WAN 2.

Table 31 Least Load First: Example 1

INTERFACE	OUTBOUND		LOAD BALANCING INDEX (M/A)
	AVAILABLE (A)	MEASURED (M)	
WAN 1	512 K	412 K	0.8
WAN 2	256 K	198 K	0.77

8.4.1.2 Example 2

This example uses the same network scenario as in Figure 104 on page 167, but uses both the outbound and inbound bandwidth utilization in calculating the load balancing index. If the measured inbound stream throughput for both WAN 1 and WAN 2 is 1600K, the ZyWALL calculates the average load balancing indices as shown in the table below.

Since WAN 1 has a smaller load balancing index (meaning that it is less utilized than WAN 2), the ZyWALL will send the next new session traffic through WAN 1.

Table 32 Least Load First: Example 2

INTERFACE	OUTBOUND		INBOUND		AVERAGE LOAD BALANCING INDEX (OM / OA + IM / IA) / 2
	AVAILABLE (OA)	MEASURED (OM)	AVAILABLE (IA)	MEASURED (IM)	
WAN 1	512 K	412 K	8000 K	1600 K	(0.8 + 0.2) / 2 = 0.5
WAN 2	256 K	198 K	2000 K	1600 K	(0.77 + 0.8) / 2 = 0.79

8.4.2 Weighted Round Robin


Round Robin routes traffic on a rotating basis and is activated only when a WAN interface has more traffic than the configured available bandwidth. On the ZyWALL with two WAN interfaces, an amount of traffic is sent through the first interface. The second interface is also given an equal amount of traffic, and then the same amount of traffic is sent through the first interface again; and so on. This works in a looping fashion until there is no outgoing traffic.

Similar to the Round Robin (RR) algorithm, the Weighted Round Robin (WRR) algorithm sets the ZyWALL to send traffic through each WAN interface in turn. In addition, the WAN interfaces are assigned weights. An interface with a larger weight gets more of the traffic than an interface with a smaller weight.

This algorithm is best suited for situations when the bandwidths set for the two WAN interfaces are different.

For example, in the figure below, the configured available bandwidth of WAN1 is 1M and WAN2 is 512K. You can set the ZyWALL to distribute the network traffic between the two interfaces by setting the weight of WAN1 and WAN2 to 2 and 1 respectively. The ZyWALL assigns the traffic of two sessions to WAN1 for every one session's traffic assigned to WAN2.

Figure 105 Weighted Round Robin Algorithm Example

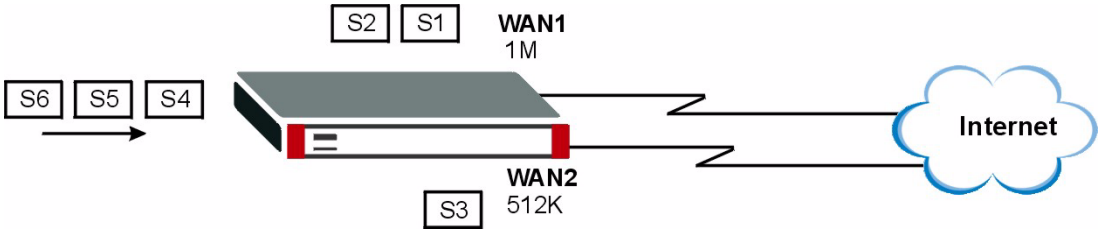


8.4.3 Spillover

With the spillover load balancing algorithm, the ZyWALL sends network traffic to the primary interface until the maximum allowable load is reached, then the ZyWALL sends the excess network traffic of new sessions to the secondary WAN interface. Configure the **Route Priority** metrics in the **WAN General** screen to determine the primary and secondary WANs.

In cases where the primary WAN interface uses an unlimited access Internet connection and the secondary WAN uses a per-use timed access plan, the ZyWALL will only use the secondary WAN interface when the traffic load reaches the upper threshold on the primary WAN interface. This allows you to fully utilize the bandwidth of the primary WAN interface while avoiding overloading it and reducing Internet connection fees at the same time.

In the following example figure, the upper threshold of the primary WAN interface is set to 800K. The ZyWALL sends network traffic of a new session that exceeds this limit to the secondary WAN interface.


Figure 106 Spillover Algorithm Example

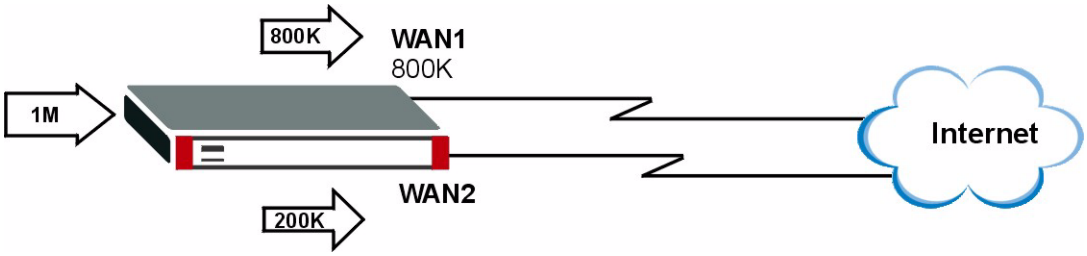

8.5 WAN Interface to Local Host Mapping Timeout

You can set the ZyWALL to send all of a local computer's traffic through the same WAN interface. This is useful when a redirect server forwards a user request for a file and informs the file server that a particular WAN IP address is requesting the file. If the user's subsequent sessions came from a different WAN IP address, the file server would deny the request. Here is an example.

Figure 107 Different WAN IP Addresses

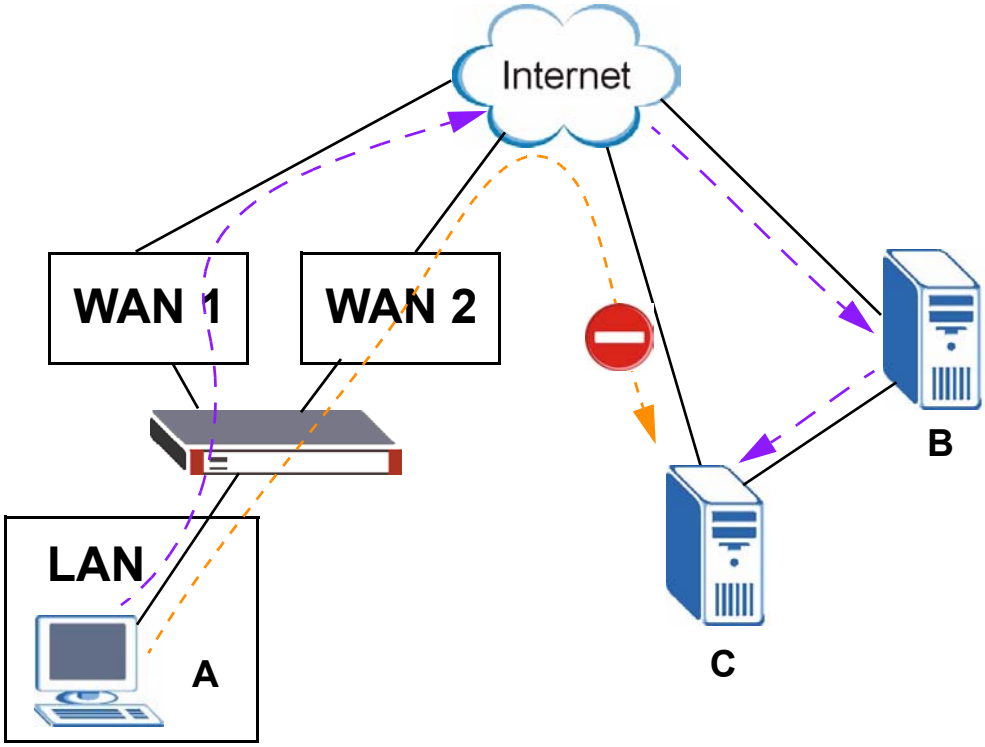

1. LAN user **A** wants to download a file from a remote server on the Internet. The ZyWALL is using active/active load balancing and sends the request to an update server (**B**) through WAN 1.
2. Update server **B** sends a file list to LAN user **A**. The download address of the desired file is a file server (**C**). At the same time, update server **B** informs file server **C** that a computer located at the WAN 1's IP address will download a file.
3. When LAN user **A** tries to retrieve the file from file server **C**, the request goes through WAN 2.
4. File server **C** finds that the request comes from WAN 2's IP address instead of WAN 1's IP address and rejects the request.

8.6 TCP/IP Priority (Metric)

The metric represents the "cost of transmission". A router determines the best route for transmission by choosing a path with the lowest "cost". RIP routing uses hop count as the measurement of cost, with a minimum of "1" for directly connected networks. The number must be between "1" and "15"; a number greater than "15" means the link is down. The smaller the number, the lower the "cost".

1. The metric sets the priority for the ZyWALL's routes to the Internet. Each route must have a unique metric.
2. The priorities of the WAN interface routes must always be higher than the dial-backup and traffic redirect route priorities.

Lets say that you have the WAN operation mode set to active/passive, meaning the ZyWALL use the second highest priority WAN interface as a back up. The WAN 1 route has a metric of "2", the WAN 2 route has a metric of "3", the traffic-redirect route has a metric of "14" and the dial-backup route has a metric of "15". In this case, the WAN 1 route acts as the primary default route. If the WAN 1 route fails to connect to the Internet, the ZyWALL tries the WAN 2 route next. If the WAN 2 route fails, the ZyWALL tries the traffic-redirect route. In the same manner, the ZyWALL uses the dial-backup route if the traffic-redirect route also fails.

The dial-backup or traffic redirect routes cannot take priority over the WAN 1 and WAN 2 routes.


8.7 WAN General

Click **NETWORK** > **WAN** to open the **General** screen. Use this screen to configure load balancing, route priority and connection test properties.



WAN 2 refers to the 3G card on the supported ZyWALL in router mode.

Figure 108 NETWORK > WAN General

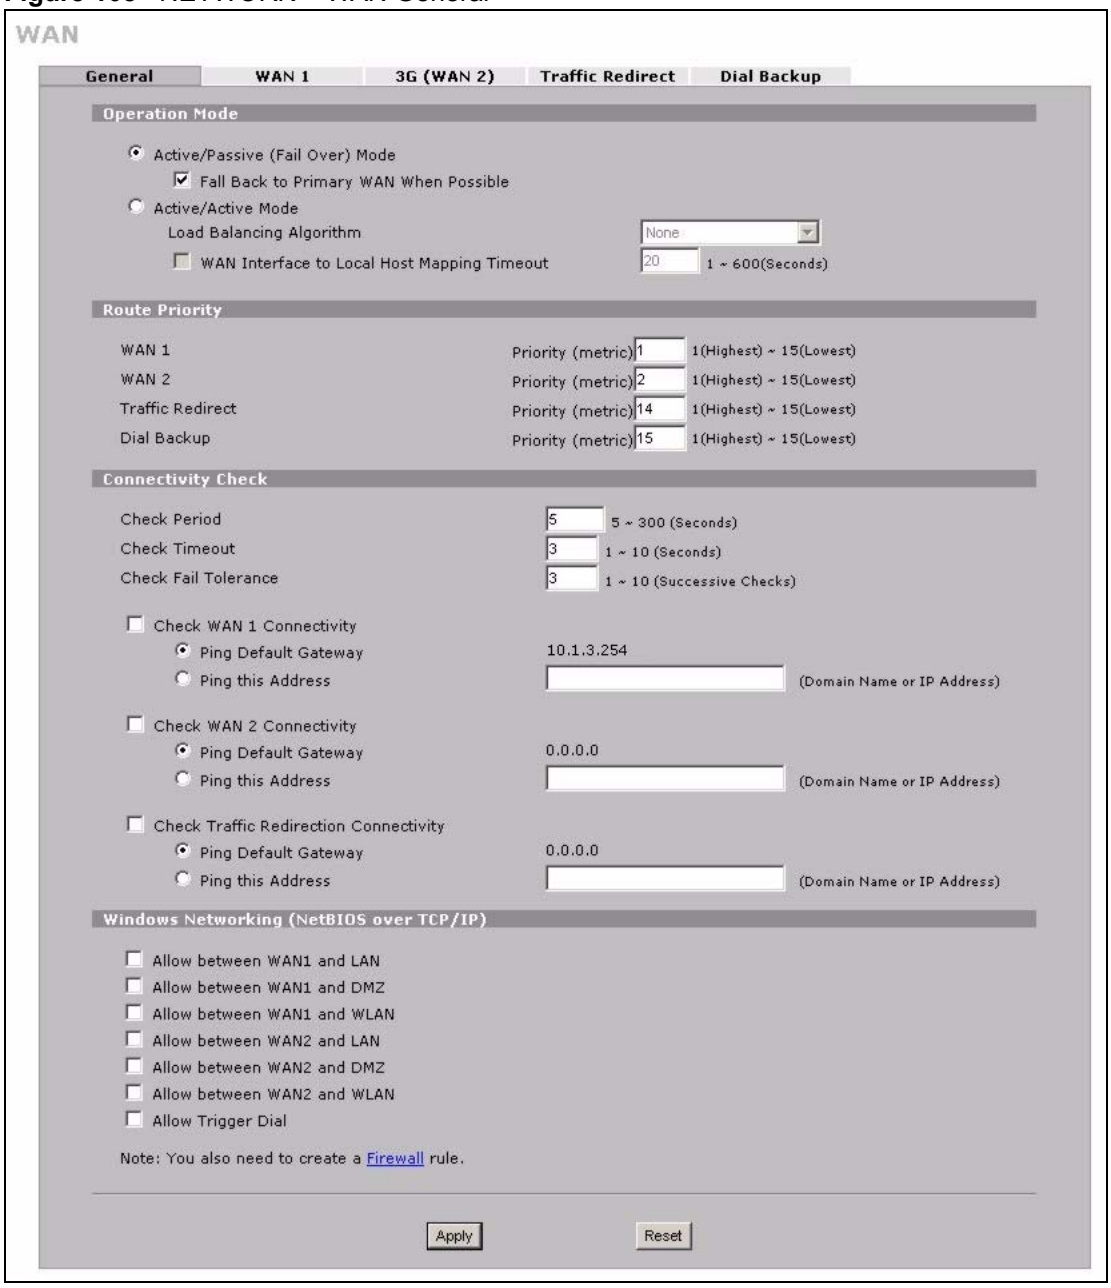

The following table describes the labels in this screen.

Table 33 NETWORK > WAN General

LABEL	DESCRIPTION
Active/Passive (Fail Over) Mode	Select the Active/Passive (fail over) operation mode to have the ZyWALL use the second highest priority WAN interface as a back up. This means that the ZyWALL will normally use the highest priority (primary) WAN interface (depending on the priorities you configure in the **Route Priority** fields). The ZyWALL will switch to the secondary (second highest priority) WAN interface when the primary WAN interface's connection fails.
Fall Back to Primary WAN When Possible	This field determines the action the ZyWALL takes after the primary WAN interface fails and the ZyWALL starts using the secondary WAN interface. Select this check box to have the ZyWALL change back to using the primary WAN interface when the ZyWALL can connect through the primary WAN interface again. Clear this check box to have the ZyWALL continue using the secondary WAN interface, even after the ZyWALL can connect through the primary WAN interface again. The ZyWALL continues to use the secondary WAN interface until it's connection fails (at which time it will change back to using the primary WAN interface if its connection is up.
Active/Active Mode	Select **Active/Active Mode** to have the ZyWALL use both of the WAN interfaces at the same time and allow you to enable load balancing.
Load Balancing Algorithm	Select **Least Load First**, **Weighted Round Robin** or **Spillover** to activate load balancing and set the related fields. Otherwise, select **None**. Refer to Section 8.8 on page 174 for load balancing configuration.
WAN Interface to Local Host Mapping Timeout	Select this option to have the ZyWALL send all of a local computer's traffic through the same WAN interface for the period of time that you specify (1 to 600 seconds). This is useful when a redirect server forwards a local user's request for a file and informs the file server that a particular WAN IP address is requesting the file. If the user's subsequent sessions came from a different WAN IP address, the file server would deny the request. This field is configurable only when you select **Active/Active Mode** and enable load balancing.
Route Priority	
WAN1 WAN2 Traffic Redirect Dial Backup	The default WAN connection is "1' as your broadband connection via the WAN interface should always be your preferred method of accessing the WAN. The ZyWALL switches from WAN interface 1 to WAN interface 2 if WAN interface 1's connection fails and then back to WAN interface 1 when WAN interface 1's connection comes back up. The default priority of the routes is **WAN 1**, **WAN 2**, **Traffic Redirect** and then **Dial Backup**: You have three choices for an auxiliary connection (**WAN 2**, **Traffic Redirect** and **Dial Backup**) in the event that your regular WAN connection goes down. If **Dial Backup** is preferred to **Traffic Redirect**, then type "14" in the **Dial Backup Priority (metric)** field (and leave the **Traffic Redirect Priority (metric)** at the default of "15"). The **Dial Backup** field is available only when you enable the corresponding dial backup feature in the **Dial Backup** screen.
Connectivity Check	
Check Period	The ZyWALL tests a WAN connection by periodically sending a ping to either the default gateway or the address in the **Ping this Address** field. Type a number of seconds (5 to 300) to set the time interval between checks. Allow more time if your destination IP address handles lots of traffic.
Check Timeout	Type the number of seconds (1 to 10) for your ZyWALL to wait for a response to the ping before considering the check to have failed. This setting must be less than the **Check Period**. Use a higher value in this field if your network is busy or congested.

Table 33 NETWORK > WAN General (continued)

LABEL	DESCRIPTION
Check Fail Tolerance	Type how many WAN connection checks can fail (1-10) before the connection is considered "down" (not connected). The ZyWALL still checks a "down" connection to detect if it reconnects.
Check WAN1/2 Connectivity	Select the check box to have the ZyWALL periodically test the respective WAN interface's connection. Select **Ping Default Gateway** to have the ZyWALL ping the WAN interface's default gateway IP address. Select **Ping this Address** and enter a domain name or IP address of a reliable nearby computer (for example, your ISP's DNS server address) to have the ZyWALL ping that address. For a domain name, use up to 63 alphanumeric characters (hyphens, periods and the underscore are also allowed) without spaces.
Check Traffic Redirection Connectivity	Select the check box to have the ZyWALL periodically test the traffic redirect connection. Select **Ping Default Gateway** to have the ZyWALL ping the backup gateway's IP address. Select **Ping this Address** and enter a domain name or IP address of a reliable nearby computer (for example, your ISP's DNS server address) to have the ZyWALL ping that address. For a domain name, use up to 63 alphanumeric characters (hyphens, periods and the underscore are also allowed) without spaces.
Windows Networking (NetBIOS over TCP/IP)	NetBIOS (Network Basic Input/Output System) are TCP or UDP packets that enable a computer to connect to and communicate with a LAN. For some dial-up services such as PPPoE or PPTP, NetBIOS packets cause unwanted calls.
Allow between WAN1 and LAN	Select this check box to forward NetBIOS packets from WAN 1 to the LAN port and from the LAN port to WAN1. If your firewall is enabled with the default policy set to block WAN 1 to LAN traffic, you also need to enable the default WAN1 to LAN firewall rule that forwards NetBIOS traffic. Clear this check box to block all NetBIOS packets going from WAN 1 to the LAN port and from LAN port to WAN1.
Allow between WAN1 and DMZ	Select this check box to forward NetBIOS packets from WAN 1 to the DMZ port and from the DMZ port to WAN1. Clear this check box to block all NetBIOS packets going from WAN 1 to the DMZ port and from DMZ port to WAN1.
Allow between WAN1 and WLAN	Select this check box to forward NetBIOS packets from WAN 1 to the WLAN port and from the WLAN port to WAN 1. Clear this check box to block all NetBIOS packets going from WAN 1to the WLAN port and from WLAN port to WAN1.
Allow between WAN2 and LAN	Select this check box to forward NetBIOS packets from WAN 2 to the LAN port and from the LAN port to WAN2. If your firewall is enabled with the default policy set to block WAN 2 to LAN traffic, you also need to enable the default WAN2 to LAN firewall rule that forwards NetBIOS traffic. Clear this check box to block all NetBIOS packets going from WAN 2 to the LAN port and from LAN port to WAN2.
Allow between WAN2 and DMZ	Select this check box to forward NetBIOS packets from WAN 2 to the DMZ port and from the DMZ port to WAN2. Clear this check box to block all NetBIOS packets going from WAN 2 to the DMZ port and from DMZ port to WAN2.
Allow between WAN2 and WLAN	Select this check box to forward NetBIOS packets from WAN 2 to the WLAN port and from the WLAN port to WAN 2. Clear this check box to block all NetBIOS packets going from WAN 2 to the WLAN port and from WLAN port to WAN 2.

Table 33 NETWORK > WAN General (continued)

LABEL	DESCRIPTION
Allow Trigger Dial	Select this option to allow NetBIOS packets to initiate calls.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

8.8 Configuring Load Balancing


To configure load balancing on the ZyWALL, click **NETWORK** > **WAN** in the navigation panel. The **WAN General** screen displays by default. Select **Active/Active Mode** under **Operation Mode** to enable load balancing on the ZyWALL.

The **WAN General** screen varies depending on what you select in the **Load Balancing Algorithm** field.

8.8.1 Least Load First

To configure **Least Load First**, select **Least Load First** in the **Load Balancing Algorithm** field.

Figure 109 Load Balancing: Least Load First

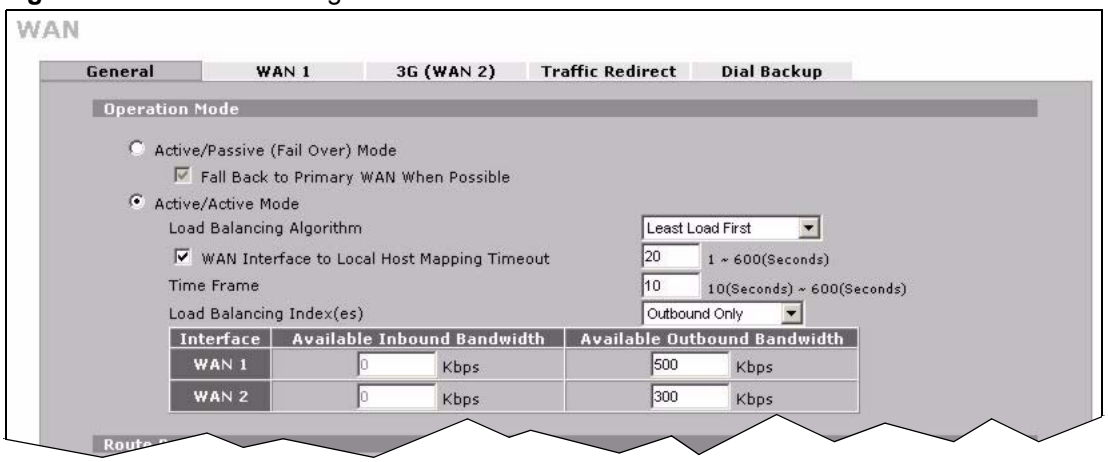

The following table describes the related fields in this screen.

Table 34 Load Balancing: Least Load First

LABEL	DESCRIPTION
Active/Active Mode	Select **Active/Active Mode** and set the related fields to enable load balancing on the ZyWALL.
Load Balancing Algorithm	Set the load balancing method to **Least Load First**.
WAN Interface to Local Host Mapping Timeout	Select this option to have the ZyWALL send all of a local computer's traffic through the same WAN interface for the period of time that you specify (1 to 600 seconds). This is useful when a redirect server forwards a local user's request for a file and informs the file server that a particular WAN IP address is requesting the file. If the user's subsequent sessions came from a different WAN IP address, the file server would deny the request.


Table 34 Load Balancing: Least Load First (continued)

LABEL	DESCRIPTION
Time Frame	You can set the ZyWALL to get the measured bandwidth using the average bandwidth in the specified time interval. Enter the time interval between 10 and 600 seconds.
Load Balancing Index(es)	Specify the direction of the traffic utilization you want the ZyWALL to use in calculating the load balancing index. Select **Outbound Only**, **Inbound Only** or **Outbound + Inbound**.
Interface	This field displays the name of the WAN interface (**WAN 1** and **WAN 2**).
Available Inbound Bandwidth	This field is applicable when you select **Outbound + Inbound** or **Inbound Only** in the **Load Balancing Index(es)** field. Specify the inbound (or downstream) bandwidth (in kilo bites per second) for the interface. This should be the actual downstream bandwidth that your ISP provides.
Available Outbound Bandwidth	This field is applicable when you select **Outbound + Inbound** or **Outbound Only** in the **Load Balancing Index(es)** field. Specify the outbound (or upstream) bandwidth (in kilo bites per second) for the interface. This should be the actual upstream bandwidth that your ISP provides.

8.8.2 Weighted Round Robin

To load balance using the weighted round robin method, select **Weighted Round Robin** in the **Load Balancing Algorithm** field.

Figure 110 Load Balancing: Weighted Round Robin

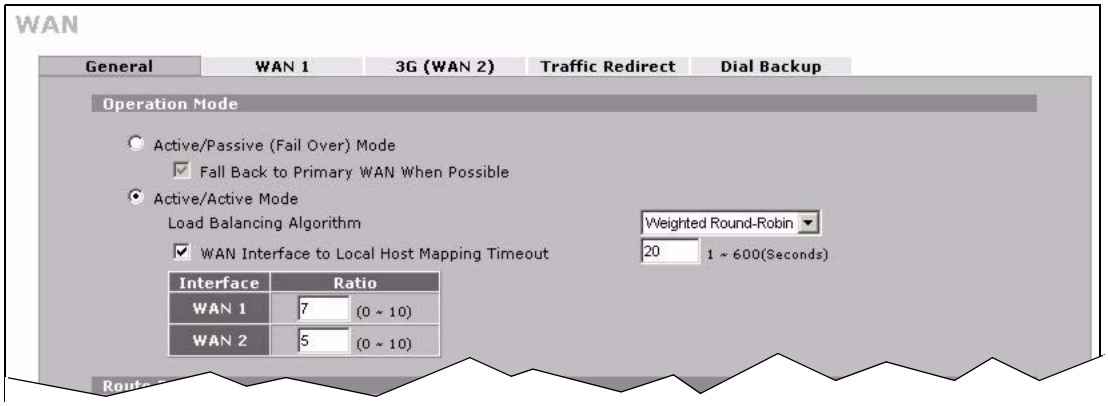

The following table describes the related fields in this screen.

Table 35 Load Balancing: Weighted Round Robin

LABEL	DESCRIPTION
Active/Active Mode	Select **Active/Active Mode** and set the related fields to enable load balancing on the ZyWALL.
Load Balancing Algorithm	Set the load balancing method to **Weighted Round Robin**.
WAN Interface to Local Host Mapping Timeout	Select this option to have the ZyWALL send all of a local computer's traffic through the same WAN interface for the period of time that you specify (1 to 600 seconds). This is useful when a redirect server forwards a local user's request for a file and informs the file server that a particular WAN IP address is requesting the file. If the user's subsequent sessions came from a different WAN IP address, the file server would deny the request.

Table 35 Load Balancing: Weighted Round Robin (continued)


LABEL	DESCRIPTION
Interface	This field displays the name of the WAN interface (**WAN 1** and **WAN 2**).
Ratio	Specify the weight for the interface. Enter 0 to set the ZyWALL not to send traffic load to the interface. The higher the number, the bigger the weight (the more traffic sent).

8.8.3 Spillover

To load balance using the spillover method, select **Spillover** in the **Load Balancing Algorithm** field.

Configure the **Route Priority** metrics in the **WAN General** screen to determine the primary and secondary WANs. By default, WAN 1 is the primary WAN and WAN 2 is the secondary WAN.

Figure 111 Load Balancing: Spillover

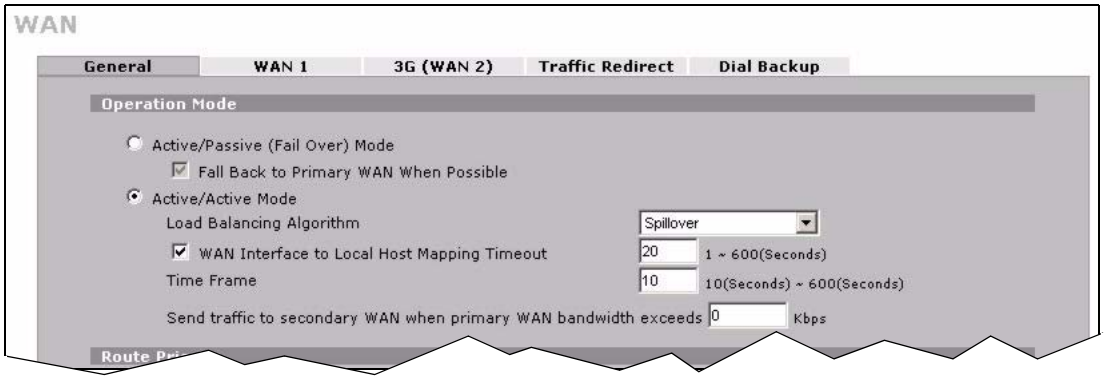

The following table describes the related fields in this screen.

Table 36 Load Balancing: Spillover

LABEL	DESCRIPTION
Active/Active Mode	Select **Active/Active Mode** and set the related fields to enable load balancing on the ZyWALL.
Load Balancing Algorithm	Set the load balancing method to **Spillover**.
WAN Interface to Local Host Mapping Timeout	Select this option to have the ZyWALL send all of a local computer's traffic through the same WAN interface for the period of time that you specify (1 to 600 seconds). This is useful when a redirect server forwards a local user's request for a file and informs the file server that a particular WAN IP address is requesting the file. If the user's subsequent sessions came from a different WAN IP address, the file server would deny the request.
Time Frame	You can set the ZyWALL to get the measured bandwidth using the average bandwidth in the specified time interval. Enter the time interval between 10 and 600 seconds.
Send traffic to secondary WAN when primary WAN bandwidth exceeds	Specify the maximum allowable bandwidth on the primary WAN. Once this maximum bandwidth is reached, the ZyWALL sends the new session traffic that exceeds this limit to the secondary WAN. The ZyWALL continues to send traffic of existing sessions to the primary WAN.

8.9 WAN IP Address Assignment

Every computer on the Internet must have a unique IP address. If your networks are isolated from the Internet, for instance, only between your two branch offices, you can assign any IP addresses to the hosts without problems. However, the Internet Assigned Numbers Authority (IANA) has reserved the following three blocks of IP addresses specifically for private networks.

Table 37 Private IP Address Ranges

10.0.0.0	-	10.255.255.255
172.16.0.0	-	172.31.255.255
192.168.0.0	-	192.168.255.255

You can obtain your IP address from the IANA, from an ISP or have it assigned by a private network. If you belong to a small organization and your Internet access is through an ISP, the ISP can provide you with the Internet addresses for your local networks. On the other hand, if you are part of a much larger organization, you should consult your network administrator for the appropriate IP addresses.



Regardless of your particular situation, do not create an arbitrary IP address; always follow the guidelines above. For more information on address assignment, please refer to RFC 1597, Address Allocation for Private Internets and RFC 1466, Guidelines for Management of IP Address Space.

8.10 DNS Server Address Assignment

Use DNS (Domain Name System) to map a domain name to its corresponding IP address and vice versa, for instance, the IP address of www.zyxel.com is 204.217.0.2. The DNS server is extremely important because without it, you must know the IP address of a computer before you can access it.

The ZyWALL can get the DNS server addresses in the following ways.

1. The ISP tells you the DNS server addresses, usually in the form of an information sheet, when you sign up. If your ISP gives you DNS server addresses, manually enter them in the DNS server fields.
2. If your ISP dynamically assigns the DNS server IP addresses (along with the ZyWALL's WAN IP address), set the DNS server fields to get the DNS server address from the ISP.
3. You can manually enter the IP addresses of other DNS servers. These servers can be public or private. A DNS server could even be behind a remote IPSec router (see Section 21.5.1 on page 428).

8.11 WAN MAC Address

Every Ethernet device has a unique MAC (Media Access Control) address. The MAC address is assigned at the factory and consists of six pairs of hexadecimal characters, for example, 00:A0:C5:00:00:02.

You can configure the WAN port's MAC address by either using the factory default or cloning the MAC address from a computer on your LAN. Once it is successfully configured, the address will be copied to the "rom" file (ZyNOS configuration file). It will not change unless you change the setting or upload a different "rom" file.

8.12 WAN 1

To change your ZyWALL's WAN 1 ISP, IP and MAC settings, click **NETWORK** > **WAN** > **WAN 1**. The screen differs by the encapsulation.




The WAN 1 and WAN 2 IP addresses of a ZyWALL with multiple WAN interfaces must be on different subnets.

8.12.1 WAN Ethernet Encapsulation

For ISPs (such as Telstra) that send UDP heartbeat packets to verify that the customer is still online, please create a **WAN-to-WAN/ZyWALL** firewall rule for those packets. Contact your ISP to find the correct port number.

The screen shown next is for **Ethernet** encapsulation.

Figure 112 NETWORK > WAN > WAN 1 (Ethernet Encapsulation)

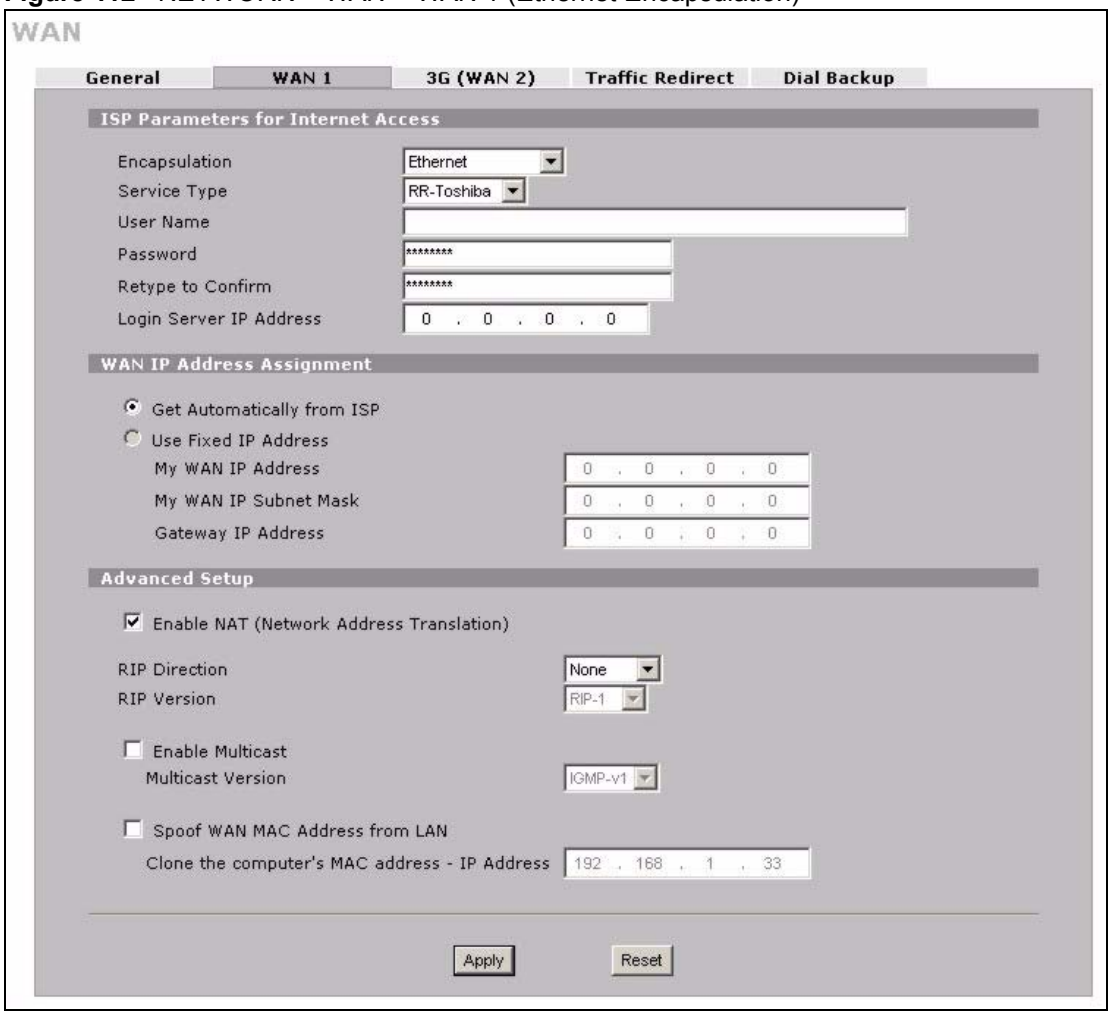

The following table describes the labels in this screen.

Table 38 NETWORK > WAN > WAN 1 (Ethernet Encapsulation)

LABEL	DESCRIPTION
ISP Parameters for Internet Access	
Encapsulation	You must choose the **Ethernet** option when the WAN port is used as a regular Ethernet.
Service Type	Choose from **Standard**, **Telstra** (RoadRunner Telstra authentication method), **RR-Manager** (Roadrunner Manager authentication method), **RR-Toshiba** (Roadrunner Toshiba authentication method) or **Telia Login**. The following fields do not appear with the **Standard** service type.
User Name	Type the user name given to you by your ISP.
Password	Type the password associated with the user name above.
Retype to Confirm	Type your password again to make sure that you have entered is correctly.
Login Server IP Address	Type the authentication server IP address here if your ISP gave you one. This field is not available for Telia Login.

Table 38 NETWORK > WAN > WAN 1 (Ethernet Encapsulation) (continued)

LABEL	DESCRIPTION
Login Server (Telia Login only)	Type the domain name of the Telia login server, for example login1.telia.com.
Relogin Every(min) (Telia Login only)	The Telia server logs the ZyWALL out if the ZyWALL does not log in periodically. Type the number of minutes from 1 to 59 (30 default) for the ZyWALL to wait between logins.
WAN IP Address Assignment	
Get automatically from ISP	Select this option If your ISP did not assign you a fixed IP address. This is the default selection.
Use Fixed IP Address	Select this option If the ISP assigned a fixed IP address.
My WAN IP Address	Enter your WAN IP address in this field if you selected **Use Fixed IP Address**.
My WAN IP Subnet Mask	Enter the IP subnet mask (if your ISP gave you one) in this field if you selected **Use Fixed IP Address**.
Gateway IP Address	Enter the gateway IP address (if your ISP gave you one) in this field if you selected **Use Fixed IP Address**.
Advanced Setup	
Enable NAT (Network Address Translation)	Network Address Translation (NAT) allows the translation of an Internet protocol address used within one network (for example a private IP address used in a local network) to a different IP address known within another network (for example a public IP address used on the Internet). Select this check box to enable NAT.
RIP Direction	RIP (Routing Information Protocol) allows a router to exchange routing information with other routers. The **RIP Direction** field controls the sending and receiving of RIP packets. Choose **Both**, **None**, **In Only** or **Out Only**. When set to **Both** or **Out Only**, the ZyWALL will broadcast its routing table periodically. When set to **Both** or **In Only**, the ZyWALL will incorporate RIP information that it receives. When set to **None**, the ZyWALL will not send any RIP packets and will ignore any RIP packets received. By default, **RIP Direction** is set to **Both**.
RIP Version	The **RIP Version** field controls the format and the broadcasting method of the RIP packets that the ZyWALL sends (it recognizes both formats when receiving). Choose **RIP-1**, **RIP-2B** or **RIP-2M**. **RIP-1** is universally supported; but **RIP-2** carries more information. RIP-1 is probably adequate for most networks, unless you have an unusual network topology. Both **RIP-2B** and **RIP-2M** sends the routing data in RIP-2 format; the difference being that RIP-2B uses subnet broadcasting while RIP-2M uses multicasting. Multicasting can reduce the load on non-router machines since they generally do not listen to the RIP multicast address and so will not receive the RIP packets. However, if one router uses multicasting, then all routers on your network must use multicasting, also. By default, the **RIP Version** field is set to **RIP-1**.
Enable Multicast	Select this check box to turn on IGMP (Internet Group Multicast Protocol). IGMP is a network-layer protocol used to establish membership in a Multicast group - it is not used to carry user data.

Table 38 NETWORK > WAN > WAN 1 (Ethernet Encapsulation) (continued)

LABEL	DESCRIPTION
Multicast Version	Choose **None** (default), **IGMP-V1** or **IGMP-V2**. IGMP (Internet Group Multicast Protocol) is a session-layer protocol used to establish membership in a Multicast group – it is not used to carry user data. IGMP version 2 (RFC 2236) is an improvement over version 1 (RFC 1112) but IGMP version 1 is still in wide use. If you would like to read more detailed information about interoperability between IGMP version 2 and version 1, please see sections 4 and 5 of RFC 2236.
Spoof WAN MAC Address from LAN	You can configure the WAN port's MAC address by either using the factory assigned default MAC Address or cloning the MAC address of a computer on your LAN. By default, the ZyWALL uses the factory assigned MAC Address to identify itself on the WAN. Otherwise, select the check box next to **Spoof WAN MAC Address from LAN** and enter the IP address of the computer on the LAN whose MAC you are cloning. Once it is successfully configured, the address will be copied to the rom file (ZyNOS configuration file). It will not change unless you change the setting or upload a different ROM file.
Clone the computer's MAC address – IP Address	Enter the IP address of the computer on the LAN whose MAC you are cloning. If you clone the MAC address of a computer on your LAN, it is recommended that you clone the MAC address prior to hooking up the WAN port.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

8.12.2 PPPoE Encapsulation

The ZyWALL supports PPPoE (Point-to-Point Protocol over Ethernet). PPPoE is an IETF standard (RFC 2516) specifying how a personal computer (PC) interacts with a broadband modem (DSL, cable, wireless, etc.) connection. The **PPPoE** option is for a dial-up connection using PPPoE.

For the service provider, PPPoE offers an access and authentication method that works with existing access control systems (for example RADIUS).


One of the benefits of PPPoE is the ability to let you access one of multiple network services, a function known as dynamic service selection. This enables the service provider to easily create and offer new IP services for individuals.

Operationally, PPPoE saves significant effort for both you and the ISP or carrier, as it requires no specific configuration of the broadband modem at the customer site.

By implementing PPPoE directly on the ZyWALL (rather than individual computers), the computers on the LAN do not need PPPoE software installed, since the ZyWALL does that part of the task. Furthermore, with NAT, all of the LANs' computers will have access.

The screen shown next is for **PPPoE** encapsulation.

Figure 113 NETWORK > WAN > WAN 1 (PPPoE Encapsulation)

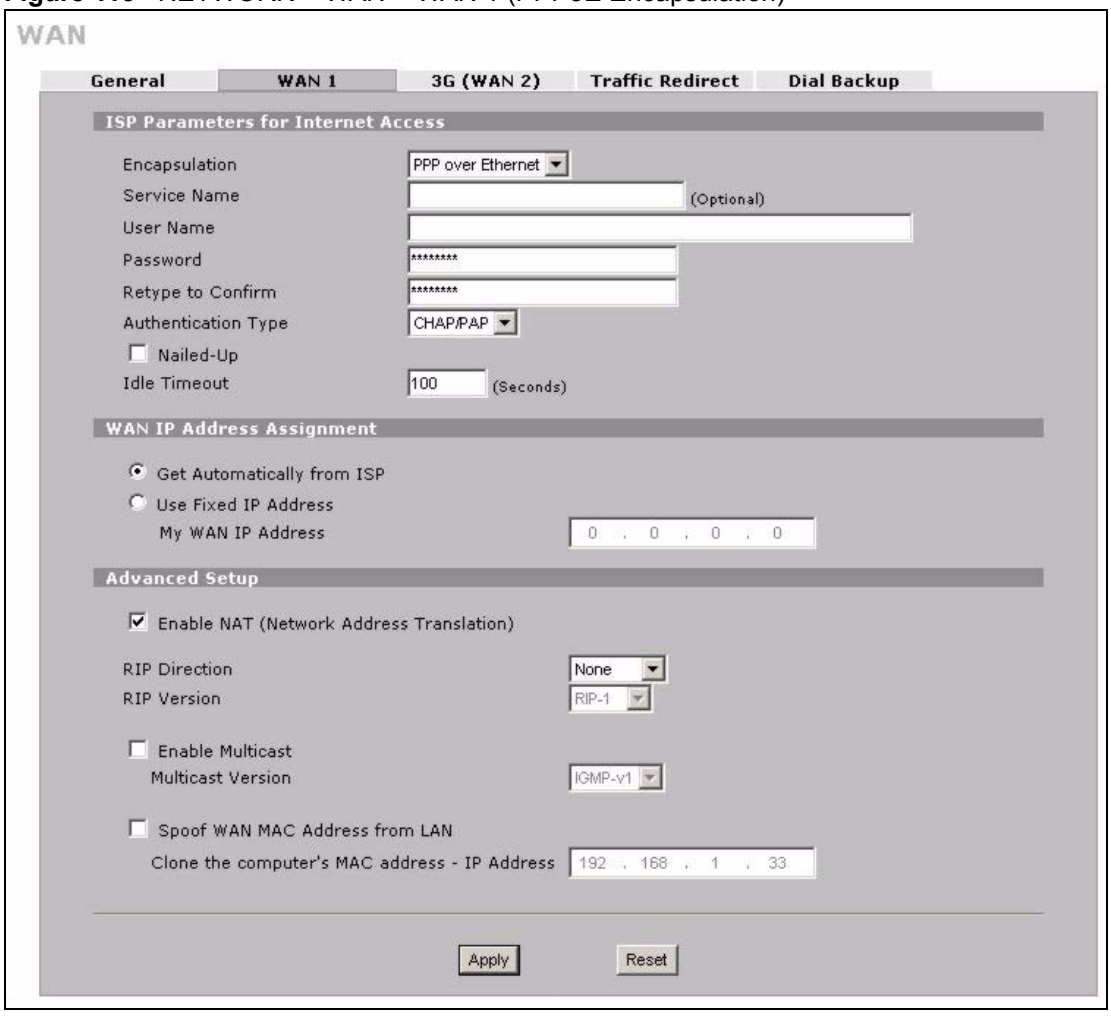

The following table describes the labels in this screen.

Table 39 NETWORK > WAN > WAN 1 (PPPoE Encapsulation)

LABEL	DESCRIPTION
ISP Parameters for Internet Access	
Encapsulation	Select **PPPoE** for a dial-up connection using PPPoE.
Service Name	Type the PPPoE service name provided to you by your ISP. PPPoE uses a service name to identify and reach the PPPoE server.
User Name	Type the user name given to you by your ISP.
Password	Type the password associated with the user name above.
Retype to Confirm	Type your password again to make sure that you have entered is correctly.

Table 39 NETWORK > WAN > WAN 1 (PPPoE Encapsulation) (continued)

LABEL	DESCRIPTION
Authentication Type	The ZyWALL supports PAP (Password Authentication Protocol) and CHAP (Challenge Handshake Authentication Protocol). CHAP is more secure than PAP; however, PAP is readily available on more platforms. Use the drop-down list box to select an authentication protocol for outgoing calls. Options are: **CHAP/PAP** - Your ZyWALL accepts either CHAP or PAP when requested by this remote node. **CHAP** - Your ZyWALL accepts CHAP only. **PAP** - Your ZyWALL accepts PAP only.
Nailed-Up	Select **Nailed-Up** if you do not want the connection to time out.
Idle Timeout	This value specifies the time in seconds that elapses before the ZyWALL automatically disconnects from the PPPoE server.
WAN IP Address Assignment	
Get automatically from ISP	Select this option If your ISP did not assign you a fixed IP address. This is the default selection.
Use Fixed IP Address	Select this option If the ISP assigned a fixed IP address.
My WAN IP Address	Enter your WAN IP address in this field if you selected **Use Fixed IP Address**.
Advanced Setup	
Enable NAT (Network Address Translation)	Network Address Translation (NAT) allows the translation of an Internet protocol address used within one network (for example a private IP address used in a local network) to a different IP address known within another network (for example a public IP address used on the Internet). Select this checkbox to enable NAT. For more information about NAT see Chapter 17 on page 385.
RIP Direction	RIP (Routing Information Protocol) allows a router to exchange routing information with other routers. The **RIP Direction** field controls the sending and receiving of RIP packets. Choose **Both**, **None**, **In Only** or **Out Only**. When set to **Both** or **Out Only**, the ZyWALL will broadcast its routing table periodically. When set to **Both** or **In Only**, the ZyWALL will incorporate RIP information that it receives. When set to **None**, the ZyWALL will not send any RIP packets and will ignore any RIP packets received. By default, **RIP Direction** is set to **Both**.
RIP Version	The **RIP Version** field controls the format and the broadcasting method of the RIP packets that the ZyWALL sends (it recognizes both formats when receiving). Choose **RIP-1**, **RIP-2B** or **RIP-2M**. **RIP-1** is universally supported; but **RIP-2** carries more information. RIP-1 is probably adequate for most networks, unless you have an unusual network topology. Both **RIP-2B** and **RIP-2M** sends the routing data in RIP-2 format; the difference being that RIP-2B uses subnet broadcasting while RIP-2M uses multicasting. Multicasting can reduce the load on non-router machines since they generally do not listen to the RIP multicast address and so will not receive the RIP packets. However, if one router uses multicasting, then all routers on your network must use multicasting, also. By default, the **RIP Version** field is set to **RIP-1**.

Table 39 NETWORK > WAN > WAN 1 (PPPoE Encapsulation) (continued)


LABEL	DESCRIPTION
Enable Multicast	Select this check box to turn on IGMP (Internet Group Multicast Protocol). IGMP is a network-layer protocol used to establish membership in a Multicast group - it is not used to carry user data.
Multicast Version	Choose **None** (default), **IGMP-V1** or **IGMP-V2**. IGMP (Internet Group Multicast Protocol) is a session-layer protocol used to establish membership in a Multicast group – it is not used to carry user data. IGMP version 2 (RFC 2236) is an improvement over version 1 (RFC 1112) but IGMP version 1 is still in wide use. If you would like to read more detailed information about interoperability between IGMP version 2 and version 1, please see sections 4 and 5 of RFC 2236.
Spoof WAN MAC Address from LAN	You can configure the WAN port's MAC address by either using the factory assigned default MAC Address or cloning the MAC address of a computer on your LAN. By default, the ZyWALL uses the factory assigned MAC Address to identify itself on the WAN. Otherwise, select the check box next to **Spoof WAN MAC Address from LAN** and enter the IP address of the computer on the LAN whose MAC you are cloning. Once it is successfully configured, the address will be copied to the rom file (ZyNOS configuration file). It will not change unless you change the setting or upload a different ROM file.
Clone the computer's MAC address – IP Address	Enter the IP address of the computer on the LAN whose MAC you are cloning. If you clone the MAC address of a computer on your LAN, it is recommended that you clone the MAC address prior to hooking up the WAN port.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

8.12.3 PPTP Encapsulation

Point-to-Point Tunneling Protocol (PPTP) is a network protocol that enables secure transfer of data from a remote client to a private server, creating a Virtual Private Network (VPN) using TCP/IP-based networks.

PPTP supports on-demand, multi-protocol and virtual private networking over public networks, such as the Internet. The screen shown next is for **PPTP** encapsulation.

Figure 114 NETWORK > WAN > WAN 1 (PPTP Encapsulation)

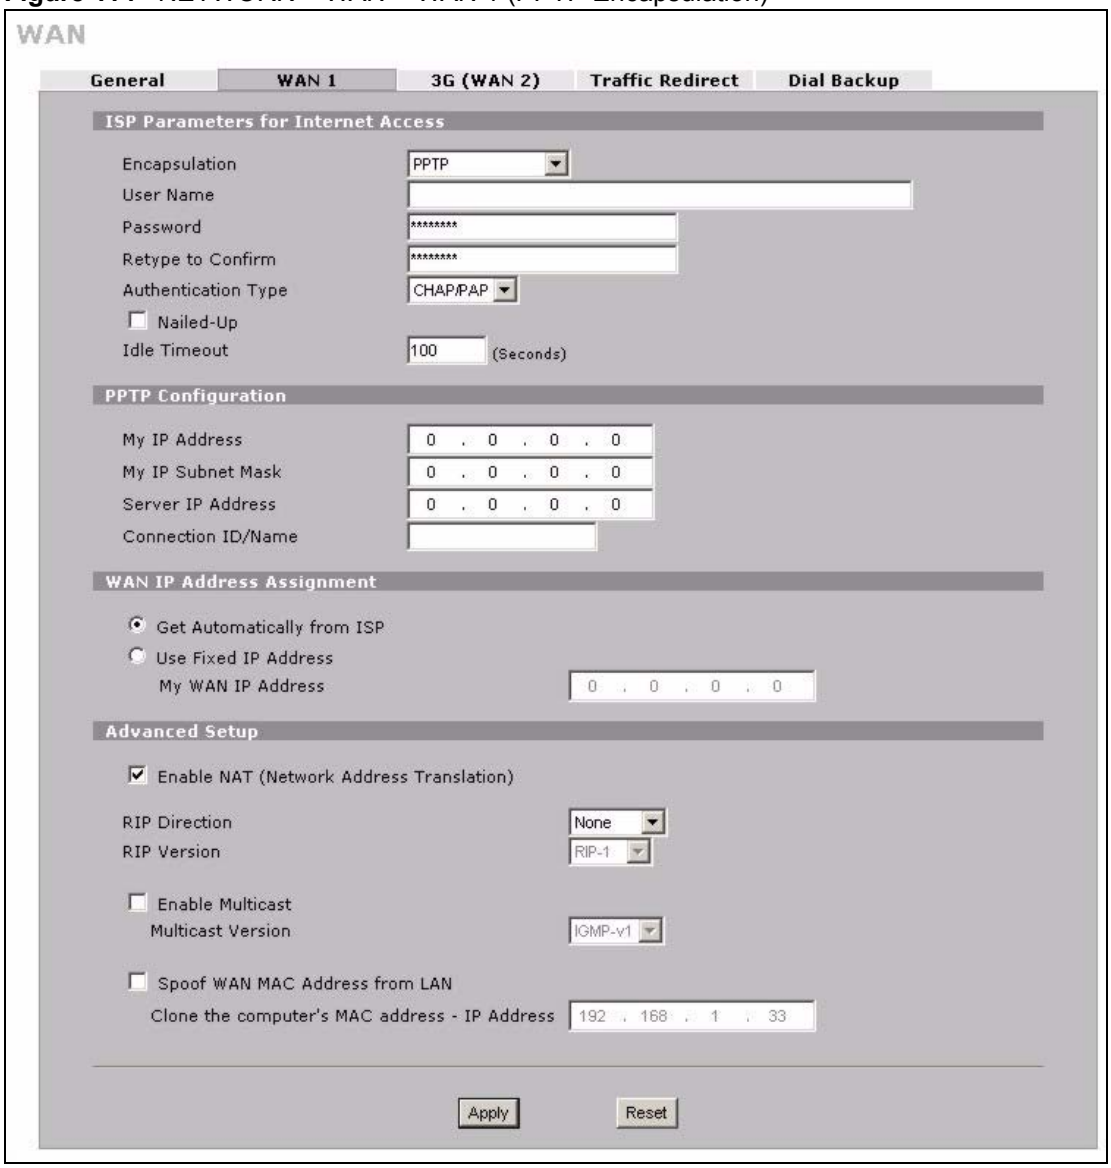

The following table describes the labels in this screen.

Table 40 NETWORK > WAN > WAN 1 (PPTP Encapsulation)

LABEL	DESCRIPTION
ISP Parameters for Internet Access	
Encapsulation	Set the encapsulation method to **PPTP**. The ZyWALL supports only one PPTP server connection at any given time. To configure a PPTP client, you must configure the **User Name** and **Password** fields for a PPP connection and the PPTP parameters for a PPTP connection.
User Name	Type the user name given to you by your ISP.
Password	Type the password associated with the user name above.
Retype to Confirm	Type your password again to make sure that you have entered it correctly.

Table 40 NETWORK > WAN > WAN 1 (PPTP Encapsulation) (continued)

LABEL	DESCRIPTION
Authentication Type	The ZyWALL supports PAP (Password Authentication Protocol) and CHAP (Challenge Handshake Authentication Protocol). CHAP is more secure than PAP; however, PAP is readily available on more platforms. Use the drop-down list box to select an authentication protocol for outgoing calls. Options are: **CHAP/PAP** - Your ZyWALL accepts either CHAP or PAP when requested by this remote node. **CHAP** - Your ZyWALL accepts CHAP only. **PAP** - Your ZyWALL accepts PAP only.
Nailed-up	Select **Nailed-Up** if you do not want the connection to time out.
Idle Timeout	This value specifies the time in seconds that elapses before the ZyWALL automatically disconnects from the PPTP server.
PPTP Configuration	
My IP Address	Type the (static) IP address assigned to you by your ISP.
My IP Subnet Mask	Your ZyWALL will automatically calculate the subnet mask based on the IP address that you assign. Unless you are implementing subnetting, use the subnet mask computed by the ZyWALL.
Server IP Address	Type the IP address of the PPTP server.
Connection ID/ Name	Type your identification name for the PPTP server.
WAN IP Address Assignment	
Get automatically from ISP	Select this option If your ISP did not assign you a fixed IP address. This is the default selection.
Use Fixed IP Address	Select this option If the ISP assigned a fixed IP address.
My WAN IP Address	Enter your WAN IP address in this field if you selected **Use Fixed IP Address**.
Advanced Setup	
Enable NAT (Network Address Translation)	Network Address Translation (NAT) allows the translation of an Internet protocol address used within one network (for example a private IP address used in a local network) to a different IP address known within another network (for example a public IP address used on the Internet). Select this checkbox to enable NAT. For more information about NAT see Chapter 17 on page 385.
RIP Direction	RIP (Routing Information Protocol) allows a router to exchange routing information with other routers. The **RIP Direction** field controls the sending and receiving of RIP packets. Choose **Both**, **None**, **In Only** or **Out Only**. When set to **Both** or **Out Only**, the ZyWALL will broadcast its routing table periodically. When set to **Both** or **In Only**, the ZyWALL will incorporate RIP information that it receives. When set to **None**, the ZyWALL will not send any RIP packets and will ignore any RIP packets received. By default, **RIP Direction** is set to **Both**.

Table 40 NETWORK > WAN > WAN 1 (PPTP Encapsulation) (continued)

LABEL	DESCRIPTION
RIP Version	The **RIP Version** field controls the format and the broadcasting method of the RIP packets that the ZyWALL sends (it recognizes both formats when receiving). Choose **RIP-1**, **RIP-2B** or **RIP-2M**. **RIP-1** is universally supported; but **RIP-2** carries more information. RIP-1 is probably adequate for most networks, unless you have an unusual network topology. Both **RIP-2B** and **RIP-2M** sends the routing data in RIP-2 format; the difference being that RIP-2B uses subnet broadcasting while RIP-2M uses multicasting. Multicasting can reduce the load on non-router machines since they generally do not listen to the RIP multicast address and so will not receive the RIP packets. However, if one router uses multicasting, then all routers on your network must use multicasting, also. By default, the **RIP Version** field is set to **RIP-1**.
Enable Multicast	Select this check box to turn on IGMP (Internet Group Multicast Protocol). IGMP is a network-layer protocol used to establish membership in a Multicast group - it is not used to carry user data.
Multicast Version	Choose **None** (default), **IGMP-V1** or **IGMP-V2**. IGMP (Internet Group Multicast Protocol) is a session-layer protocol used to establish membership in a Multicast group – it is not used to carry user data. IGMP version 2 (RFC 2236) is an improvement over version 1 (RFC 1112) but IGMP version 1 is still in wide use. If you would like to read more detailed information about interoperability between IGMP version 2 and version 1, please see sections 4 and 5 of RFC 2236.
Spoof WAN MAC Address from LAN	You can configure the WAN port's MAC address by either using the factory assigned default MAC Address or cloning the MAC address of a computer on your LAN. By default, the ZyWALL uses the factory assigned MAC Address to identify itself on the WAN. Otherwise, select the check box next to **Spoof WAN MAC Address from LAN** and enter the IP address of the computer on the LAN whose MAC you are cloning. Once it is successfully configured, the address will be copied to the rom file (ZyNOS configuration file). It will not change unless you change the setting or upload a different ROM file.
Clone the computer's MAC address – IP Address	Enter the IP address of the computer on the LAN whose MAC you are cloning. If you clone the MAC address of a computer on your LAN, it is recommended that you clone the MAC address prior to hooking up the WAN port.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

8.13 WAN 2 (3G WAN)

3G (Third Generation) is a digital, packet-switched wireless technology. Bandwidth usage is optimized as multiple users share the same channel and bandwidth is only allocated to users when they send data. It allows fast transfer of voice and non-voice data and provides broadband Internet access to mobile devices.



The actual data rate you obtain varies depending on the 3G card you use, the signal strength of the service provider's base station, your service plan, etc.

If the signal strength of a 3G network is too low, the 3G card may switch to an available 2.5G or 2.75G network. See the following table for a comparison between 2G, 2.5G, 2.75G, 3G and 3.5G wireless technologies.

Table 41 2G, 2.5G, 2.75G, 3G and 3.5G Wireless Technologies

NAME	TYPE	MOBILE PHONE AND DATA STANDARDS		DATA SPEED
		GSM-BASED	CDMA-BASED	
2G	Circuit-switched	GSM (Global System for Mobile Communications), Personal Handy-phone System (PHS), etc.	Interim Standard 95 (IS-95), the first CDMA-based digital cellular standard pioneered by Qualcomm. The brand name for IS-95 is cdmaOne. IS-95 is also known as TIA-EIA-95.	Slow ↑ ↓ Fast
2.5G	Packet-switched	GPRS (General Packet Radio Services), High-Speed Circuit-Switched Data (HSCSD), etc.	CDMA2000 is a hybrid 2.5G / 3G protocol of mobile telecommunications standards that use CDMA, a multiple access scheme for digital radio. CDMA2000 1xRTT (1 times Radio Transmission Technology) is the core CDMA2000 wireless air interface standard. It is also known as 1x, 1xRTT, or IS-2000 and considered to be a 2.5G or 2.75G technology.	
2.75G	Packet-switched	Enhanced Data rates for GSM Evolution (EDGE), Enhanced GPRS (EGPRS), etc.		
3G	Packet-switched	UMTS (Universal Mobile Telecommunications System), a third-generation (3G) wireless standard defined in ITU[A] specification, is sometimes marketed as 3GSM. The UMTS uses GSM infrastructures and W-CDMA (Wideband Code Division Multiple Access) as the air interface.	CDMA2000 EV-DO (Evolution-Data Optimized, originally 1x Evolution-Data Only), also referred to as EV-DO, EVDO, or just EV, is an evolution of CDMA2000 1xRTT and enables high-speed wireless connectivity. It is also denoted as IS-856 or High Data Rate (HDR).	
3.5G	Packet-switched	HSDPA (High-Speed Downlink Packet Access) is a mobile telephony protocol, used for UMTS-based 3G networks and allows for higher data transfer speeds.		

A. The International Telecommunication Union (ITU) is an international organization within which governments and the private sector coordinate global telecom networks and services.

After you insert a 3G card in the ZyWALL, the 3G connection becomes WAN 2. Refer to the Chapter 49 on page 693 for the type of 3G cards that you can use in the ZyWALL along with the corresponding supported features.

To change your ZyWALL's 3G WAN settings, click **NETWORK** > **WAN** > **3G (WAN 2)** or **WIRELESS** > **3G (WAN 2)**.




Turn the ZyWALL off before you install or remove the 3G card.



The WAN 1 and WAN 2 IP addresses of a ZyWALL with multiple WAN interfaces must be on different subnets.

Figure 115 NETWORK > WAN > WAN 2 (3G WAN)

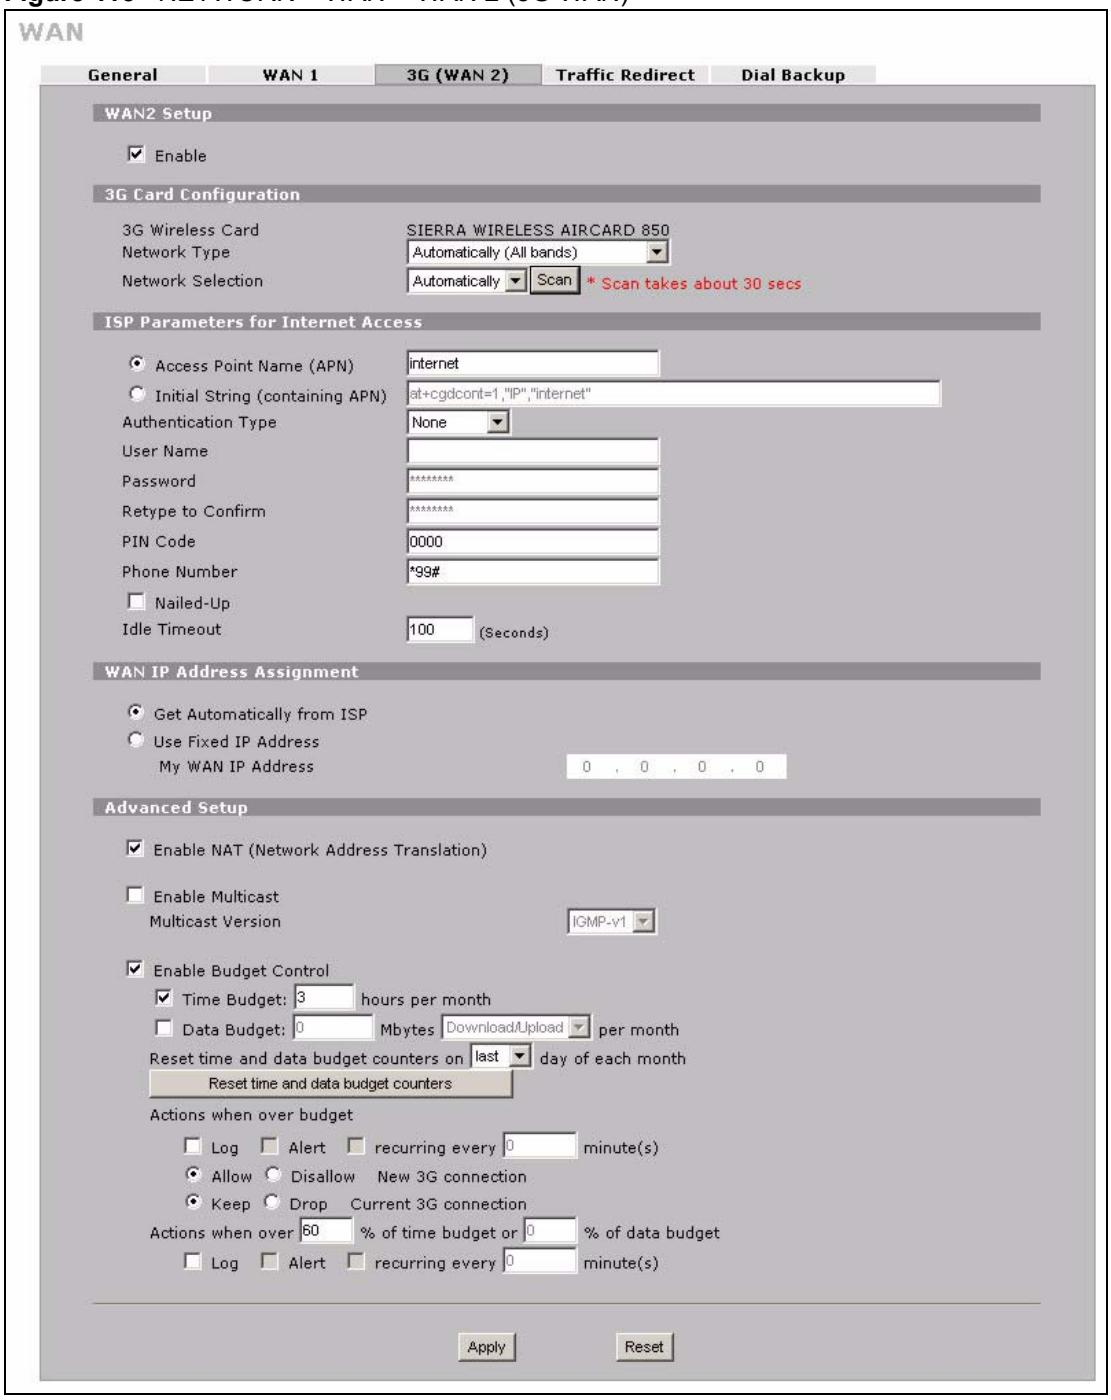

The following table describes the labels in this screen.

Table 42 NETWORK > WAN > WAN 2 (3G WAN)

LABEL	DESCRIPTION
WAN2 Setup	
Enable	Select this option to enable WAN 2.
3G Card Configuration	The fields below display only when you enable WAN 2.

Table 42 NETWORK > WAN > WAN 2 (3G WAN) (continued)

LABEL	DESCRIPTION
3G Wireless Card	This displays the manufacturer and model name of your 3G card if you inserted one in the ZyWALL. Otherwise, it displays **Not Installed**.
Network Type	Select the type of the network (**UMTS/HSDPA only**, **GPRS/EDGE only**, **GSM all** or **WCDMA all**) to which you want the card to connect. See Table 41 on page 188 for more information. Otherwise, select **Automatically** to have the card connect to an available network using the default settings on the 3G card. The types of the network vary depending on the 3G card you inserted. This setting is saved to the flash of your 3G card.
Network Selection	Select a service provider to which you want the card to connect. Otherwise, select **Automatically** to have the ZyWALL use the default settings on the 3G card and connect to your service provider's base station. This shows **Automatically** only by default. Click **Scan** to have the ZyWALL search for and display the available service providers. This field resets to the default setting (**Automatically**) if the ZyWALL restarts.
ISP Parameters for Internet Access	
Access Point Name (APN)	Select this option and enter the APN (Access Point Name) if your ISP gives you the APN only. Connections with different APNs may provide different services (such as Internet access or MMS (Multi-Media Messaging Service)) and charge methods. You can enter up to 31 ASCII printable characters. Spaces are allowed. This field is available only when you insert a GSM 3G card.
Initial String (containing APN)	Select this option and enter the initial string and APN if you know how to configure or your ISP provides a string, which would include the APN, to initialize the 3G card. You can enter up to 72 ASCII printable characters. Spaces are allowed. This field is available only when you insert a GSM 3G card.
Authentication Type	The ZyWALL supports PAP (Password Authentication Protocol) and CHAP (Challenge Handshake Authentication Protocol). CHAP is more secure than PAP; however, PAP is readily available on more platforms. Use the drop-down list box to select an authentication protocol for outgoing calls. Options are: **CHAP/PAP** - Your ZyWALL accepts either CHAP or PAP when requested by the ISP. **CHAP** - Your ZyWALL accepts CHAP only. **PAP** - Your ZyWALL accepts PAP only. **None** - Your ZyWALL does not send your user name and password for authentication. The user name and password fields are grayed out. Select this option if your ISP did not give you a user name and password.
User Name	Type the user name (of up to 31 ASCII printable characters) given to you by your service provider.
Password	Type the password (of up to 31 ASCII printable characters) associated with the user name above.
Retype to Confirm	Type your password again to make sure that you have entered is correctly.
PIN Code	A PIN (Personal Identification Number) code is a key to a 3G card. Without the PIN code, you cannot use the 3G card. Enter the PIN code (four to eight digits, 0000 for example) provided by your ISP. If you enter the PIN code incorrectly, the 3G card may be blocked by your ISP and you cannot use the account to access the Internet. If your ISP disabled PIN code authentication, enter an arbitrary number. This field is available only when you insert a GSM 3G card.

Table 42 NETWORK > WAN > WAN 2 (3G WAN) (continued)

LABEL	DESCRIPTION
Phone Number	Enter the phone number (dial string) used to dial up a connection to your service provider's base station. Your ISP should provide the dial string. By default, *99# is the dial string for GSM-based networks and #777 is the dial string for CDMA-based networks.
Nailed-Up	Select **Nailed-Up** if you do not want the connection to time out.
Idle Timeout	This specifies the time (from 0 to 9999) in seconds that elapses before the ZyWALL automatically disconnects from the ISP.
WAN IP Address Assignment	
Get automatically from ISP	Select this option if your ISP did not assign you a fixed IP address. This is the default selection.
Use Fixed IP Address	Select this option if the ISP assigned a fixed IP address.
My WAN IP Address	Enter your WAN IP address in this field if you selected **Use Fixed IP Address**.
Advanced Setup	
Enable NAT (Network Address Translation)	Network Address Translation (NAT) allows the translation of an Internet protocol address used within one network (for example a private IP address used in a local network) to a different IP address known within another network (for example a public IP address used on the Internet). Select this checkbox to enable NAT. For more information about NAT see Chapter 17 on page 385.
Enable Multicast	Select this check box to turn on IGMP (Internet Group Multicast Protocol). IGMP is a network-layer protocol used to establish membership in a Multicast group - it is not used to carry user data.
Multicast Version	Choose **None** (default), **IGMP-V1** or **IGMP-V2**. IGMP (Internet Group Multicast Protocol) is a session-layer protocol used to establish membership in a Multicast group – it is not used to carry user data. IGMP version 2 (RFC 2236) is an improvement over version 1 (RFC 1112) but IGMP version 1 is still in wide use. If you would like to read more detailed information about interoperability between IGMP version 2 and version 1, please see sections 4 and 5 of RFC 2236.
Enable Budget Control	Select this check box to set a monthly limit for the user account of the installed 3G card. You must insert a 3G card before you enable budget control on the ZyWALL. You can set a limit on the total traffic and/or call time. The ZyWALL takes the actions you specified when a limit is exceeded during the month.
Time Budget	Select this check box and specify the amount of time (in hours) that the 3G connection can be used within one month. If you change the value after you configure and enable budget control, the ZyWALL resets the statistics.
Data Budget	Select this check box and specify how much downstream and/or upstream data (in Mbytes) can be transmitted via the 3G connection within one month. Select **Download** to set a limit on the downstream traffic (from the ISP to the ZyWALL). Select **Upload** to set a limit on the upstream traffic (from the ZyWALL to the ISP). Select **Download/Upload** to set a limit on the total traffic in both directions. If you change the value after you configure and enable budget control, the ZyWALL resets the statistics.
Reset time and data budget counters on	Select the date on which the ZyWALL resets the budget every month. If the date you selected is not available in a month, such as 30th or 31th, the ZyWALL resets the budget on the last day of the month.


Table 42 NETWORK > WAN > WAN 2 (3G WAN) (continued)

LABEL	DESCRIPTION
Reset time and data budget counters	This button is available only when you enable budget control in this screen. Click this button to reset the time and data budgets immediately. The count starts over with the 3G connection's full configured monthly time and data budgets. This does not affect the normal monthly budget restart.
Actions when over budget	Specify the actions the ZyWALL takes when the time or data limit is exceeded. Select **Log** to create a log. Select **Alert** to create an alert. This option is available only when you select **Log**. If you select **Log**, you can also select **recurring every** to have the ZyWALL send a log (and alert if selected) for this event periodically. Specify how often (from 1 to 65535 minutes) to send the log (and alert if selected). Select **Allow** to permit new 3G connections or **Disallow** to drop/block new 3G connections. Select **Keep** to maintain the existing 3G connection or **Drop** to disconnect it. You cannot select **Allow** and **Drop** at the same time. If you select **Disallow** and **Keep**, the ZyWALL allows you to transmit data using the current connection, but you cannot build a new connection if the existing connection is disconnected.
Actions when over % of time budget or % of data budget	Specify the actions the ZyWALL takes when the specified percentage of time budget or data limit is exceeded. Enter a number from 1 to 99 in the percentage fields. If you change the value after you configure and enable budget control, the ZyWALL resets the statistics. Select **Log** to create a log. Select **Alert** to create an alert. This option is available only when you select **Log**. If you select **Log**, you can also select **recurring every** to have the ZyWALL send a log (and alert if selected) for this event periodically. Specify how often (from 1 to 65535 minutes) to send the log (and alert if selected).
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

8.14 Traffic Redirect


Traffic redirect forwards WAN traffic to a backup gateway when the ZyWALL cannot connect to the Internet through its normal gateway. Connect the backup gateway on the WAN so that the ZyWALL still provides firewall protection for the LAN.

Figure 116 Traffic Redirect WAN Setup

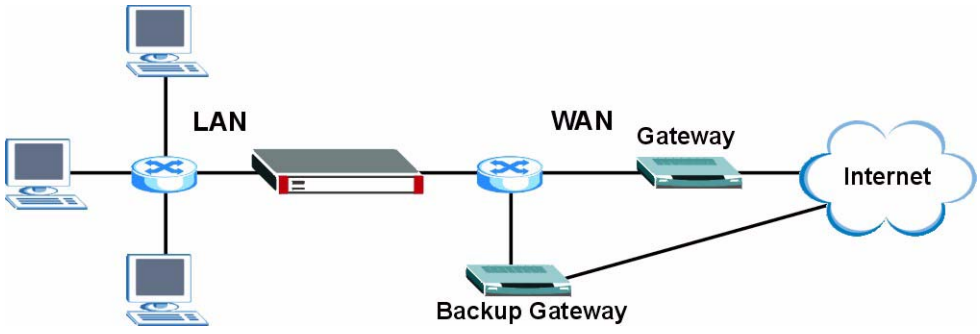

IP alias allows you to avoid triangle route security issues when the backup gateway is connected to the LAN or DMZ. Use IP alias to configure the LAN into two or three logical networks with the ZyWALL itself as the gateway for each LAN network. Put the protected LAN in one subnet (Subnet 1 in the following figure) and the backup gateway in another subnet (Subnet 2). Configure a LAN to LAN/ZyWALL firewall rule that forwards packets from the protected LAN (Subnet 1) to the backup gateway (Subnet 2).


Figure 117 Traffic Redirect LAN Setup

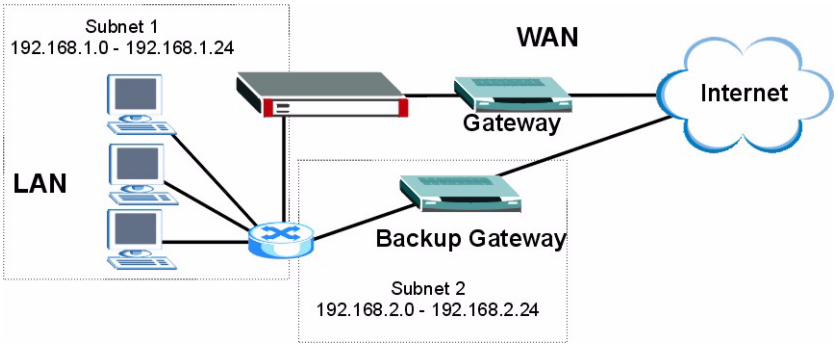

8.15 Configuring Traffic Redirect

To change your ZyWALL's traffic redirect settings, click **NETWORK** > **WAN** > **Traffic Redirect**. The screen appears as shown.

Figure 118 NETWORK > WAN > Traffic Redirect

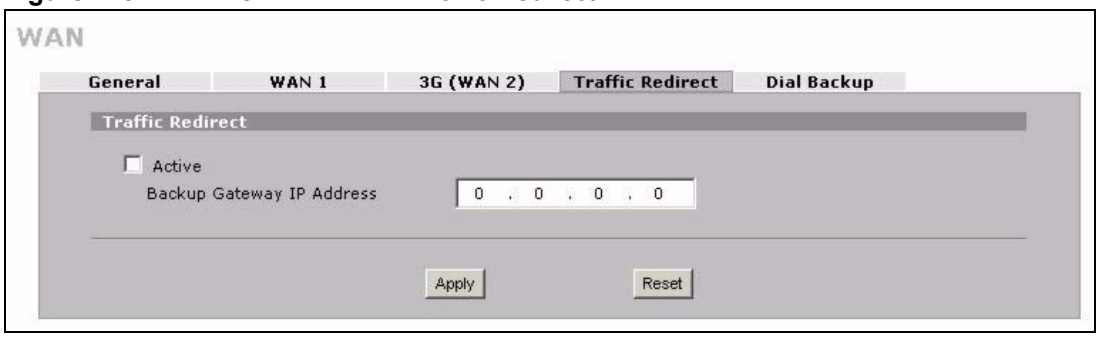

The following table describes the labels in this screen.


Table 43 NETWORK > WAN > Traffic Redirect

LABEL	DESCRIPTION
Active	Select this check box to have the ZyWALL use traffic redirect if the normal WAN connection goes down.
Backup Gateway IP Address	Type the IP address of your backup gateway in dotted decimal notation. The ZyWALL automatically forwards traffic to this IP address if the ZyWALL's Internet connection terminates.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

8.16 Configuring Dial Backup

Click **NETWORK** > **WAN** > **Dial Backup** to display the **Dial Backup** screen. Use this screen to configure the backup WAN dial-up connection.

Figure 119 NETWORK > WAN > Dial Backup

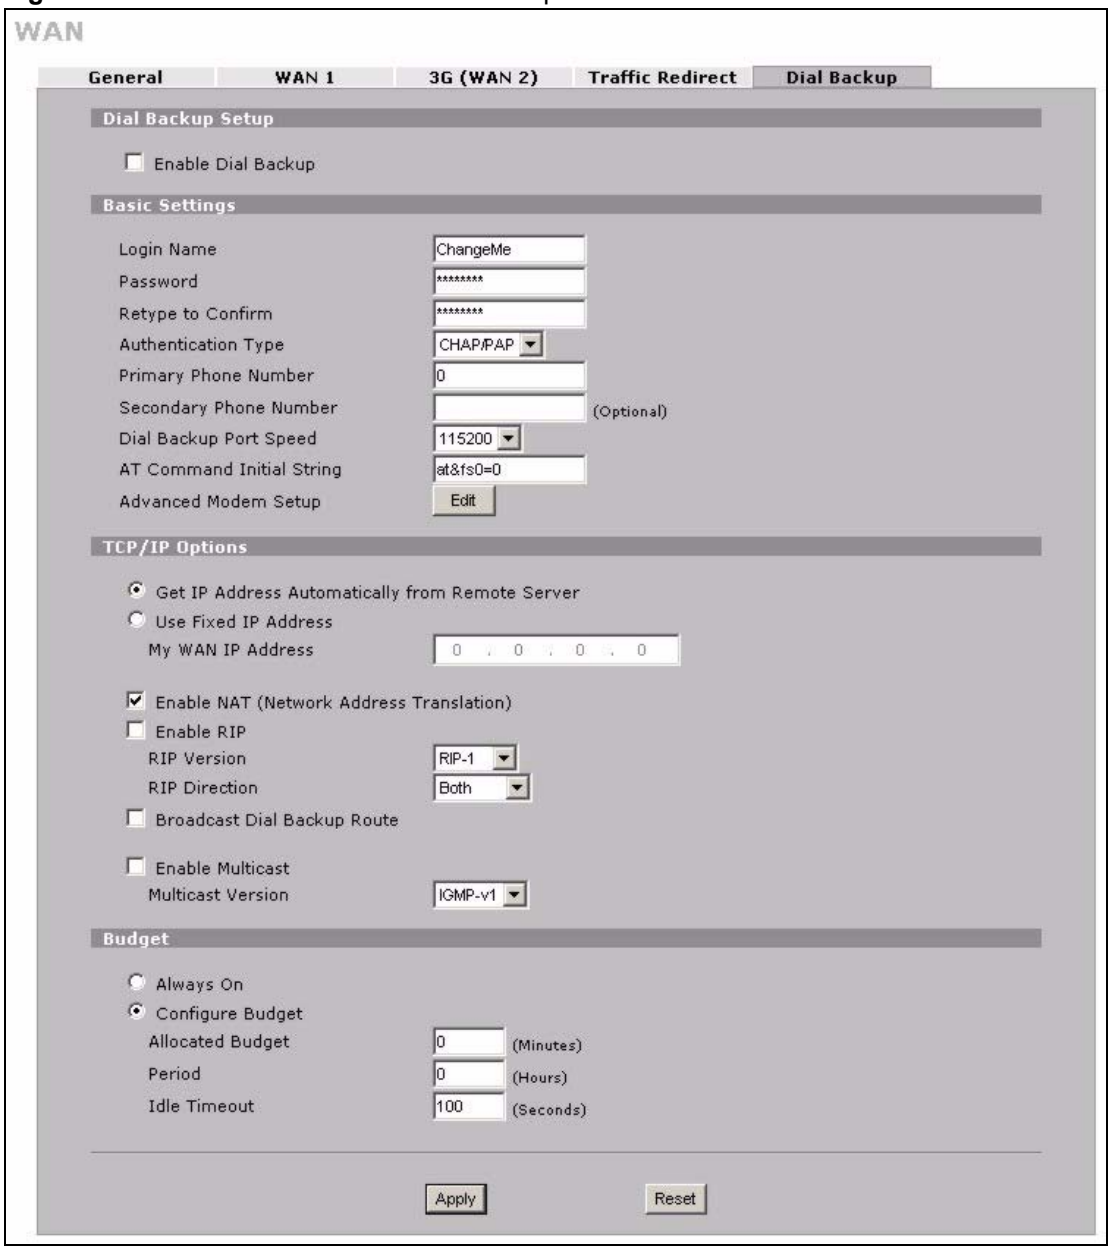

The following table describes the labels in this screen.

Table 44 NETWORK > WAN > Dial Backup

LABEL	DESCRIPTION
Dial Backup Setup	
Enable Dial Backup	Select this check box to turn on dial backup.
Basic Settings	

Table 44 NETWORK > WAN > Dial Backup (continued)

LABEL	DESCRIPTION
Login Name	Type the login name assigned by your ISP.
Password	Type the password assigned by your ISP.
Retype to Confirm	Type your password again to make sure that you have entered is correctly.
Authentication Type	Use the drop-down list box to select an authentication protocol for outgoing calls. Options are: **CHAP/PAP** - Your ZyWALL accepts either CHAP or PAP when requested by this remote node. **CHAP** - Your ZyWALL accepts CHAP only. **PAP** - Your ZyWALL accepts PAP only.
Primary/ Secondary Phone Number	Type the first (primary) phone number from the ISP for this remote node. If the Primary Phone number is busy or does not answer, your ZyWALL dials the Secondary Phone number if available. Some areas require dialing the pound sign # before the phone number for local calls. Include a # symbol at the beginning of the phone numbers as required.
Dial Backup Port Speed	Use the drop-down list box to select the speed of the connection between the Dial Backup port and the external device. Available speeds are: **9600**, **19200**, **38400**, **57600**, **115200** or **230400** bps.
AT Command Initial String	Type the AT command string to initialize the WAN device. Consult the manual of your WAN device connected to your Dial Backup port for specific AT commands.
Advanced Modem Setup	Click **Edit** to display the **Advanced Setup** screen and edit the details of your dial backup setup.
TCP/IP Options	
Get IP Address Automatically from Remote Server	Type the login name assigned by your ISP for this remote node.
Used Fixed IP Address	Select this check box if your ISP assigned you a fixed IP address, then enter the IP address in the following field.
My WAN IP Address	Leave the field set to 0.0.0.0 (default) to have the ISP or other remote router dynamically (automatically) assign your WAN IP address if you do not know it. Type your WAN IP address here if you know it (static). This is the address assigned to your local ZyWALL, not the remote router.
Enable NAT (Network Address Translation)	Network Address Translation (NAT) allows the translation of an Internet protocol address used within one network to a different IP address known within another network. Select the check box to enable NAT. Clear the check box to disable NAT so the ZyWALL does not perform any NAT mapping for the dial backup connection.
Enable RIP	Select this check box to turn on RIP (Routing Information Protocol), which allows a router to exchange routing information with other routers.
RIP Version	The **RIP Version** field controls the format and the broadcasting method of the RIP packets that the ZyWALL sends (it recognizes both formats when receiving). Choose **RIP-1**, **RIP-2B** or **RIP-2M**. **RIP-1** is universally supported; but **RIP-2** carries more information. RIP-1 is probably adequate for most networks, unless you have an unusual network topology. Both **RIP-2B** and **RIP-2M** sends the routing data in RIP-2 format; the difference being that RIP-2B uses subnet broadcasting while RIP-2M uses multicasting. Multicasting can reduce the load on non-router machines since they generally do not listen to the RIP multicast address and so will not receive the RIP packets. However, if one router uses multicasting, then all routers on your network must use multicasting, also.

Table 44 NETWORK > WAN > Dial Backup (continued)

LABEL	DESCRIPTION
RIP Direction	RIP (Routing Information Protocol) allows a router to exchange routing information with other routers. The **RIP Direction** field controls the sending and receiving of RIP packets. Choose **Both**, **In Only** or **Out Only**. When set to **Both** or **Out Only**, the ZyWALL will broadcast its routing table periodically. When set to **Both** or **In Only**, the ZyWALL will incorporate RIP information that it receives.
Broadcast Dial Backup Route	Select this check box to forward the backup route broadcasts to the WAN.
Enable Multicast	Select this check box to turn on IGMP (Internet Group Multicast Protocol). IGMP is a network-layer protocol used to establish membership in a Multicast group - it is not used to carry user data.
Multicast Version	Select **IGMP-v1** or **IGMP-v2**. IGMP version 2 (RFC 2236) is an improvement over version 1 (RFC 1112) but IGMP version 1 is still in wide use. If you would like to read more detailed information about interoperability between IGMP version 2 and version 1, please see *sections 4* and *5* of *RFC 2236*.
Budget	
Always On	Select this check box to have the dial backup connection on all of the time.
Configure Budget	Select this check box to have the dial backup connection on during the time that you select.
Allocated Budget	Type the amount of time (in minutes) that the dial backup connection can be used during the time configured in the **Period** field. Set an amount that is less than the time period configured in the **Period** field.
Period	Type the time period (in hours) for how often the budget should be reset. For example, to allow calls to this remote node for a maximum of 10 minutes every hour, set the **Allocated Budget** to 10 (minutes) and the **Period** to 1 (hour).
Idle Timeout	Type the number of seconds of idle time (when there is no traffic from the ZyWALL to the remote node) for the ZyWALL to wait before it automatically disconnects the dial backup connection. This option applies only when the ZyWALL initiates the call. The dial backup connection never times out if you set this field to "0" (it is the same as selecting **Always On**).
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

8.17 Advanced Modem Setup

8.17.1 AT Command Strings

For regular telephone lines, the default Dial string tells the modem that the line uses tone dialing. `ATDT` is the command for a switch that requires tone dialing. If your switch requires pulse dialing, change the string to `ATDP`.

For ISDN lines, there are many more protocols and operational modes. Please consult the documentation of your TA. You may need additional commands in both Dial and Init strings.

8.17.2 DTR Signal

The majority of WAN devices default to hanging up the current call when the DTR (Data Terminal Ready) signal is dropped by the DTE. When the Drop DTR When Hang Up check box is selected, the ZyWALL uses this hardware signal to force the WAN device to hang up, in addition to issuing the drop command `ATH`.

8.17.3 Response Strings


The response strings tell the ZyWALL the tags, or labels, immediately preceding the various call parameters sent from the WAN device. The response strings have not been standardized; please consult the documentation of your WAN device to find the correct tags.

8.18 Configuring Advanced Modem Setup

Click the **Edit** button in the **Dial Backup** screen to display the **Advanced Setup** screen.

Consult the manual of your WAN device connected to your dial backup port for specific AT commands.

Figure 120 NETWORK > WAN > Dial Backup > Edit

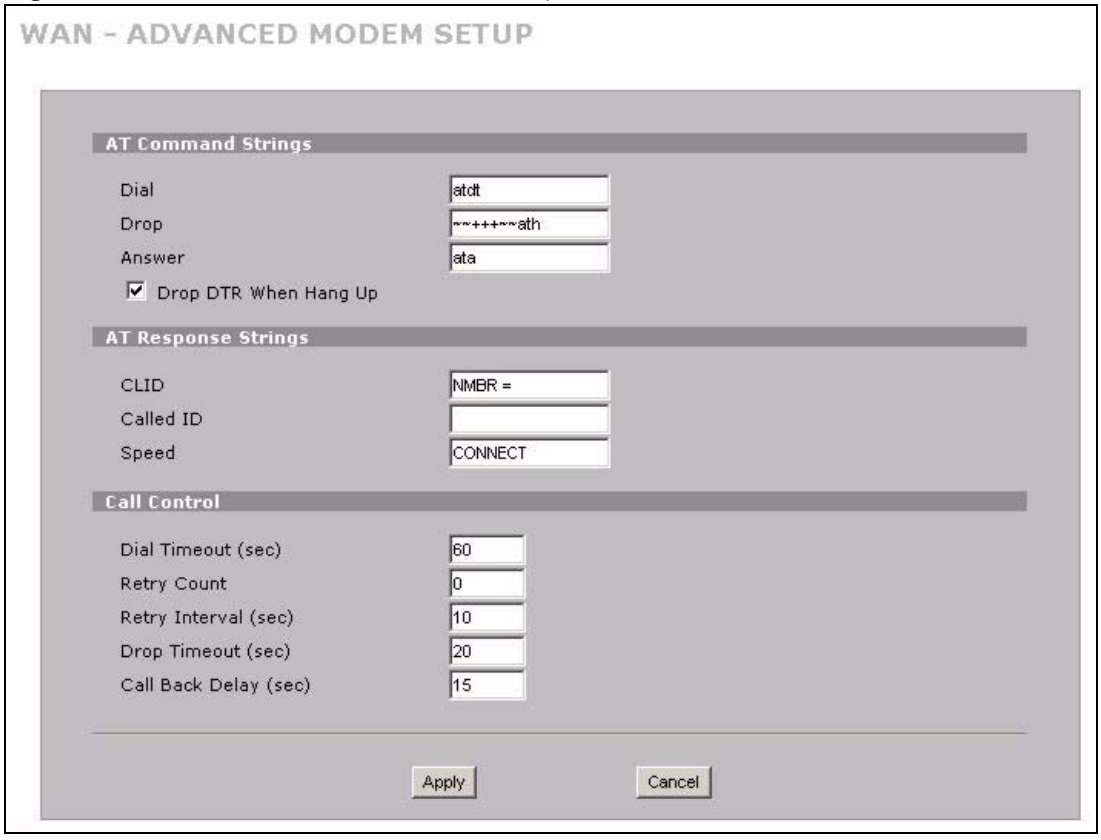

The following table describes the labels in this screen.

Table 45 NETWORK > WAN > Dial Backup > Edit

LABEL	DESCRIPTION
AT Command Strings	
Dial	Type the AT Command string to make a call.
Drop	Type the AT Command string to drop a call. "~" represents a one second wait, for example, "~~~+++~~ath" can be used if your modem has a slow response time.
Answer	Type the AT Command string to answer a call.
Drop DTR When Hang Up	Select this check box to have the ZyWALL drop the DTR (Data Terminal Ready) signal after the "AT Command String: Drop" is sent out.
AT Response Strings	
CLID	Type the keyword that precedes the CLID (Calling Line Identification) in the AT response string. This lets the ZyWALL capture the CLID in the AT response string that comes from the WAN device. CLID is required for CLID authentication.
Called ID	Type the keyword preceding the dialed number.
Speed	Type the keyword preceding the connection speed.
Call Control	
Dial Timeout (sec)	Type a number of seconds for the ZyWALL to try to set up an outgoing call before timing out (stopping).
Retry Count	Type a number of times for the ZyWALL to retry a busy or no-answer phone number before blacklisting the number.
Retry Interval (sec)	Type a number of seconds for the ZyWALL to wait before trying another call after a call has failed. This applies before a phone number is blacklisted.
Drop Timeout (sec)	Type the number of seconds for the ZyWALL to wait before dropping the DTR signal if it does not receive a positive disconnect confirmation.
Call Back Delay (sec)	Type a number of seconds for the ZyWALL to wait between dropping a callback request call and dialing the corresponding callback call.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Cancel	Click **Cancel** to exit this screen without saving.

9

DMZ Screens

This chapter describes how to configure the ZyWALL's DMZ.

9.1 DMZ

The DeMilitarized Zone (DMZ) provides a way for public servers (Web, e-mail, FTP, etc.) to be visible to the outside world (while still being protected from DoS (Denial of Service) attacks such as SYN flooding and Ping of Death). These public servers can also still be accessed from the secure LAN.

By default the firewall allows traffic between the WAN and the DMZ, traffic from the DMZ to the LAN is denied, and traffic from the LAN to the DMZ is allowed. Internet users can have access to host servers on the DMZ but no access to the LAN, unless special filter rules allowing access were configured by the administrator or the user is an authorized remote user.

It is highly recommended that you connect all of your public servers to the DMZ port(s).

It is also highly recommended that you keep all sensitive information off of the public servers connected to the DMZ port. Store sensitive information on LAN computers.

9.2 Configuring DMZ

The DMZ and the connected computers can have private or public IP addresses.


When the DMZ uses public IP addresses, the WAN and DMZ ports must use public IP addresses that are on separate subnets. See Appendix C on page 729 for information on IP subnetting. If you do not configure SUA NAT or any full feature NAT mapping rules for the public IP addresses on the DMZ, the ZyWALL will route traffic to the public IP addresses on the DMZ without performing NAT. This may be useful for hosting servers for NAT unfriendly applications (see Chapter 17 on page 385 for more information).

If the DMZ computers use private IP addresses, use NAT if you want to make them publicly accessible.

Like the LAN, the ZyWALL can also assign TCP/IP configuration via DHCP to computers connected to the DMZ ports.

From the main menu, click **NETWORK** > **DMZ** to open the **DMZ** screen. The screen appears as shown next.

Figure 121 NETWORK > DMZ

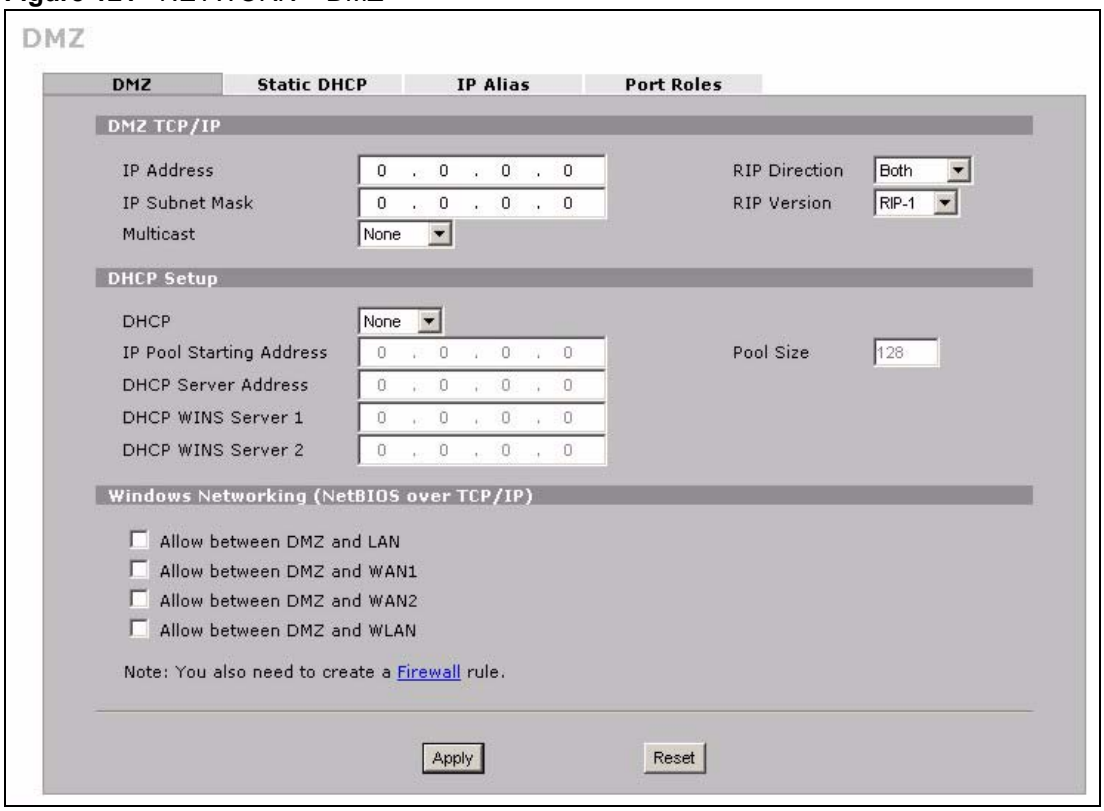

The following table describes the labels in this screen.

Table 46 NETWORK > DMZ

LABEL	DESCRIPTION
DMZ TCP/IP	
IP Address	Type the IP address of your ZyWALL's DMZ port in dotted decimal notation. Note: Make sure the IP addresses of the LAN, WAN, WLAN and DMZ are on separate subnets.
IP Subnet Mask	The subnet mask specifies the network number portion of an IP address. Your ZyWALL will automatically calculate the subnet mask based on the IP address that you assign. Unless you are implementing subnetting, use the subnet mask computed by the ZyWALL 255.255.255.0.
RIP Direction	RIP (Routing Information Protocol, RFC1058 and RFC 1389) allows a router to exchange routing information with other routers. The **RIP Direction** field controls the sending and receiving of RIP packets. Select the RIP direction from **Both**/**In Only**/**Out Only**/**None**. When set to **Both** or **Out Only**, the ZyWALL will broadcast its routing table periodically. When set to **Both** or **In Only**, it will incorporate the RIP information that it receives; when set to **None**, it will not send any RIP packets and will ignore any RIP packets received. **Both** is the default.

Table 46 NETWORK > DMZ (continued)

LABEL	DESCRIPTION
RIP Version	The **RIP Version** field controls the format and the broadcasting method of the RIP packets that the ZyWALL sends (it recognizes both formats when receiving). **RIP-1** is universally supported but RIP-2 carries more information. RIP-1 is probably adequate for most networks, unless you have an unusual network topology. Both **RIP-2B** and **RIP-2M** sends the routing data in RIP-2 format; the difference being that **RIP-2B** uses subnet broadcasting while **RIP-2M** uses multicasting. Multicasting can reduce the load on non-router machines since they generally do not listen to the RIP multicast address and so will not receive the RIP packets. However, if one router uses multicasting, then all routers on your network must use multicasting, also. By default, RIP direction is set to **Both** and the Version set to **RIP-1**.
Multicast	Select **IGMP V-1** or **IGMP V-2** or **None**. IGMP (Internet Group Multicast Protocol) is a network-layer protocol used to establish membership in a Multicast group - it is not used to carry user data. IGMP version 2 (RFC 2236) is an improvement over version 1 (RFC 1112) but IGMP version 1 is still in wide use. If you would like to read more detailed information about interoperability between IGMP version 2 and version 1, please see *sections 4 and 5 of RFC 2236*.
DHCP Setup	
DHCP	DHCP (Dynamic Host Configuration Protocol, RFC 2131 and RFC 2132) allows individual clients (workstations) to obtain TCP/IP configuration at startup from a server. Unless you are instructed by your ISP, leave this field set to **Server**. When configured as a server, the ZyWALL provides TCP/IP configuration for the clients. When set as a server, fill in the **IP Pool Starting Address** and **Pool Size** fields. Select **Relay** to have the ZyWALL forward DHCP requests to another DHCP server. When set to **Relay**, fill in the **DHCP Server Address** field. Select **None** to stop the ZyWALL from acting as a DHCP server. When you select **None**, you must have another DHCP server on your LAN, or else the computers must be manually configured.
IP Pool Starting Address	This field specifies the first of the contiguous addresses in the IP address pool.
Pool Size	This field specifies the size, or count of the IP address pool.
DHCP Server Address	Type the IP address of the DHCP server to which you want the ZyWALL to relay DHCP requests. Use dotted decimal notation. Alternatively, click the right mouse button to copy and/or paste the IP address.
DHCP WINS Server 1, 2	Type the IP address of the WINS (Windows Internet Naming Service) server that you want to send to the DHCP clients. The WINS server keeps a mapping table of the computer names on your network and the IP addresses that they are currently using.
Windows Networking (NetBIOS over TCP/IP)	
Allow between DMZ and LAN	Select this check box to forward NetBIOS packets from the LAN to the DMZ and from the DMZ to the LAN. If your firewall is enabled with the default policy set to block DMZ to LAN traffic, you also need to configure a DMZ to LAN firewall rule that forwards NetBIOS traffic. Clear this check box to block all NetBIOS packets going from the LAN to the DMZ and from the DMZ to the LAN.
Allow between DMZ and WAN 1	Select this check box to forward NetBIOS packets from the DMZ to WAN 1 and from WAN 1 to the DMZ. Clear this check box to block all NetBIOS packets going from the DMZ to WAN 1 and from WAN 1 to the DMZ.

Table 46 NETWORK > DMZ (continued)

LABEL	DESCRIPTION
Allow between DMZ and WAN 2	Select this check box to forward NetBIOS packets from the DMZ to WAN 2 and from WAN 2 to the DMZ. Clear this check box to block all NetBIOS packets going from the DMZ to WAN 2 and from WAN 2 to the DMZ.
Allow between DMZ and WLAN	Select this check box to forward NetBIOS packets from the WLAN to the DMZ and from the DMZ to the WLAN. If your firewall is enabled with the default policy set to block DMZ to WLAN traffic and WLAN to DMZ traffic, you also need to configure DMZ to WLAN and WLAN to DMZ firewall rules that forward NetBIOS traffic. Clear this check box to block all NetBIOS packets going from the WLAN to the DMZ and from the DMZ to the WLAN.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.


9.3 DMZ Static DHCP

This table allows you to assign IP addresses on the DMZ to specific individual computers based on their MAC Addresses.

Every Ethernet device has a unique MAC (Media Access Control) address. The MAC address is assigned at the factory and consists of six pairs of hexadecimal characters, for example, 00:A0:C5:00:00:02.

To change your ZyWALL's static DHCP settings on the DMZ, click **NETWORK** > **DMZ** > **Static DHCP**. The screen appears as shown.

Figure 122 NETWORK > DMZ > Static DHCP

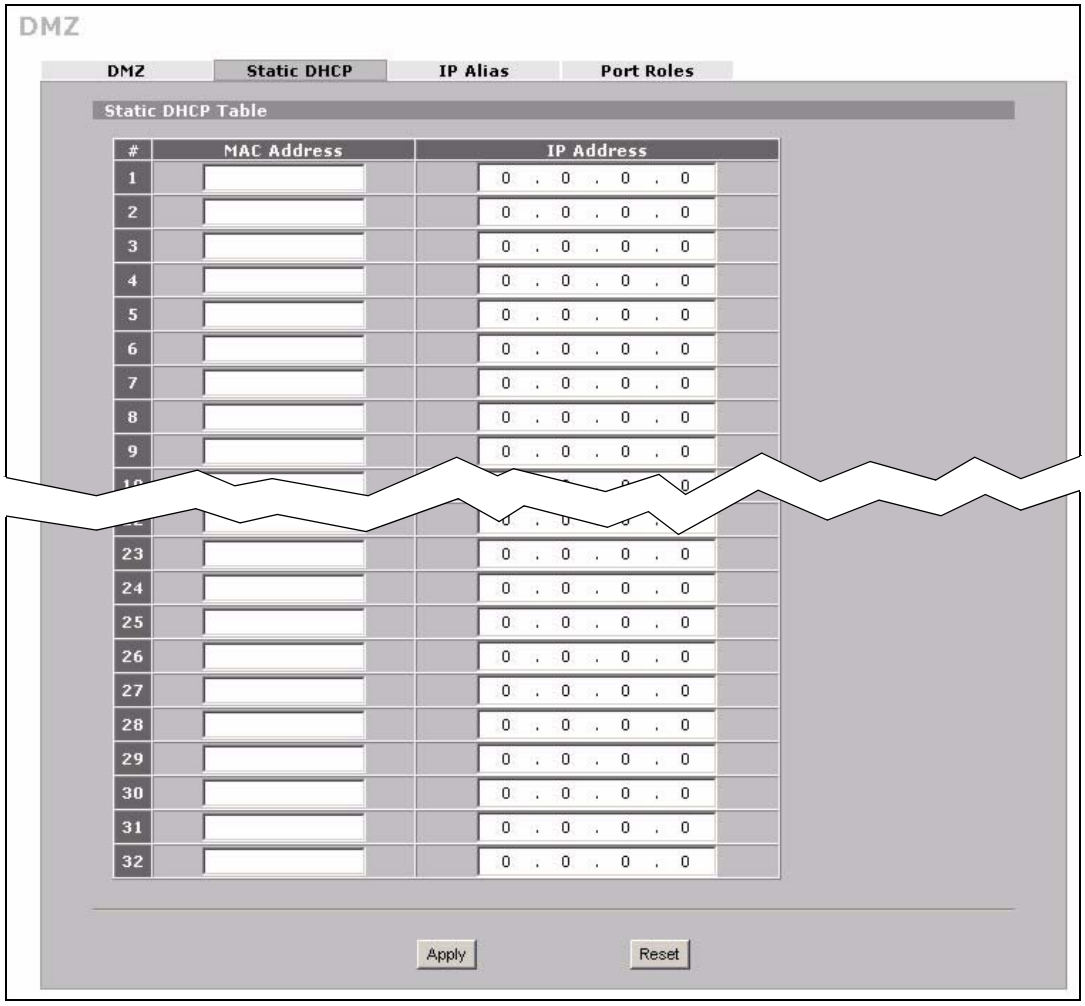

The following table describes the labels in this screen.

Table 47 NETWORK > DMZ > Static DHCP

LABEL	DESCRIPTION
#	This is the index number of the Static IP table entry (row).
MAC Address	Type the MAC address of a computer on your DMZ.
IP Address	Type the IP address that you want to assign to the computer on your DMZ. Alternatively, click the right mouse button to copy and/or paste the IP address.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

9.4 DMZ IP Alias

IP alias allows you to partition a physical network into different logical networks over the same Ethernet interface.

The ZyWALL has a single DMZ interface. Even though more than one of ports 1~4 may be in the DMZ port role, they are all still part of a single physical Ethernet interface and all use the same IP address.


The ZyWALL supports three logical DMZ interfaces via its single physical DMZ Ethernet interface. The ZyWALL itself is the gateway for each of the logical DMZ networks.

The IP alias IP addresses can be either private or public regardless of whether the physical DMZ interface is set to use a private or public IP address. Use NAT if you want to make DMZ computers with private IP addresses publicly accessible (see Chapter 17 on page 385 for more information). When you use IP alias, you can have the DMZ use both public and private IP addresses at the same time.

Make sure that the subnets of the logical networks do not overlap.

To change your ZyWALL's IP alias settings, click **NETWORK** > **DMZ** > **IP Alias**. The screen appears as shown.

Figure 123 NETWORK > DMZ > IP Alias

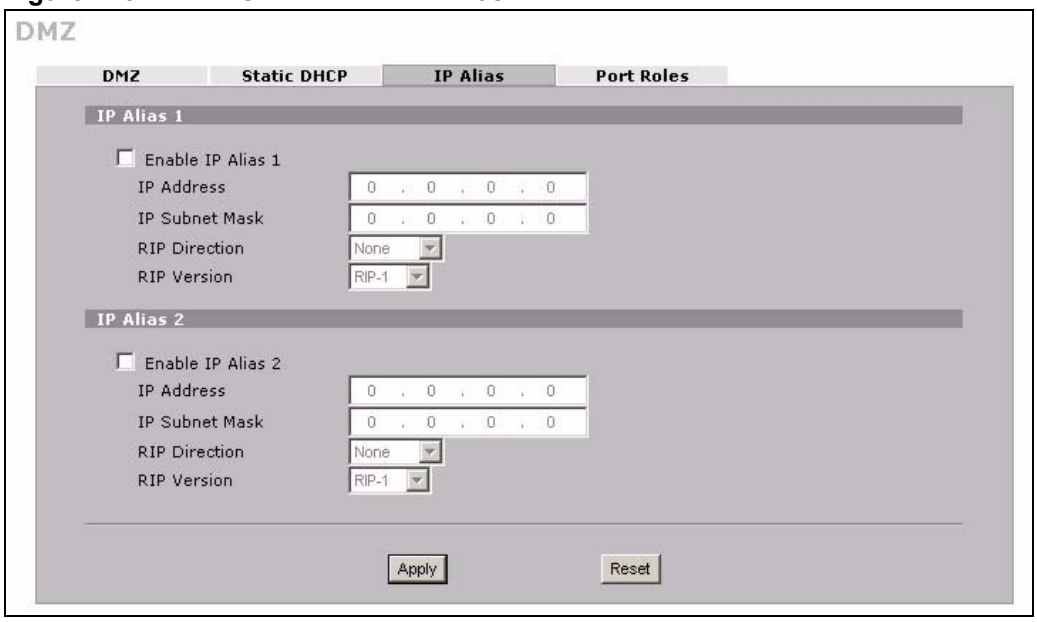

The following table describes the labels in this screen.

Table 48 NETWORK > DMZ > IP Alias

LABEL	DESCRIPTION
Enable IP Alias 1, 2	Select the check box to configure another DMZ network for the ZyWALL.
IP Address	Enter the IP address of your ZyWALL in dotted decimal notation. Note: Make sure the IP addresses of the LAN, WAN, WLAN and DMZ are on separate subnets.


Table 48 NETWORK > DMZ > IP Alias (continued)

LABEL	DESCRIPTION
IP Subnet Mask	Your ZyWALL will automatically calculate the subnet mask based on the IP address that you assign. Unless you are implementing subnetting, use the subnet mask computed by the ZyWALL.
RIP Direction	RIP (Routing Information Protocol, RFC1058 and RFC 1389) allows a router to exchange routing information with other routers. The **RIP Direction** field controls the sending and receiving of RIP packets. Select the RIP direction from **Both**/**In Only**/**Out Only**/**None**. When set to **Both** or **Out Only**, the ZyWALL will broadcast its routing table periodically. When set to **Both** or **In Only**, it will incorporate the RIP information that it receives; when set to **None**, it will not send any RIP packets and will ignore any RIP packets received.
RIP Version	The **RIP Version** field controls the format and the broadcasting method of the RIP packets that the ZyWALL sends (it recognizes both formats when receiving). **RIP-1** is universally supported but RIP-2 carries more information. RIP-1 is probably adequate for most networks, unless you have an unusual network topology. Both **RIP-2B** and **RIP-2M** sends the routing data in RIP-2 format; the difference being that **RIP-2B** uses subnet broadcasting while **RIP-2M** uses multicasting. Multicasting can reduce the load on non-router machines since they generally do not listen to the RIP multicast address and so will not receive the RIP packets. However, if one router uses multicasting, then all routers on your network must use multicasting, also. By default, RIP direction is set to **Both** and the Version set to **RIP-1**.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

9.5 DMZ Public IP Address Example

The following figure shows a simple network setup with public IP addresses on the WAN and DMZ and private IP addresses on the LAN. Lower case letters represent public IP addresses (like a.b.c.d for example). The LAN port and connected computers (A through C) use private IP addresses that are in one subnet. The DMZ port and connected servers (D through F) use public IP addresses that are in another subnet. The public IP addresses of the DMZ and WAN ports are in separate subnets.

Figure 124 DMZ Public Address Example

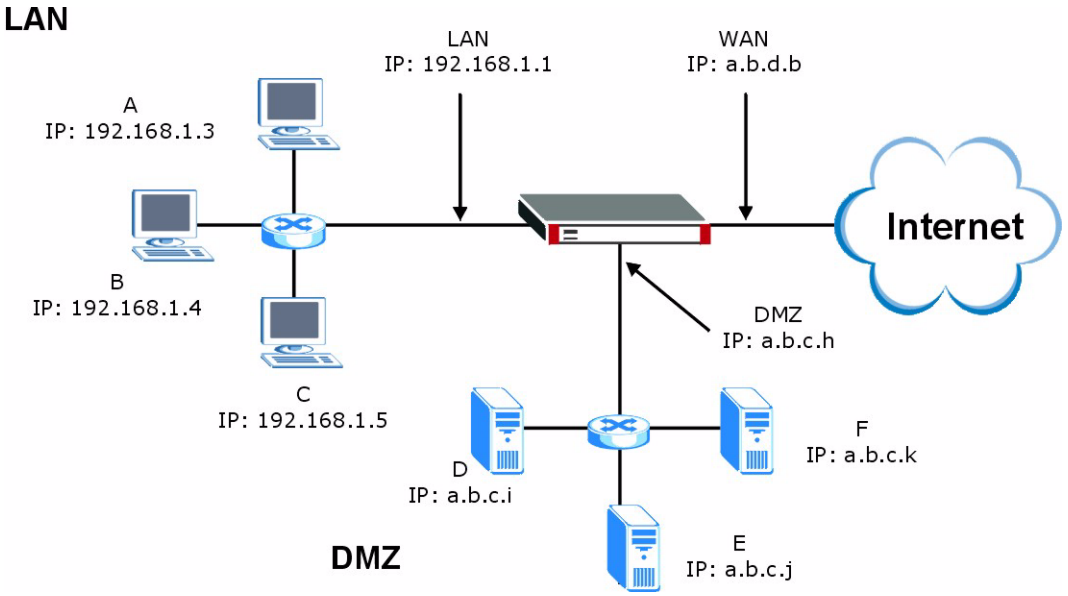


9.6 DMZ Private and Public IP Address Example

The following figure shows a network setup with both private and public IP addresses on the DMZ. Lower case letters represent public IP addresses (like a.b.c.d for example). The LAN port and connected computers (A through C) use private IP addresses that are in one subnet. The DMZ port and server F use private IP addresses that are in one subnet. The private IP addresses of the LAN and DMZ are on separate subnets. The DMZ port and connected servers (D and E) use public IP addresses that are in one subnet. The public IP addresses of the DMZ and WAN are on separate subnets.

Configure one subnet (either the public or the private) in the **Network > DMZ** screen (see Figure 9.2 on page 201) and configure the other subnet in the **Network > DMZ > IP Alias** screen (see Figure 9.4 on page 205) to use this kind of network setup. You also need to configure NAT for the private DMZ IP addresses.

Figure 125 DMZ Private and Public Address Example

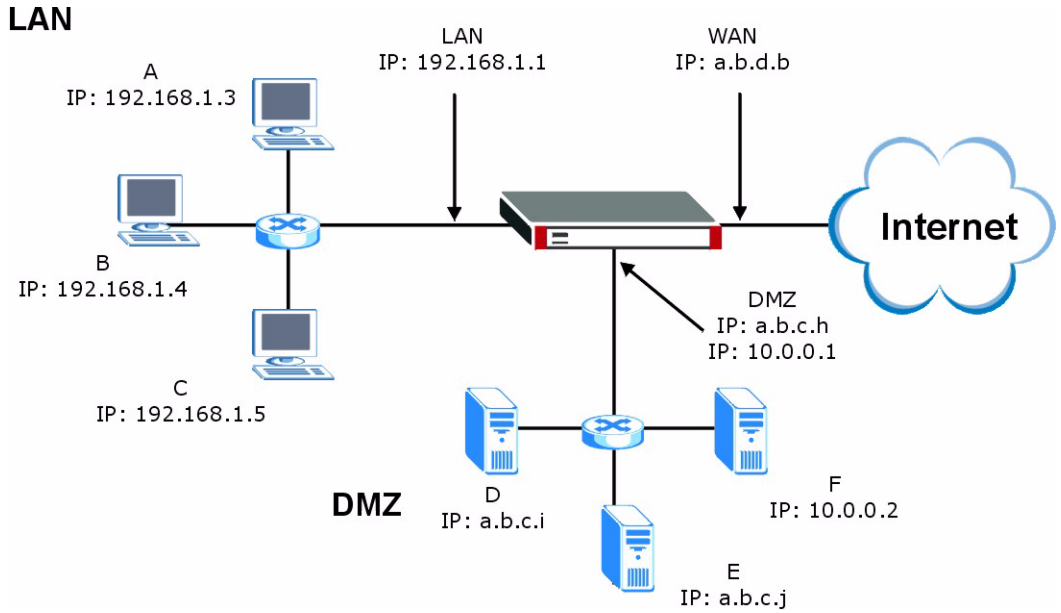

9.7 DMZ Port Roles

Use the **Port Roles** screen to set ports as part of the LAN, DMZ and/or WLAN interface.

Ports 1~4 on the ZyWALL can be part of the LAN, DMZ or WLAN interface.

Do the following if you are configuring from a computer connected to a LAN, DMZ or WLAN port and changing the port's role:


1. A port's IP address varies as its role changes, make sure your computer's IP address is in the same subnet as the ZyWALL's LAN, DMZ or WLAN IP address.
2. Use the appropriate LAN, DMZ or WLAN IP address to access the ZyWALL.

To change your ZyWALL's port role settings, click **NETWORK** > **DMZ** > **Port Roles**. The screen appears as shown.

The radio buttons correspond to Ethernet ports on the front panel of the ZyWALL. On the ZyWALL, ports 1 to 4 are all LAN ports by default.

Your changes are also reflected in the **LAN** and/or **WLAN Port Roles** screens.

Figure 126 NETWORK > DMZ > Port Roles

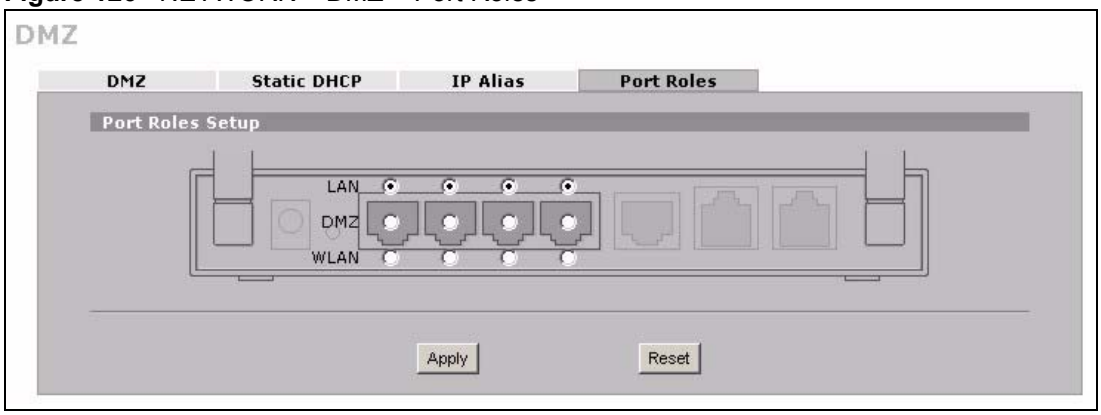

The following table describes the labels in this screen.

Table 49 NETWORK > DMZ > Port Roles

LABEL	DESCRIPTION
LAN	Select a port's LAN radio button to use the port as part of the LAN. The port will use the ZyWALL's LAN IP address and MAC address.
DMZ	Select a port's DMZ radio button to use the port as part of the DMZ. The port will use the ZyWALL's DMZ IP address and MAC address.
WLAN	Select a port's WLAN radio button to use the port as part of the WLAN. The port will use the ZyWALL's WLAN IP address and MAC address.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

10

Wireless LAN


This chapter discusses how to configure wireless LAN on the ZyWALL.

10.1 Wireless LAN Introduction

A wireless LAN can be as simple as two computers with wireless LAN adapters communicating in a peer-to-peer network or as complex as a number of computers with wireless LAN adapters communicating through access points which bridge network traffic to the wired LAN.

The following figure provides an example of a wireless network.

Figure 127 Example of a Wireless Network

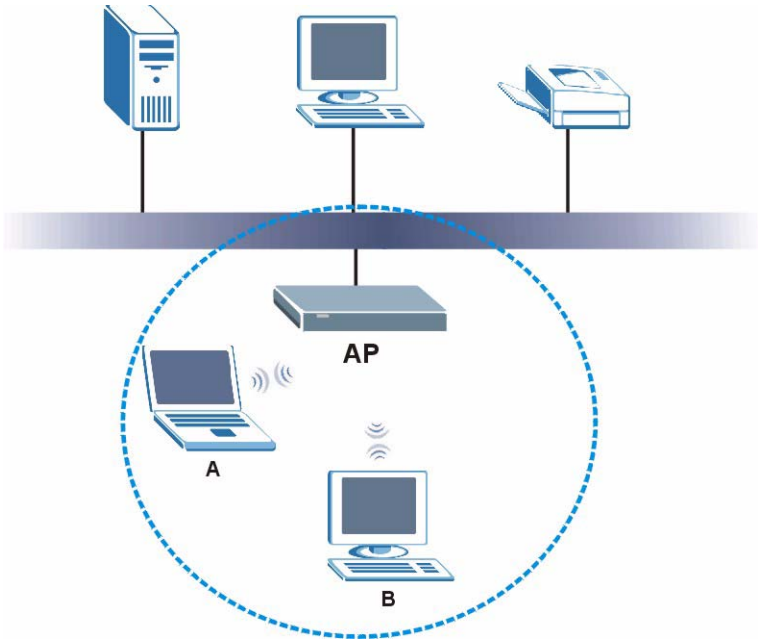

The wireless network is the part in the blue circle. In this wireless network, devices A and B are called wireless clients. The wireless clients use the access point (AP) to interact with other devices (such as the printer) or with the Internet. Your ZyWALL is the AP.

Every wireless network must follow these basic guidelines.

- Every wireless client in the same wireless network must use the same SSID.

  The SSID is the name of the wireless network. It stands for Service Set IDentity.

- If two wireless networks overlap, they should use different channels.

  Like radio stations or television channels, each wireless network uses a specific channel, or frequency, to send and receive information.

- Every wireless client in the same wireless network must use security compatible with the AP.

  Security stops unauthorized devices from using the wireless network. It can also protect the information that is sent in the wireless network.




See the WLAN appendix for more detailed information on WLANs.

10.2 Configuring WLAN

The built-in wireless card is used as part of the LAN by default. You can use the **Port Roles** screen (see Figure 132 on page 220) to set a port to be part of the WLAN. Then connect an access point (AP) to it to extend the ZyWALL's wireless LAN coverage. See Section 8.13 on page 187 if you need to configure a 3G connection (a 3G connection is for Internet access instead of providing a local wireless LAN).

Click **NETWORK** > **WLAN** to open the **WLAN** screen to configure the IP address for ZyWALL's WLAN interface, other TCP/IP and DHCP settings.

Figure 128 NETWORK > WLAN

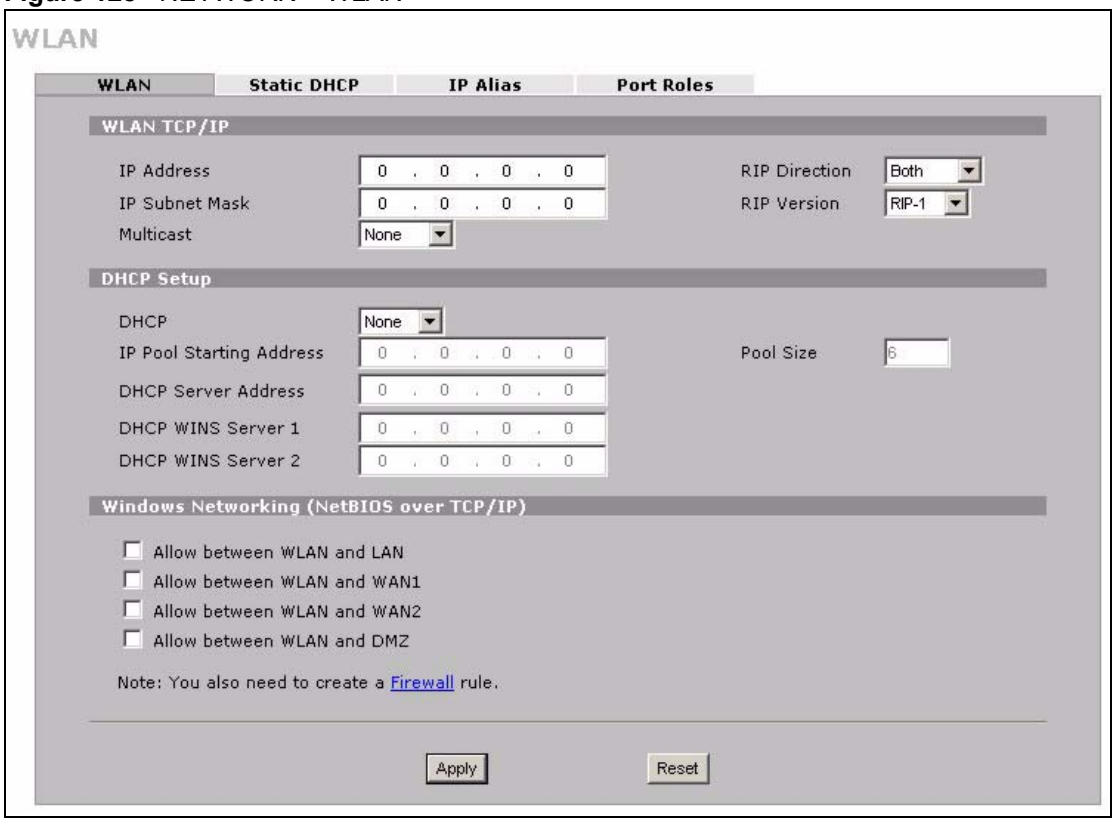

The following table describes the labels in this screen.

Table 50 NETWORK > WLAN

LABEL	DESCRIPTION
WLAN TCP/IP	
IP Address	Type the IP address of your ZyWALL's WLAN interface in dotted decimal notation. Alternatively, click the right mouse button to copy and/or paste the IP address. Note: Make sure the IP addresses of the LAN, WAN, WLAN and DMZ are on separate subnets.
IP Subnet Mask	The subnet mask specifies the network number portion of an IP address. Your ZyWALL automatically calculates the subnet mask based on the IP address that you assign. Unless you are implementing subnetting, use the subnet mask computed by the ZyWALL.
RIP Direction	RIP (Routing Information Protocol, RFC1058 and RFC 1389) allows a router to exchange routing information with other routers. The **RIP Direction** field controls the sending and receiving of RIP packets. Select the RIP direction from **Both**/**In Only**/**Out Only**/**None**. When set to **Both** or **Out Only**, the ZyWALL will broadcast its routing table periodically. When set to **Both** or **In Only**, it will incorporate the RIP information that it receives; when set to **None**, it will not send any RIP packets and will ignore any RIP packets received. **Both** is the default.

Table 50 NETWORK > WLAN (continued)

LABEL	DESCRIPTION
RIP Version	The **RIP Version** field controls the format and the broadcasting method of the RIP packets that the ZyWALL sends (it recognizes both formats when receiving). **RIP-1** is universally supported but RIP-2 carries more information. RIP-1 is probably adequate for most networks, unless you have an unusual network topology. Both **RIP-2B** and **RIP-2M** sends the routing data in RIP-2 format; the difference being that **RIP-2B** uses subnet broadcasting while **RIP-2M** uses multicasting. Multicasting can reduce the load on non-router machines since they generally do not listen to the RIP multicast address and so will not receive the RIP packets. However, if one router uses multicasting, then all routers on your network must use multicasting, also. By default, RIP direction is set to **Both** and the Version set to **RIP-1**.
Multicast	Select **IGMP V-1** or **IGMP V-2** or **None**. IGMP (Internet Group Multicast Protocol) is a network-layer protocol used to establish membership in a Multicast group - it is not used to carry user data. IGMP version 2 (RFC 2236) is an improvement over version 1 (RFC 1112) but IGMP version 1 is still in wide use. If you would like to read more detailed information about interoperability between IGMP version 2 and version 1, please see *sections 4 and 5 of RFC 2236*.
DHCP Setup	
DHCP	DHCP (Dynamic Host Configuration Protocol, RFC 2131 and RFC 2132) allows individual clients (workstations) to obtain TCP/IP configuration at startup from a server. Unless you are instructed by your ISP, leave this field set to **Server**. When configured as a server, the ZyWALL provides TCP/IP configuration for the clients. When set as a server, fill in the **IP Pool Starting Address** and **Pool Size** fields. Select **Relay** to have the ZyWALL forward DHCP requests to another DHCP server. When set to **Relay**, fill in the **DHCP Server Address** field. Select **None** to stop the ZyWALL from acting as a DHCP server. When you select **None**, you must have another DHCP server on your WLAN, or else the computers must be manually configured.
IP Pool Starting Address	This field specifies the first of the contiguous addresses in the IP address pool.
Pool Size	This field specifies the size, or count of the IP address pool.
DHCP Server Address	Type the IP address of the DHCP server to which you want the ZyWALL to relay DHCP requests. Use dotted decimal notation. Alternatively, click the right mouse button to copy and/or paste the IP address.
DHCP WINS Server 1, 2	Type the IP address of the WINS (Windows Internet Naming Service) server that you want to send to the DHCP clients. The WINS server keeps a mapping table of the computer names on your network and the IP addresses that they are currently using.
Windows Networking (NetBIOS over TCP/IP)	NetBIOS (Network Basic Input/Output System) are TCP or UDP packets that enable a computer to connect to and communicate with a LAN. For some dial-up services such as PPPoE or PPTP, NetBIOS packets cause unwanted calls. However it may sometimes be necessary to allow NetBIOS packets to pass through to the WAN in order to find a computer on the WAN.
Allow between WLAN and LAN	Select this check box to forward NetBIOS packets from the WLAN to the LAN and from the LAN to the WLAN. Clear this check box to block all NetBIOS packets going from the LAN to the WLAN and from the WLAN to the LAN.
Allow between WLAN and WAN 1	Select this check box to forward NetBIOS packets from the WLAN to WAN 1 and from WAN 1 to the WLAN. Clear this check box to block all NetBIOS packets going from the WLAN to WAN 1 and from WAN 1 to the WLAN.

Table 50 NETWORK > WLAN (continued)

LABEL	DESCRIPTION
Allow between WLAN and WAN 2	Select this check box to forward NetBIOS packets from the WLAN to WAN 2 and from WAN 2 to the WLAN. Clear this check box to block all NetBIOS packets going from the WLAN to WAN 2 and from WAN 2 to the WLAN.
Allow between WLAN and DMZ	Select this check box to forward NetBIOS packets from the WLAN to the DMZ and from the DMZ to the WLAN. If your firewall is enabled with the default policy set to block WLAN to DMZ traffic and DMZ to WLAN traffic, you also need to configure WLAN to DMZ and DMZ to WLAN firewall rules that forward NetBIOS traffic. Clear this check box to block all NetBIOS packets going from the WLAN to the DMZ and from the DMZ to the WLAN.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.


10.3 WLAN Static DHCP

This table allows you to assign IP addresses on the WLAN to specific individual computers based on their MAC addresses.

Every Ethernet device has a unique MAC (Media Access Control) address. The MAC address is assigned at the factory and consists of six pairs of hexadecimal characters, for example, 00:A0:C5:00:00:02.

To change your ZyWALL's WLAN static DHCP settings, click **NETWORK** >**WLAN** > **Static DHCP**. The screen appears as shown.

Figure 129 NETWORK > WLAN > Static DHCP

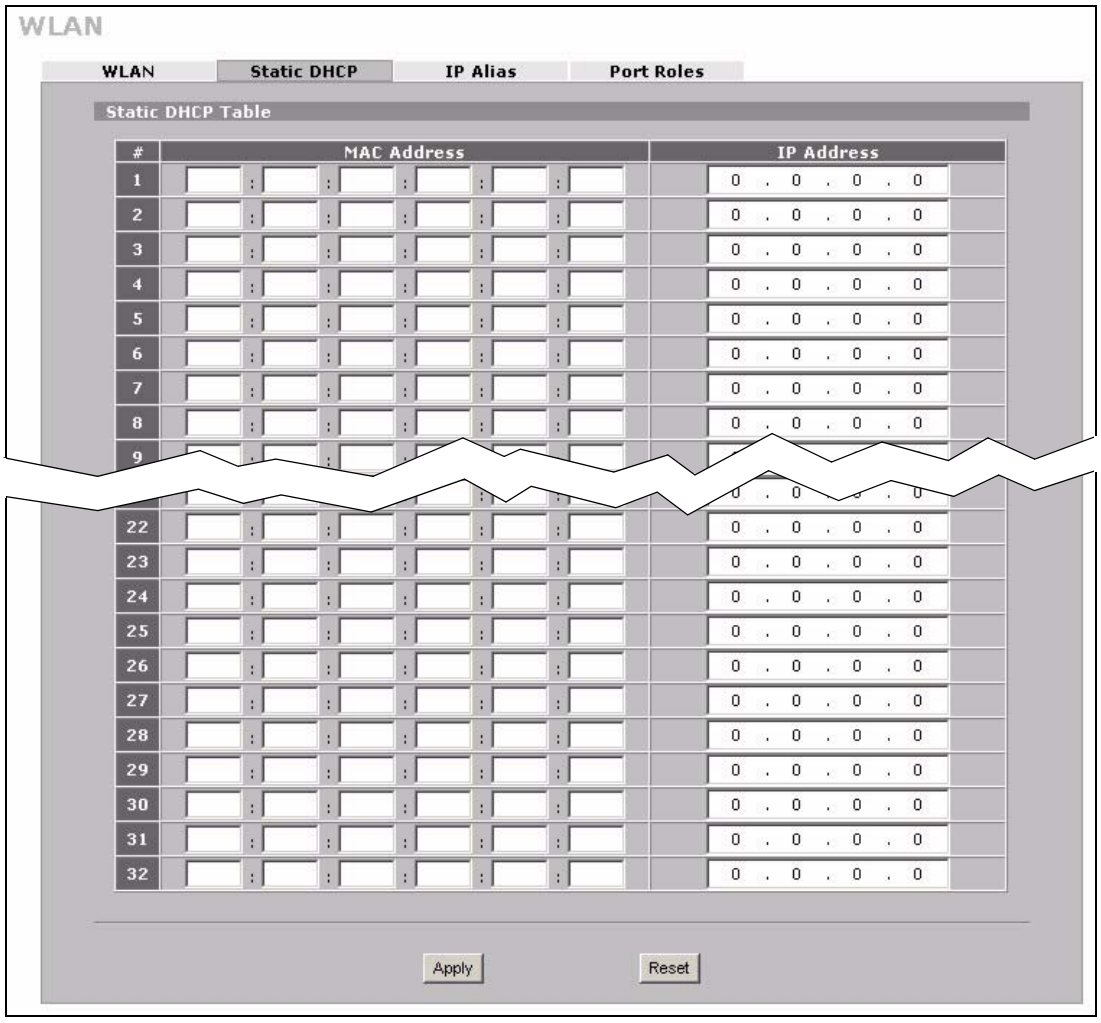

The following table describes the labels in this screen.

Table 51 NETWORK > WLAN > Static DHCP

LABEL	DESCRIPTION
#	This is the index number of the Static IP table entry (row).
MAC Address	Type the MAC address of a computer on your WLAN.
IP Address	Type the IP address that you want to assign to the computer on your WLAN. Alternatively, click the right mouse button to copy and/or paste the IP address.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

10.4 WLAN IP Alias

IP alias allows you to partition a physical network into different logical networks over the same Ethernet interface.

The ZyWALL has a single WLAN interface. Even though more than one of ports 1~4 may be in the WLAN port role, they are all still part of a single physical Ethernet interface and all use the same IP address.


The ZyWALL supports three logical WLAN interfaces via its single physical WLAN Ethernet interface. The ZyWALL itself is the gateway for each of the logical WLAN networks.

When you use IP alias, you can also configure firewall rules to control access between the WLAN's logical networks (subnets).

Make sure that the subnets of the logical networks do not overlap.

To change your ZyWALL's IP alias settings, click **NETWORK** > **WLAN** > **IP Alias**. The screen appears as shown.

Figure 130 NETWORK > WLAN > IP Alias

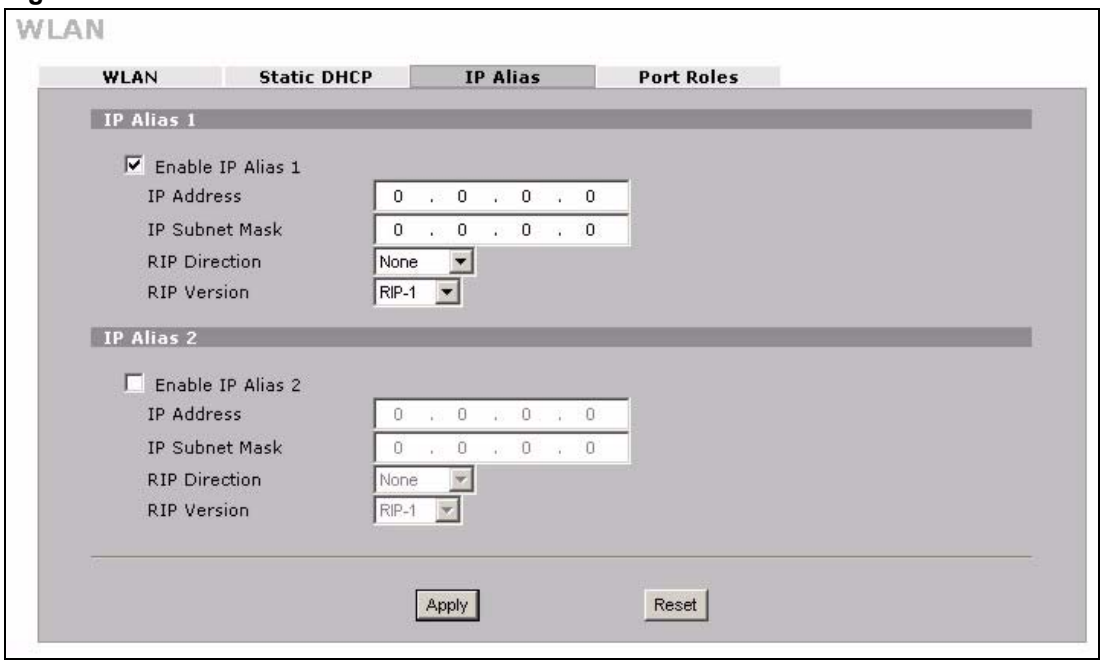

The following table describes the labels in this screen.

Table 52 NETWORK > WLAN > IP Alias

LABEL	DESCRIPTION
Enable IP Alias 1, 2	Select the check box to configure another WLAN network for the ZyWALL.
IP Address	Enter the IP address of your ZyWALL in dotted decimal notation. Alternatively, click the right mouse button to copy and/or paste the IP address.
IP Subnet Mask	Your ZyWALL will automatically calculate the subnet mask based on the IP address that you assign. Unless you are implementing subnetting, use the subnet mask computed by the ZyWALL.

Table 52 NETWORK > WLAN > IP Alias (continued)

LABEL	DESCRIPTION
RIP Direction	RIP (Routing Information Protocol, RFC 1058 and RFC 1389) allows a router to exchange routing information with other routers. The **RIP Direction** field controls the sending and receiving of RIP packets. Select the RIP direction from **Both**/**In Only**/**Out Only**/**None**. When set to **Both** or **Out Only**, the ZyWALL will broadcast its routing table periodically. When set to **Both** or **In Only**, it will incorporate the RIP information that it receives; when set to **None**, it will not send any RIP packets and will ignore any RIP packets received.
RIP Version	The **RIP Version** field controls the format and the broadcasting method of the RIP packets that the ZyWALL sends (it recognizes both formats when receiving). **RIP-1** is universally supported but RIP-2 carries more information. RIP-1 is probably adequate for most networks, unless you have an unusual network topology. Both **RIP-2B** and **RIP-2M** sends the routing data in RIP-2 format; the difference being that **RIP-2B** uses subnet broadcasting while **RIP-2M** uses multicasting. Multicasting can reduce the load on non-router machines since they generally do not listen to the RIP multicast address and so will not receive the RIP packets. However, if one router uses multicasting, then all routers on your network must use multicasting, also. By default, RIP direction is set to **Both** and the Version set to **RIP-1**.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

10.5 WLAN Port Roles


Use the **Port Roles** screen to set ports as part of the LAN, DMZ and/or WLAN interface.

Ports 1~4 on the ZyWALL can be part of the LAN, DMZ or WLAN interface.

Connect wireless LAN Access Points (APs) to WLAN interfaces to extend the ZyWALL's wireless LAN coverage. The WLAN port role allows the ZyWALL's firewall to treat traffic from connected APs as part of the ZyWALL's WLAN. You can specify firewall rules for traffic going to or from the WLAN. The WLAN includes the ZyWALL's own WLAN and the Ethernet ports in the WLAN port role.

The following figure shows the ZyWALL with a built-in wireless card and an AP connected to an Ethernet port in the WLAN port role.

Figure 131 WLAN Port Role Example

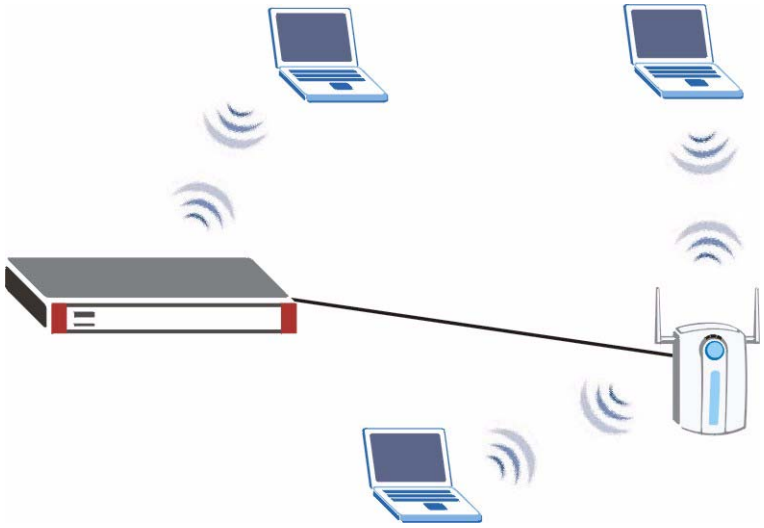

Do the following if you are configuring from a computer connected to a LAN, DMZ or WLAN port and changing the port's role:


1. A port's IP address varies as its role changes, make sure your computer's IP address is in the same subnet as the ZyWALL's LAN, DMZ or WLAN IP address.
2. Use the appropriate LAN, DMZ or WLAN IP address to access the ZyWALL.

To change your ZyWALL's port role settings, click **NETWORK** > **WLAN** > **Port Roles**. The screen appears as shown.

The radio buttons correspond to Ethernet ports on the front panel of the ZyWALL. On the ZyWALL, ports 1 to 4 are all LAN ports by default.

Your changes are also reflected in the **LAN** and/or **DMZ Port Roles** screen.

Figure 132 NETWORK > WLAN > Port Roles

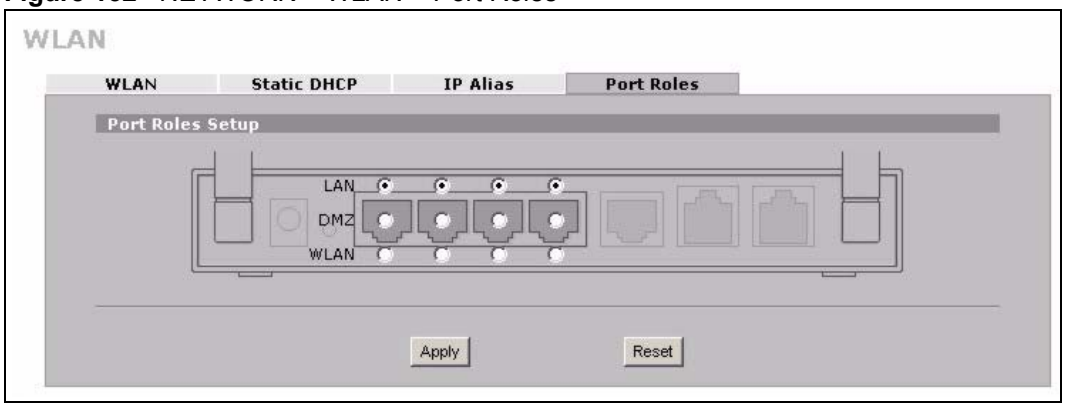

The following table describes the labels in this screen.

Table 53 NETWORK > WLAN > Port Roles

LABEL	DESCRIPTION
LAN	Select a port's LAN radio button to use the port as part of the LAN. The port will use the LAN IP address.
DMZ	Select a port's DMZ radio button to use the port as part of the DMZ. The port will use the DMZ IP address.
WLAN	Select a port's WLAN radio button to use the port as part of the WLAN. The port will use the WLAN IP address.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

After you change the LAN/DMZ/WLAN port roles and click **Apply**, please wait for few seconds until the following screen appears. Click **Return** to go back to the **Port Roles** screen.

Figure 133 NETWORK > WLAN > Port Roles: Change Complete



10.6 Wireless Security Overview

The following sections introduce different types of wireless security you can set up in the wireless network.

10.6.1 SSID

Normally, the AP acts like a beacon and regularly broadcasts the SSID in the area. You can hide the SSID instead, in which case the AP does not broadcast the SSID. In addition, you should change the default SSID to something that is difficult to guess.

This type of security is fairly weak, however, because there are ways for unauthorized devices to get the SSID. In addition, unauthorized devices can still see the information that is sent in the wireless network.

10.6.2 MAC Address Filter

Every wireless client has a unique identification number, called a MAC address.[2] A MAC address is usually written using twelve hexadecimal characters[3]; for example, 00A0C5000002 or 00:A0:C5:00:00:02. To get the MAC address for each wireless client, see the appropriate User's Guide or other documentation.

You can use the MAC address filter to tell the AP which wireless clients are allowed or not allowed to use the wireless network. If a wireless client is allowed to use the wireless network, it still has to have the correct settings (SSID, channel, and security). If a wireless client is not allowed to use the wireless network, it does not matter if it has the correct settings.

This type of security does not protect the information that is sent in the wireless network. Furthermore, there are ways for unauthorized devices to get the MAC address of an authorized wireless client. Then, they can use that MAC address to use the wireless network.

10.6.3 User Authentication

You can make every user log in to the wireless network before they can use it. This is called user authentication. However, every wireless client in the wireless network has to support IEEE 802.1x to do this.

For wireless networks, there are two typical places to store the user names and passwords for each user.

- In the AP: this feature is called a local user database or a local database.
- In a RADIUS server: this is a server used in businesses more than in homes.

If your AP does not provide a local user database and if you do not have a RADIUS server, you cannot set up user names and passwords for your users.

2. Some wireless devices, such as scanners, can detect wireless networks but cannot use wireless networks. These kinds of wireless devices might not have MAC addresses.
3. Hexadecimal characters are 0, 1, 2, 3, 4, 5, 6, 7, 8, 9, A, B, C, D, E, and F.

Unauthorized devices can still see the information that is sent in the wireless network, even if they cannot use the wireless network. Furthermore, there are ways for unauthorized wireless users to get a valid user name and password. Then, they can use that user name and password to use the wireless network.

Local user databases also have an additional limitation that is explained in the next section.

10.6.4 Encryption

Wireless networks can use encryption to protect the information that is sent in the wireless network. Encryption is like a secret code. If you do not know the secret code, you cannot understand the message.

The types of encryption you can choose depend on the type of user authentication. (See Section 10.6.3 on page 221 for information about this.)

Table 54 Types of Encryption for Each Type of Authentication

	No Authentication	RADIUS Server
Weakest	No Security	
↑	Static WEP	
		802.1x +Static WEP
↓	WPA-PSK	WPA
Strongest	WPA2-PSK or WPA2-PSK-Mix	WPA2 or WPA2-Mix

For example, if the wireless network has a RADIUS server, you can choose **WPA** or **WPA2**. If users do not log in to the wireless network, you can choose no encryption, **Static WEP**, **WPA-PSK**, or **WPA2-PSK**.

Usually, you should set up the strongest encryption that every wireless client in the wireless network supports. For example, suppose the AP does not have a local user database, and you do not have a RADIUS server. Therefore, there is no user authentication. Suppose the wireless network has two wireless clients. Device A only supports WEP, and device B supports WEP and WPA. Therefore, you should set up **Static WEP** in the wireless network.



It is recommended that wireless clients use **WPA-PSK**, **WPA**, or stronger encryption. IEEE 802.1x and WEP encryption are better than none at all, but it is still possible for unauthorized devices to figure out the original information pretty quickly.



It is not possible to use **WPA-PSK**, **WPA** or stronger encryption with a local user database. In this case, it is better to set up stronger encryption with no authentication than to set up weaker encryption with the local user database.

If some wireless clients support WPA and some support WPA2, you should set up **WPA2-PSK-Mix** or **WPA2-Mix** (depending on the type of wireless network login) in the ZyWALL.

Many types of encryption use a key to protect the information in the wireless network. The longer the key, the stronger the encryption. Every wireless client in the wireless network must have the same key.

10.6.5 Additional Installation Requirements for Using 802.1x


- A computer with an IEEE 802.11a/b/g wireless LAN card.
- A computer equipped with a web browser (with JavaScript enabled) and/or Telnet.
- A wireless station must be running IEEE 802.1x-compliant software. Currently, this is offered in Windows XP.
- An optional network RADIUS server for remote user authentication and accounting.

10.7 Wireless Card

If you are configuring the ZyWALL from a computer connected to the wireless LAN and you change the ZyWALL's SSID or security settings, you will lose your wireless connection when you press **Apply** to confirm. You must then change the wireless settings of your computer to match the ZyWALL's new settings.

Click **WIRELESS > Wi-Fi** to open the **Wireless Card** screen.

Figure 134 WIRELESS > Wi-Fi > Wireless Card

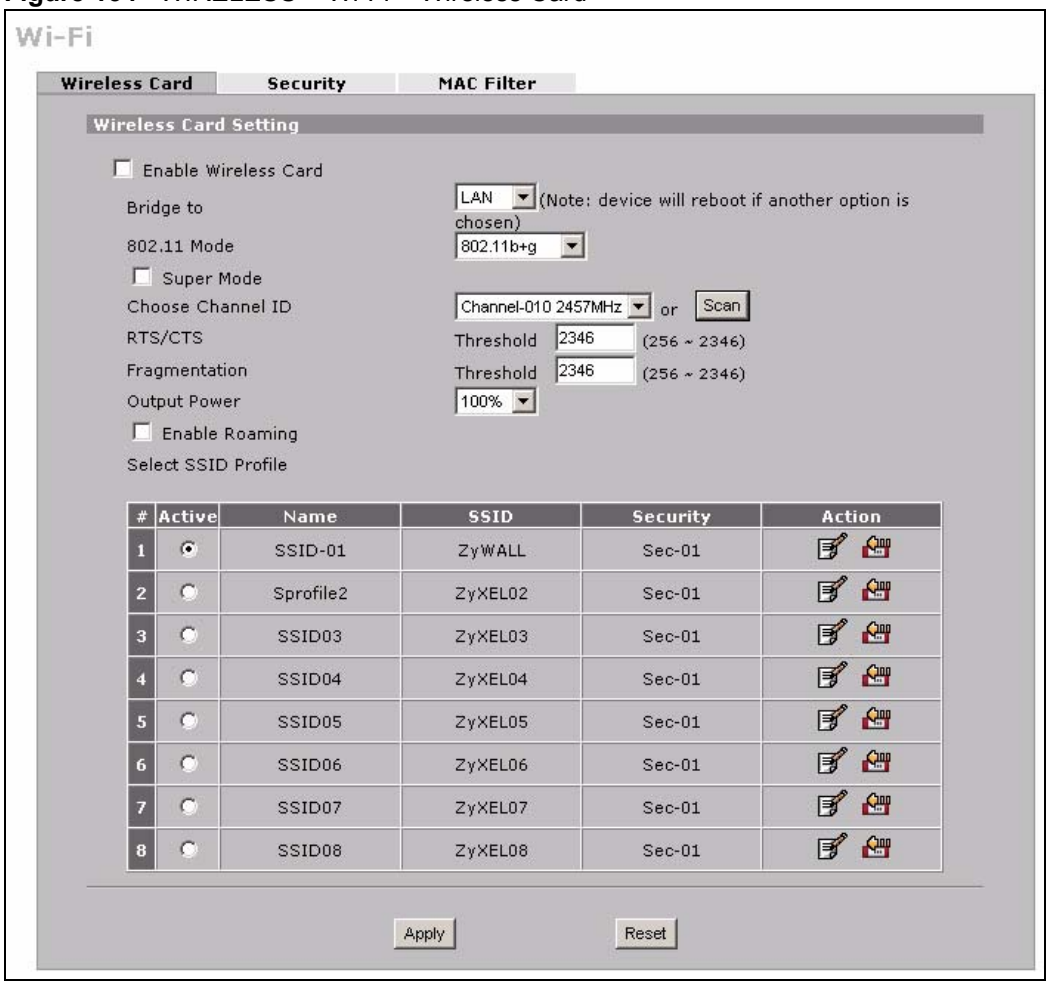

The following table describes the labels in this screen.

Table 55 WIRELESS > Wi-Fi > Wireless Card

LABEL	DESCRIPTION
Enable Wireless Card	The wireless LAN through a wireless LAN card is turned off by default, before you enable the wireless LAN you should configure some security by setting MAC filters and/or 802.1x security; otherwise your wireless LAN will be vulnerable upon enabling it. Select the check box to enable the wireless LAN.
Bridge to	Select **LAN** to use the wireless card as part of the LAN. Select **DMZ** to use the wireless card as part of the DMZ. Select **WLAN** to use the wireless card as part of the WLAN. The ZyWALL restarts after you change the wireless card setting. Note: If you set the wireless card to be part of the LAN or DMZ, you can still use wireless access. The firewall will treat the wireless card as part of the LAN or DMZ respectively.

Table 55 WIRELESS > Wi-Fi > Wireless Card (continued)

LABEL	DESCRIPTION
802.11 Mode	Select **802.11b Only** to allow only IEEE 802.11b compliant WLAN devices to associate with the ZyWALL. Select **802.11g Only** to allow only IEEE 802.11g compliant WLAN devices to associate with the ZyWALL. Select **802.11b+g** to allow both IEEE802.11b and IEEE802.11g compliant WLAN devices to associate with the ZyWALL. The transmission rate of your ZyWALL might be reduced. Select **802.11a Only** to allow only IEEE 802.11a compliant WLAN devices to associate with the ZyWALL.
Super Mode	Select this to improve data throughput on the WLAN by enabling fast frame and packet bursting. At the time of writing, this works only when the wireless client is using an Atheros card.
Choose Channel ID	Set the operating frequency/channel depending on your particular region. To manually set the ZyWALL to use a channel, select a channel from the drop-down list box. To have the ZyWALL automatically select a channel, click **Scan** instead.
Scan	Click this button to have the ZyWALL automatically select the wireless channel with the lowest interference.
RTS/CTS Threshold	This is the threshold (number of bytes) for enabling RTS/CTS handshake. Data with a frame size larger than this value will perform the RTS/CTS handshake. Setting this attribute to be larger than the maximum MSDU (MAC service data unit) size turns off the RTS/CTS handshake. Enter a value between **256** and **2346**. If you select **Super Mode**, this field is grayed out and the ZyWALL uses 2346 automatically.
Fragmentation Threshold	This is the threshold (number of bytes) for the fragmentation boundary for directed messages. It is the maximum data fragment size that can be sent. Enter a value between **256** and **2346**. If you select **Super Mode**, this field is grayed out and the ZyWALL uses 2346 automatically.
Output Power	Set the output power of the ZyWALL in this field. If there is a high density of APs in an area, decrease the output power to reduce interference with other APs. Select one of the following **100%** (full power), **50%**, **25%**, **12.5%** or **min** (minimum). See the product specifications for more information on your ZyWALL's output power.
Enable Roaming	Roaming allows wireless stations to switch from one access point to another as they move from one coverage area to another. Select this checkbox to enable roaming on the ZyWALL if you have two or more ZyWALLs on the same subnet. Note: All APs on the same subnet and the wireless clients must have the same SSID to allow roaming.
Select SSID Profile	An SSID profile is the set of parameters relating to one of the ZyWALL's BSSs. The SSID (Service Set IDentifier) identifies the Service Set with which a wireless client is associated. Wireless clients associating with the access point (AP) must have the same SSID. Note: If you are configuring the ZyWALL from a computer connected to the wireless LAN and you change the ZyWALL's SSID or security settings, you will lose your wireless connection when you press **Apply** to confirm. You must then change the wireless settings of your computer to match the ZyWALL's new settings.
#	This field displays the index number of each SSID profile.
Active	Choose a profile to apply to your wireless network by selecting its radio button.
Name	This field displays the identification name of each SSID profile on the ZyWALL.

Table 55 WIRELESS > Wi-Fi > Wireless Card (continued)

LABEL	DESCRIPTION
SSID	This field displays the name of the wireless profile on the network. When a wireless client scans for an AP to associate with, this is the name that is broadcast and seen in the wireless client utility.
Security	This field indicates which security profile is currently associated with each SSID profile. See Section 10.8 on page 227 for more information.
Action	Click the edit icon next to the profile you want to configure and go to the SSID configuration screen. Click the reset default icon to clear all user-entered configuration information and return the SSID profile to its factory defaults.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

10.7.1 SSID Profile

Configure wireless network security by configuring and applying an SSID profile. You can configure multiple profiles but you can only apply one to your network.

Use the **Wireless Card** screen to see information about the SSID profiles on the ZyWALL, and use the **Wireless Card** > **Edit** screen to configure the SSID profiles.


Each SSID profile references the settings configured in the following screens:

- **WIRELESS > Wi-Fi** > **Security** (one of the security profiles).
- **AUTH SERVER** > **RADIUS** (the RADIUS server settings).
- **WIRELESS > Wi-Fi** > **MAC Filter** (the MAC filter list, if activated in the SSID profile).

Configure the fields in the above screens to use the settings in an SSID profile.

In the **Wireless Card** screen, click the edit icon next to an SSID profile to display the following screen.

Figure 135 Configuring SSID

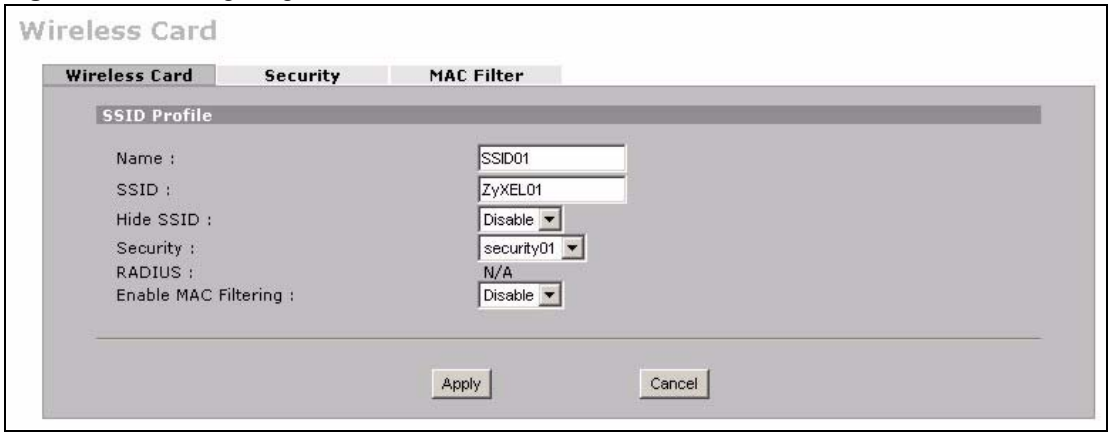

The following table describes the labels in this screen.

Table 56 Configuring SSID

LABEL	DESCRIPTION
Name	Enter a name (up to 32 printable 7-bit ASCII characters) identifying this profile.
SSID	When a wireless client scans for an AP to associate with, this is the name that is broadcast and seen in the wireless client utility. Enter a descriptive name (up to 32 printable 7-bit ASCII characters) for the wireless LAN.
Hide SSID	Select **Disable** if you want the ZyWALL to broadcast this SSID (a wireless client scanning for an AP will find this SSID). Alternatively, select **Enable** to have the ZyWALL hide this SSID (a wireless client scanning for an AP will not find this SSID).
Security	Select a security profile to use with this SSID profile. See Section 10.8 on page 227 for more information.
RADIUS	This displays **N/A** if the security profile you selected does not use RADIUS authentication. See Section 10.8 on page 227 for more information. This displays **Radius Configuration** if you select a security profile that uses RADIUS authentication. Click **Radius Configuration** to go to the **RADIUS** screen where you can view and/or change the RADIUS settings. See Section 16.3 on page 381 for more information.
Enable MAC Filtering	Select **Enable** from the drop down list box to activate MAC address filtering.
Apply	Click **Apply** to save your customized settings and exit this screen.
Cancel	Click **Cancel** to exit this screen without saving.

10.8 Configuring Wireless Security

Click **WIRELESS > Wi-Fi > Security** to open the **Security** screen. Use this screen to create security profiles. A security profile is a group of configuration settings which can be assigned to an SSID profile in the **Wireless Card** screen.

The screen changes when you configure a security profile and varies according to the security modes you select.

The following table describes the security modes you can configure.


Table 57 Security Modes

SECURITY MODE	DESCRIPTION
None	Select this to have no data encryption.
WEP	Select this to use WEP encryption.
802.1x-Only	Select this to use 802.1x authentication with no data encryption.
802.1x-Static64	Select this to use 802.1x authentication with a static 64bit WEP key and an authentication server.
802.1x-Static128	Select this to use 802.1x authentication with a static 128bit WEP key and an authentication server.
WPA	Select this to use WPA.
WPA-PSK	Select this to use WPA with a pre-shared key.
WPA2	Select this to use WPA2.

Table 57 Security Modes

SECURITY MODE	DESCRIPTION
WPA2-MIX	Select this to use either WPA2 or WPA depending on which security mode the wireless client uses.
WPA2-PSK	Select this to use WPA2 with a pre-shared key.
WPA2-PSK-MIX	Select this to use either WPA-PSK or WPA2-PSK depending on which security mode the wireless client uses.

Figure 136 WIRELESS > Wi-Fi > Security

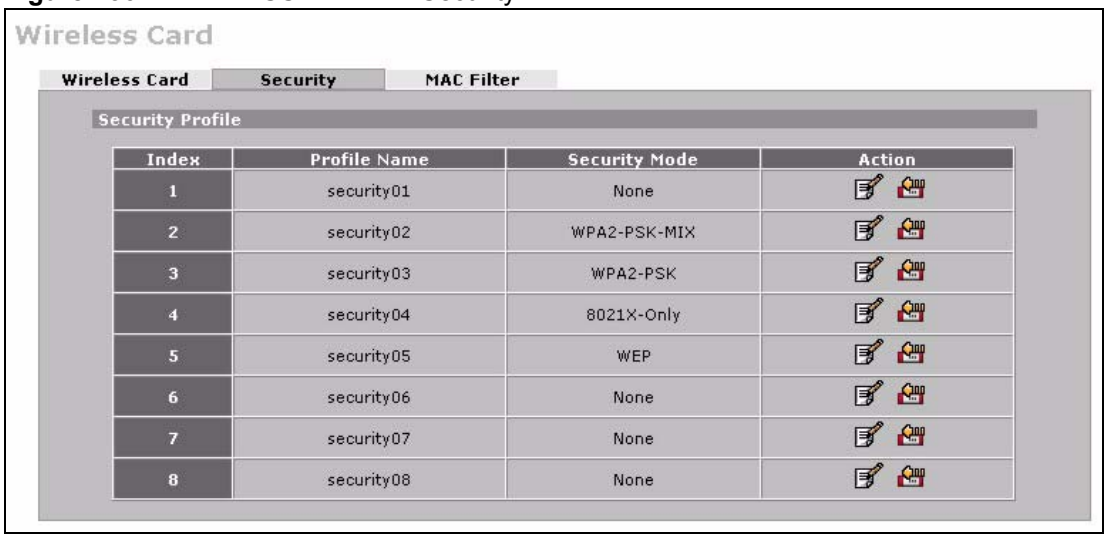

The following table describes the labels in this screen.

Table 58 WIRELESS > Wi-Fi > Security

LABEL	DESCRIPTION
Security Profile	
Index	This is the index number of the security profile.
Profile Name	This field displays a name given to a security profile in the **Security** configuration screen.
Security Mode	This field displays the security mode this security profile uses.
Action	Click the edit icon to configure security settings for that profile. Click the reset default icon to clear all user-entered configuration information and return the security profile to its factory defaults.

10.8.1 No Security



If you do not enable any wireless security on your ZyWALL, your network is accessible to any wireless networking device within range.

Figure 137 WIRELESS > Wi-Fi > Security: None



The following table describes the wireless LAN security labels in this screen.

Table 59 WIRELESS > Wi-Fi > Security: None

LABEL	DESCRIPTION
Name	Type a name (up to 32 printable 7-bit ASCII characters) to identify this security profile.
Security Mode	Select **None** to allow wireless clients to communicate with the access points without any data encryption.
Apply	Click **Apply** to save your customized settings and exit this screen.
Cancel	Click **Cancel** to exit this screen without saving.


10.8.2 Static WEP

Static WEP provides a mechanism for encrypting data using encryption keys. Both the AP and the wireless stations must use the same WEP key to encrypt and decrypt data.

Your ZyWALL allows you to configure up to four 64-bit, 128-bit or 152-bit WEP keys, but only one key can be used at any one time.

In order to configure and enable WEP encryption, click **WIRELESS > Wi-Fi > Security > Edit**.

Figure 138 WIRELESS > Wi-Fi > Security: WEP

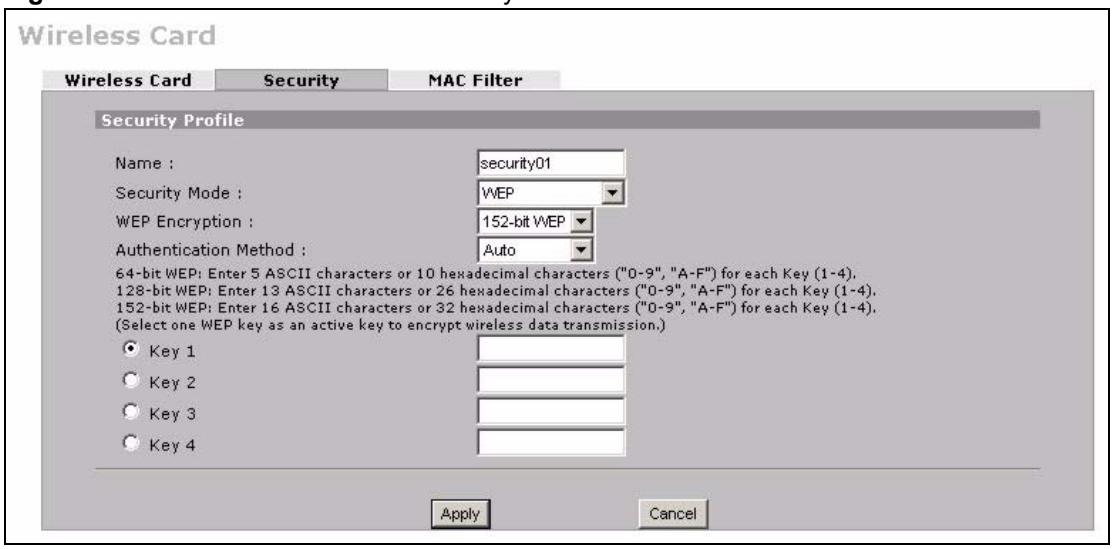

The following table describes the labels in this screen.


Table 60 WIRELESS > Wi-Fi > Security: WEP

LABEL	DESCRIPTION
Name	Type a name to identify this security profile.
Security Mode	Select **WEP** from the drop-down list.
WEP Encryption	WEP (Wired Equivalent Privacy) provides data encryption to prevent unauthorized wireless stations from accessing data transmitted over the wireless network. Select **64-bit WEP**, **128-bit WEP** or **152-bit WEP** to enable data encryption.
Authentication Method	Select **Shared-Key** to have the ZyWALL use the default WEP key to authenticate the wireless client to the ZyWALL. Select **Auto** to have the ZyWALL switch between the shared-key and open system (the wireless clients and AP do not share a secret key for authentication) modes automatically. The default setting is **Auto**.
Key 1 to Key 4	The WEP keys are used to encrypt data. Both the ZyWALL and the wireless clients must use the same WEP key for data transmission. If you chose **64-bit WEP** in the **WEP Encryption** field, then enter any 5 ASCII characters or 10 hexadecimal characters ("0-9", "A-F") preceded by 0x for each key. If you chose **128-bit WEP** in the **WEP Encryption** field, then enter 13 ASCII characters or 26 hexadecimal characters ("0-9", "A-F") preceded by 0x for each key. If you chose **152-bit WEP** in the **WEP Encryption** field, then enter 16 ASCII characters or 32 hexadecimal characters ("0-9", "A-F") preceded by 0x for each key. You can configure up to four keys, but only one key can be activated at any one time. The default key is key 1.
Apply	Click **Apply** to save your customized settings and exit this screen.
Cancel	Click **Cancel** to exit this screen without saving.

10.8.3 IEEE 802.1x Only

Click the **WIRELESS > Wi-Fi > Security > Edit**. Select **8021X-Only** from the **Security Mode** list.

Figure 139 WIRELESS > Wi-Fi > Security: 802.1x Only

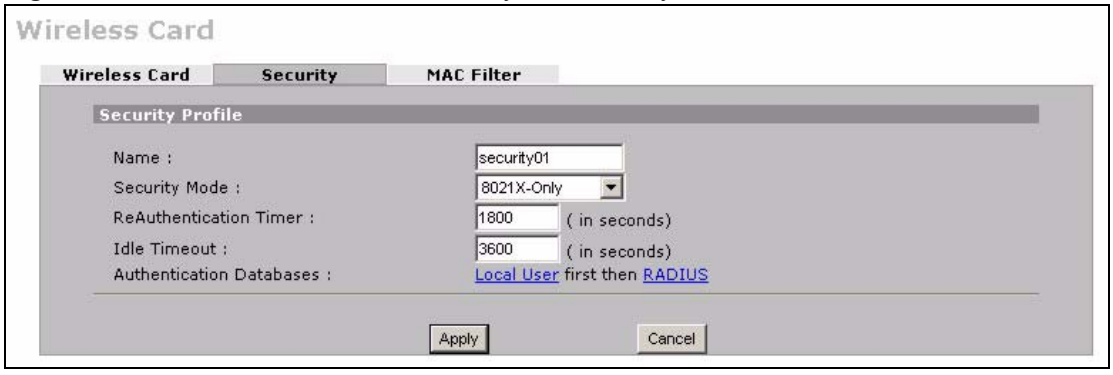

The following table describes the labels in this screen.

Table 61 WIRELESS > Wi-Fi > Security: 802.1x Only

LABEL	DESCRIPTION
Name	Type a name to identify this security profile.
Security Mode	Select **8021X-Only** from the drop-down list.


Table 61 WIRELESS > Wi-Fi > Security: 802.1x Only (continued)

LABEL	DESCRIPTION
ReAuthentication Timer	Specify how often wireless clients have to resend user names and passwords in order to stay connected. Enter a time interval between 600 and 65535 seconds. If wireless client authentication is done using a RADIUS server, the reauthentication timer on the RADIUS server has priority.
Idle Timeout	The ZyWALL automatically disconnects a wireless client from the wireless network after a period of inactivity. The wireless client needs to send the username and password again before it can use the wireless network again. Some wireless clients may prompt users for a username and password; other clients may use saved login credentials. In either case, there is usually a short delay while the wireless client logs in to the wireless network again. This value is usually smaller when the wireless network is keeping track of how much time each wireless client is connected to the wireless network (for example, using an authentication server). If the wireless network is not keeping track of this information, you can usually set this value higher to reduce the number of delays caused by logging in again. Enter a time interval between 600 and 65535 seconds.
Authentication Databases	Click **Local User** to go to the **Local User Database** screen where you can view and/or edit the list of users and passwords. Click **RADIUS** to go to the **RADIUS** screen where you can configure the ZyWALL to check an external RADIUS server.
Apply	Click **Apply** to save your customized settings and exit this screen.
Cancel	Click **Cancel** to exit this screen without saving.

10.8.4 IEEE 802.1x + Static WEP

Click the **WIRELESS > Wi-Fi > Security > Edit**. Select **8021X-Static 64** or **8021X-Static128** in the **Security Mode** field to display the following screen.

Figure 140 WIRELESS > Wi-Fi > Security: 802.1x + Static WEP

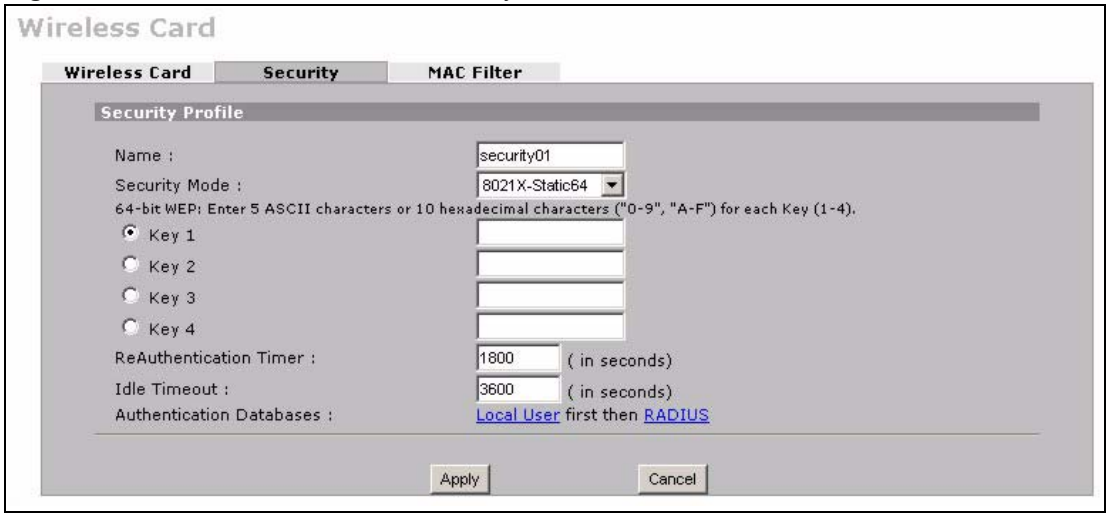

The following table describes the labels in this screen.

Table 62 WIRELESS > Wi-Fi > Security: 802.1x + Static WEP

LABEL	DESCRIPTION
Name	Type a name to identify this security profile.
Security Mode	Select **8021X-Static64** or **8021X-Static128** from the drop-down list.


Table 62 WIRELESS > Wi-Fi > Security: 802.1x + Static WEP (continued)

LABEL	DESCRIPTION
Key 1 to Key 4	If you chose **8021X-Static64** in the **Security Mode** field, then enter any 5 characters (ASCII string) or 10 hexadecimal characters ("0-9", "A-F") preceded by 0x for each key. If you chose **8021X-Static128** in the **Security Mode** field, then enter 13 characters (ASCII string) or 26 hexadecimal characters ("0-9", "A-F") preceded by 0x for each key. There are four data encryption keys to secure your data from eavesdropping by unauthorized wireless users. The values for the keys must be set up exactly the same on the access points as they are on the wireless clients.
ReAuthentication Timer	Specify how often wireless clients have to resend user names and passwords in order to stay connected. Enter a time interval between 600 and 65535 seconds. If wireless client authentication is done using a RADIUS server, the reauthentication timer on the RADIUS server has priority.
Idle Timeout	The ZyWALL automatically disconnects a wireless client from the wireless network after a period of inactivity. The wireless client needs to send the username and password again before it can use the wireless network again. Some wireless clients may prompt users for a username and password; other clients may use saved login credentials. In either case, there is usually a short delay while the wireless client logs in to the wireless network again. This value is usually smaller when the wireless network is keeping track of how much time each wireless client is connected to the wireless network (for example, using an authentication server). If the wireless network is not keeping track of this information, you can usually set this value higher to reduce the number of delays caused by logging in again. Enter a time interval between 600 and 65535 seconds.
Authentication Databases	Click **Local User** to go to the **Local User Database** screen where you can view and/or edit the list of users and passwords. Click **RADIUS** to go to the **RADIUS** screen where you can configure the ZyWALL to check an external RADIUS server.
Apply	Click **Apply** to save your customized settings and exit this screen.
Cancel	Click **Cancel** to exit this screen without saving.

10.8.5 WPA, WPA2, WPA2-MIX

Click **WIRELESS > Wi-Fi > Security > Edit**. Select **WPA**, **WPA2** or **WPA2-MIX** from the **Security Mode** list.

Figure 141 WIRELESS > Wi-Fi > Security: WPA, WPA2 or WPA2-MIX

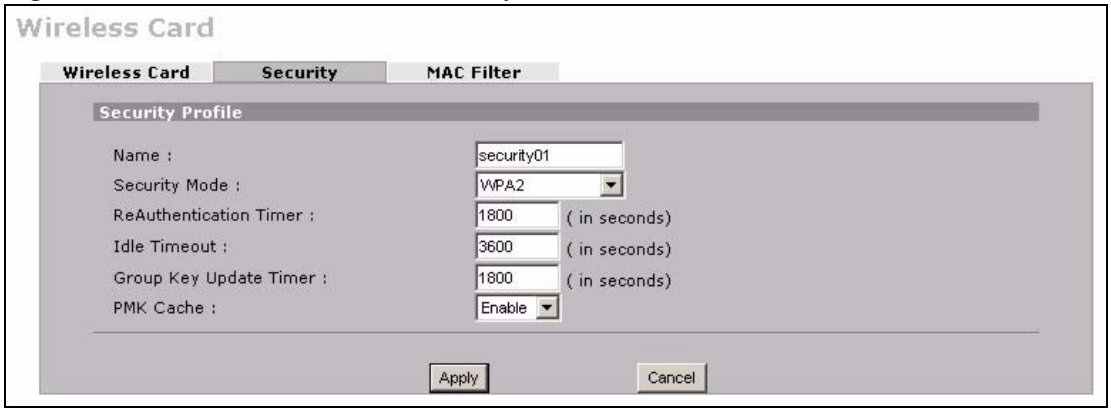

The following table describes the labels in this screen.


Table 63 WIRELESS > Wi-Fi > Security: WPA, WPA2 or WPA2-MIX

LABEL	DESCRIPTION
Name	Type a name to identify this security profile.
Security Mode	Select **WPA**, **WPA2** or **WPA2-MIX** from the drop-down list.
ReAuthentication Timer	Specify how often wireless clients have to resend user names and passwords in order to stay connected. Enter a time interval between 600 and 65535 seconds. If wireless client authentication is done using a RADIUS server, the reauthentication timer on the RADIUS server has priority.
Idle Timeout	The ZyWALL automatically disconnects a wireless client from the wireless network after a period of inactivity. The wireless client needs to send the username and password again before it can use the wireless network again. Some wireless clients may prompt users for a username and password; other clients may use saved login credentials. In either case, there is usually a short delay while the wireless client logs in to the wireless network again. This value is usually smaller when the wireless network is keeping track of how much time each wireless client is connected to the wireless network (for example, using an authentication server). If the wireless network is not keeping track of this information, you can usually set this value higher to reduce the number of delays caused by logging in again. Enter a time interval between 600 and 65535 seconds.
Group Key Update Timer	The **Group Key Update Timer** is the rate at which the AP sends a new group key out to all clients. The re-keying process is the WPA equivalent of automatically changing the WEP key for an AP and all stations in a WLAN on a periodic basis. Setting of the **Group Key Update Timer** is also supported in **WPA(2)-PSK** mode.
PMK Cache	This field is available only when you select **WPA2** or **WPA2-MIX**. When a wireless client moves from one AP's coverage area to another, it performs an authentication procedure (exchanging security information) with the new AP. Instead of re-authenticating a client each time it returns to the AP's coverage area, which can cause delays to time-sensitive applications, the AP and the client can store (or "cache") and use information about their previous authentication. Select **Enable** to allow PMK (Pairwise Master Key) caching, or **Disable** to switch this feature off.
Apply	Click **Apply** to save your customized settings and exit this screen.
Cancel	Click **Cancel** to exit this screen without saving.

10.8.6 WPA-PSK, WPA2-PSK, WPA2-PSK-MIX

Click **WIRELESS > Wi-Fi > Security > Edit**. Select **WPA-PSK**, **WPA2-PSK** or **WPA2-PSK-MIX** from the **Security Mode** list.

Figure 142 WIRELESS > Wi-Fi > Security: WPA(2)-PSK

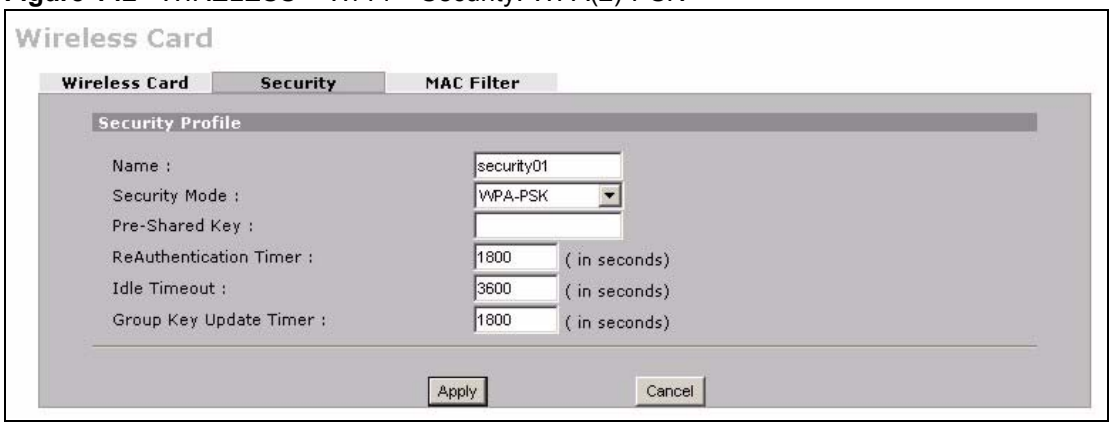

The following table describes the labels in this screen.

Table 64 WIRELESS > Wi-Fi > Security: WPA(2)-PSK

LABEL	DESCRIPTION
Name	Type a name to identify this security profile.
Security Mode	Select **WPA-PSK**, **WPA2-PSK** or **WPA2-PSK-MIX** from the drop-down list.
Pre-Shared Key	The encryption mechanisms used for **WPA(2)** and **WPA(2)-PSK** are the same. The only difference between the two is that **WPA(2)-PSK** uses a simple common password, instead of user-specific credentials. Type a pre-shared key from 8 to 63 case-sensitive ASCII characters (including spaces and symbols).
ReAuthentication Timer	Specify how often wireless clients have to resend user names and passwords in order to stay connected. Enter a time interval between 600 and 65535 seconds. If wireless client authentication is done using a RADIUS server, the reauthentication timer on the RADIUS server has priority.
Idle Timeout	The ZyWALL automatically disconnects a wireless client from the wireless network after a period of inactivity. The wireless client needs to send the username and password again before it can use the wireless network again. Some wireless clients may prompt users for a username and password; other clients may use saved login credentials. In either case, there is usually a short delay while the wireless client logs in to the wireless network again. This value is usually smaller when the wireless network is keeping track of how much time each wireless client is connected to the wireless network (for example, using an authentication server). If the wireless network is not keeping track of this information, you can usually set this value higher to reduce the number of delays caused by logging in again. Enter a time interval between 600 and 65535 seconds.
Group Key Update Timer	The **Group Key Update Timer** is the rate at which the AP sends a new group key out to all clients. The re-keying process is the WPA equivalent of automatically changing the WEP key for an AP and all stations in a WLAN on a periodic basis. Setting of the **Group Key Update Timer** is also supported in **WPA(2)-PSK** mode.
Apply	Click **Apply** to save your customized settings and exit this screen.
Cancel	Click **Cancel** to exit this screen without saving.


10.9 MAC Filter

The MAC filter screen allows you to configure the ZyWALL to give exclusive access to specific devices (**Allow**) or exclude specific devices from accessing the ZyWALL (**Deny**). Every Ethernet device has a unique MAC (Media Access Control) address. The MAC address is assigned at the factory and consists of six pairs of hexadecimal characters, for example, 00:A0:C5:00:00:02. You need to know the MAC addresses of the devices to configure this screen.

To change your ZyWALL's MAC filter settings, click the **WIRELESS > Wi-Fi** > **MAC Filter**. The screen appears as shown.

To activate MAC filtering on a profile, select **Enable** from the **Enable MAC Filtering** drop-down list box in the **Wireless Card** > **Edit** screen and click **Apply**.

Figure 143 NETWORK > WIRELESS CARD > MAC Filter

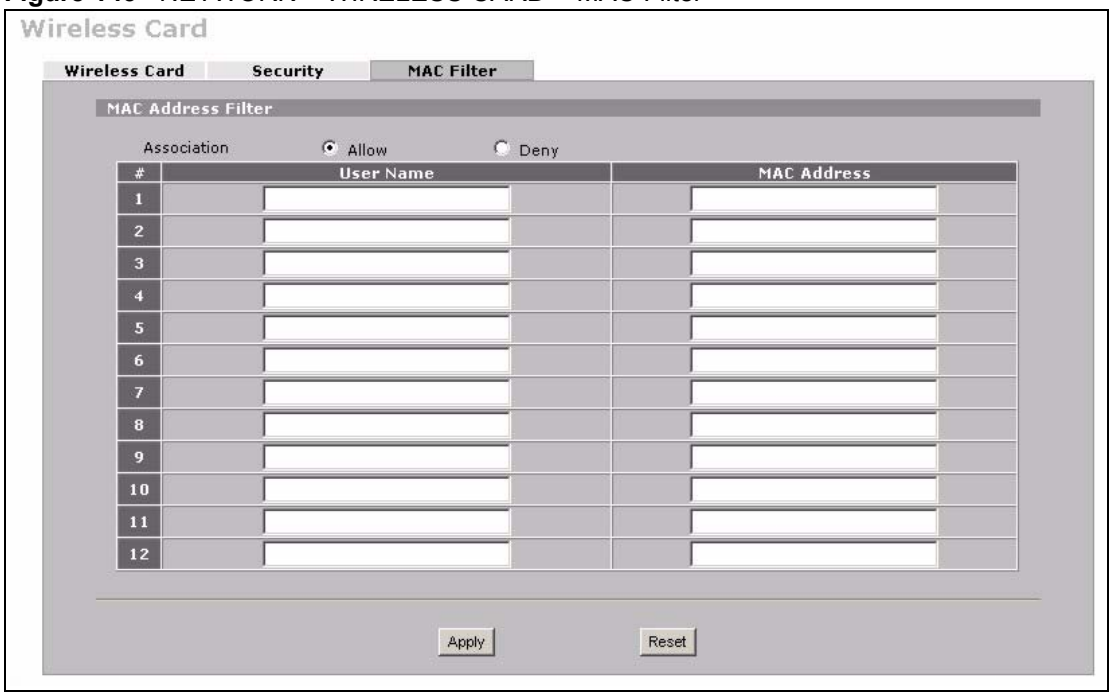

The following table describes the labels in this menu.

Table 65 WIRELESS > Wi-Fi > MAC Filter

LABEL	DESCRIPTION
Association	Define the filter action for the list of MAC addresses in the MAC address filter table. Select **Deny** to block access to the router, MAC addresses not listed will be allowed to access the router. Select **Allow** to permit access to the router, MAC addresses not listed will be denied access to the router.
#	This is the index number of the MAC address.
User Name	Enter a descriptive name for the MAC address.

Table 65 WIRELESS > Wi-Fi > MAC Filter

LABEL	DESCRIPTION
MAC Address	Enter the MAC addresses (in XX:XX:XX:XX:XX:XX format) of the wireless stations that are allowed or denied access to the ZyWALL in these address fields.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

PART III
Security

Firewall (239)
Content Filtering Screens (271)
Content Filtering Reports (293)
IPSec VPN (301)
Certificates (349)
Authentication Server (379)

11

Firewall

This chapter shows you how to configure your ZyWALL's firewall.

11.1 Firewall Overview

The networking term firewall is a system or group of systems that enforces an access-control policy between two networks. It is generally a mechanism used to protect a trusted network from an untrusted network.


The ZyWALL physically separates the LAN, DMZ, WLAN and the WAN and acts as a secure gateway for all data passing between the networks. The ZyWALL protects against Denial of Service (DoS) attacks, prevents theft, destruction and modification of data, and logs events.

Enable the firewall to protect your LAN computers from attacks by hackers on the Internet and control access between the LAN, DMZ, WLAN and WAN. By default the firewall:

- allows traffic that originates from your LAN computers to go to all of the networks.
- blocks traffic that originates on the other networks from going to the LAN.
- allows traffic that originates on the WLAN to go to the WAN.
- allows traffic that originates on the WAN to go to the DMZ and protects your DMZ computers against DoS attacks.
- allows VPN traffic between any of the networks.

The following figure illustrates the default firewall action. User A can initiate an IM (Instant Messaging) session from the LAN to the WAN (1). Return traffic for this session is also allowed (2). However other traffic initiated from the WAN is blocked (3 and 4).

Figure 144 Default Firewall Action

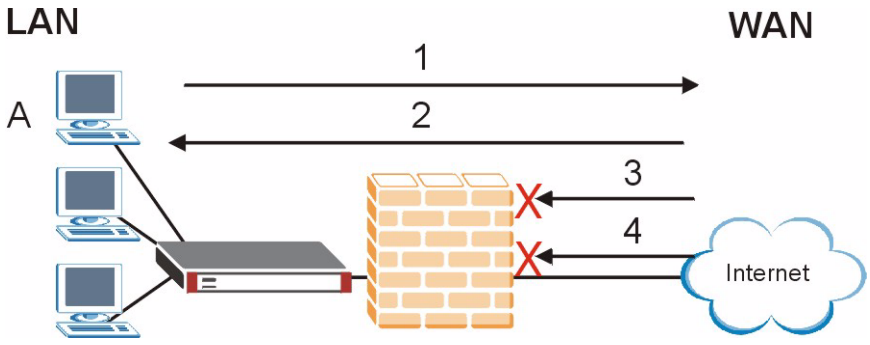


Your customized rules take precedence and override the ZyWALL's default settings. The ZyWALL checks the source IP address, destination IP address and IP protocol type of network traffic against the firewall rules (in the order you list them). When the traffic matches a rule, the ZyWALL takes the action specified in the rule.

11.2 Packet Direction Matrix

The ZyWALL's packet direction matrix allows you to apply certain security settings (like firewall) to traffic flowing in specific directions.

For example, click **SECURITY** > **FIREWALL** to open the following screen. This screen configures general firewall settings.

Figure 145 SECURITY > FIREWALL > Default Rule (Router Mode)

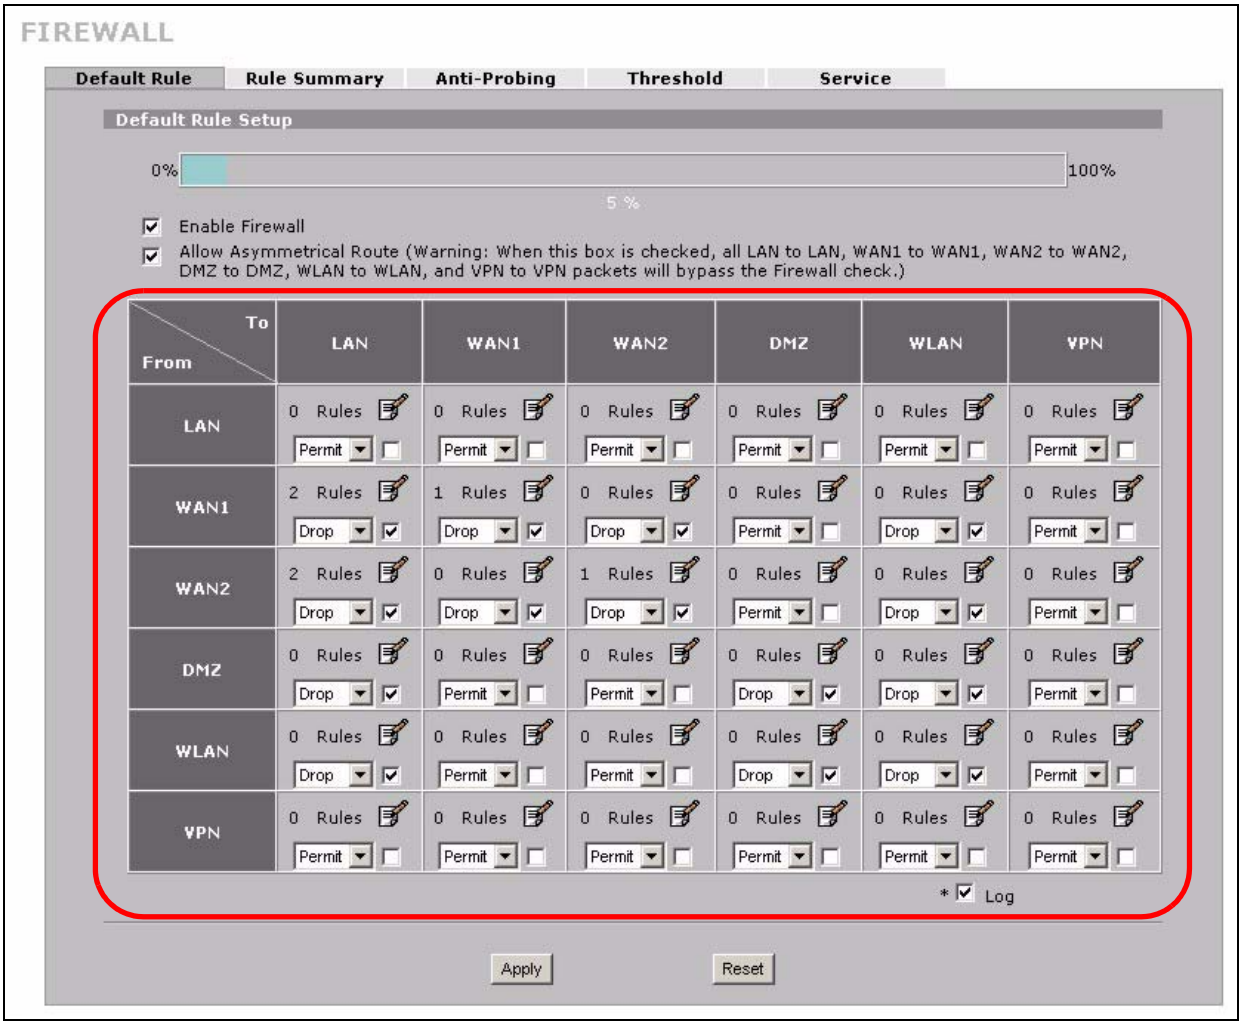


Packets have a source and a destination. The packet direction matrix in the lower part of the screen sets what the ZyWALL does with packets traveling in a specific direction that do not match any of the firewall rules.

From ⟶ To	
A specific interface or any of the ZyWALL's VPN connections	A specific interface or any of the ZyWALL's VPN connections

To set the ZyWALL to by default silently block traffic from WAN 1 from going to the DMZ interfaces, you would find where the **From WAN1** row and the **To DMZ** column intersect and set the field to **Drop** as shown.

Figure 146 Default Block Traffic From WAN1 to DMZ Example

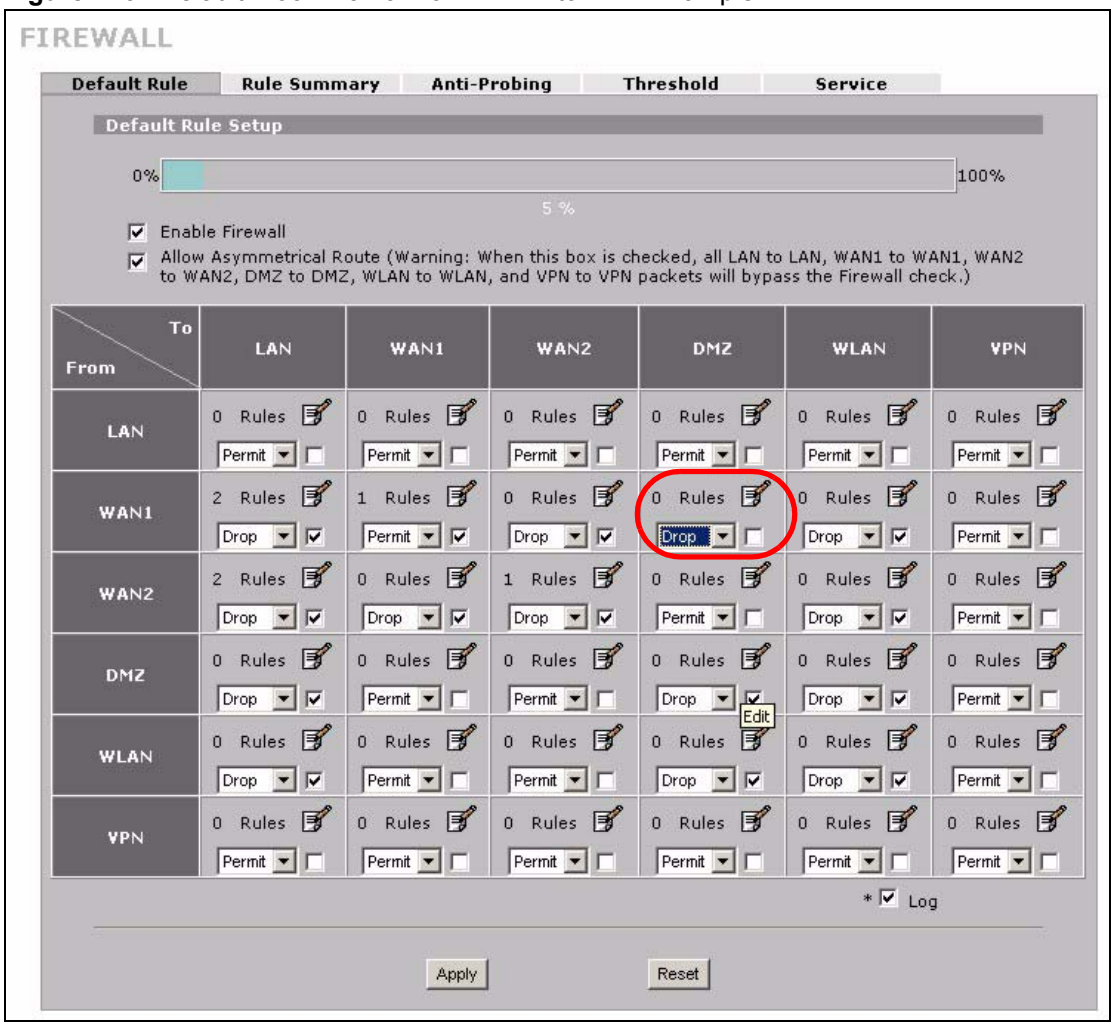

11.3 Packet Direction Examples

Firewall rules are grouped based on the direction of travel of packets to which they apply. This section gives some examples of why you might configure firewall rules for specific connection directions.

By default, the ZyWALL allows packets traveling in the following directions.:

- LAN to LAN These rules specify which computers on the LAN can manage the ZyWALL (remote management) and communicate between networks or subnets connected to the LAN interface (IP alias).



You can also configure the remote management settings to allow only a specific computer to manage the ZyWALL.

- LAN to WAN 1 These rules specify which computers on the LAN can access which computers or services connected to WAN 1. See Section 11.5 on page 248 for an example.

By default, the ZyWALL drops packets traveling in the following directions.

- WAN 1 to LAN These rules specify which computers connected to WAN 1 can access which computers or services on the LAN. For example, you may create rules to:
  - Allow certain types of traffic, such as Lotus Notes database synchronization, from specific hosts on the Internet to specific hosts on the LAN.
  - Allow public access to a Web server on your protected network. You could also block certain IP addresses from accessing it.



You also need to configure NAT port forwarding (or full featured NAT address mapping rules) to allow computers on the WAN to access devices on the LAN. See Section 17.5.3 on page 395 for an example.

- WAN to WAN By default the ZyWALL stops computers connected to WAN1 or WAN2 from managing the ZyWALL or using the ZyWALL as a gateway to communicate with other computers on the WAN. You could configure one of these rules to allow a WAN computer to manage the ZyWALL.

You also need to configure the remote management settings to allow a WAN computer to manage the ZyWALL.


See Chapter 4 on page 101 for information about packets traveling to or from the VPN tunnels.

11.3.1 To VPN Packet Direction

The ZyWALL can apply firewall rules to traffic before encrypting it to send through a VPN tunnel. **To VPN** means traffic that comes in through the selected "from" interface and goes out through any of the ZyWALL's VPN tunnels. For example, **From LAN To VPN** specifies the traffic that is coming from the LAN and going out through any of the ZyWALL's VPN tunnels.


For example, by default the **From LAN To VPN** default firewall rule allows traffic from the LAN computers to go out through any of the ZyWALL's VPN tunnels. You could configure the **From DMZ To VPN** default rule to set the ZyWALL to silently block traffic from the DMZ computers from going out through any of the ZyWALL's VPN tunnels.

Figure 147 From LAN to VPN Example

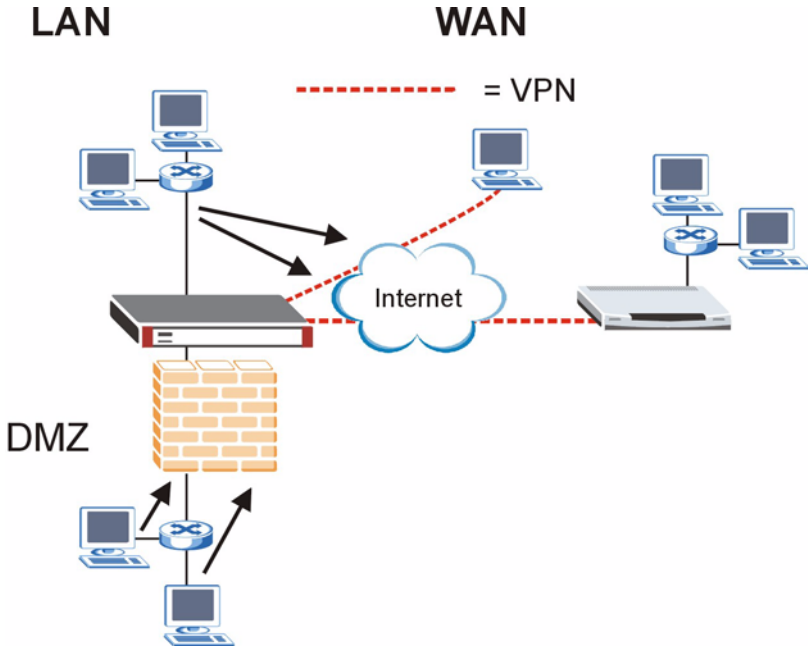

In order to do this, you would configure the **SECURITY > FIREWALL > Default Rule** screen as follows.

Figure 148 Block DMZ to VPN Traffic by Default Example

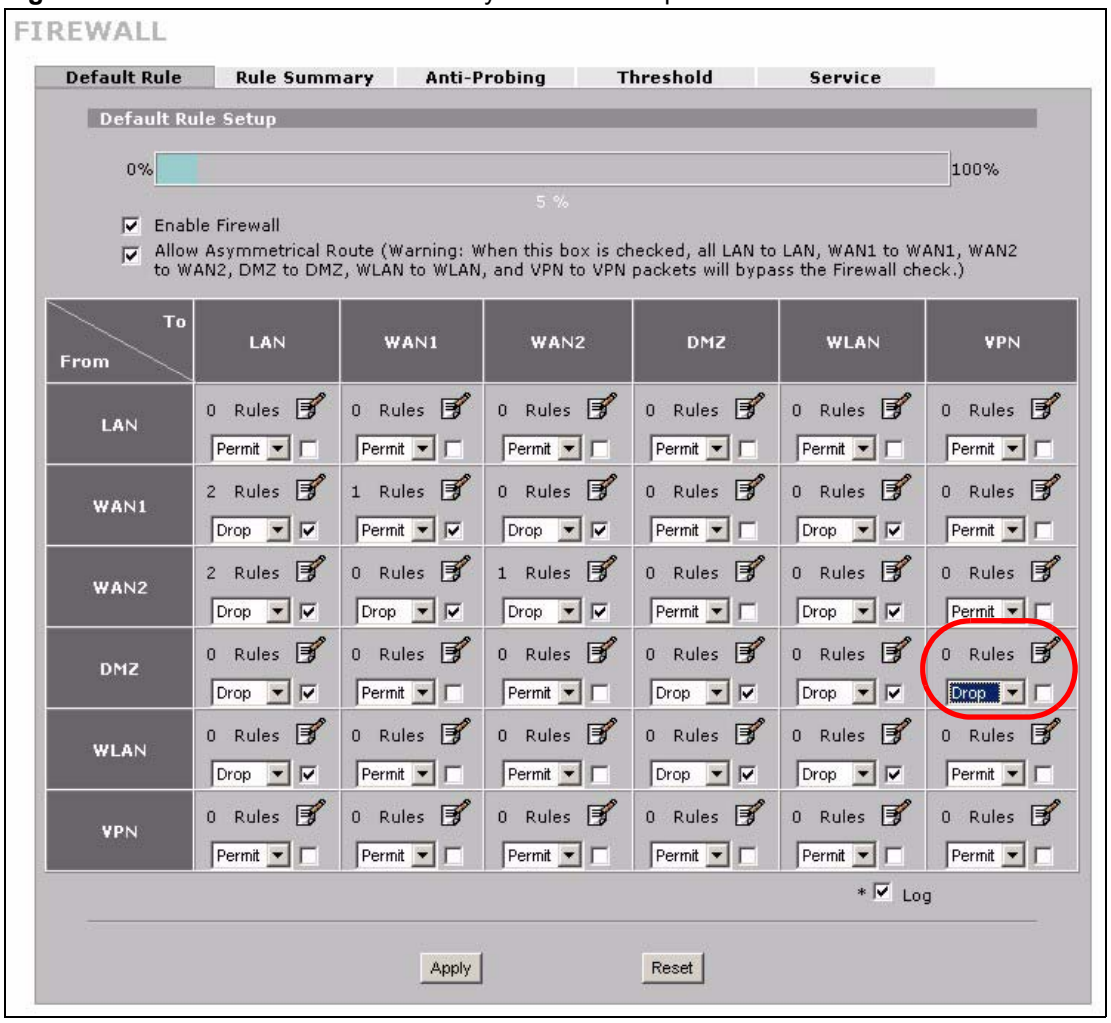


11.3.2 From VPN Packet Direction

You can also apply firewall rules to traffic that comes in through the ZyWALL's VPN tunnels. The ZyWALL decrypts the VPN traffic and then applies the firewall rules. **From VPN** means traffic that came into the ZyWALL through a VPN tunnel and is going to the selected "to" interface.


For example, by default the firewall allows traffic from any VPN tunnel to go to any of the ZyWALL's interfaces, the ZyWALL itself and other VPN tunnels. You could edit the **From VPN To LAN** default firewall rule to silently block traffic from the VPN tunnels from going to the LAN computers.

Figure 149 From VPN to LAN Example

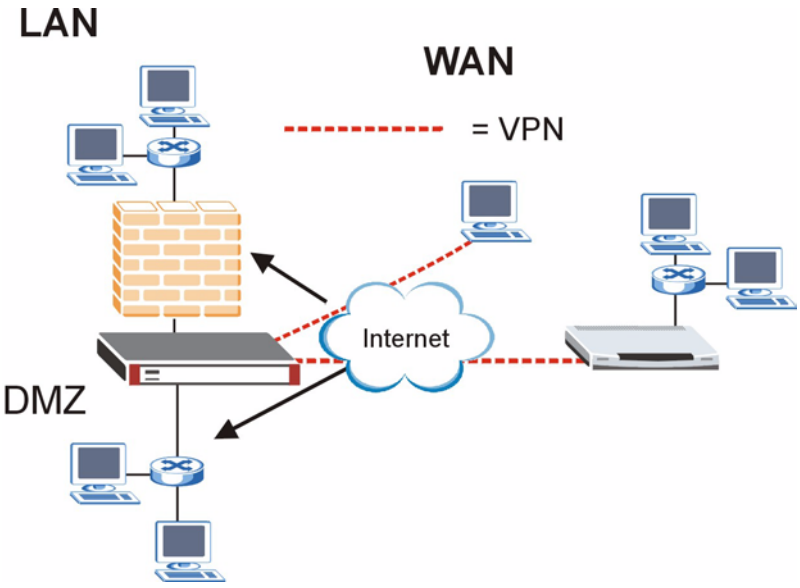

In order to do this, you would configure the **SECURITY > FIREWALL > Default Rule** screen as follows.

Figure 150 Block VPN to LAN Traffic by Default Example

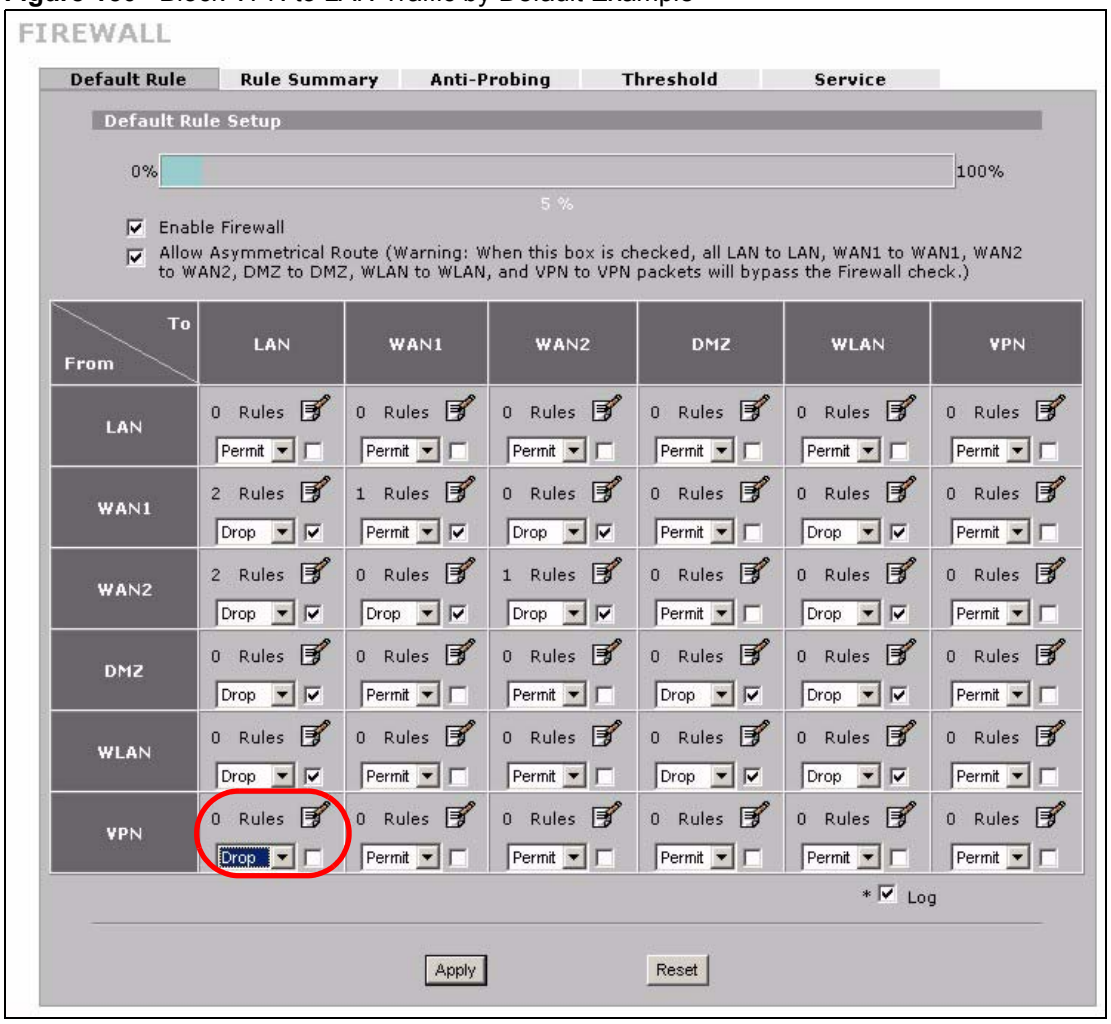


11.3.3 From VPN To VPN Packet Direction

From VPN To VPN firewall rules apply to traffic that comes in through one of the ZyWALL's VPN tunnels and terminates at the ZyWALL (like for remote management) or goes out through another of the ZyWALL's VPN tunnels (this is called hub-and-spoke VPN, see Section 14.20 on page 344 for details). The ZyWALL decrypts the traffic and applies the firewall rules before re-encrypting it or allowing the traffic to terminate at the ZyWALL.


In the following example, the **From VPN To VPN** default firewall rule silently blocks the traffic that the ZyWALL receives from any VPN tunnel (either A or B) that is destined for the other VPN tunnel or the ZyWALL itself. VPN traffic destined for the DMZ is allowed through.

Figure 151 From VPN to VPN Example

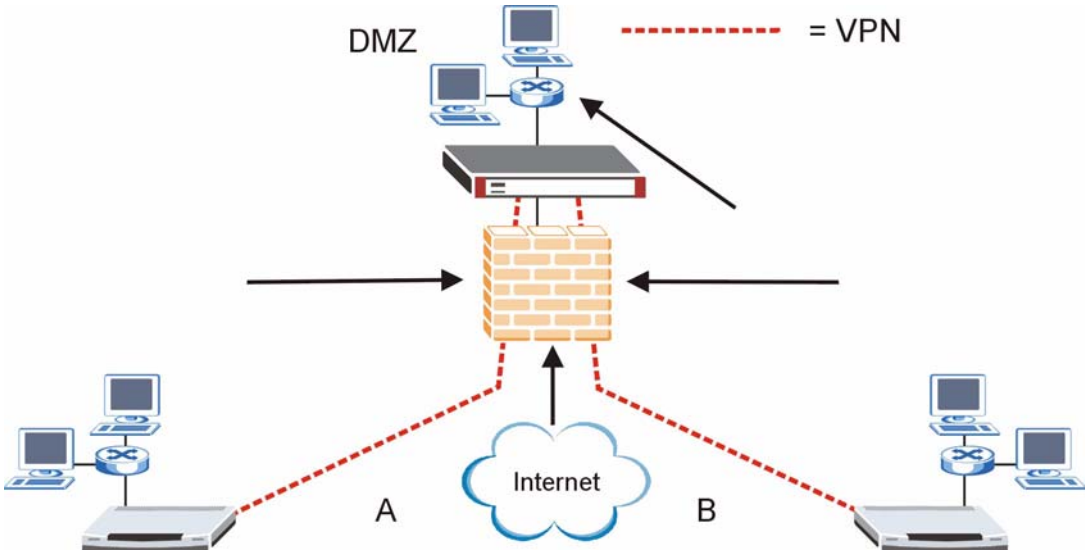

You would configure the **SECURITY > FIREWALL > Default Rule** screen as follows.

Figure 152 Block VPN to VPN Traffic by Default Example

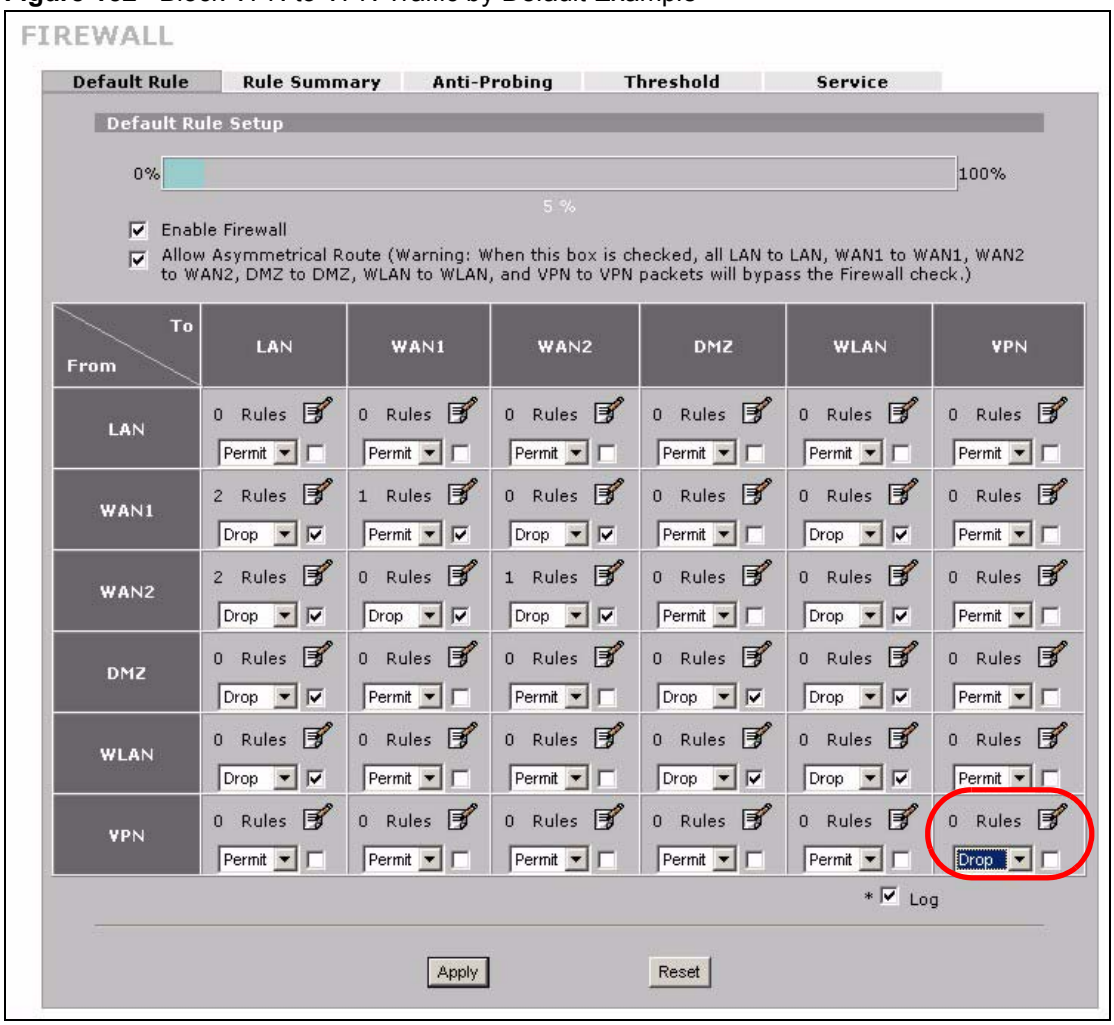

11.4 Security Considerations

Incorrectly configuring the firewall may block valid access or introduce security risks to the ZyWALL and your protected network. Use caution when creating or deleting firewall rules and test your rules after you configure them.

Consider these security ramifications before creating a rule:


1. Does this rule stop LAN users from accessing critical resources on the Internet? For example, if IRC is blocked, are there users that require this service?
2. Is it possible to modify the rule to be more specific? For example, if IRC is blocked for all users, will a rule that blocks just certain users be more effective?
3. Does a rule that allows Internet users access to resources on the LAN create a security vulnerability? For example, if FTP ports (TCP 20, 21) are allowed from the Internet to the LAN, Internet users may be able to connect to computers with running FTP servers.
4. Does this rule conflict with any existing rules?

Once these questions have been answered, adding rules is simply a matter of entering the information into the correct fields in the web configurator screens.

11.5 Firewall Rules Example

Suppose that your company decides to block all of the LAN users from using IRC (Internet Relay Chat) through the Internet. To do this, you would configure a LAN to WAN firewall rule that blocks IRC traffic from any source IP address from going to any destination address. You do not need to specify a schedule since you need the firewall rule to always be in effect. The following figure shows the results of this rule.

Figure 153 Blocking All LAN to WAN IRC Traffic Example

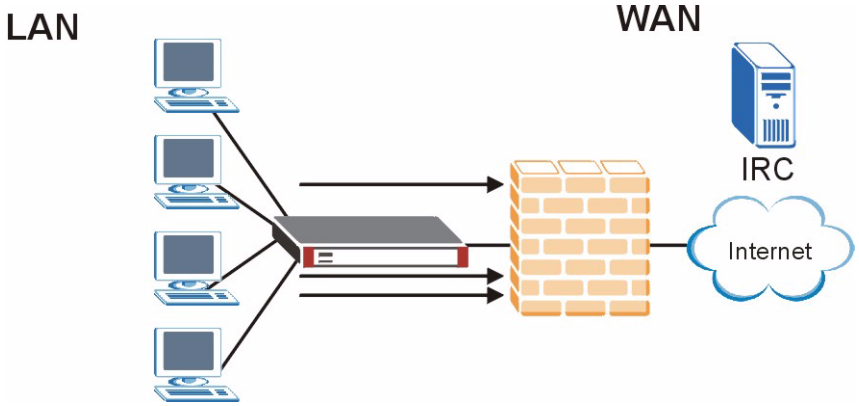

Your firewall would have the following configuration.

Table 66 Blocking All LAN to WAN IRC Traffic Example

#	SOURCE	DESTINATION	SCHEDULE	SERVICE	ACTION
1	Any	Any	Any	IRC	Drop
Default	Any	Any	Any	Any	Allow

- The first row blocks LAN access to the IRC service on the WAN.
- The second row is the firewall's default policy that allows all traffic from the LAN to go to the WAN.


The ZyWALL applies the firewall rules in order. So for this example, when the ZyWALL receives traffic from the LAN, it checks it against the first rule. If the traffic matches (if it is IRC traffic) the firewall takes the action in the rule (drop) and stops checking the firewall rules. Any traffic that does not match the first firewall rule will match the default rule and the ZyWALL forwards it.

Now suppose that your company wants to let the CEO use IRC. You can configure a LAN to WAN firewall rule that allows IRC traffic from the IP address of the CEO's computer. In order to make sure that the CEO's computer always uses the same IP address, make sure it either:

- has a static IP address,
- or you configure a static DHCP entry for it so the ZyWALL always assigns it the same IP address (see Section 6.8 on page 153 for information on static DHCP).

Now you configure a LAN to WAN firewall rule that allows IRC traffic from the IP address of the CEO's computer (192.168.1.7 for example) to go to any destination address. You do not need to specify a schedule since you want the firewall rule to always be in effect. The following figure shows the results of your two custom rules.

Figure 154 Limited LAN to WAN IRC Traffic Example

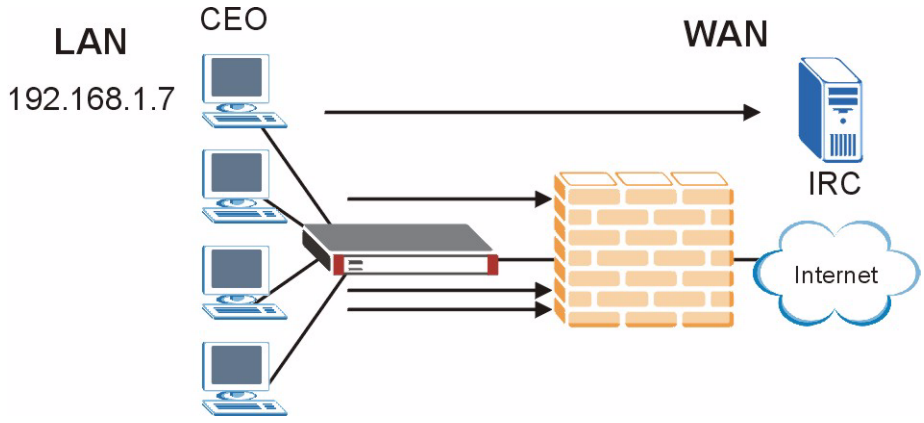

Your firewall would have the following configuration.

Table 67 Limited LAN to WAN IRC Traffic Example

#	SOURCE	DESTINATION	SCHEDULE	SERVICE	ACTION
1	192.168.1.7	Any	Any	IRC	Allow
2	Any	Any	Any	IRC	Drop
Default	Any	Any	Any	Any	Allow

- The first row allows the LAN computer at IP address 192.168.1.7 to access the IRC service on the WAN.
- The second row blocks LAN access to the IRC service on the WAN.
- The third row is (still) the firewall's default policy of allowing all traffic from the LAN to go to the WAN.

The rule for the CEO must come before the rule that blocks all LAN to WAN IRC traffic. If the rule that blocks all LAN to WAN IRC traffic came first, the CEO's IRC traffic would match that rule and the ZyWALL would drop it and not check any other firewall rules.

11.6 Asymmetrical Routes

If an alternate gateway on the LAN has an IP address in the same subnet as the ZyWALL's LAN IP address, return traffic may not go through the ZyWALL. This is called an asymmetrical or "triangle" route. This causes the ZyWALL to reset the connection, as the connection has not been acknowledged.

You can have the ZyWALL permit the use of asymmetrical route topology on the network (not reset the connection).

Allowing asymmetrical routes may let traffic from the WAN go directly to the LAN without passing through the ZyWALL. A better solution is to use IP alias to put the ZyWALL and the backup gateway on separate subnets.


11.6.1 Asymmetrical Routes and IP Alias

You can use IP alias instead of allowing asymmetrical routes. IP Alias allow you to partition your network into logical sections over the same interface.

By putting your LAN and Gateway **A** in different subnets, all returning network traffic must pass through the ZyWALL to your LAN. The following steps describe such a scenario.

1. A computer on the LAN initiates a connection by sending a SYN packet to a receiving server on the WAN.
2. The ZyWALL reroutes the packet to Gateway **A**, which is in **Subnet 2**.
3. The reply from the WAN goes to the ZyWALL.
4. The ZyWALL then sends it to the computer on the LAN in **Subnet 1**.

Figure 155 Using IP Alias to Solve the Triangle Route Problem

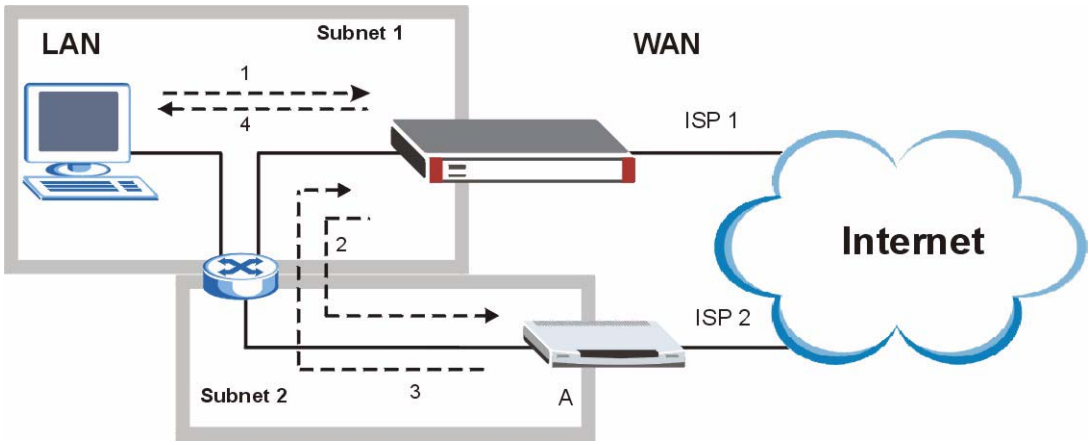


11.7 Firewall Default Rule (Router Mode)

Click **SECURITY** > **FIREWALL** to open the **Default Rule** screen.

Use this screen to configure general firewall settings when the ZyWALL is set to router mode.

Figure 156 SECURITY > FIREWALL > Default Rule (Router Mode)

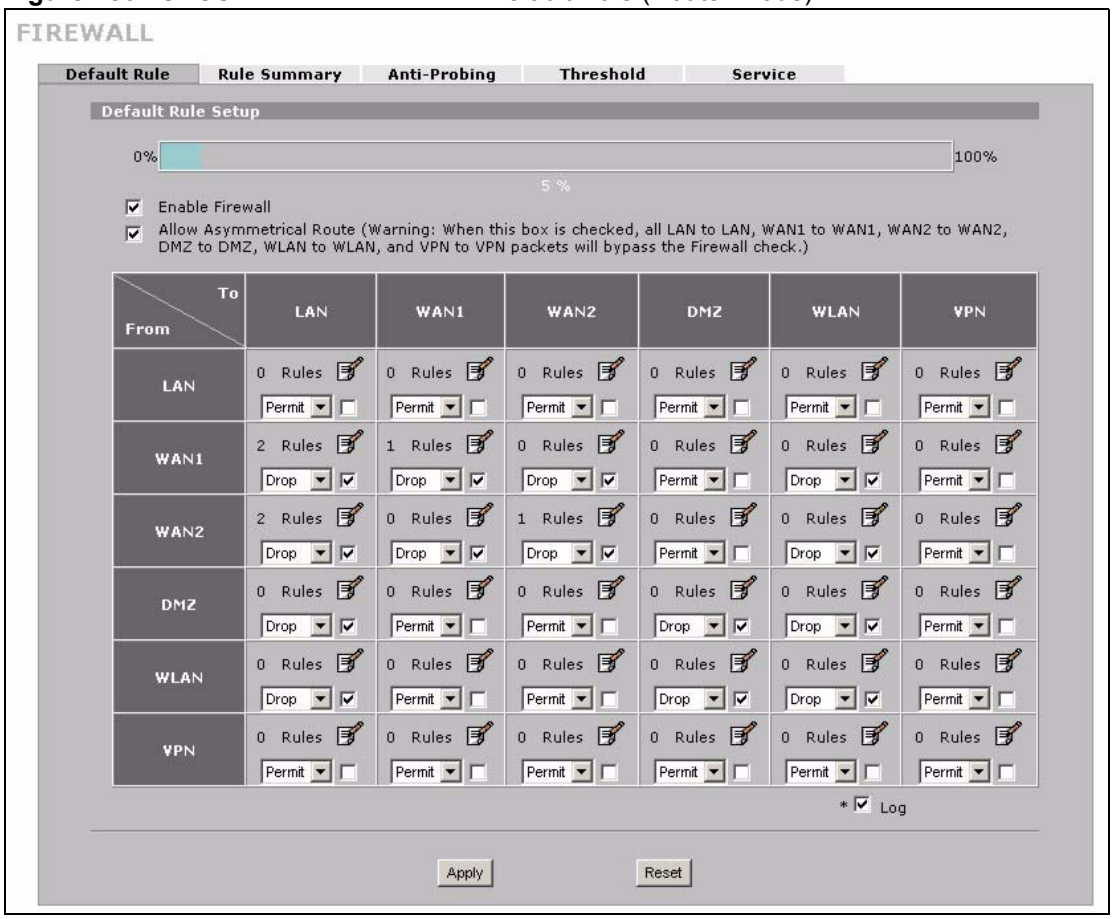

The following table describes the labels in this screen.

Table 68 SECURITY > FIREWALL > Default Rule (Router Mode)

LABEL	DESCRIPTION
0-100%	This bar displays the percentage of the ZyWALL's firewall rules storage space that is currently in use. When the storage space is almost full, you should consider deleting unnecessary firewall rules before adding more firewall rules.
Enable Firewall	Select this check box to activate the firewall. The ZyWALL performs access control and protects against Denial of Service (DoS) attacks when the firewall is activated. Note: When you activate the firewall, all current connections through the ZyWALL are dropped when you apply your changes.
Allow Asymmetrical Route	If an alternate gateway on the LAN has an IP address in the same subnet as the ZyWALL's LAN IP address, return traffic may not go through the ZyWALL. This is called an asymmetrical or "triangle" route. This causes the ZyWALL to reset the connection, as the connection has not been acknowledged. Select this check box to have the ZyWALL permit the use of asymmetrical route topology on the network (not reset the connection). Note: Allowing asymmetrical routes may let traffic from the WAN go directly to the LAN without passing through the ZyWALL. A better solution is to use IP alias to put the ZyWALL and the backup gateway on separate subnets. See Section 11.6.1 on page 250 for an example.

Table 68 SECURITY > FIREWALL > Default Rule (Router Mode) (continued)


LABEL	DESCRIPTION
From, To	The firewall rules are grouped by the direction of packet travel. This displays the number of rules for each packet direction. Click the edit icon to go to a summary screen of the rules for that packet direction. Here are some example descriptions of the directions of travel. **From LAN To LAN** means packets traveling from a computer on one LAN subnet to a computer on another LAN subnet on the LAN interface of the ZyWALL or the ZyWALL itself. The ZyWALL does not apply the firewall to packets traveling from a LAN computer to another LAN computer on the same subnet. **From VPN** means traffic that came into the ZyWALL through a VPN tunnel and is going to the selected "to" interface. For example, **From VPN To LAN** specifies the VPN traffic that is going to the LAN. The ZyWALL applies the firewall to the traffic after decrypting it. **To VPN** is traffic that comes in through the selected "from" interface and goes out through any VPN tunnel. For example, **From LAN To VPN** specifies the traffic that is coming from the LAN and going out through a VPN tunnel. The ZyWALL applies the firewall to the traffic before encrypting it. **From VPN To VPN** means traffic that comes in through a VPN tunnel and goes out through (another) VPN tunnel or terminates at the ZyWALL. This is the case when the ZyWALL is the hub in a hub-and-spoke VPN. This is also the case if you allow someone to use a service (like Telnet or HTTP) through a VPN tunnel to manage the ZyWALL. The ZyWALL applies the firewall to the traffic after decrypting it. Note: The VPN connection directions apply to the traffic going to or from the ZyWALL's VPN tunnels. They do not apply to other VPN traffic for which the ZyWALL is not one of the gateways (VPN pass-through traffic). Use the drop-down list box to set the firewall's default actions based on the direction of travel of packets. Select **Drop** to silently discard the packets without sending a TCP reset packet or an ICMP destination-unreachable message to the sender. Select **Reject** to deny the packets and send a TCP reset packet (for a TCP packet) or an ICMP destination-unreachable message (for a UDP packet) to the sender. Select **Permit** to allow the passage of the packets. The firewall rules for the WAN port with a higher route priority also apply to the dial backup connection.
Log	Select the check box next to a direction of packet travel to create a log when the above action is taken for packets that are traveling in that direction and do not match any of your customized rules.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

11.8 Firewall Default Rule (Bridge Mode)

Click **SECURITY** > **FIREWALL** to open the **Default Rule** screen.

Use this screen to configure general firewall settings when the ZyWALL is set to bridge mode. See Section 11.1 on page 239 for more information about the firewall.

Figure 157 SECURITY > FIREWALL > Default Rule (Bridge Mode)

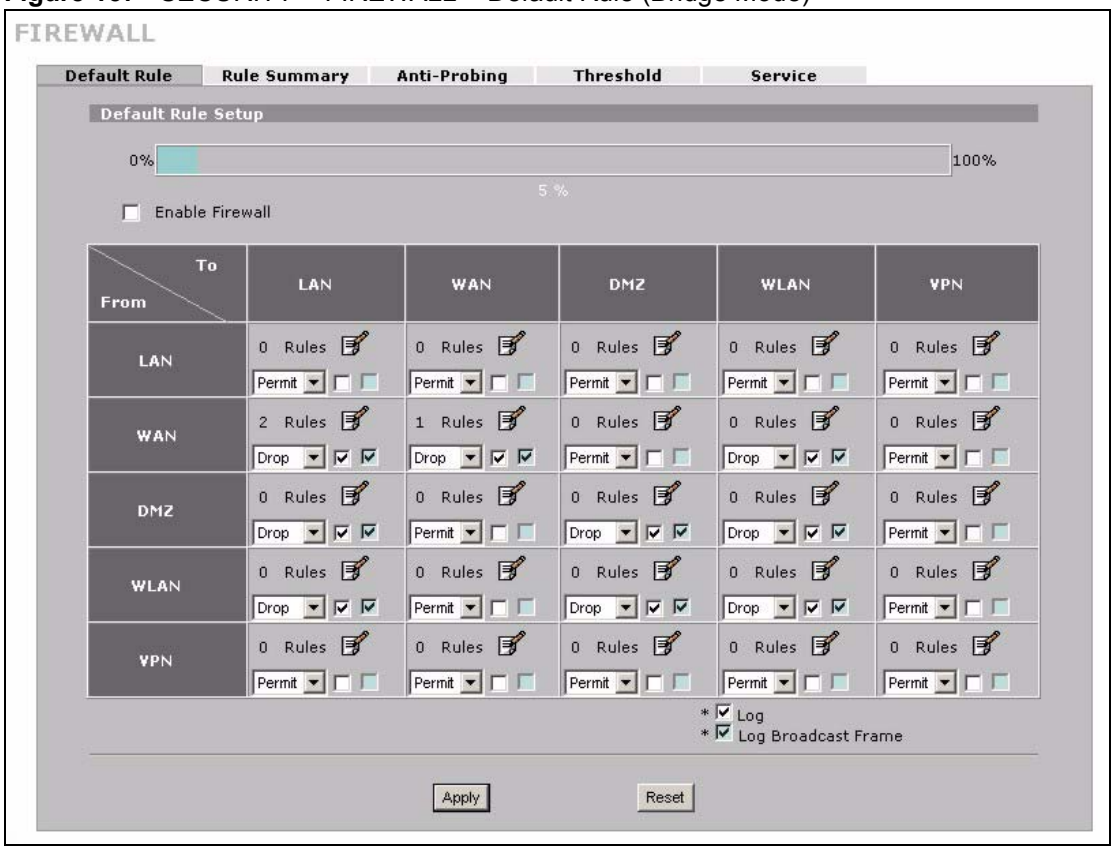

The following table describes the labels in this screen.

Table 69 SECURITY > FIREWALL > Default Rule (Bridge Mode)

LABEL	DESCRIPTION
0-100%	This bar displays the percentage of the ZyWALL's firewall rules storage space that is currently in use. When the storage space is almost full, you should consider deleting unnecessary firewall rules before adding more firewall rules.
Enable Firewall	Select this check box to activate the firewall. The ZyWALL performs access control and protects against Denial of Service (DoS) attacks when the firewall is activated. Note: When you activate the firewall, all current connections through the ZyWALL are dropped when you apply your changes.

Table 69 SECURITY > FIREWALL > Default Rule (Bridge Mode)

LABEL	DESCRIPTION
From, To	The firewall rules are grouped by the direction of packet travel. This displays the number of rules for each packet direction. Click the edit icon to go to a summary screen of the rules for that packet direction. Here are some example descriptions of the directions of travel. **From LAN To LAN** means packets traveling from a computer on one LAN subnet to a computer on another LAN subnet on the LAN interface of the ZyWALL or the ZyWALL itself. The ZyWALL does not apply the firewall to packets traveling from a LAN computer to another LAN computer on the same subnet. **From VPN** means traffic that came into the ZyWALL through a VPN tunnel and is going to the selected "to" interface. For example, **From VPN To LAN** specifies the VPN traffic that is going to the LAN. The ZyWALL applies the firewall to the traffic after decrypting it. **To VPN** is traffic that comes in through the selected "from" interface and goes out through any VPN tunnel. For example, **From LAN To VPN** specifies the traffic that is coming from the LAN and going out through a VPN tunnel. The ZyWALL applies the firewall to the traffic before encrypting it. **From VPN To VPN** means traffic that comes in through a VPN tunnel and goes out through (another) VPN tunnel or terminates at the ZyWALL. This is the case when the ZyWALL is the hub in a hub-and-spoke VPN. This is also the case if you allow someone to use a service (like Telnet or HTTP) through a VPN tunnel to manage the ZyWALL. The ZyWALL applies the firewall to the traffic after decrypting it. Note: The VPN connection directions apply to the traffic going to or from the ZyWALL's VPN tunnels. They do not apply to other VPN traffic for which the ZyWALL is not one of the gateways (VPN pass-through traffic). Use the drop-down list box to set the firewall's default actions based on the direction of travel of packets. Select **Drop** to silently discard the packets without sending a TCP reset packet or an ICMP destination-unreachable message to the sender. Select **Reject** to deny the packets and send a TCP reset packet (for a TCP packet) or an ICMP destination-unreachable message (for a UDP packet) to the sender. Select **Permit** to allow the passage of the packets. The firewall rules for the WAN port with a higher route priority also apply to the dial backup connection.
Log	Select this to create a log when the above action is taken.
Log Broadcast Frame	Select this to create a log for any broadcast frames traveling in the selected direction. Many of these logs in a short time period could indicate a broadcast storm. A broadcast storm occurs when a packet triggers multiple responses from all hosts on a network or when computers attempt to respond to a host that never replies. As a result, duplicated packets are continuously created and circulated in the network, thus reducing network performance or even rendering it inoperable. A broadcast storm can be caused by an attack on the network, an incorrect network topology (such as a bridge loop) or a malfunctioning network device.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.


11.9 Firewall Rule Summary

Click **SECURITY** > **FIREWALL** > **Rule Summary** to open the screen. This screen displays a list of the configured firewall rules.

The ordering of your rules is very important as rules are applied in the order that they are listed.

See Section 11.1 on page 239 for more information about the firewall.

Figure 158 SECURITY > FIREWALL > Rule Summary

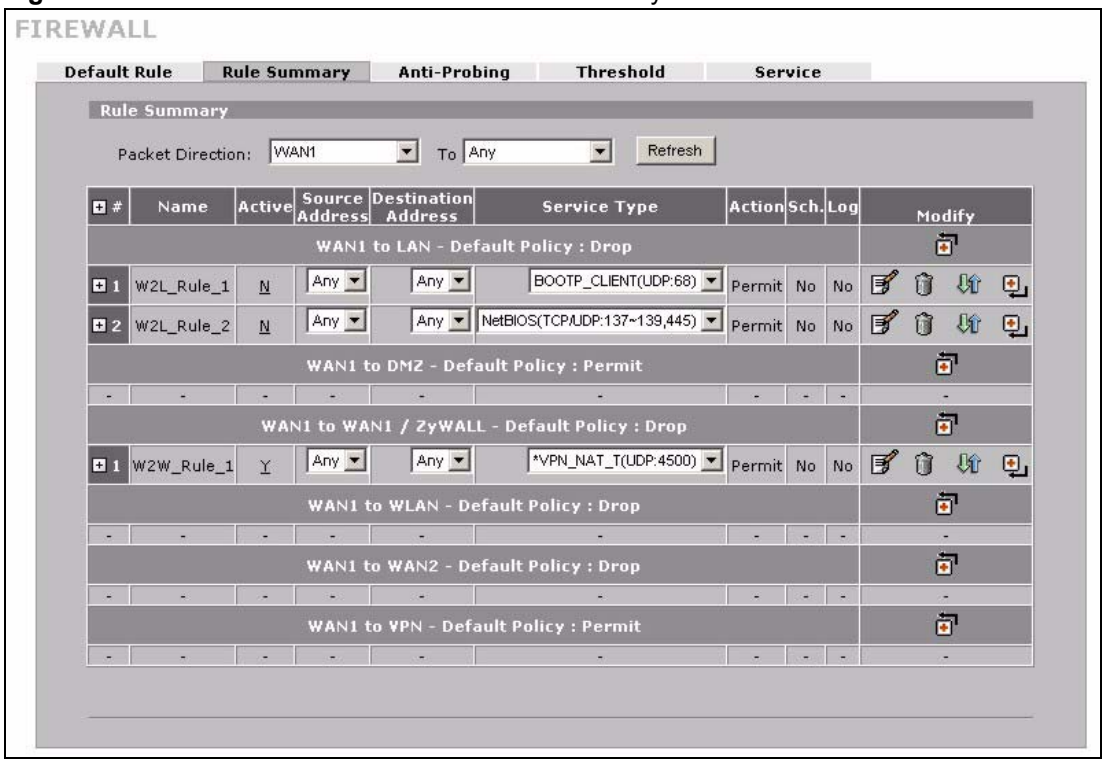

The following table describes the labels in this screen.

Table 70 SECURITY > FIREWALL > Rule Summary

LABEL	DESCRIPTION
Packet Direction	Use the drop-down list boxes and click **Refresh** to select a direction of travel of packets for which you want to display firewall rules. Note: The VPN connection directions apply to the traffic going to or from the ZyWALL's VPN tunnels. They do not apply to other VPN traffic for which the ZyWALL is not one of the gateways (VPN pass-through traffic).
+/-	In the heading row, click + to expand or - to collapse the **Source Address**, **Destination Address** and **Service Type** drop down lists for all of the displayed rules.
Default Policy	This field displays the default action you selected in the **Default Rule** screen for the packet direction displayed.
The following fields summarize the rules you have created that apply to traffic traveling in the selected packet direction. The firewall rules that you configure (summarized below) take priority over the general firewall action settings above.	

Table 70 SECURITY > FIREWALL > Rule Summary

LABEL	DESCRIPTION
#	This is your firewall rule number. The ordering of your rules is important as rules are applied in turn. Click + to expand or - to collapse the **Source Address**, **Destination Address** and **Service Type** drop down lists.
Name	This is the name of the firewall rule.
Active	This field displays whether a firewall is turned on (**Y**) or not (**N**). Click the setting to change it.
Source Address	This drop-down list box displays the source addresses or ranges of addresses to which this firewall rule applies. Please note that a blank source or destination address is equivalent to **Any**.
Destination Address	This drop-down list box displays the destination addresses or ranges of addresses to which this firewall rule applies. Please note that a blank source or destination address is equivalent to **Any**.
Service Type	This drop-down list box displays the services to which this firewall rule applies. Custom services have an * before the name. See Appendix D on page 737 for a list of common services.
Action	This field displays whether the firewall silently discards packets (**Drop**), discards packets and sends a TCP reset packet or an ICMP destination-unreachable message to the sender (**Reject**) or allows the passage of packets (**Permit**).
Sch.	This field tells you whether a schedule is specified (**Yes**) or not (**No**).
Log	This field shows you whether a log is created when packets match this rule (**Yes**) or not (**No**).
Modify	Click the edit icon to go to the screen where you can edit the rule. Click the delete icon to delete an existing firewall rule. A window displays asking you to confirm that you want to delete the firewall rule. Note that subsequent firewall rules move up by one when you take this action. Click the insert icon to display the screen where you can configure a new firewall rule. The insert icon at the top of the row creates the new firewall rule before the others. The individual firewall rule insert icons create a new firewall rule after the row's firewall rule. Click the move icon, type an index number, and press Enter to move the rule to the number that you typed. The ordering of your rules is important as they are applied in order of their numbering.


11.9.1 Firewall Edit Rule

In the **Rule Summary** screen, click the edit icon or the insert icon to display the **Firewall Edit Rule** screen.

Use this screen to create or edit a firewall rule. Refer to the following table for information on the labels.

See Section 11.1 on page 239 for more information about the firewall.

Figure 159 SECURITY > FIREWALL > Rule Summary > Edit

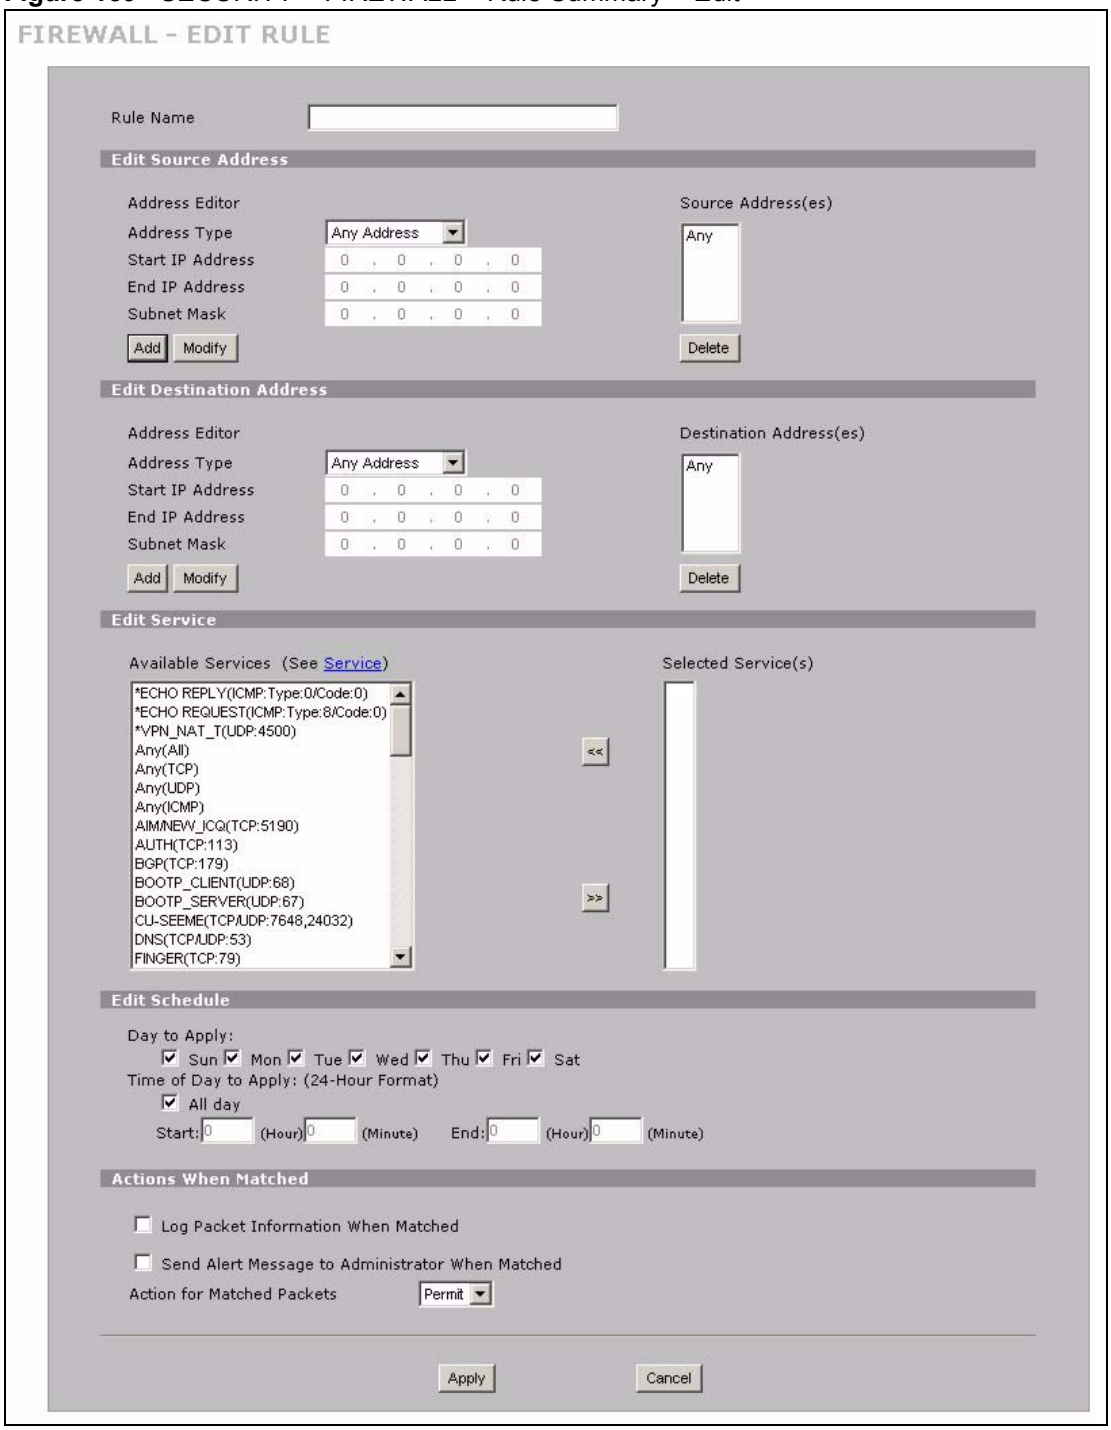

The following table describes the labels in this screen.

Table 71 SECURITY > FIREWALL > Rule Summary > Edit

LABEL	DESCRIPTION
Rule Name	Enter a descriptive name of up to 31 printable ASCII characters (except Extended ASCII characters) for the firewall rule. Spaces are allowed.
Edit Source/ Destination Address	
Address Type	Do you want your rule to apply to packets with a particular (single) IP, a range of IP addresses (for example 192.168.1.10 to 192.169.1.50), a subnet or any IP address? Select an option from the drop-down list box that includes: **Single Address**, **Range Address**, **Subnet Address** and **Any Address**.
Start IP Address	Enter the single IP address or the starting IP address in a range here.
End IP Address	Enter the ending IP address in a range here.
Subnet Mask	Enter the subnet mask here, if applicable.
Add	Click **Add** to add a new address to the **Source** or **Destination Address(es)** box. You can add multiple addresses, ranges of addresses, and/or subnets.
Modify	To edit an existing source or destination address, select it from the box and click **Modify**.
Delete	Highlight an existing source or destination address from the **Source** or **Destination Address(es)** box above and click **Delete** to remove it.
Edit Service	
Available/ Selected Services	Highlight a service from the **Available Services** box on the left, then click **>>** to add it to the **Selected Service(s)** box on the right. To remove a service, highlight it in the **Selected Service(s)** box on the right, then click **<<**. Next to the name of a service, two fields appear in brackets. The first field indicates the IP protocol type (TCP, UDP, or ICMP). The second field indicates the IP port number that defines the service. (Note that there may be more than one IP protocol type). For example, look at the DNS entry, (UDP/TCP:53) means UDP port 53 and TCP port 53. Click the **Service** link to go to the **Service** screen where you can configure custom service ports. See Appendix D on page 737 for a list of commonly used services and port numbers. You can use the [CTRL] key and select multiple services at once.
Edit Schedule	
Day to Apply	Select everyday or the day(s) of the week to apply the rule.
Time of Day to Apply (24-Hour Format)	Select **All Day** or enter the start and end times in the hour-minute format to apply the rule.
Actions When Matched	
Log Packet Information When Matched	This field determines if a log for packets that match the rule is created (**Yes**) or not (**No**). Go to the **Log Settings** page and select the **Access Control** logs category to have the ZyWALL record these logs.
Send Alert Message to Administrator When Matched	Select the check box to have the ZyWALL generate an alert when the rule is matched.


Table 71 SECURITY > FIREWALL > Rule Summary > Edit

LABEL	DESCRIPTION
Action for Matched Packets	Use the drop-down list box to select what the firewall is to do with packets that match this rule. Select **Drop** to silently discard the packets without sending a TCP reset packet or an ICMP destination-unreachable message to the sender. Select **Reject** to deny the packets and send a TCP reset packet (for a TCP packet) or an ICMP destination-unreachable message (for a UDP packet) to the sender. Select **Permit** to allow the passage of the packets. Note: You also need to configure NAT port forwarding (or full featured NAT address mapping rules) if you want to allow computers on the WAN to access devices on the LAN. Note: You may also need to configure the remote management settings if you want to allow a WAN computer to manage the ZyWALL or restrict management from the LAN.
Apply	Click **Apply** to save your customized settings and exit this screen.
Cancel	Click **Cancel** to exit this screen without saving.

11.10 Anti-Probing

Click **SECURITY > FIREWALL > Anti-Probing** to open the following screen. Configure this screen to help keep the ZyWALL hidden from probing attempts. You can specify which of the ZyWALL's interfaces will respond to Ping requests and whether or not the ZyWALL is to respond to probing for unused ports.

Figure 160 SECURITY > FIREWALL > Anti-Probing

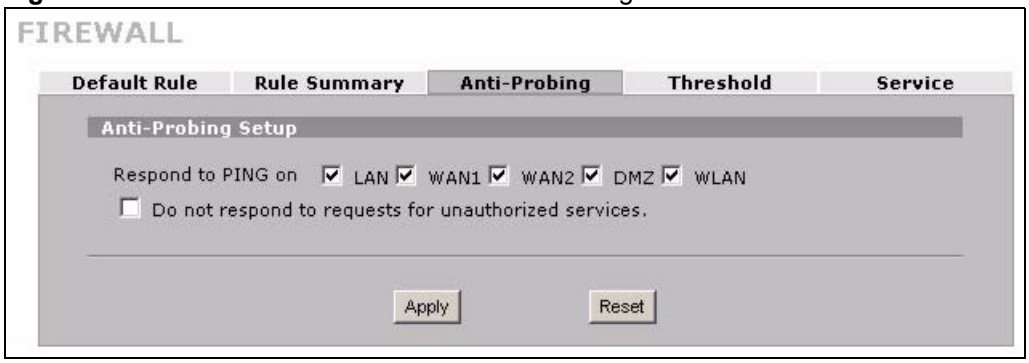

The following table describes the labels in this screen.

Table 72 SECURITY > FIREWALL > Anti-Probing


LABEL	DESCRIPTION
Respond to PING on	Select the check boxes of the interfaces that you want to reply to incoming Ping requests. Clear an interface's check box to have the ZyWALL not respond to any Ping requests that come into that interface.
Do not respond to requests for unauthorized services.	Select this option to prevent hackers from finding the ZyWALL by probing for unused ports. If you select this option, the ZyWALL will not respond to port request(s) for unused ports, thus leaving the unused ports and the ZyWALL unseen. If this option is not selected, the ZyWALL will reply with an ICMP port unreachable packet for a port probe on its unused UDP ports and a TCP reset packet for a port probe on its unused TCP ports. Note that the probing packets must first traverse the ZyWALL's firewall rule checks before reaching this anti-probing mechanism. Therefore if a firewall rule stops a probing packet, the ZyWALL reacts based on the firewall rule to either send a TCP reset packet for a blocked TCP packet (or an ICMP port-unreachable packet for a blocked UDP packets) or just drop the packets without sending a response packet.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

11.11 Firewall Thresholds

For DoS attacks, the ZyWALL uses thresholds to determine when to start dropping sessions that do not become fully established (half-open sessions). These thresholds apply globally to all sessions.

For TCP, half-open means that the session has not reached the established state-the TCP three-way handshake has not yet been completed. Under normal circumstances, the application that initiates a session sends a SYN (synchronize) packet to the receiving server. The receiver sends back an ACK (acknowledgment) packet and its own SYN, and then the initiator responds with an ACK (acknowledgment). After this handshake, a connection is established.

Figure 161 Three-Way Handshake

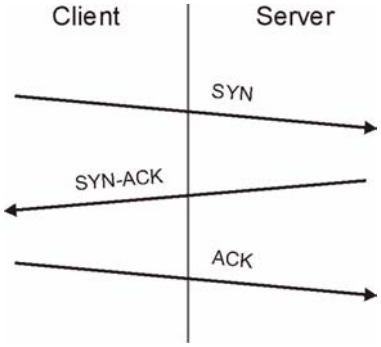

For UDP, half-open means that the firewall has detected no return traffic. An unusually high number (or arrival rate) of half-open sessions could indicate a DOS attack.

11.11.1 Threshold Values

If everything is working properly, you probably do not need to change the threshold settings as the default threshold values should work for most small offices. Tune these parameters when you believe the ZyWALL has been receiving DoS attacks that are not recorded in the logs or the logs show that the ZyWALL is classifying normal traffic as DoS attacks. Factors influencing choices for threshold values are:

1. The maximum number of opened sessions.
2. The minimum capacity of server backlog in your LAN network.
3. The CPU power of servers in your LAN network.
4. Network bandwidth.
5. Type of traffic for certain servers.


Reduce the threshold values if your network is slower than average for any of these factors (especially if you have servers that are slow or handle many tasks and are often busy).

If you often use P2P applications such as file sharing with eMule or eDonkey, it's recommended that you increase the threshold values since lots of sessions will be established during a small period of time and the ZyWALL may classify them as DoS attacks.

11.12 Threshold Screen

Click **SECURITY > FIREWALL > Threshold** to bring up the next screen. The global values specified for the threshold and timeout apply to all TCP connections.

Figure 162 SECURITY > FIREWALL > Threshold

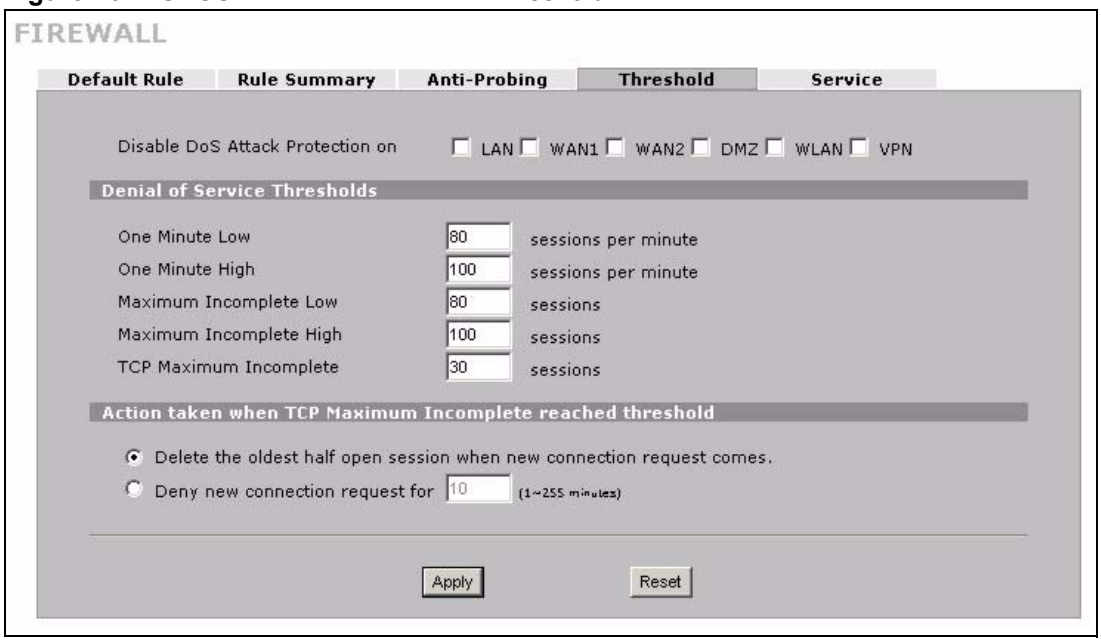

The following table describes the labels in this screen.

Table 73 SECURITY > FIREWALL > Threshold


LABEL	DESCRIPTION
Disable DoS Attack Protection on	Select the check boxes of any interfaces (or all VPN tunnels) for which you want the ZyWALL to not use the Denial of Service protection thresholds. This disables DoS protection on the selected interface (or all VPN tunnels). You may want to disable DoS protection for an interface if the ZyWALL is treating valid traffic as DoS attacks. Another option would be to raise the thresholds.
Denial of Service Thresholds	The ZyWALL measures both the total number of existing half-open sessions and the rate of session establishment attempts. Both TCP and UDP half-open sessions are counted in the total number and rate measurements. Measurements are made once a minute.
One Minute Low	This is the rate of new half-open sessions per minute that causes the firewall to stop deleting half-open sessions. The ZyWALL continues to delete half-open sessions as necessary, until the rate of new connection attempts drops below this number.
One Minute High	This is the rate of new half-open sessions per minute that causes the firewall to start deleting half-open sessions. When the rate of new connection attempts rises above this number, the ZyWALL deletes half-open sessions as required to accommodate new connection attempts. For example, if you set the one minute high to 100, the ZyWALL starts deleting half-open sessions when more than 100 session establishment attempts have been detected in the last minute. It stops deleting half-open sessions when the number of session establishment attempts detected in a minute goes below the number set as the one minute low.
Maximum Incomplete Low	This is the number of existing half-open sessions that causes the firewall to stop deleting half-open sessions. The ZyWALL continues to delete half-open requests as necessary, until the number of existing half-open sessions drops below this number.
Maximum Incomplete High	This is the number of existing half-open sessions that causes the firewall to start deleting half-open sessions. When the number of existing half-open sessions rises above this number, the ZyWALL deletes half-open sessions as required to accommodate new connection requests. Do not set **Maximum Incomplete High** to lower than the current **Maximum Incomplete Low** number. For example, if you set the maximum incomplete high to 100, the ZyWALL starts deleting half-open sessions when the number of existing half-open sessions rises above 100. It stops deleting half-open sessions when the number of existing half-open sessions drops below the number set as the maximum incomplete low.
TCP Maximum Incomplete	An unusually high number of half-open sessions with the same destination host address could indicate that a DoS attack is being launched against the host. Specify the number of existing half-open TCP sessions with the same destination host IP address that causes the firewall to start dropping half-open sessions to that same destination host IP address. Enter a number between 1 and 256. As a general rule, you should choose a smaller number for a smaller network, a slower system or limited bandwidth. The ZyWALL sends alerts whenever the **TCP Maximum Incomplete** is exceeded.
Action taken when TCP Maximum Incomplete reached threshold	Select the action that ZyWALL should take when the TCP maximum incomplete threshold is reached. You can have the ZyWALL either: Delete the oldest half open session when a new connection request comes. or Deny new connection requests for the number of minutes that you specify (between 1 and 256).
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

11.13 Service

Click **SECURITY > FIREWALL** > **Service** to open the screen as shown next. Use this screen to configure custom services for use in firewall rules or view the services that are predefined in the ZyWALL.

See Section 11.1 on page 239 for more information about the firewall.

Figure 163 SECURITY > FIREWALL > Service

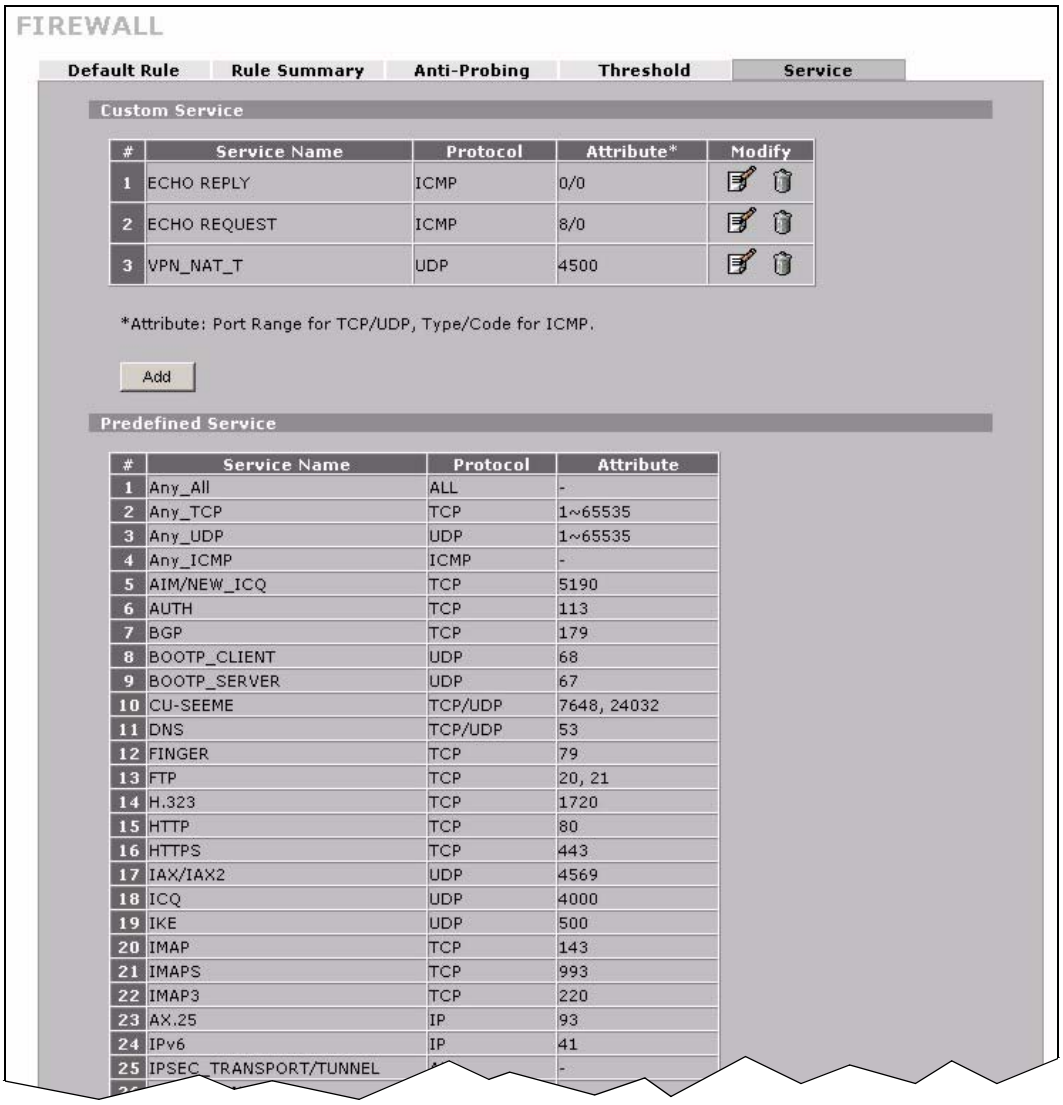

The following table describes the labels in this screen.

Table 74 SECURITY > FIREWALL > Service

LABEL	DESCRIPTION
Custom Service	This table shows all configured custom services.
#	This is the index number of the custom service.
Service Name	This is the name of the service.

Table 74 SECURITY > FIREWALL > Service (continued)


LABEL	DESCRIPTION
Protocol	This is the IP protocol type. If you selected **Custom**, this is the IP protocol value you entered.
Attribute	This is the IP port number or ICMP type and code that defines the service.
Modify	Click the edit icon to go to the screen where you can edit the service. Click the delete icon to remove an existing service. A window displays asking you to confirm that you want to delete the service. Note that subsequent services move up by one when you take this action.
Add	Click this button to bring up the screen that you use to configure a new custom service that is not in the predefined list of services.
Predefined Service	This table shows all the services that are already configured for use in firewall rules. See Appendix D on page 737 for a list of common services.
#	This is the index number of the predefined service.
Service Name	This is the name of the service.
Protocol	This is the IP protocol type. There may be more than one IP protocol type.
Attribute	This is the IP port number or ICMP type and code that defines the service.

11.13.1 Firewall Edit Custom Service

Click **SECURITY > FIREWALL** > **Service** > **Add** to display the following screen. Use this screen to configure a custom service entry not is not predefined in the ZyWALL. See Appendix D on page 737 the user's guide appendices for a list of commonly used services and port numbers.

See Section 11.1 on page 239 for more information about the firewall.

Figure 164 Firewall Edit Custom Service

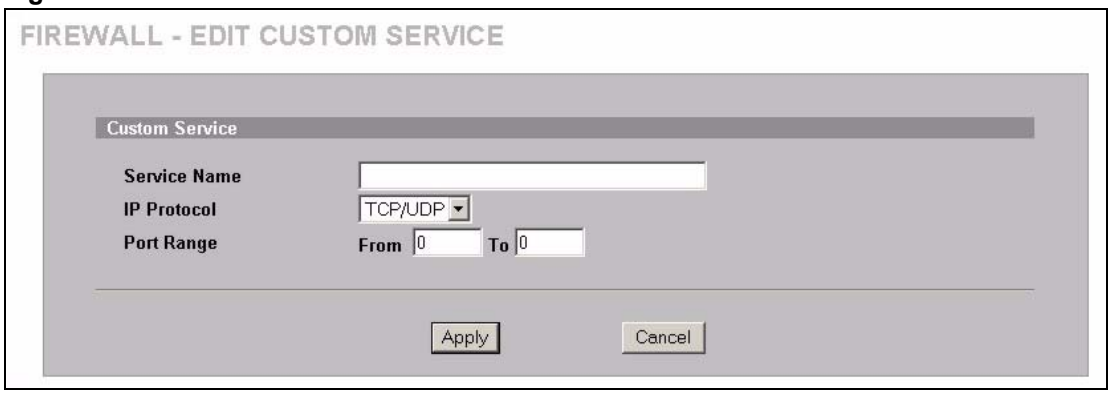

The following table describes the labels in this screen.

Table 75 SECURITY > FIREWALL > Service > Add


LABEL	DESCRIPTION
Service Name	Enter a descriptive name of up to 31 printable ASCII characters (except Extended ASCII characters) for the custom service. You cannot use the "(" character. Spaces are allowed.
IP Protocol	Choose the IP protocol (**TCP**, **UDP**, **TCP/UDP**, **ICMP** or **Custom**) that defines your customized service from the drop down list box. If you select **Custom**, specify the protocol's number. For example, ICMP is 1, TCP is 6, UDP is 17 and so on.
Port Range	Enter the port number (from 1 to 255) that defines the customized service To specify one port only, enter the port number in the **From** field and enter it again in the **To** field. To specify a span of ports, enter the first port in the **From** field and enter the last port in the **To** field.
Type/Code	This field is available only when you select **ICMP** in the **IP Protocol** field. The ICMP messages are identified by their types and in some cases codes. Enter the type number in the **Type** field and select the **Code** radio button and enter the code number if any.
Apply	Click **Apply** to save your customized settings and exit this screen.
Cancel	Click **Cancel** to exit this screen without saving.

11.14 My Service Firewall Rule Example

The following Internet firewall rule example allows a hypothetical My Service connection from the Internet.


1 In the **Service** screen, click **Add** to open the **Edit Custom Service** screen.

Figure 165 My Service Firewall Rule Example: Service

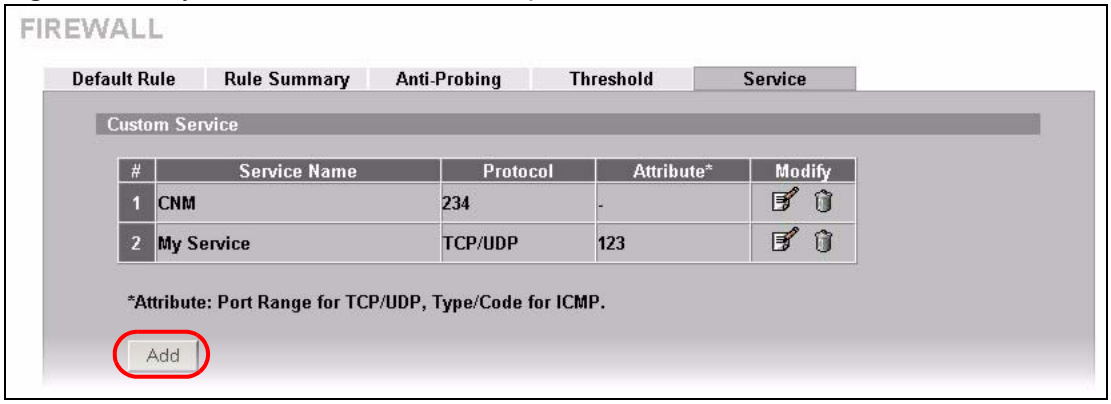

2 Configure it as follows and click **Apply**.


Figure 166 My Service Firewall Rule Example: Edit Custom Service

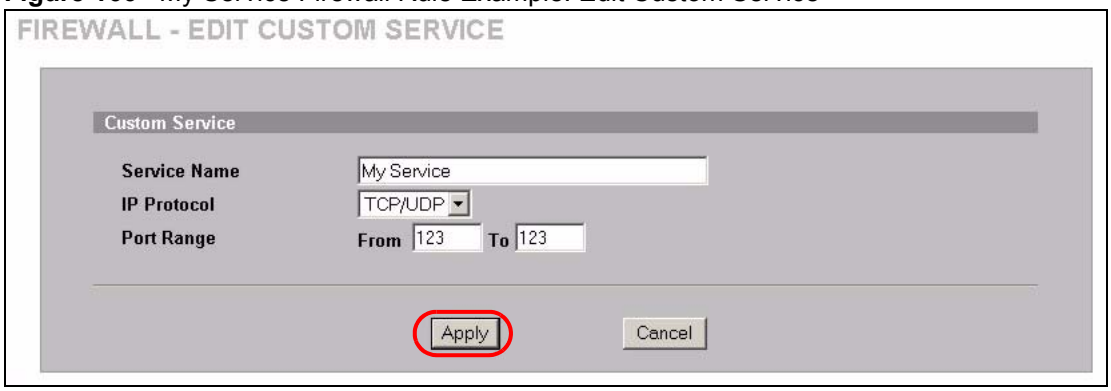

3 Click **Rule Summary**. Select **WAN1** and **LAN** from the **Packet Direction** drop-down list boxes and click **Refresh** to display existing firewall rules for the selected direction of travel of packets.

4 Click the insert icon at the top of the row to create the new firewall rule before the others.

Figure 167 My Service Firewall Rule Example: Rule Summary

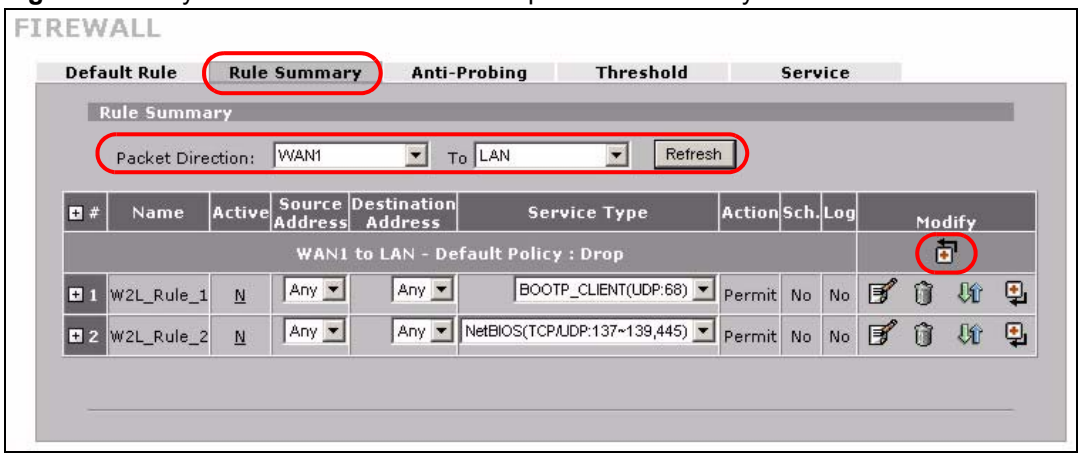


5 The **Edit Rule** screen displays. Enter the name of the firewall rule.

6 Select **Any** in the **Destination Address(es)** box and then click **Delete**.

7 Configure the destination address fields as follows and click **Add**.


Figure 168 My Service Firewall Rule Example: Rule Edit: Source and Destination Addresses

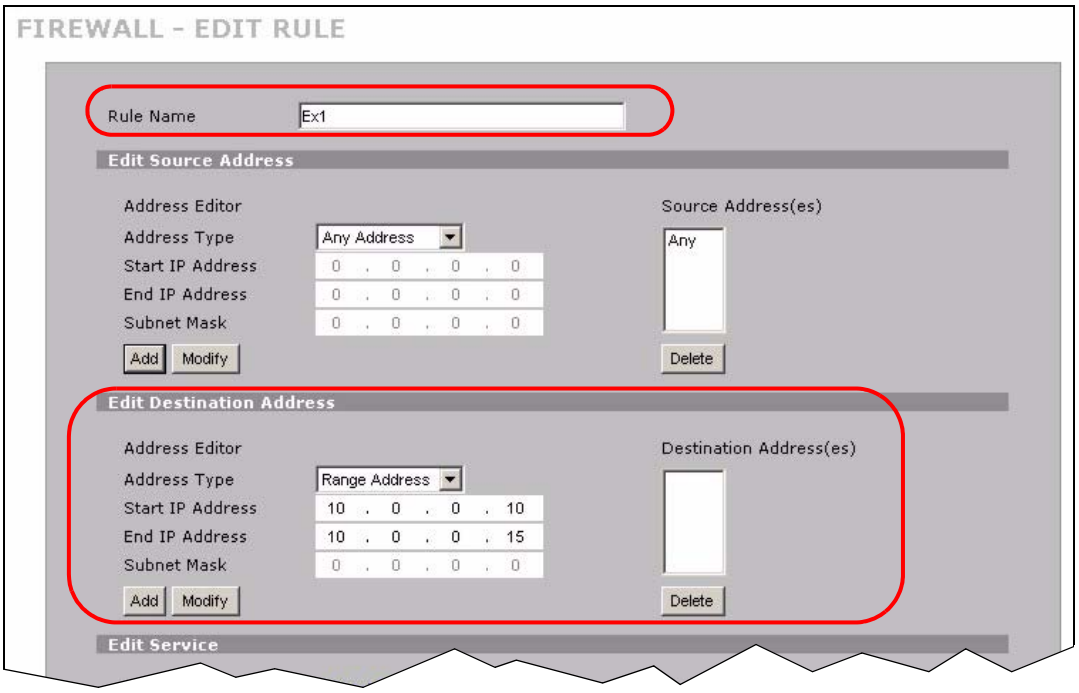

8 In the **Edit Service** section, use the arrows between **Available Services** and **Selected Service(s)** to configure it as follows. Click **Apply** when you are done.


Custom services show up with an * before their names in the **Services** list boxes and the **Rule Summary** screen's **Service Type** list box.

Figure 169 My Service Firewall Rule Example: Edit Rule: Service Configuration

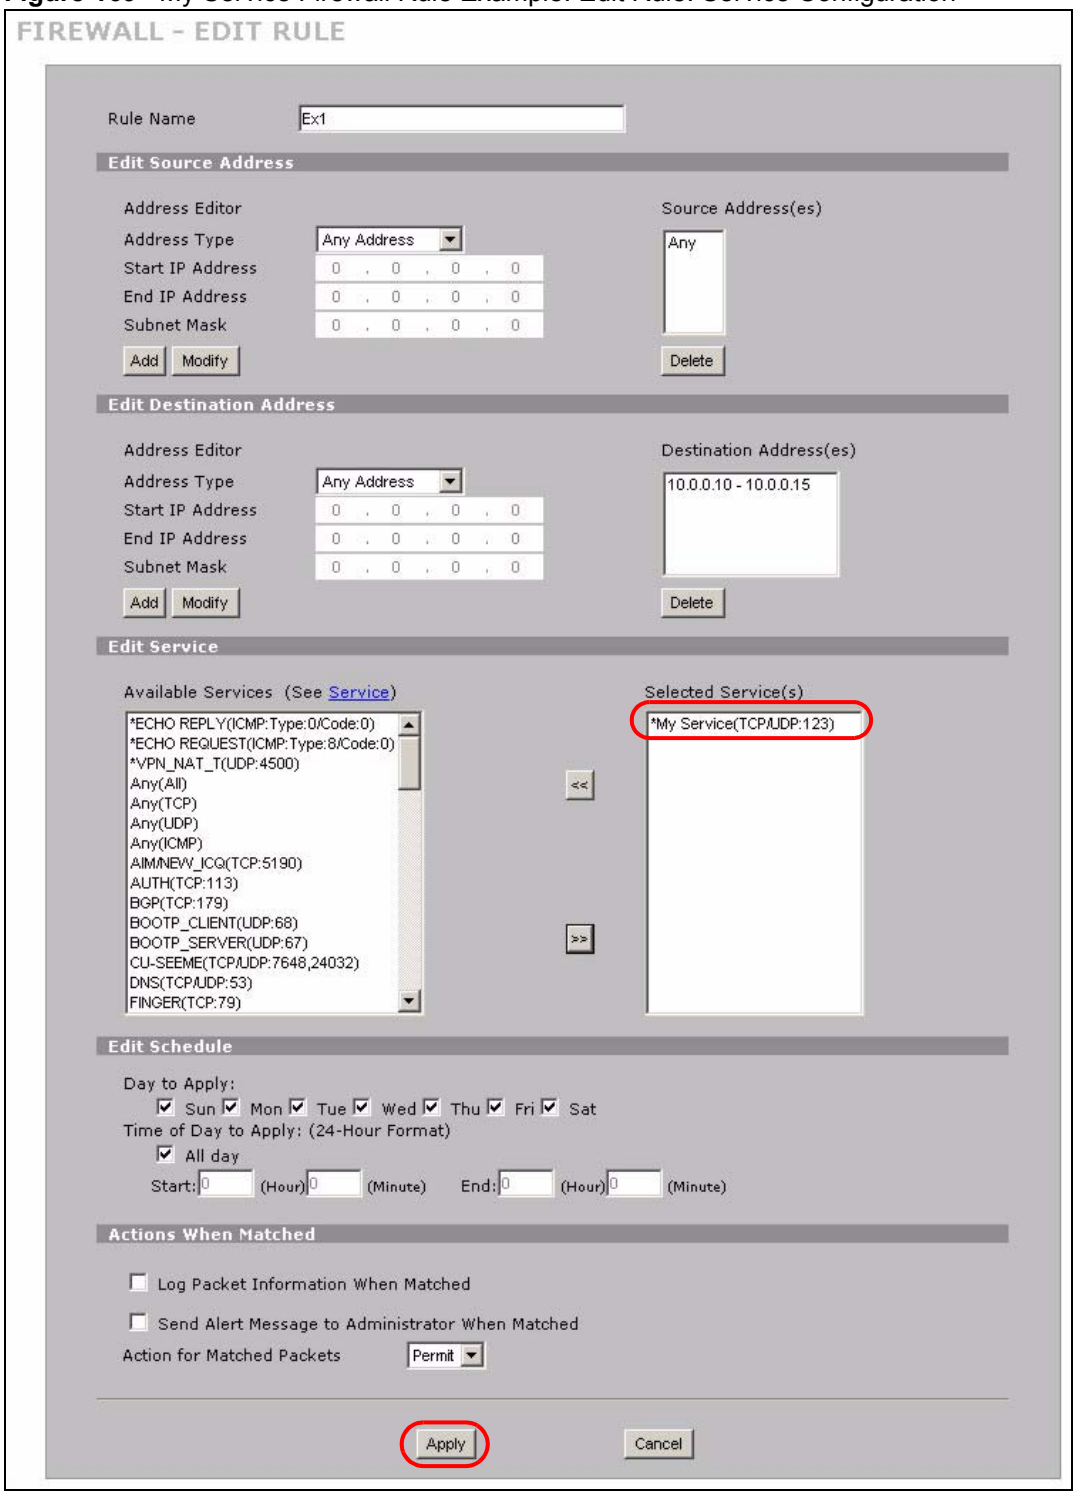

Rule 1 allows a My Service connection from WAN 1 to IP addresses 10.0.0.10 through 10.0.0.15 on the LAN.

Figure 170 My Service Firewall Rule Example: Rule Summary: Completed

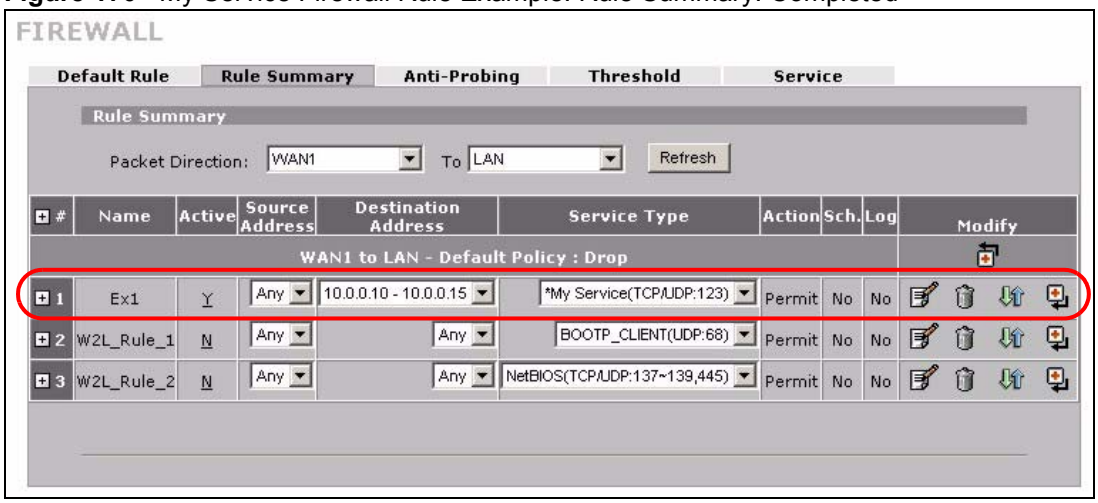

12

Content Filtering Screens

This chapter provides an overview of content filtering.

12.1 Content Filtering Overview

Content filtering allows you to block certain web features, such as Cookies, and/or block access to specific websites. With content filtering, you can do the following:

12.1.1 Restrict Web Features

The ZyWALL can block web features such as ActiveX controls, Java applets, cookies and disable web proxies.

12.1.2 Create a Filter List

You can select categories, such as pornography or racial intolerance, to block from a pre-defined list.


12.1.3 Customize Web Site Access

You can specify URLs to which the ZyWALL blocks access. You can alternatively block access to all URLs except ones that you specify. You can also have the ZyWALL block access to URLs that contain key words that you specify.

12.2 Content Filtering with an External Database

When you register for and enable external database content filtering, your ZyWALL accesses an external database that has millions of web sites categorized based on content. You can have the ZyWALL block, block and/or log access to web sites based on these categories. The content filtering lookup process is described below.

Figure 171 Content Filtering Lookup Procedure

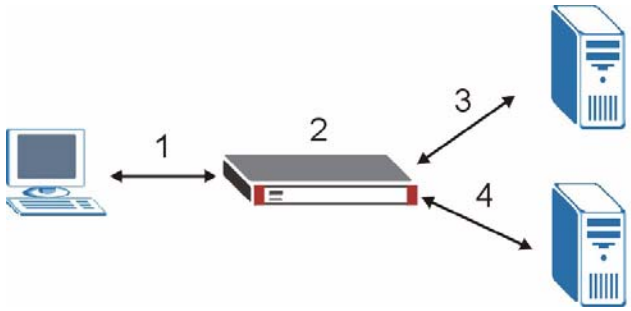

1. A computer behind the ZyWALL tries to access a web site.
2. The ZyWALL looks up the web site in its cache. If an attempt to access the web site was made in the past, a record of that web site's category will be in the ZyWALL's cache. The ZyWALL blocks, blocks and logs or just logs the request based on your configuration.
3. Use the **CONTENT FILTER Cache** screen to configure how long a web site address remains in the cache as well as view those web site addresses (see Section 12.11 on page 291). All of the web site address records are also cleared from the local cache when the ZyWALL restarts.
4. If the ZyWALL has no record of the web site, it will query the external content filtering database and simultaneously send the request to the web server.


   The external content filtering database may change a web site's category or categorize a previously uncategorized web site.
5. The external content filtering server sends the category information back to the ZyWALL, which then blocks and/or logs access to the web site. The web site's address and category are then stored in the ZyWALL's content filtering cache.

12.3 Content Filter General Screen

Click **SECURITY** > **CONTENT FILTER** to open the **CONTENT FILTER General** screen.

Use this screen to enable content filtering and configure general settings. You must register for external content filtering before you can use it. Use the **REGISTRATION** screens (see Chapter 5 on page 141) to create a myZyXEL.com account, register your device and activate the external content filtering service.

Figure 172 SECURITY > CONTENT FILTER > General

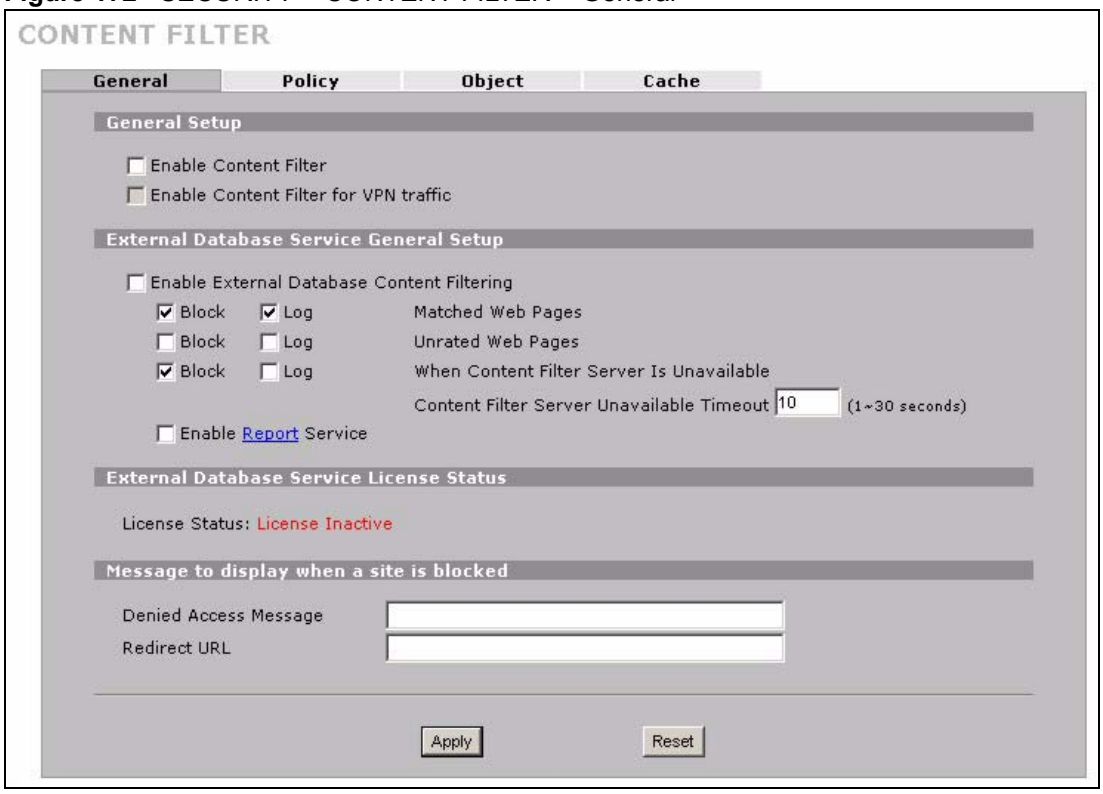

The following table describes the labels in this screen.

Table 76 SECURITY > CONTENT FILTER > General

LABEL	DESCRIPTION
General Setup	
Enable Content Filter	Select this check box to enable the content filter. Content filtering works on HTTP traffic that is using TCP ports 80, 119, 3128 or 8080. See Section 24.1 on page 471 if you need to use content filtering for traffic on custom ports.
Enable Content Filter for VPN traffic	Select this check box to have the content filter apply to traffic that the ZyWALL sends out through a VPN tunnel or receives through a VPN tunnel. The ZyWALL applies the content filter to the traffic before encrypting it or after decrypting it. Note: The ZyWALL can apply content filtering on the traffic going to or from the ZyWALL's VPN tunnels. It does not apply to other VPN traffic for which the ZyWALL is not one of the gateways (VPN pass-through traffic).
External Database Service General Setup	The external database content filtering service has the ZyWALL check an external database to find to which category a requested web page belongs.
Enable External Database Content Filtering	Turn on external database content filtering to have the ZyWALL block or forward access to web pages depending on the ZyWALL's external database content filtering settings.

Table 76 SECURITY > CONTENT FILTER > General

LABEL	DESCRIPTION
Matched Web Pages	Select **Block** to prevent users from accessing web pages that match the categories that you select below. When external database content filtering blocks access to a web page, it displays the denied access message that you configured in the **CONTENT FILTER General** screen along with the category of the blocked web page. Select **Log** to record attempts to access prohibited web pages.
Unrated Web Pages	Select **Block** to prevent users from accessing web pages that the external database content filtering has not categorized. When the external database content filtering blocks access to a web page, it displays the denied access message that you configured in the **CONTENT FILTER General** screen along with the category of the blocked web page. Select **Log** to record attempts to access web pages that are not categorized.
When Content Filter Server Is Unavailable	Select **Block** to block access to any requested web page if the external content filtering database is unavailable. The following are possible causes: There is no response from the external content filtering server within the time period specified in the **Content Filter Server Unavailable Timeout** field. The ZyWALL is not able to resolve the domain name of the external content filtering database. There is an error response from the external content filtering database. This can be caused by an expired content filtering registration (External content filtering's license key is invalid"). Select **Log** to record attempts to access web pages that occur when the external content filtering database is unavailable.
Content Filter Server Unavailable Timeout	Specify a number of seconds (1 to 30) for the ZyWALL to wait for a response from the external content filtering server. If there is still no response by the time this period expires, the ZyWALL blocks or allows access to the requested web page based on the setting in the **Block When Content Filter Server Is Unavailable** field.
Enable Report Service	Select this option to record content filtering reports on myZyXEL.com. These reports consist of generated statistics and charts of access attempts to web sites belonging to the categories you selected in your content filter configuration. Click **Report** to go to myZyXEL.com. Then do the following to view the content filtering reports (see Chapter 13 on page 293 for details). 1. Log into myZyXEL.com and click your device's link to open it's **Service Management** screen. 2. Click **Content Filter** in the **Service Name** field to open the Blue Coat login screen. 3. Enter your ZyWALL's MAC address (in lower case) in the **Name** field. You can find this MAC address in the **Service Management** screen (Figure 182 on page 295). Type your myZyXEL.com account password in the **Password** field and click **Submit**.
External Database Service License Status	

Table 76 SECURITY > CONTENT FILTER > General

LABEL	DESCRIPTION
License Status	This read-only field displays the status of your category-based content filtering (using an external database) service subscription. **License Inactive** displays if you have not registered and activated the category-based content filtering service. **License Active** and the subscription expiration date display if you have registered the ZyWALL and activated the category-based content filtering service. **Trial Active** and the trial subscription expiration date display if you have registered the ZyWALL and activated the category-based content filtering service. **License Inactive** and the date your subscription expired display if your subscription to the category-based content filtering service has expired. Note: After you register for content filtering, you need to wait up to five minutes for content filtering to be activated. See Section 13.1 on page 293 for how to check the content filtering activation.
Message to display when a site is blocked	
Denied Access Message	Enter a message to be displayed when a user tries to access a restricted web site. The default message is Please contact your network administrator!
Redirect URL	Enter the URL of the web page to which you want to send users when their web access is blocked by content filtering. The web page you specify here opens in a new frame below the denied access message. Use “http://” followed by up to 120 ASCII characters. For example, http://192.168.1.17/blocked access. If you do not specify a URL and a user tries to access a web page containing a forbidden object, a blocking page displays on the forbidden object.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.


12.4 Content Filter Policy

Click **SECURITY** > **CONTENT FILTER** > **Policy** to display the following screen.

This screen lists groups of content filtering settings called policies. Content filtering policies allow you to have different content filtering settings for different users or groups of users. For example, you may want to block most employees from accessing finance or stock websites, but allow the finance department to access these. You can set the ZyWALL to use external database content filtering and select which web site categories to block and/or log.

You may find that a web site has not been accurately categorized or that a web site’s contents have changed and the content filtering category needs to be updated. See Section 13.3 on page 298 for how to submit the web site for review.

Figure 173 SECURITY > CONTENT FILTER > Policy

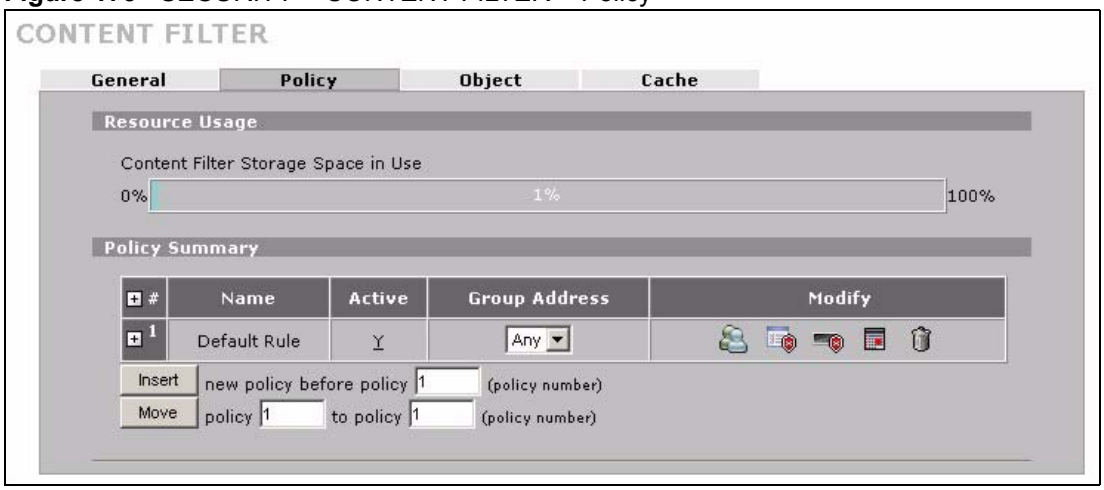

The following table describes the labels in this screen.

Table 77 SECURITY > CONTENT FILTER > Policy

LABEL	DESCRIPTION
Content Filter Storage Space in Use	This bar displays the percentage of the ZyWALL's content filter policies storage space that is currently in use. When the storage space is almost full, you should consider deleting unnecessary content filter policies before adding more.
The following fields summarize the content filter policies you have created.	
+/-	In the heading row, click + to expand or - to collapse the **Group Address** drop down lists for all of the displayed rules.
#	This is the content filter policy number. The ordering of your policies is important as rules are applied in turn. Click + to expand or - to collapse the **Group Address** drop down list.
Name	This is the name of the content filter policy.
Active	This field displays whether a content filter policy is turned on (**Y**) or not (**N**). Click the setting to change it.
Group Address	This drop-down list box displays the source (user) addresses or ranges of addresses to which the content filter policy applies. Please note that a blank source or destination address is equivalent to **Any**.
Modify	Click the general icon to restrict web features and edit the source (user) addresses or ranges of addresses to which the content filter policy applies. Click the external database icon to edit which web features and content categories the content filter policy blocks. Click the customization icon to configure the policy's list of good (allowed) web site addresses and a list of bad (blocked) web site addresses. You can also block web sites based on whether the web site's address contains a keyword. Click the schedule icon to set for which days and times the policy applies. Click the delete icon to remove the content filter policy. You cannot delete the default policy. A window display asking you to confirm that you want to delete the policy. Note that subsequent policies move up by one when you take this action.

Table 77 SECURITY > CONTENT FILTER > Policy (continued)

LABEL	DESCRIPTION
Insert	Type the index number for where you want to put a content filter policy. For example, if you type 6, your new content filter policy becomes number 6 and the previous content filter policy 6 (if there is one) becomes content filter policy 7. Click **Insert** to display the screens where you configure the content filter policy.
Move	Type a content filter policy's index number and the number for where you want to put that policy. Click **Move** to move the policy to the number that you typed. The ordering of your policies is important as they are applied in order of their numbering.

12.5 Content Filter Policy: General

Click **SECURITY** > **CONTENT FILTER** > **Policy** and use the **Insert** button or a policy's general icon to display the following screen.

Use this screen to restrict web features and edit the source (user) addresses or ranges of addresses to which the content filter policy applies.

Figure 174 SECURITY > CONTENT FILTER > Policy > General



The following table describes the labels in this screen.

Table 78 SECURITY > CONTENT FILTER > Policy > General

LABEL	DESCRIPTION
Active	Select this option to turn on the content filter policy.
Policy Name	Enter a descriptive name of up to 31 printable ASCII characters (except Extended ASCII characters) for the content filter policy. Spaces are allowed.

Table 78 SECURITY > CONTENT FILTER > Policy > General (continued)


LABEL	DESCRIPTION
Restrict Web Features	Select the check box(es) to restrict a feature. When you try to access a page containing a restricted feature, the whole page will be blocked or the restricted feature part of the web page will appear blank or grayed out. You will also see the message and URL you configured in the **Denied Access Message** and **Redirect URL** fields.
Block ActiveX	ActiveX is a tool for building dynamic and active web pages and distributed object applications. When you visit an ActiveX web site, ActiveX controls are downloaded to your browser, where they remain in case you visit the site again.
Java Applet	Java is a programming language and development environment for building downloadable Web components or Internet and intranet business applications of all kinds.
Cookies	Cookies are files stored on a computer's hard drive. Some web servers use them to track usage and provide service based on ID.
Web Proxy	A server that acts as an intermediary between a user and the Internet to provide security, administrative control, and caching service. When a proxy server is located on the WAN it is possible for LAN users to circumvent content filtering by pointing to this proxy server.
Address Setup	
Address Type	Do you want the policy to apply to packets from a particular (single) IP, a range of IP addresses (for example 192.168.1.10 to 192.169.1.50), a subnet or any IP address? Select an option from the drop-down list box that includes: **Single Address**, **Range Address**, **Subnet Address** and **Any Address**.
Start IP Address	Enter the single IP address or the starting IP address in a range here.
End IP Address	Enter the ending IP address in a range here.
Subnet Mask	Enter the subnet mask here, if applicable.
Add	Click **Add** to add a new address to the **Configured Address** box. You can add multiple addresses, ranges of addresses, and/or subnets.
Modify	To edit an existing source or destination address, select it from the box and click **Modify**.
Delete	Highlight an existing source or destination address from the **Configured Address** box and click **Delete** to remove it.
Apply	Click **Apply** to save your customized settings and exit this screen.
Cancel	Click **Cancel** to exit this screen without saving.

12.6 Content Filter Policy: External Database

Click **SECURITY** > **CONTENT FILTER** > **Policy** and then a policy's external database icon to display the following screen.

Use this screen to edit which content categories the content filter policy blocks.

Figure 175 SECURITY > CONTENT FILTER > Policy > External Database

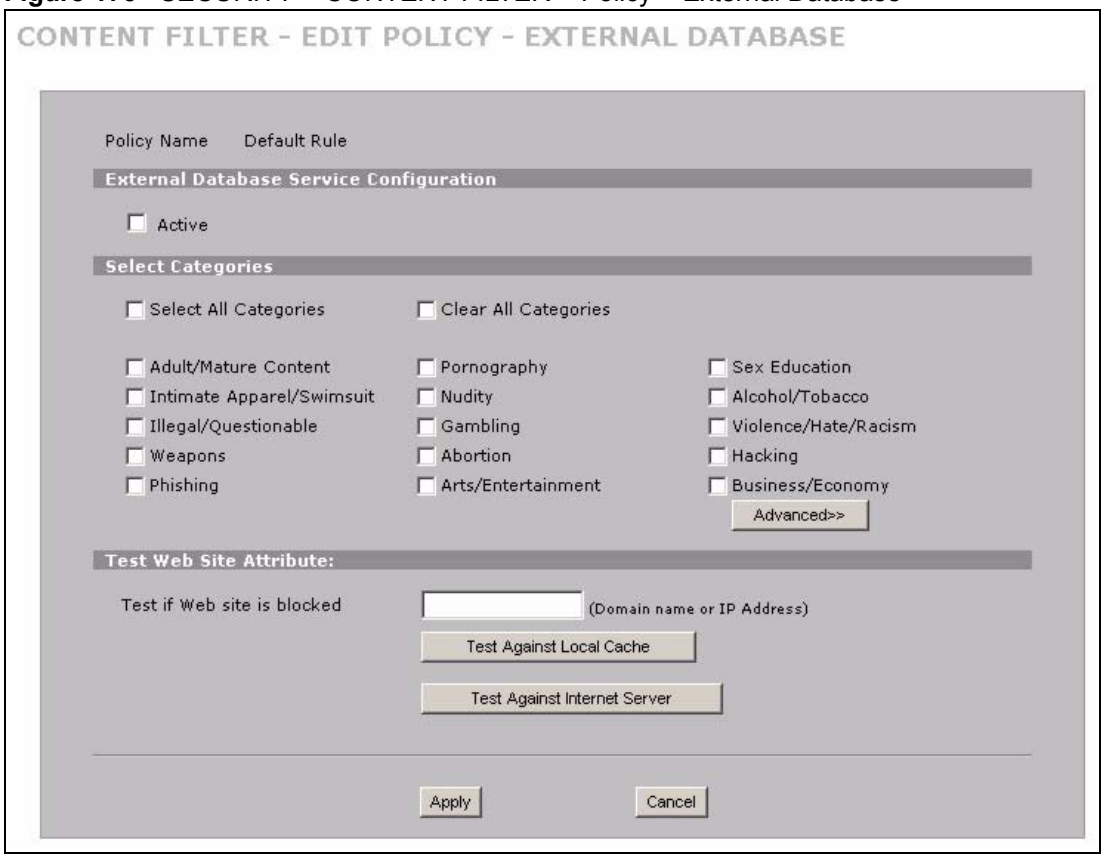

The following table describes the labels in this screen.

Table 79 SECURITY > CONTENT FILTER > Policy > External Database

LABEL	DESCRIPTION
Policy Name	This is the name of the content filter policy that you are configuring.
Active	Select this option to apply category based content filtering for this policy.
Select Categories	These are the categories available at the time of writing. Note: If you chose to record attempts to access the restricted pages and a web page matches more than one category you selected, you will see a log showing this page matches one category (the first matched one) only.
Select All Categories	Select this check box to restrict access to all site categories listed below.
Clear All Categories	Select this check box to clear the selected categories below.
Adult/Mature Content	Selecting this category excludes pages that contain material of adult nature that does not necessarily contain excessive violence, sexual content, or nudity. These pages include very profane or vulgar content and pages that are not appropriate for children.
Pornography	Selecting this category excludes pages that contain sexually explicit material for the purpose of arousing a sexual or prurient interest.

Table 79 SECURITY > CONTENT FILTER > Policy > External Database (continued)

LABEL	DESCRIPTION
Sex Education	Selecting this category excludes pages that provide graphic information (sometimes graphic) on reproduction, sexual development, safe sex practices, sexuality, birth control, and sexual development. It also includes pages that offer tips for better sex as well as products used for sexual enhancement.
Intimate Apparel/Swimsuit	Selecting this category excludes pages that contain images or offer the sale of swimsuits or intimate apparel or other types of suggestive clothing. It does not include pages selling undergarments as a subsection of other products offered.
Nudity	Selecting this category excludes pages containing nude or seminude depictions of the human body. These depictions are not necessarily sexual in intent or effect, but may include pages containing nude paintings or photo galleries of artistic nature. This category also includes nudist or naturist pages that contain pictures of nude individuals.
Alcohol/Tobacco	Selecting this category excludes pages that promote or offer the sale alcohol/tobacco products, or provide the means to create them. It also includes pages that glorify, tout, or otherwise encourage the consumption of alcohol/tobacco. It does not include pages that sell alcohol or tobacco as a subset of other products.
Illegal/Questionable	Selecting this category excludes pages that advocate or give advice on performing illegal acts such as service theft, evading law enforcement, fraud, burglary techniques and plagiarism. It also includes pages that provide or sell questionable educational materials, such as term papers. Note: This category includes sites identified as being malicious in any way (such as having viruses, spyware and etc.).
Gambling	Selecting this category excludes pages where a user can place a bet or participate in a betting pool (including lotteries) online. It also includes pages that provide information, assistance, recommendations, or training on placing bets or participating in games of chance. It does not include pages that sell gambling related products or machines. It also does not include pages for offline casinos and hotels (as long as those pages do not meet one of the above requirements).
Violence/Hate/Racism	Selecting this category excludes pages that depict extreme physical harm to people or property, or that advocate or provide instructions on how to cause such harm. It also includes pages that advocate, depict hostility or aggression toward, or denigrate an individual or group on the basis of race, religion, gender, nationality, ethnic origin, or other characteristics.
Weapons	Selecting this category excludes pages that sell, review, or describe weapons such as guns, knives or martial arts devices, or provide information on their use, accessories, or other modifications. It does not include pages that promote collecting weapons, or groups that either support or oppose weapons use.
Abortion	Selecting this category excludes pages that provide information or arguments in favor of or against abortion, describe abortion procedures, offer help in obtaining or avoiding abortion, or provide information on the effects, or lack thereof, of abortion.

Table 79 SECURITY > CONTENT FILTER > Policy > External Database (continued)

LABEL	DESCRIPTION
Hacking	Selecting this category excludes pages that distribute, promote, or provide hacking tools and/or information which may help gain unauthorized access to computer systems and/or computerized communication systems. Hacking encompasses instructions on illegal or questionable tactics, such as creating viruses, distributing cracked or pirated software, or distributing other protected intellectual property.
Phishing	Selecting this category excludes pages that are designed to appear as a legitimate bank or retailer with the intent to fraudulently capture sensitive data (i.e. credit card numbers, pin numbers).
Arts/Entertainment	Selecting this category excludes pages that promote and provide information about motion pictures, videos, television, music and programming guides, books, comics, movie theatres, galleries, artists or reviews on entertainment.
Business/Economy	Selecting this category excludes pages devoted to business firms, business information, economics, marketing, business management and entrepreneurship. This does not include pages that perform services that are defined in another category (such as Information Technology companies, or companies that sell travel services).
Alternative Spirituality/Occult	Selecting this category excludes pages that promote and provide information on religions such as Wicca, Witchcraft or Satanism. Occult practices, atheistic views, voodoo rituals or any other form of mysticism are represented here. Includes sites that endorse or offer methods, means of instruction, or other resources to affect or influence real events through the use of spells, incantations, curses and magic powers. This category includes sites which discuss or deal with paranormal or unexplained events.
Illegal Drugs	Selecting this category excludes pages that promote, offer, sell, supply, encourage or otherwise advocate the illegal use, cultivation, manufacture, or distribution of drugs, pharmaceuticals, intoxicating plants or chemicals and their related paraphernalia.
Education	Selecting this category excludes pages that offer educational information, distance learning and trade school information or programs. It also includes pages that are sponsored by schools, educational facilities, faculty, or alumni groups.
Cultural/Charitable Organization	Selecting this category excludes pages that nurture cultural understanding and foster volunteerism such as 4H, the Lions and Rotary Clubs. Also encompasses non-profit associations that cultivate philanthropic or relief efforts. Sites that provide a learning environment or cultural refinement/awareness outside of the strictures of formalized education such as museums and planetariums are included under this heading.
Financial Services	Selecting this category excludes pages that provide or advertise banking services (online or offline) or other types of financial information, such as loans. It does not include pages that offer market information, brokerage or trading services.
Brokerage/Trading	Selecting this category excludes pages that provide or advertise trading of securities and management of investment assets (online or offline). It also includes insurance pages, as well as pages that offer financial investment strategies, quotes, and news.
Online Games	Selecting this category excludes pages that provide information and support game playing or downloading, video games, computer games, electronic games, tips, and advice on games or how to obtain cheat codes. It also includes pages dedicated to selling board games as well as journals and magazines dedicated to game playing. It includes pages that support or host online sweepstakes and giveaways.

Table 79 SECURITY > CONTENT FILTER > Policy > External Database (continued)

LABEL	DESCRIPTION
Government/Legal	Selecting this category excludes pages sponsored by or which provide information on government, government agencies and government services such as taxation and emergency services. It also includes pages that discuss or explain laws of various governmental entities.
Military	Selecting this category excludes pages that promote or provide information on military branches or armed services.
Political/Activist Groups	Selecting this category excludes pages sponsored by or which provide information on political parties, special interest groups, or any organization that promotes change or reform in public policy, public opinion, social practice, or economic activities.
Health	Selecting this category excludes pages that provide advice and information on general health such as fitness and well-being, personal health or medical services, drugs, alternative and complimentary therapies, medical information about ailments, dentistry, optometry, general psychiatry, self-help, and support organizations dedicated to a disease or condition.
Computers/Internet	Selecting this category excludes pages that sponsor or provide information on computers, technology, the Internet and technology-related organizations and companies.
Search Engines/Portals	Selecting this category excludes pages that support searching the Internet, indices, and directories.
Spyware/Malware Sources	Selecting this category excludes pages which distribute spyware and other malware. Spyware is defined as software which takes control of your computer, modifies computer settings, collects or reports personal information, or misrepresents itself by tricking users to install, download, or enter personal information. This includes drive-by downloads; browser hijackers; dialers; intrusive advertising; any program which modifies your homepage, bookmarks, or security settings; and keyloggers. It also includes any software which bundles spyware (as defined above) as part of its offering. Information collected or reported is "personal" if it contains uniquely identifying data, such as email addresses, name, social security number, IP address, etc. A site is not classified as spyware if the user is reasonably notified that the software will perform these actions (ie, it alerts that it will send personal information, be installed, or that it will log keystrokes). Note: Sites rated as spyware should have a second category assigned with them.
Spyware Effects/Privacy Concerns	Selecting this category excludes pages to which spyware (as defined in the Spyware/Malware Sources category) reports its findings or from which it alone downloads advertisements. Also includes sites that contain serious privacy issues, such as “phone home” sites to which software can connect and send user info; sites that make extensive use of tracking cookies without a posted privacy statement; and sites to which browser hijackers redirect users. Usually does not include sites that can be marked as Spyware/Malware. Note: Sites rated as spyware effects typically have a second category assigned with them.
Job Search/Careers	Selecting this category excludes pages that provide assistance in finding employment, and tools for locating prospective employers.
News/Media	Selecting this category excludes pages that primarily report information or comments on current events or contemporary issues of the day. It also includes radio stations and magazines. It does not include pages that can be rated in other categories.
Personals/Dating	Selecting this category excludes pages that promote interpersonal relationships.

Table 79 SECURITY > CONTENT FILTER > Policy > External Database (continued)

LABEL	DESCRIPTION
Reference	Selecting this category excludes pages containing personal, professional, or educational reference, including online dictionaries, maps, census, almanacs, library catalogues, genealogy-related pages and scientific information.
Open Image/Media Search	Selecting this category excludes pages with image or video search capabilities which return graphical results (i.e. thumbnail pictures) that include potentially pornographic content along with non-pornographic content (as defined in the Pornography category). Sites that explicitly exclude offensive content are not included in this category.
Chat/Instant Messaging	Selecting this category excludes pages that provide chat or instant messaging capabilities or client downloads.
Email	Selecting this category excludes pages offering web-based email services, such as online email reading, e-cards, and mailing list services.
Blogs/Newsgroups	Selecting this category excludes pages that offer access to Usenet news groups or other messaging or bulletin board systems. Also, blog specific sites or an individual with his own blog. This does not include social networking communities with blogs.
Religion	Selecting this category excludes pages that promote and provide information on conventional or unconventional religious or quasi-religious subjects, as well as churches, synagogues, or other houses of worship. It does not include pages containing alternative religions such as Wicca or witchcraft (Cult/Occult) or atheist beliefs (Political/Activist Groups).
Social Networking	Selecting this category excludes pages that enable people to connect with others to form an online community. Typically members describe themselves in personal web page policies and form interactive networks, linking them with other members based on common interests or acquaintances. Instant messaging, file sharing and web logs (blogs) are common features of Social Networking sites. Note: These sites may contain offensive material in the community-created content. Sites in this category are also referred to as "virtual communities" or "online communities". This category does not include more narrowly focused sites, like those that specifically match descriptions for Personals/ Dating sites or Business sites.
Online Storage	Selecting this category excludes pages that provide a secure, encrypted, off-site backup and restoration of personal data. These online repositories are typically used to store, organize and share videos, music, movies, photos, documents and other electronically formatted information. Sites that fit this criteria essentially act as your personal hard drive on the Internet.
Remote Access Tools	Selecting this category excludes pages that primarily focus on providing information about and/or methods that enables authorized access to and use of a desktop computer or private network remotely.
Shopping	Selecting this category excludes pages that provide or advertise the means to obtain goods or services. It does not include pages that can be classified in other categories (such as vehicles or weapons).
Auctions	Selecting this category excludes pages that support the offering and purchasing of goods between individuals. This does not include classified advertisements.
Real Estate	Selecting this category excludes pages that provide information on renting, buying, or selling real estate or properties.

Table 79 SECURITY > CONTENT FILTER > Policy > External Database (continued)

LABEL	DESCRIPTION
Society/Lifestyle	Selecting this category excludes pages providing information on matters of daily life. This does not include pages relating to entertainment, sports, jobs, sex or pages promoting alternative lifestyles such as homosexuality. Personal homepages fall within this category if they cannot be classified in another category.
Sexuality/Alternative Lifestyles	Selecting this category excludes pages that provide information, promote, or cater to gays, lesbians, swingers, other sexual orientations or practices, or a particular fetish. This category does not include sites that are sexually gratuitous in nature which would typically fall under the Pornography category.
Restaurants/Dining/Food	Selecting this category excludes pages that list, review, discuss, advertise and promote food, catering, dining services, cooking and recipes.
Sports/Recreation/Hobbies	Selecting this category excludes pages that promote or provide information about spectator sports, recreational activities, or hobbies. This includes pages that discuss or promote camping, gardening, and collecting.
Travel	Selecting this category excludes pages that promote or provide opportunity for travel planning, including finding and making travel reservations, vehicle rentals, descriptions of travel destinations, or promotions for hotels or casinos.
Vehicles	Selecting this category excludes pages that provide information on or promote vehicles, boats, or aircraft, including pages that support online purchase of vehicles or parts.
Humor/Jokes	Selecting this category excludes pages that primarily focus on comedy, jokes, fun, etc. This may include pages containing jokes of adult or mature nature. Pages containing humorous Adult/Mature content also have an Adult/Mature category rating.
Software Downloads	Selecting this category excludes pages that are dedicated to the electronic download of software packages, whether for payment or at no charge.
Pay to Surf	Selecting this category excludes pages that pay users in the form of cash or prizes, for clicking on or reading specific links, email, or web pages.
Peer-to-Peer	Selecting this category excludes pages that distribute software to facilitate the direct exchange of files between users, including software that enables file search and sharing across a network without dependence on a central server.
Streaming Media/MP3s	Selecting this category excludes pages that sell, deliver, or stream music or video content in any format, including sites that provide downloads for such viewers.
Proxy Avoidance	Selecting this category excludes pages that provide information on how to bypass proxy server/appliance features or gain access to URLs in any way that bypasses the proxy server/appliance. It also includes any service that will allow a person to bypass the content filtering feature, such as anonymous surfing services.
For Kids	Selecting this category excludes pages designed specifically for children.
Web Advertisements	Selecting this category excludes pages that provide online advertisements or banners. This does not include advertising servers that serve adult-oriented advertisements.

Table 79 SECURITY > CONTENT FILTER > Policy > External Database (continued)

LABEL	DESCRIPTION
Web Hosting	Selecting this category excludes pages of organizations that provide top-level domain pages, as well as web communities or hosting services.
Advanced/Basic	Click **Advanced** to see an expanded list of categories, or click **Basic** to see a smaller list.
Test Web Site Attribute	
Test if Web site is blocked	You can check whether or not the content filter policy currently blocks any given web page. Enter a web site URL in the text box.
Test Against Local Cache	Click this button to test whether or not the web site above is saved in the ZyWALL's database of restricted web pages.
Test Against Internet Server	Click this button to test whether or not the web site above is saved in the external content filter server's database of restricted web pages.
Apply	Click **Apply** to save your settings and exit this screen.
Cancel	Click **Cancel** to exit this screen without saving.

12.7 Content Filter Policy: Customization


Click **SECURITY** > **CONTENT FILTER** > **Policy** and then a policy's customization icon to display the following screen.

Use this screen to select good (allowed) web site addresses for this policy and bad (blocked) web site addresses. You can also block web sites based on whether the web site's address contains a keyword. Use this screen to add or remove specific sites or keywords from the filter list.



Use the **SECURITY** > **CONTENT FILTER** > **Object** screen (see Section 12.9 on page 288) first to configure the master lists of trusted (allowed) web sites, forbidden (blocked) web sites, and keywords.

Figure 176 SECURITY > CONTENT FILTER > Policy > Customization

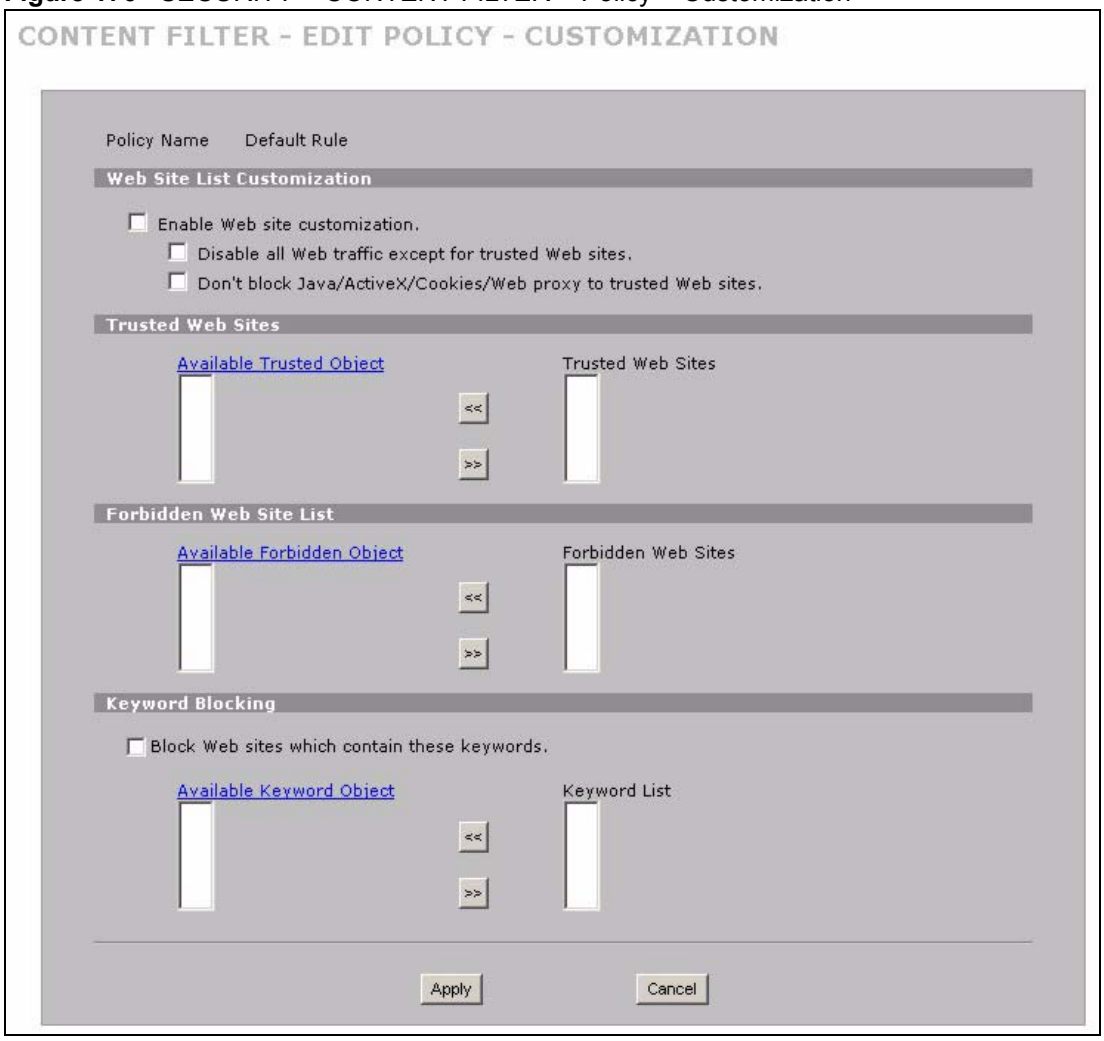

The following table describes the labels in this screen.

Table 80 SECURITY > CONTENT FILTER > Policy > Customization

LABEL	DESCRIPTION
Policy Name	This is the name of the content filter policy that you are configuring.
Web Site List Customization	
Enable Web site customization	Select this check box to allow trusted web sites and block forbidden web sites. Content filter list customization may be enabled and disabled without re-entering these site names.
Disable all Web traffic except for trusted Web sites	When this box is selected, the ZyWALL only allows Web access to sites on the **Trusted Web Site** list. If they are chosen carefully, this is the most effective way to block objectionable material.
Don't block Java/ActiveX/ Cookies/Web proxy to trusted Web sites	When this box is selected, the ZyWALL will permit Java, ActiveX and Cookies from sites on the **Trusted Web Site** list to the LAN. In certain cases, it may be desirable to allow Java, ActiveX or Cookies from sites that are known and trusted.

Table 80 SECURITY > CONTENT FILTER > Policy > Customization (continued)


LABEL	DESCRIPTION
Available Trusted Object	This list displays the trusted host names you configured in the **SECURITY > CONTENT FILTER > Object** screen (click **Available Trusted Object** to go there). Select the ones to which you want to allow access and use the arrow button to move them to the **Trusted Web Sites** list.
Trusted Web Sites	This list displays web sites to which this content filtering policy allows access. Select an entry and use the arrow button to remove it from the list.
Available Forbidden Object	This list displays the forbidden host names you configured in the **SECURITY > CONTENT FILTER > Object** screen (click **Available Forbidden Object** to go there). Select the ones you want this policy to block and use the arrow button to move them to the **Forbidden Web Sites** list.
Forbidden Web Sites	This list displays web sites to which this content filtering policy blocks access. Select an entry and use the arrow button to remove it from the list.
Keyword Blocking	Keyword blocking allows you to block websites with URLs that contain certain keywords in the domain name or IP address. See Section 12.10 on page 290 for how to set how much of the URL the ZyWALL checks.
Block Web sites which contain these keywords.	Select this checkbox to enable keyword blocking.
Available Keyword Object	This list displays the keywords you configured in the **SECURITY > CONTENT FILTER > Object** screen (click **Available Keyword Object** to go there). Select the ones you want this policy to block and use the arrow button to move them to **Keyword List**.
Keyword List	This list displays the keywords that this content filtering policy blocks. Select an entry and use the arrow button to remove it from the list.
Apply	Click **Apply** to save your settings and exit this screen.
Cancel	Click **Cancel** to exit this screen without saving.

12.8 Content Filter Policy: Schedule

Click **SECURITY** > **CONTENT FILTER** > **Policy** and then a policy's schedule icon to display the following screen.

Use this screen to set for which days and times the policy applies.

Figure 177 SECURITY > CONTENT FILTER > Policy > Schedule

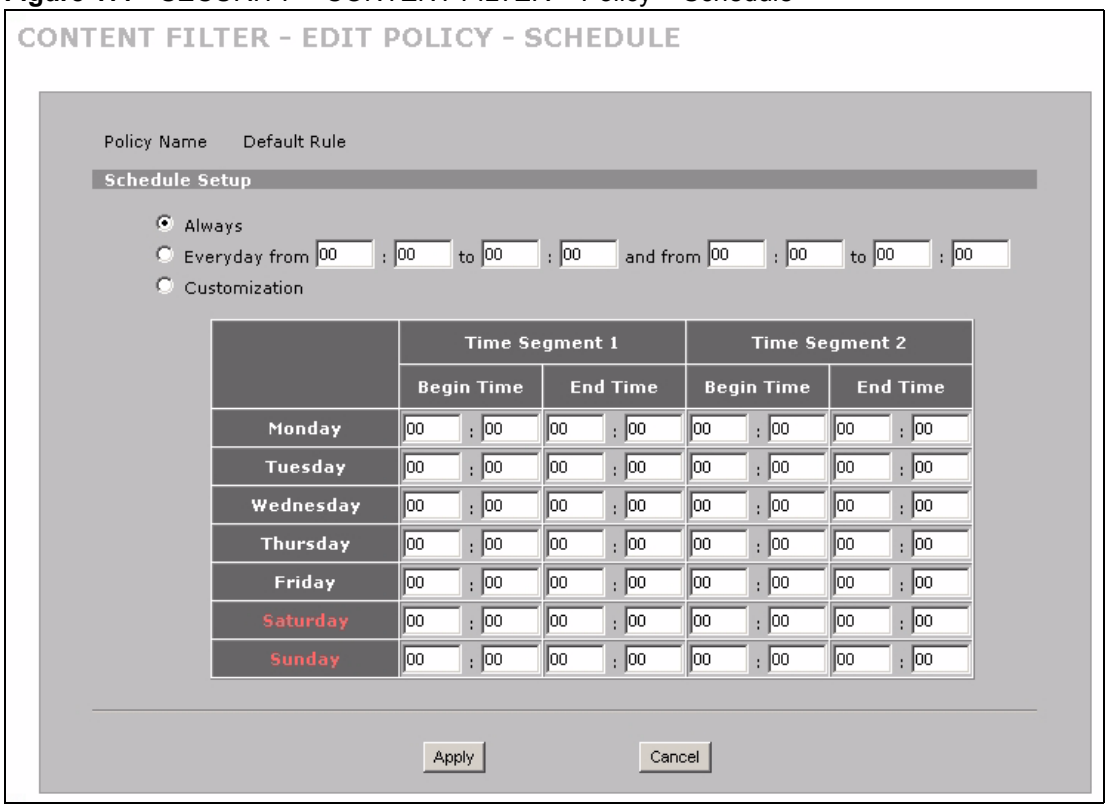

The following table describes the labels in this screen.

Table 81 SECURITY > CONTENT FILTER > Policy > Schedule

LABEL	DESCRIPTION
Policy Name	This is the name of the content filter policy that you are configuring.
Schedule Setup	Content filtering scheduling applies to the filter list, customized sites and keywords. Restricted web server data, such as ActiveX, Java, Cookies and Web Proxy are not affected.
Always	Select this option to have content filtering active all the time.
Everyday from/to	Select this option to have content filtering active during the specified time interval(s) of each day. In the **from** and **to** fields, enter the time period(s), in 24-hour format, during which content filtering will be enforced.
Customization	Select this option to have content filtering only active during the specified time interval(s) of the specified day(s). In the **Begin Time** and **End Time** fields, enter the time period(s), in 24-hour format, for individual day(s) of the week.
Apply	Click **Apply** to save your settings and exit this screen.
Cancel	Click **Cancel** to exit this screen without saving.


12.9 Content Filter Object

Click **SECURITY** > **CONTENT FILTER** > **Object** to display the following screen.

Use this screen to a list of allowed web site addresses for this policy and a list of blocked web site addresses. You can also block web sites based on whether the web site's address contains a keyword. Use this screen to add or remove specific sites or keywords from the filter list.

To use this screens settings in content filtering, you must use the **SECURITY > CONTENT FILTER > Policy > Customization** screen to set individual policies to add or remove specific sites or keywords for individual policies.

Figure 178 SECURITY > CONTENT FILTER > Object

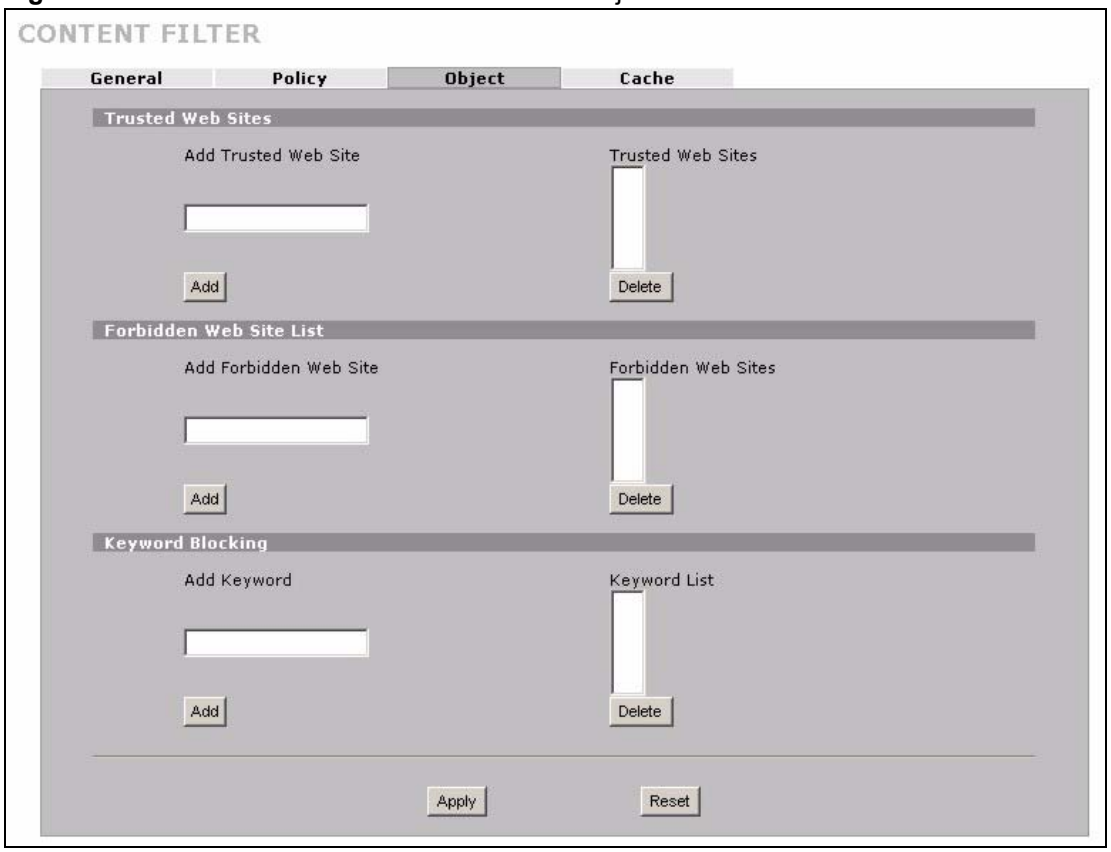

The following table describes the labels in this screen.

Table 82 SECURITY > CONTENT FILTER > Object

LABEL	DESCRIPTION
Trusted Web Sites	These are sites that you want to allow access to, regardless of their content rating, can be allowed by adding them to this list. You can enter up to 32 entries.
Add Trusted Web Site	Enter host names such as www.good-site.com into this text field. Do not enter the complete URL of the site – that is, do not include "http://". All subdomains are allowed. For example, entering "zyxel.com" also allows "www.zyxel.com", "partner.zyxel.com", "press.zyxel.com", etc.
Trusted Web Sites	This list displays the trusted web sites already added.
Add	Click this button when you have finished adding the host name in the text field above.

Table 82 SECURITY > CONTENT FILTER > Object (continued)

LABEL	DESCRIPTION
Delete	Select a web site name from the **Trusted Web Site** list, and then click this button to delete it from that list.
Forbidden Web Site List	Sites that you want to block access to, regardless of their content rating, can be allowed by adding them to this list. You can enter up to 32 entries.
Add Forbidden Web Site	Enter host names such as www.bad-site.com into this text field. Do not enter the complete URL of the site – that is, do not include “http://”. All subdomains are blocked. For example, entering “bad-site.com” also blocks “www.bad-site.com”, “partner.bad-site.com”, “press.bad-site.com”, etc.
Forbidden Web Sites	This list displays the forbidden web sites already added.
Add	Click this button when you have finished adding the host name in the text field above.
Delete	Select a web site name from the **Forbidden Web Site** list, and then click this button to delete it from that list.
Keyword Blocking	**Keyword Blocking** allows you to block websites with URLs that contain certain keywords in the domain name or IP address. See Section 12.10 on page 290 for how to set how much of the URL the ZyWALL checks.
Add Keyword	Enter a keyword (up to 31 printable ASCII characters) to block. You can also enter a numerical IP address.
Keyword List	This list displays the keywords already added.
Add	Click this button when you have finished adding the key words field above.
Delete	Select a keyword from the **Keyword List**, and then click this button to delete it from that list.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

12.10 Customizing Keyword Blocking URL Checking

You can use commands to set how much of a website’s URL the content filter is to check for keyword blocking. See the appendices for information on how to access and use the command interpreter.

12.10.1 Domain Name or IP Address URL Checking

By default, the ZyWALL checks the URL’s domain name or IP address when performing keyword blocking.

This means that the ZyWALL checks the characters that come before the first slash in the URL.

For example, with the URL www.zyxel.com.tw/news/pressroom.php, content filtering only searches for keywords within www.zyxel.com.tw.

12.10.2 Full Path URL Checking

Full path URL checking has the ZyWALL check the characters that come before the last slash in the URL.

For example, with the URL www.zyxel.com.tw/news/pressroom.php, full path URL checking searches for keywords within www.zyxel.com.tw/news/.

Use the `ip urlfilter customize actionFlags 6 [disable | enable]` command to extend (or not extend) the keyword blocking search to include the URL's full path.

12.10.3 File Name URL Checking

Filename URL checking has the ZyWALL check all of the characters in the URL.

For example, filename URL checking searches for keywords within the URL www.zyxel.com.tw/news/pressroom.php.

Use the `ip urlfilter customize actionFlags 8 [disable | enable]` command to extend (or not extend) the keyword blocking search to include the URL's complete filename.

12.11 Content Filtering Cache


Click **SECURITY > CONTENT FILTER > Cache** to display the **CONTENT FILTER Cache** screen.

Use this screen to view and configure your ZyWALL's URL caching. You can also configure how long a categorized web site address remains in the cache as well as view those web site addresses to which access has been allowed or blocked based on the responses from the external content filtering server. The ZyWALL only queries the external content filtering database for sites not found in the cache.

You can remove individual entries from the cache. When you do this, the ZyWALL queries the external content filtering database the next time someone tries to access that web site. This allows you to check whether a web site's category has been changed.

Please see Section 13.3 on page 298 for how to submit a web site that has been incorrectly categorized.

Figure 179 SECURITY > CONTENT FILTER > Cache

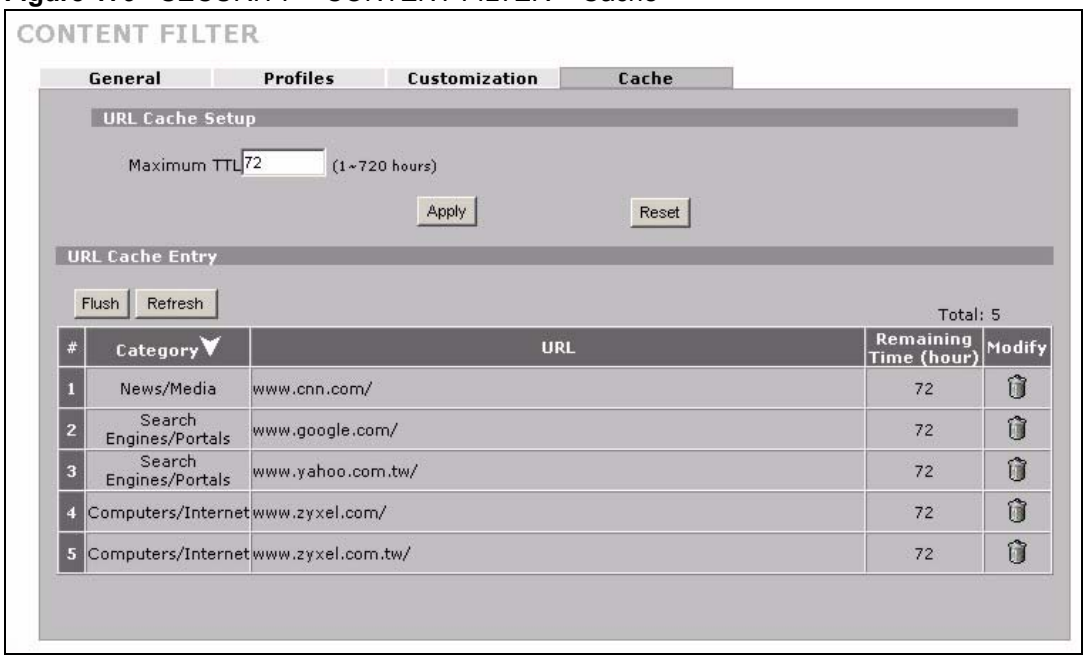

The following table describes the labels in this screen.

Table 83 SECURITY > CONTENT FILTER > Cache

LABEL	DESCRIPTION
URL Cache Setup	
Maximum TTL	Type the maximum time to live (TTL) (1 to 720 hours). This sets how long the ZyWALL is to allow an entry to remain in the URL cache before discarding it.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.
URL Cache Entry	
Flush	Click this button to clear all web site addresses from the cache manually.
Refresh	Click this button to reload the cache.
#	This is the index number of a categorized web site address record.
Category	This field shows the site category to which requested access belongs.
URL	This is a web site's address that the ZyWALL previously checked with the external content filtering database.
Remaining Time (hour)	This is the number of hours left before the URL entry is discarded from the cache.
Modify	Click the delete icon to remove the URL entry from the cache.

13

Content Filtering Reports

This chapter describes how to view content filtering reports after you have activated the category-based content filtering subscription service.

See Chapter 5 on page 141 on how to create a myZyXEL.com account, register your device and activate the subscription services using the **REGISTRATION** screens.

13.1 Checking Content Filtering Activation

After you activate content filtering, you need to wait up to five minutes for content filtering to be turned on.

Since there will be no content filtering activation notice, you can do the following to see if content filtering is active.

1. Go to your device's web configurator's **CONTENT FILTER Categories** screen.
2. Select at least one category and click **Apply**.
3. Enter a valid URL or IP address of a web site in the **Test if Web site is blocked** field and click the **Test Against Internet Server** button.
   When content filtering is active, you should see an access blocked or access forwarded message. An error message displays if content filtering is not active.

13.2 Viewing Content Filtering Reports


Content filtering reports are generated statistics and charts of access attempts to web sites belonging to the categories you selected in your device content filter screen.

You need to register your iCard before you can view content filtering reports.

Alternatively, you can also view content filtering reports during the free trial (up to 30 days).


1. Go to http://www.myZyXEL.com.
2. Fill in your myZyXEL.com account information and click **Submit**.

Figure 180 myZyXEL.com: Login

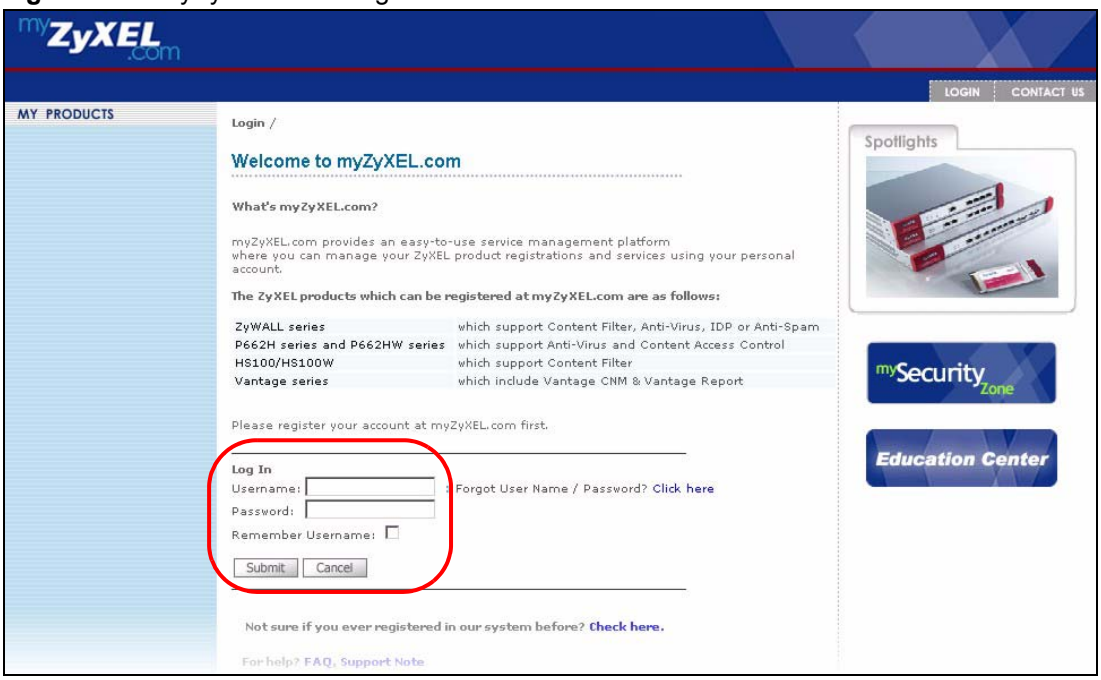


3 A welcome screen displays. Click your ZyWALL's model name and/or MAC address under **Registered ZyXEL Products**. You can change the descriptive name for your ZyWALL using the **Rename** button in the **Service Management** screen (see Figure 182 on page 295).

Figure 181 myZyXEL.com: Welcome

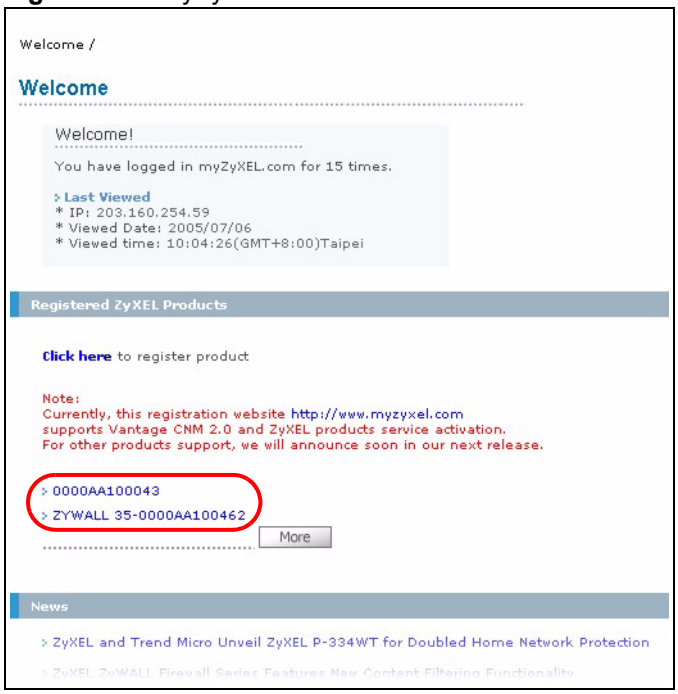

4 In the **Service Management** screen click **Content Filter** in the **Service Name** field to open the Blue Coat login screen.


Figure 182 myZyXEL.com: Service Management

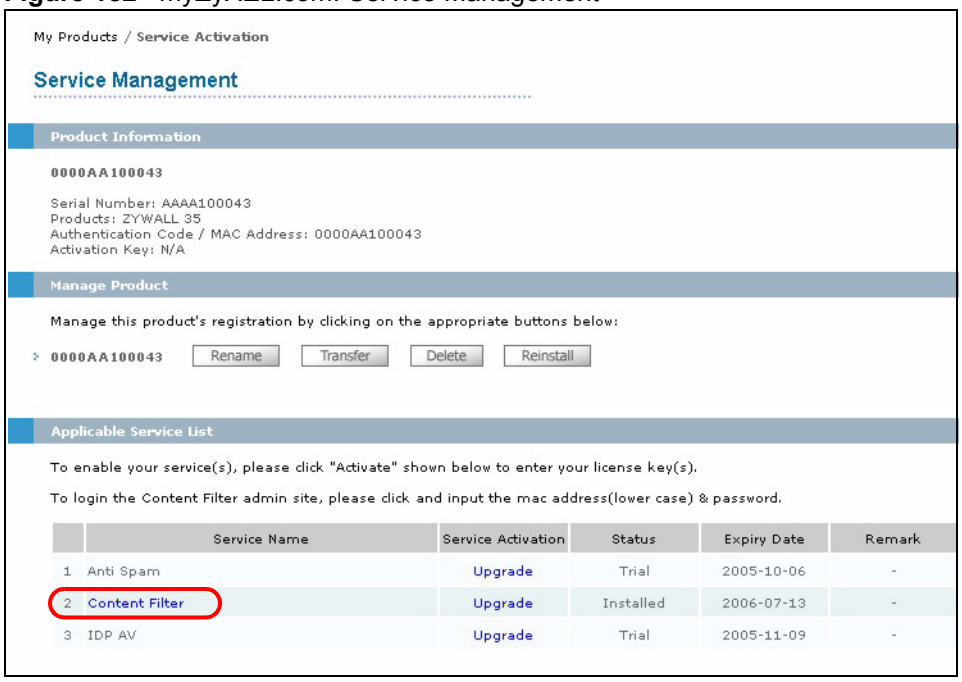

5 Enter your ZyXEL device's MAC address (in lower case) in the **Name** field. You can find this MAC address in the **Service Management** screen (Figure 182 on page 295). Type your myZyXEL.com account password in the **Password** field.


6 Click **Submit**.

Figure 183 Blue Coat: Login

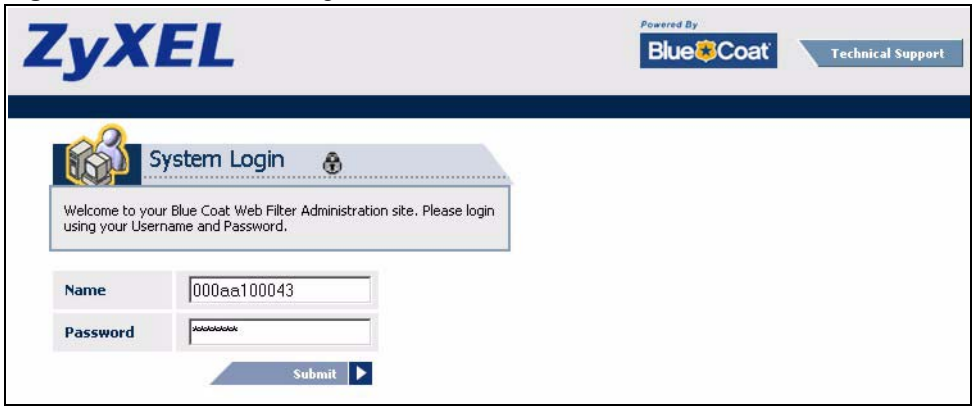


7 In the **Web Filter Home** screen, click the **Reports** tab.

Figure 184 Content Filtering Reports Main Screen

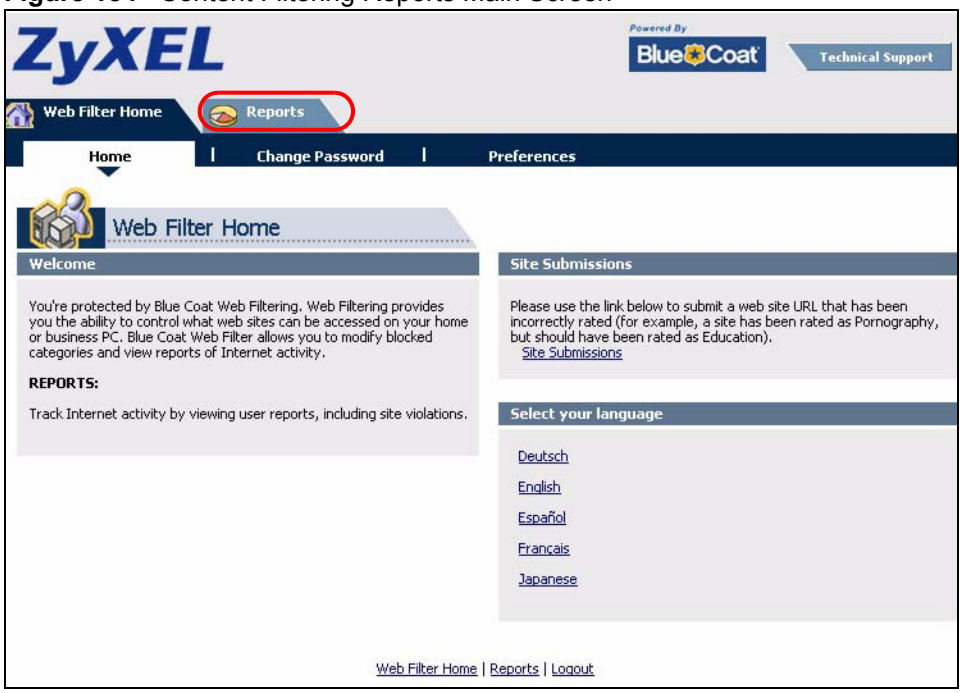

8 Select items under **Global Reports** or **Single User Reports** to view the corresponding reports.


Figure 185 Blue Coat: Report Home

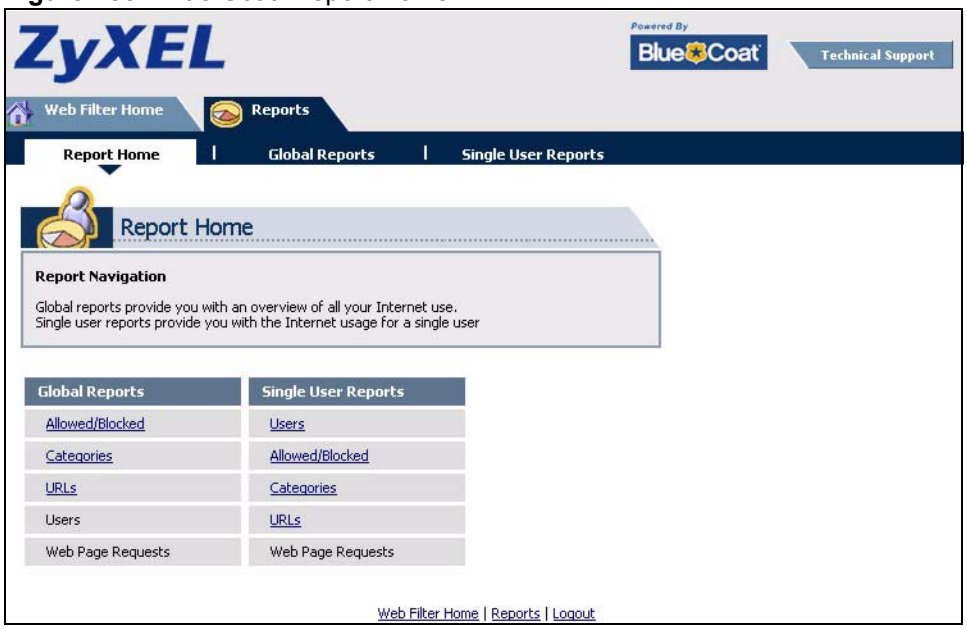

9 Select a time period in the **Date Range** field, either **Allowed** or **Blocked** in the **Action Taken** field and a category (or enter the user name if you want to view single user reports) and click **Run Report**.The screens vary according to the report type you selected in the **Report Home** screen.

10 A chart and/or list of requested web site categories display in the lower half of the screen.

Figure 186 Global Report Screen Example

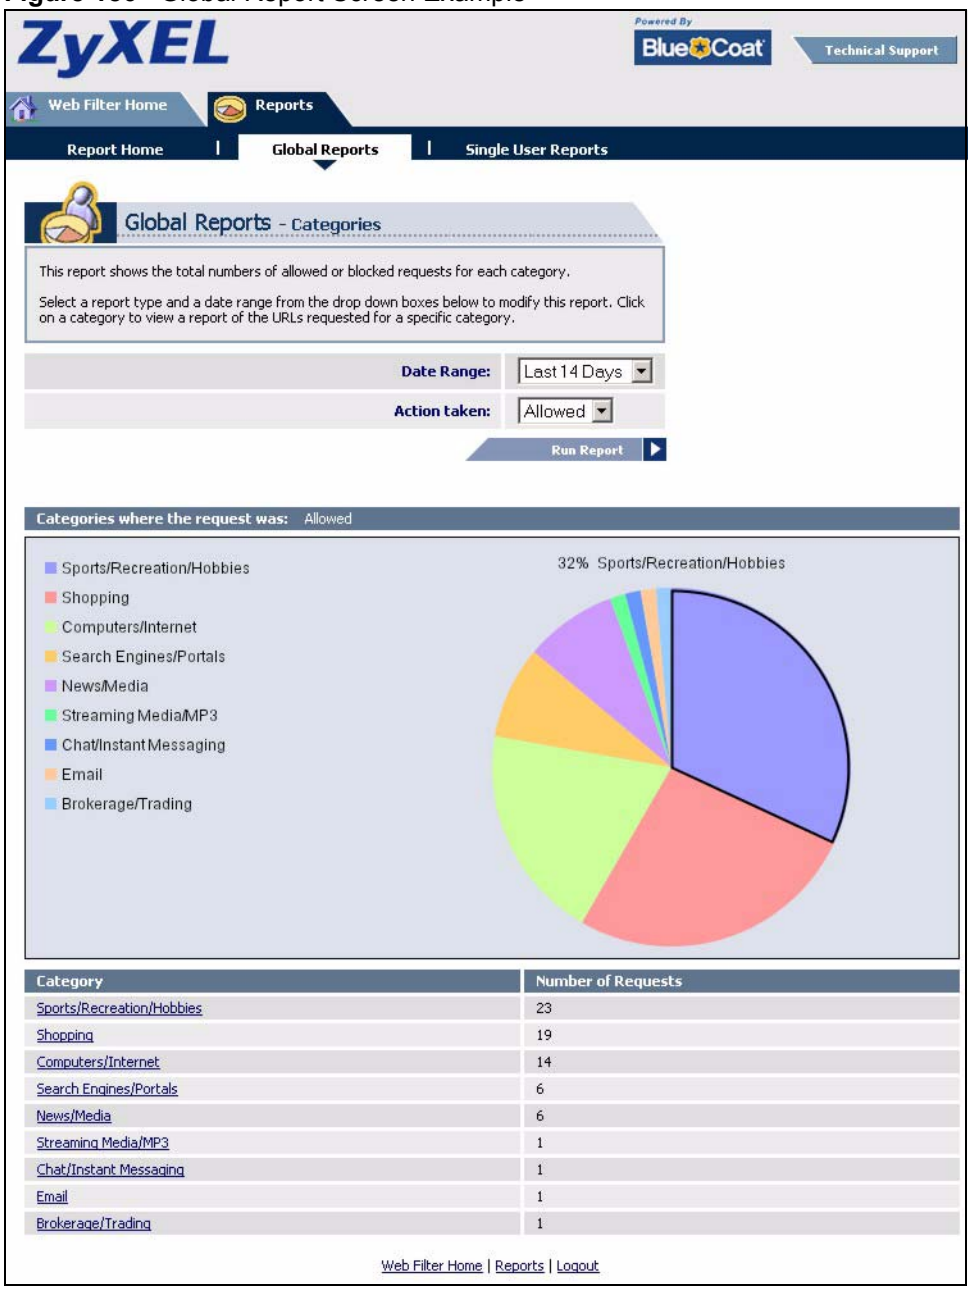

11 You can click a category in the **Categories** report or click **URLs** in the **Report Home** screen to see the URLs that were requested.

Figure 187 Requested URLs Example




13.3 Web Site Submission

You may find that a web site has not been accurately categorized or that a web site's contents have changed and the content filtering category needs to be updated. Use the following procedure to submit the web site for review.

1. Log into the content filtering reports web site (see Section 13.2 on page 293).
2. In the **Web Filter Home** screen (see Figure 184 on page 296), click **Site Submissions** to open the **Web Page Review Process** screen shown next.

Figure 188 Web Page Review Process Screen

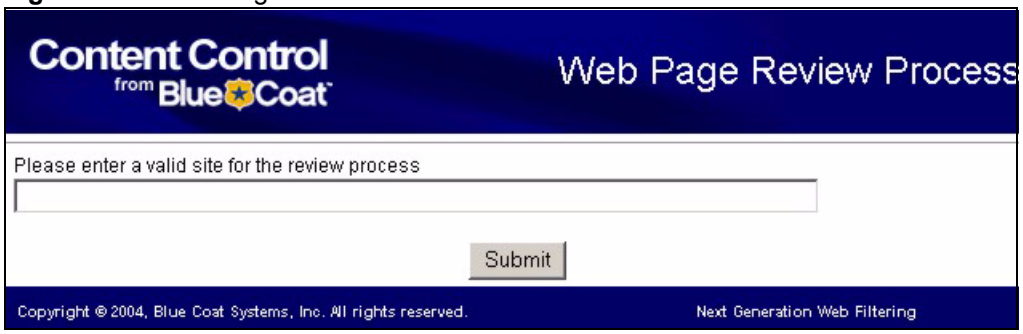

3 Type the web site's URL in the field and click **Submit** to have the web site reviewed.

14

IPSec VPN

This chapter explains how to set up and maintain IPSec VPNs in the ZyWALL. First, it provides an overview of IPSec VPNs. Then, it introduces each screen for IPSec VPN in the ZyWALL.


14.1 IPSec VPN Overview

A virtual private network (VPN) provides secure communications between sites without the expense of leased site-to-site lines. A secure VPN is a combination of tunneling, encryption, authentication, access control and auditing. It is used to transport traffic over the Internet or any insecure network that uses TCP/IP for communication.

Internet Protocol Security (IPSec) is a standards-based VPN that offers flexible solutions for secure data communications across a public network like the Internet. IPSec is built around a number of standardized cryptographic techniques to provide confidentiality, data integrity and authentication at the IP layer.

The following figure provides one perspective of a VPN tunnel.


Figure 189 VPN: Example

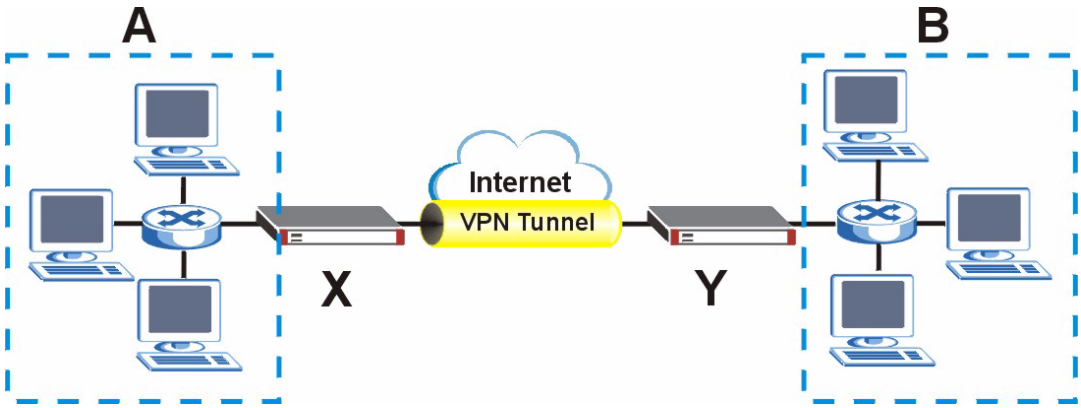

The VPN tunnel connects the ZyWALL (**X**) and the remote IPSec router (**Y**). These routers then connect the local network (**A**) and remote network (**B**).

A VPN tunnel is usually established in two phases. Each phase establishes a security association (SA), a contract indicating what security parameters the ZyWALL and the remote IPSec router will use. The first phase establishes an Internet Key Exchange (IKE) SA between the ZyWALL and remote IPSec router. The second phase uses the IKE SA to securely establish an IPSec SA through which the ZyWALL and remote IPSec router can send data between computers on the local network and remote network. The following figure illustrates this.

Figure 190 VPN: IKE SA and IPSec SA

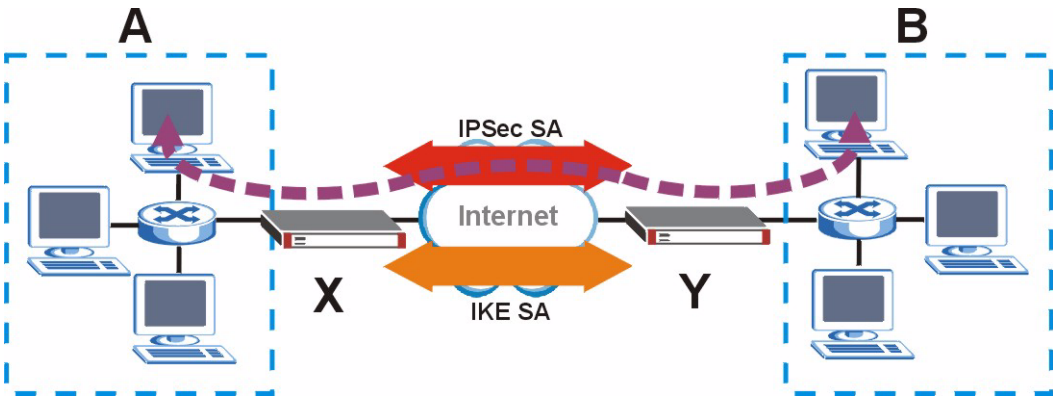

In this example, a computer in network **A** is exchanging data with a computer in network **B**. Inside networks **A** and **B**, the data is transmitted the same way data is normally transmitted in the networks. Between routers **X** and **Y**, the data is protected by tunneling, encryption, authentication, and other security features of the IPSec SA. The IPSec SA is established securely using the IKE SA that routers **X** and **Y** established first.

The rest of this section discusses IKE SA and IPSec SA in more detail.

14.1.1 IKE SA Overview

The IKE SA provides a secure connection between the ZyWALL and remote IPSec router.

It takes several steps to establish an IKE SA. The negotiation mode determines the number of steps to use. There are two negotiation modes--main mode and aggressive mode. Main mode provides better security, while aggressive mode is faster.

Both routers must use the same negotiation mode.

These modes are discussed in more detail in Section 14.3.1.4 on page 308. Main mode is used in various examples in the rest of this section.

14.1.1.1 IP Addresses of the ZyWALL and Remote IPSec Router

In the ZyWALL, you have to specify the IP addresses of the ZyWALL and the remote IPSec router to establish an IKE SA.

You can usually provide a static IP address or a domain name for the ZyWALL. Sometimes, your ZyWALL might also offer another alternative, such as using the IP address of a port or interface.


You can usually provide a static IP address or a domain name for the remote IPSec router as well. Sometimes, you might not know the IP address of the remote IPSec router (for example, telecommuters). In this case, you can still set up the IKE SA, but only the remote IPSec router can initiate an IKE SA.

14.2 VPN Rules (IKE)

A VPN (Virtual Private Network) tunnel gives you a secure connection to another computer or network.


- A gateway policy contains the IKE SA settings. It identifies the IPSec routers at either end of a VPN tunnel.
- A network policy contains the IPSec SA settings. It specifies which devices (behind the IPSec routers) can use the VPN tunnel.

Figure 191 Gateway and Network Policies

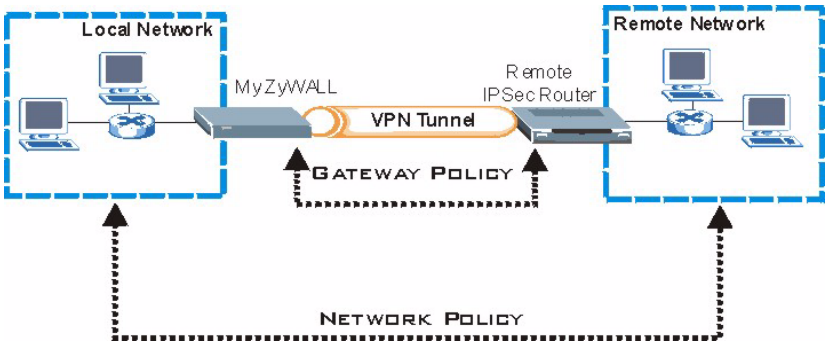


This figure helps explain the main fields in the VPN setup.

Figure 192 IPSec Fields Summary

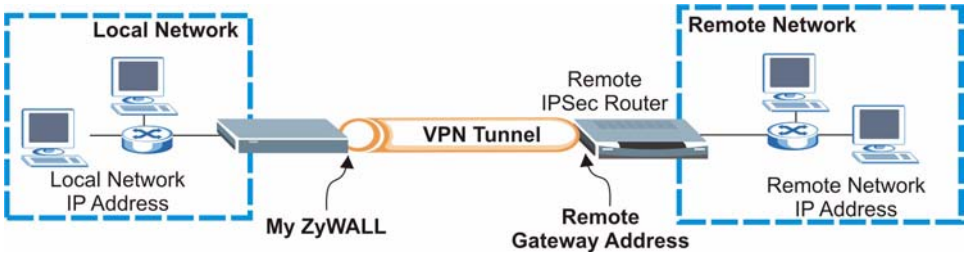

Click **SECURITY > VPN** to display the **VPN Rules (IKE)** screen. Use this screen to manage the ZyWALL's list of VPN rules (tunnels) that use IKE SAs.

Figure 193 SECURITY > VPN > VPN Rules (IKE)

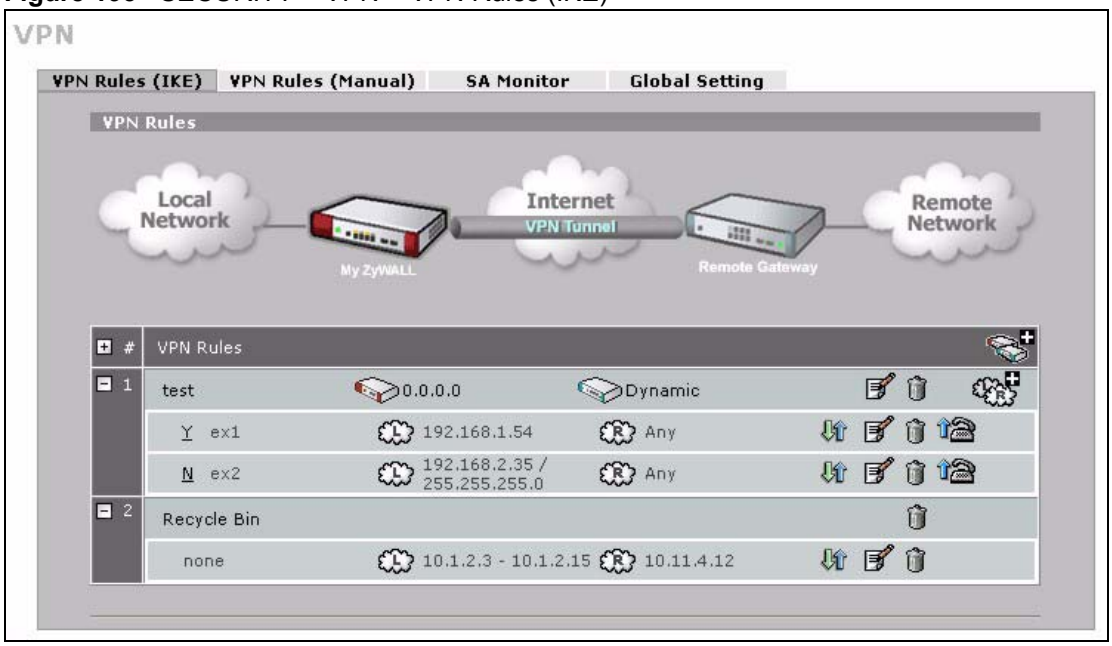

The following table describes the labels in this screen.

Table 84 SECURITY > VPN > VPN Rules (IKE)

LABEL	DESCRIPTION
VPN Rules	These VPN rules define the settings for creating VPN tunnels for secure connection to other computers or networks.
	Click this icon to add a VPN gateway policy (or IPSec rule).
Gateway Policies	The first row of each VPN rule represents the gateway policy. The gateway policy identifies the IPSec routers at either end of a VPN tunnel (**My ZyWALL** and **Remote Gateway**) and specifies the authentication, encryption and other settings needed to negotiate a phase 1 IKE SA (click the edit icon to display the other settings).
 My ZyWALL	This represents your ZyWALL. The WAN IP address, domain name or dynamic domain name of your ZyWALL displays in router mode. The ZyWALL's IP address displays in bridge mode.
 Remote Gateway	This represents the remote secure gateway. The IP address, domain name or dynamic domain name of the remote IPSec router displays if you specify it, otherwise **Dynamic** displays.
	Click this icon to add a VPN network policy.
Network Policies	The subsequent rows in a VPN rule are network policies. A network policy identifies the devices behind the IPSec routers at either end of a VPN tunnel and specifies the authentication, encryption and other settings needed to negotiate a phase 2 IPSec SA.
 Local Network	This is the network behind the ZyWALL. A network policy specifies which devices (behind the IPSec routers) can use the VPN tunnel.
 Remote Network	This is the remote network behind the remote IPsec router.
	Click this icon to display a screen in which you can associate a network policy to a gateway policy or move it to the recycle bin.

Table 84 SECURITY > VPN > VPN Rules (IKE) (continued)

LABEL	DESCRIPTION
	Click this icon to display a screen in which you can change the settings of a gateway or network policy.
	Click this icon to delete a gateway or network policy. When you delete a gateway, the ZyWALL automatically moves the associated network policy(ies) to the recycle bin. When you delete a network policy, it is just deleted.
	Click this icon to establish a VPN connection to a remote network.
	Click this icon to drop a VPN connection to a remote network.
Y/N	This field displays whether a network policy is turned on (**Y**) or not (**N**). Click the letter to change it to the other state (click **Y** to change it to **N** or **N** to change it to **Y**).
Recycle Bin	The recycle bin appears when you have any network policies that are not associated to a gateway policy. When you delete a gateway, the ZyWALL automatically moves the associated network policy(ies) to the recycle bin. You can also manually move a network policy that you do not need (but may want to use again later) to the recycle bin. Click the network policy's move or edit icon and set it's **Gateway Policy** to **Recycle Bin**.


14.3 IKE SA Setup

This section provides more details about IKE SAs.

14.3.1 IKE SA Proposal

The IKE SA proposal is used to identify the encryption algorithm, authentication algorithm, and Diffie-Hellman (DH) key group that the ZyWALL and remote IPSec router use in the IKE SA. In main mode, this is done in steps 1 and 2, as illustrated below.

Figure 194 IKE SA: Main Negotiation Mode, Steps 1 - 2: IKE SA Proposal

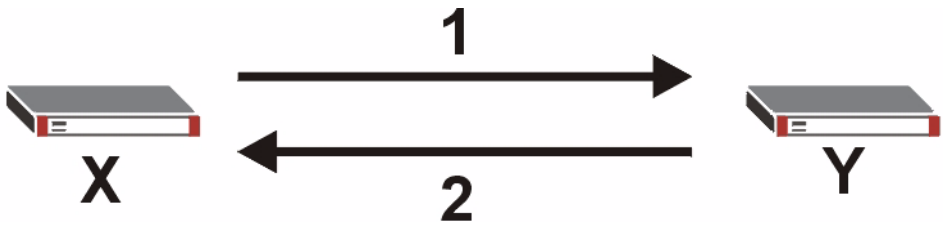

The ZyWALL sends one or more proposals to the remote IPSec router. (In some devices, you can set up only one proposal.) Each proposal consists of an encryption algorithm, authentication algorithm, and DH key group that the ZyWALL wants to use in the IKE SA. The remote IPSec router selects an acceptable proposal and sends the accepted proposal back to the ZyWALL. If the remote IPSec router rejects all of the proposals (for example, if the VPN tunnel is not configured correctly), the ZyWALL and remote IPSec router cannot establish an IKE SA.


Both routers must use the same encryption algorithm, authentication algorithm, and DH key group.

See the field descriptions for information about specific encryption algorithms, authentication algorithms, and DH key groups. See Section 14.3.1.1 on page 306 for more information about DH key groups.

14.3.1.1 Diffie-Hellman (DH) Key Exchange

The ZyWALL and the remote IPSec router use a DH key exchange to establish a shared secret, which is used to generate encryption keys for IKE SA and IPSec SA. In main mode, the DH key exchange is done in steps 3 and 4, as illustrated below.

Figure 195 IKE SA: Main Negotiation Mode, Steps 3 - 4: DH Key Exchange

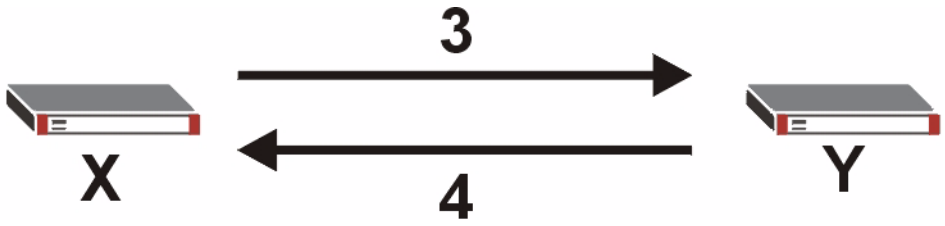


The DH key exchange is based on DH key groups. Each key group is a fixed number of bits long. The longer the key, the more secure the encryption keys, but also the longer it takes to encrypt and decrypt information. For example, DH2 keys (1024 bits) are more secure than DH1 keys (768 bits), but DH2 encryption keys take longer to encrypt and decrypt.

14.3.1.2 Authentication

Before the ZyWALL and remote IPSec router establish an IKE SA, they have to verify each other's identity. This process is based on pre-shared keys and router identities.

In main mode, the ZyWALL and remote IPSec router authenticate each other in steps 5 and 6, as illustrated below. Their identities are encrypted using the encryption algorithm and encryption key the ZyWALL and remote IPSec router selected in previous steps.

Figure 196 IKE SA: Main Negotiation Mode, Steps 5 - 6: Authentication

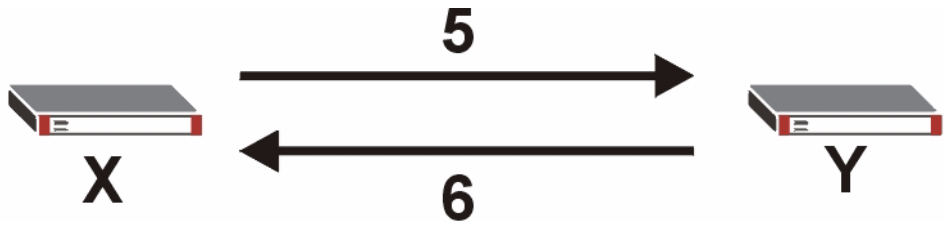

The ZyWALL and remote IPSec router use a pre-shared key in the authentication process, though it is not actually transmitted or exchanged.

The ZyWALL and the remote IPSec router must use the same pre-shared key.

Router identity consists of ID type and ID content. The ID type can be IP address, domain name, or e-mail address, and the ID content is a specific IP address, domain name, or e-mail address. The ID content is only used for identification; the IP address, domain name, or e-mail address that you enter does not have to actually exist.

The ZyWALL and the remote IPSec router each has its own identity, so each one must store two sets of information, one for itself and one for the other router. Local ID type and ID content refers to the ID type and ID content that applies to the router itself, and peer ID type and ID content refers to the ID type and ID content that applies to the other router in the IKE SA.

The ZyWALL's local and peer ID type and ID content must match the remote IPSec router's peer and local ID type and ID content, respectively.

In the following example, the ID type and content match so the ZyWALL and the remote IPSec router authenticate each other successfully.

Table 85 VPN Example: Matching ID Type and Content

ZYWALL	REMOTE IPSEC ROUTER
Local ID type: E-mail	Local ID type: IP
Local ID content: tom@yourcompany.com	Local ID content: 1.1.1.2
Peer ID type: IP	Peer ID type: E-mail
Peer ID content: 1.1.1.2	Peer ID content: tom@yourcompany.com

In the following example, the ID type and content do not match so the authentication fails and the ZyWALL and the remote IPSec router cannot establish an IKE SA.

Table 86 VPN Example: Mismatching ID Type and Content

ZYWALL	REMOTE IPSEC ROUTER
Local ID type: E-mail	Local ID type: IP
Local ID content: tom@yourcompany.com	Local ID content: **1.1.1.2**
Peer ID type: IP	Peer ID type: E-mail
Peer ID content: **1.1.1.15**	Peer ID content: tom@yourcompany.com

It is also possible to configure the ZyWALL to ignore the identity of the remote IPSec router. In this case, you usually set the peer ID type to **Any**. This is not as secure as other peer ID types, however.

14.3.1.2.1 Certificates

It is also possible for the ZyWALL and remote IPSec router to authenticate each other with certificates. In this case, the authentication process is different.

- Instead of using the pre-shared key, the ZyWALL and remote IPSec router check each other's certificates.
- The local ID type and ID content come from the certificate. On the ZyWALL, you simply select which certificate to use.
- If you set the peer ID type to **Any**, the ZyWALL authenticates the remote IPSec router using the trusted certificates and trusted CAs you have set up. Alternatively, if you want to use a specific certificate to authenticate the remote IPSec router, you can use the information in the certificate to specify the peer ID type and ID content.



You must set up the certificates for the ZyWALL and remote IPSec router before you can use certificates in IKE SA. See Chapter 15 on page 349 for more information about certificates.

14.3.1.3 Extended Authentication

Extended authentication is often used when multiple IPSec routers use the same VPN tunnel to connect to a single IPSec router. For example, this might be used with telecommuters. Extended authentication occurs right after the authentication described in Section 14.3.1.2 on page 306.

In extended authentication, one of the routers (the ZyWALL or the remote IPSec router) provides a user name and password to the other router, which uses a local user database and/or an external server to verify the user name and password. If the user name or password is wrong, the routers do not establish an IKE SA.

You can set up the ZyWALL to provide a user name and password to the remote IPSec router, or you can set up the ZyWALL to check a user name and password that is provided by the remote IPSec router.

14.3.1.4 Negotiation Mode

There are two negotiation modes: main mode and aggressive mode. Main mode provides better security, while aggressive mode is faster.

Main mode takes six steps to establish an IKE SA.

Steps 1-2: The ZyWALL sends its proposals to the remote IPSec router. The remote IPSec router selects an acceptable proposal and sends it back to the ZyWALL.

Steps 3-4: The ZyWALL and the remote IPSec router participate in a Diffie-Hellman key exchange, based on the accepted DH key group, to establish a shared secret.

Steps 5-6: Finally, the ZyWALL and the remote IPSec router generate an encryption key from the shared secret, encrypt their identities, and exchange their encrypted identity information for authentication.

In contrast, aggressive mode only takes three steps to establish an IKE SA.

Step 1: The ZyWALL sends its proposals to the remote IPSec router. It also starts the Diffie-Hellman key exchange and sends its (unencrypted) identity to the remote IPSec router for authentication.

Step 2: The remote IPSec router selects an acceptable proposal and sends it back to the ZyWALL. It also finishes the Diffie-Hellman key exchange, authenticates the ZyWALL, and sends its (unencrypted) identity to the ZyWALL for authentication.


Step 3: The ZyWALL authenticates the remote IPSec router and confirms that the IKE SA is established.

Aggressive mode does not provide as much security as main mode because the identity of the ZyWALL and the identity of the remote IPSec router are not encrypted. It is usually used when the address of the initiator is not known by the responder and both parties want to use pre-shared keys for authentication (for example, telecommuters).

14.3.1.5 VPN, NAT, and NAT Traversal

In the following example, there is another router (**A**) between router **X** and router **Y**.

Figure 197 VPN/NAT Example

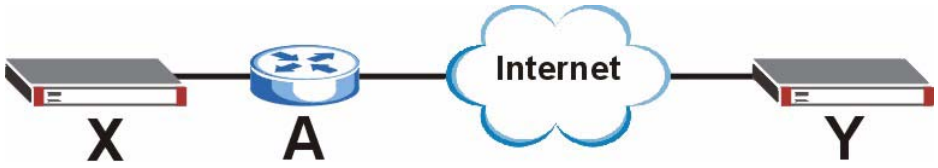

If router **A** does NAT, it might change the IP addresses, port numbers, or both. If router **X** and router **Y** try to establish a VPN tunnel, the authentication fails because it depends on this information. The routers cannot establish a VPN tunnel.

Most routers like router **A** now have an IPSec pass-through feature. This feature helps router **A** recognize VPN packets and route them appropriately. If router **A** has this feature, router **X** and router **Y** can establish a VPN tunnel as long as the active protocol is ESP. (See Section 14.6.3 on page 320 for more information about active protocols.)

If router A does not have an IPSec pass-through or if the active protocol is AH, you can solve this problem by enabling NAT traversal. In NAT traversal, router **X** and router **Y** add an extra header to the IKE SA and IPSec SA packets. If you configure router **A** to forward these packets unchanged, router **X** and router **Y** can establish a VPN tunnel.

You have to do the following things to set up NAT traversal.

- Enable NAT traversal on the ZyWALL and remote IPSec router.
- Configure the NAT router to forward packets with the extra header unchanged. (See the field description for detailed information about the extra header.)

The extra header may be UDP port 500 or UDP port 4500, depending on the standard(s) the ZyWALL and remote IPSec router support.

14.4 Additional IPSec VPN Topics

This section discusses other IPSec VPN topics that apply to either IKE SAs or IPSec SAs or both. Relationships between the topics are also highlighted.

14.4.1 SA Life Time

SAs have a lifetime that specifies how long the SA lasts until it times out. When an SA times out, the ZyWALL automatically renegotiates the SA in the following situations:

- There is traffic when the SA life time expires
- The IPSec SA is configured on the ZyWALL as nailed up (see below)

Otherwise, the ZyWALL must re-negotiate the SA the next time someone wants to send traffic.

If the IKE SA times out while an IPSec SA is connected, the IPSec SA stays connected.

An IPSec SA can be set to **nailed up**. Normally, the ZyWALL drops the IPSec SA when the life time expires or after two minutes of outbound traffic with no inbound traffic. If you set the IPSec SA to nailed up, the ZyWALL automatically renegotiates the IPSec SA when the SA life time expires, and it does not drop the IPSec SA if there is no inbound traffic.


The SA life time and nailed up settings only apply if the rule identifies the remote IPSec router by a static IP address or a domain name. If the **Primary Remote Gateway** field is set to **0.0.0.0**, the ZyWALL cannot initiate the tunnel (and cannot renegotiate the SA).

14.4.2 IPSec High Availability

IPSec high availability (also known as VPN high availability) allows you to use a redundant (backup) VPN connection to another WAN interface on the remote IPSec router if the primary (regular) VPN connection goes down.

In the following figure, if the primary VPN tunnel (A) goes down, the ZyWALL uses the redundant VPN tunnel (B).

Figure 198 IPSec High Availability

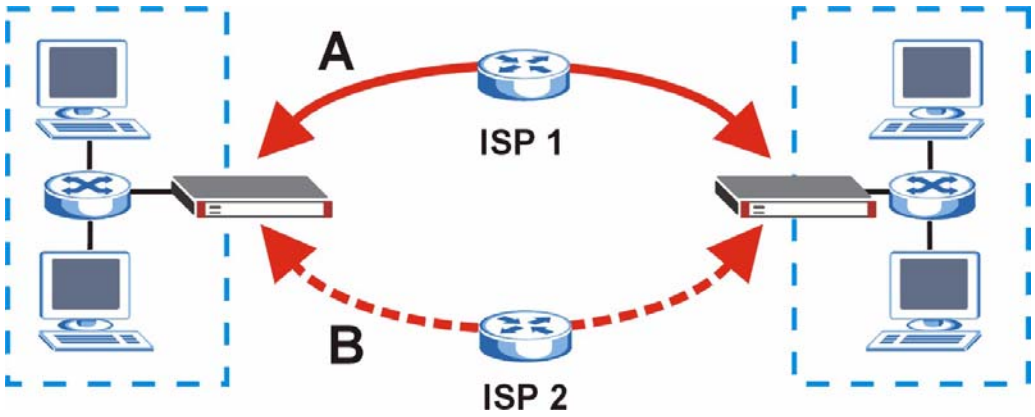

When setting up an IPSec high availability VPN tunnel, the remote IPSec router:

- Must have multiple WAN connections
- Only needs one corresponding IPSec rule
- Should only have IPSec high availability settings in its corresponding IPSec rule if your ZyWALL has multiple WAN connections
- Should ideally identify itself by a domain name or dynamic domain name (it must otherwise have My Address set to 0.0.0.0)
- Should use a WAN connectivity check to this ZyWALL's WAN IP address

If the remote IPSec router is not a ZyWALL, you may also want to avoid setting the IPSec rule to nailed up.

14.4.3 Encryption and Authentication Algorithms

In most ZyWALLs, you can select one of the following encryption algorithms for each proposal. The encryption algorithms are listed here in order from weakest to strongest.

- Data Encryption Standard (DES) is a widely used (but breakable) method of data encryption. It applies a 56-bit key to each 64-bit block of data.
- Triple DES (3DES) is a variant of DES. It iterates three times with three separate keys, effectively tripling the strength of DES.
- Advanced Encryption Standard (AES) is a newer method of data encryption that also uses a secret key. AES applies a 128-bit key to 128-bit blocks of data. It is faster than 3DES.

Use the commands to have the AES encryption apply 192-bit or 256-bit keys to 128-bit blocks of data.

You can select one of the following authentication algorithms for each proposal. The algorithms are listed here in order from weakest to strongest.


- MD5 (Message Digest 5) produces a 128-bit digest to authenticate packet data.
- SHA1 (Secure Hash Algorithm) produces a 160-bit digest to authenticate packet data.

14.5 VPN Rules (IKE) Gateway Policy Edit

In the **VPN Rule (IKE)** screen, click the add gateway policy () icon or the edit () icon to display the **VPN-Gateway Policy -Edit** screen.

Use this screen to configure a VPN gateway policy. The gateway policy identifies the IPSec routers at either end of a VPN tunnel (**My ZyWALL** and **Remote Gateway**) and specifies the authentication, encryption and other settings needed to negotiate a phase 1 IKE SA.

Figure 199 SECURITY > VPN > VPN Rules (IKE) > Edit Gateway Policy

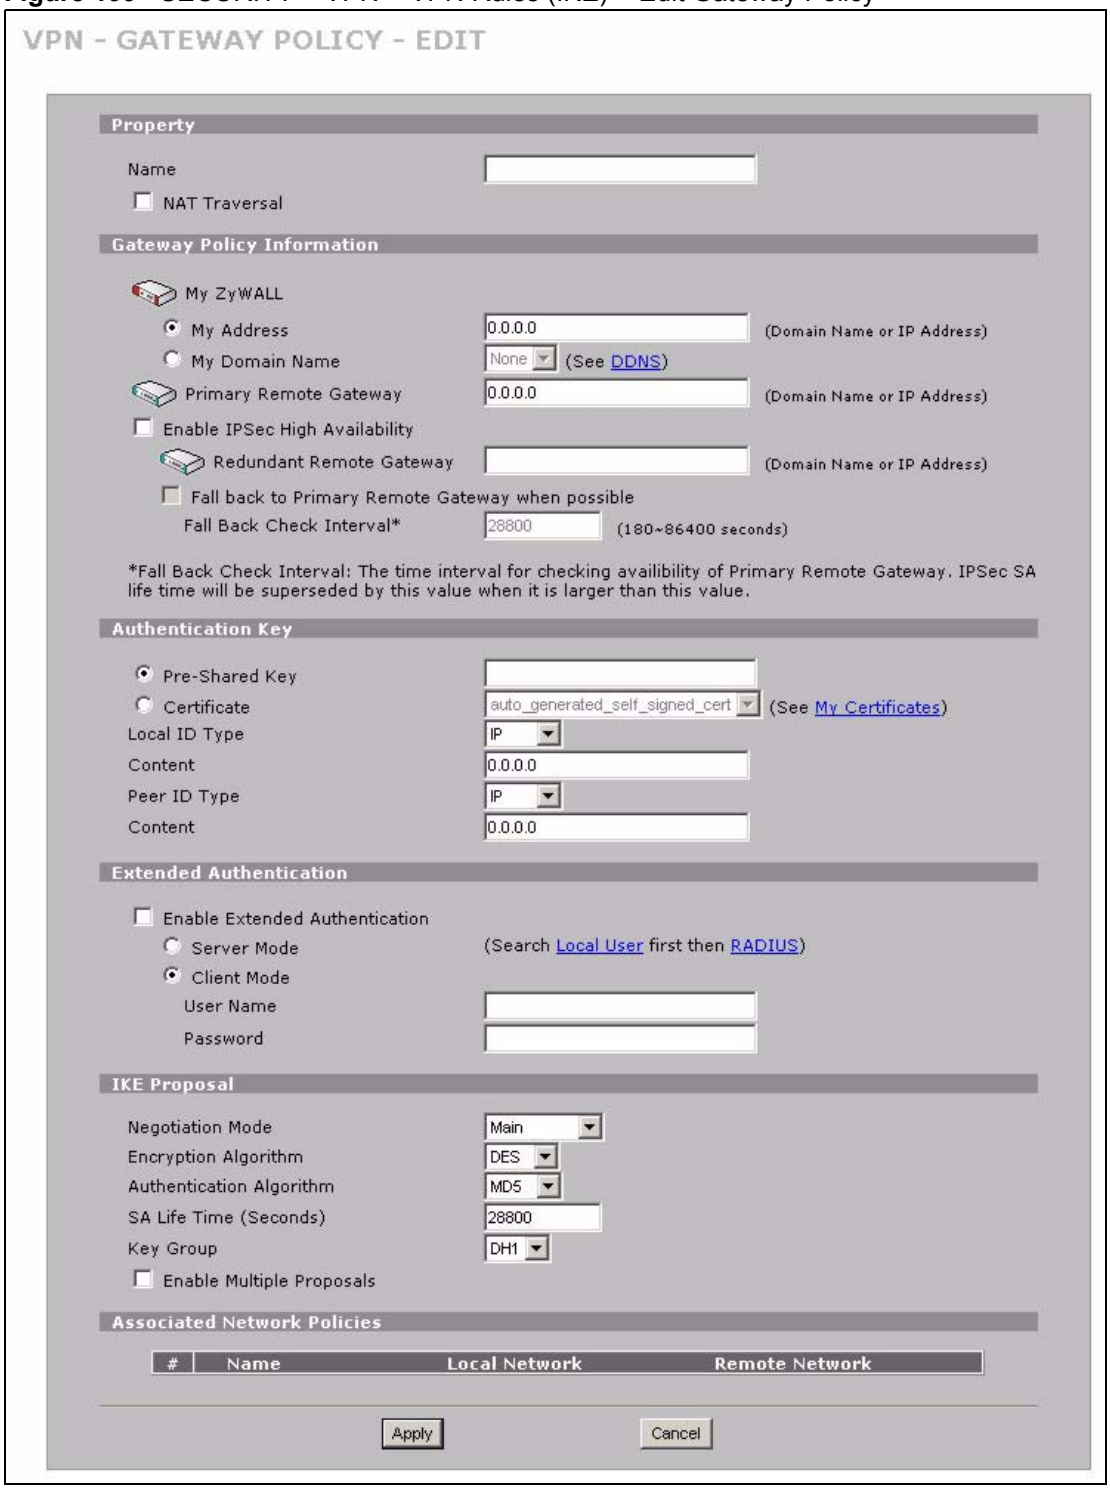

The following table describes the labels in this screen.

Table 87 SECURITY > VPN > VPN Rules (IKE) > Edit Gateway Policy

LABEL	DESCRIPTION
Property	
Name	Type up to 32 characters to identify this VPN gateway policy. You may use any character, including spaces, but the ZyWALL drops trailing spaces.
NAT Traversal	Select this check box to enable NAT traversal. NAT traversal allows you to set up a VPN connection when there are NAT routers between the two IPSec routers. Note: The remote IPSec router must also have NAT traversal enabled. See Section 14.3.1.5 on page 309 for more information. You can use NAT traversal with **ESP** protocol using **Transport** or **Tunnel** mode, but not with **AH** protocol nor with manual key management. In order for an IPSec router behind a NAT router to receive an initiating IPSec packet, set the NAT router to forward UDP ports 500 and 4500 to the IPSec router behind the NAT router.
Gateway Policy Information	
My ZyWALL	When the ZyWALL is in router mode, this field identifies the WAN IP address or domain name of the ZyWALL. You can select **My Address** and enter the ZyWALL's static WAN IP address (if it has one) or leave the field set to 0.0.0.0. The ZyWALL uses its current WAN IP address (static or dynamic) in setting up the VPN tunnel if you leave this field as **0.0.0.0**. If the WAN connection goes down, the ZyWALL uses the dial backup IP address for the VPN tunnel when using dial backup or the LAN IP address when using traffic redirect. Otherwise, you can select **My Domain Name** and choose one of the dynamic domain names that you have configured (in the **DDNS** screen) to have the ZyWALL use that dynamic domain name's IP address. When the ZyWALL is in bridge mode, this field is read-only and displays the ZyWALL's IP address. The VPN tunnel has to be rebuilt if the **My ZyWALL** IP address changes after setup.
Primary Remote Gateway	Type the WAN IP address or the domain name (up to 31 characters) of the IPSec router with which you're making the VPN connection. Set this field to **0.0.0.0** if the remote IPSec router has a dynamic WAN IP address. In order to have more than one active rule with the **Primary Remote Gateway** field set to **0.0.0.0**, the ranges of the local IP addresses cannot overlap between rules. If you configure an active rule with **0.0.0.0** in the **Primary Remote Gateway** field and the LAN's full IP address range as the local IP address, then you cannot configure any other active rules with the **Primary Remote Gateway** field set to **0.0.0.0**.
Enable IPSec High Availability	Turn on the high availability feature to use a redundant (backup) VPN connection to another WAN interface on the remote IPSec router if the primary (regular) VPN connection goes down. The remote IPSec router must have a second WAN connection in order for you to use this. To use this, you must identify both the primary and the redundant remote IPSec routers by WAN IP address or domain name (you cannot set either to **0.0.0.0**).
Redundant Remote Gateway	Type the WAN IP address or the domain name (up to 31 characters) of the backup IPSec router to use when the ZyWALL cannot connect to the primary remote gateway.

Table 87 SECURITY > VPN > VPN Rules (IKE) > Edit Gateway Policy (continued)

LABEL	DESCRIPTION
Fall back to Primary Remote Gateway when possible	Select this to have the ZyWALL change back to using the primary remote gateway if the connection becomes available again.
Fall Back Check Interval*	Set how often the ZyWALL should check the connection to the primary remote gateway while connected to the redundant remote gateway. Each gateway policy uses one or more network policies. If the fall back check interval is shorter than a network policy's SA life time, the fall back check interval is used as the check interval and network policy SA life time. If the fall back check interval is longer than a network policy's SA life time, the SA lifetime is used as the check interval and network policy SA life time.
Authentication Key	
Pre-Shared Key	Select the **Pre-Shared Key** radio button and type your pre-shared key in this field. A pre-shared key identifies a communicating party during a phase 1 IKE negotiation. It is called "pre-shared" because you have to share it with another party before you can communicate with them over a secure connection. Type from 8 to 31 case-sensitive ASCII characters or from 16 to 62 hexadecimal ("0-9", "A-F") characters. You must precede a hexadecimal key with a "0x (zero x), which is not counted as part of the 16 to 62 character range for the key. For example, in "0x0123456789ABCDEF", 0x denotes that the key is hexadecimal and 0123456789ABCDEF is the key itself. Both ends of the VPN tunnel must use the same pre-shared key. You will receive a PYLD_MALFORMED (payload malformed) packet if the same pre-shared key is not used on both ends.
Certificate	Select the **Certificate** radio button to identify the ZyWALL by a certificate. Use the drop-down list box to select the certificate to use for this VPN tunnel. You must have certificates already configured in the **My Certificates** screen. Click **My Certificates** to go to the **My Certificates** screen where you can view the ZyWALL's list of certificates.
Local ID Type	Select **IP** to identify this ZyWALL by its IP address. Select **DNS** to identify this ZyWALL by a domain name. Select **E-mail** to identify this ZyWALL by an e-mail address. You do not configure the local ID type and content when you set **Authentication Key** to **Certificate**. The ZyWALL takes them from the certificate you select.
Content	When you select **IP** in the **Local ID Type** field, type the IP address of your computer in the local **Content** field. The ZyWALL automatically uses the IP address in the **My ZyWALL** field (refer to the **My ZyWALL** field description) if you configure the local **Content** field to **0.0.0.0** or leave it blank. It is recommended that you type an IP address other than **0.0.0.0** in the local **Content** field or use the **DNS** or **E-mail** ID type in the following situations. 1. When there is a NAT router between the two IPSec routers. 2. When you want the remote IPSec router to be able to distinguish between VPN connection requests that come in from IPSec routers with dynamic WAN IP addresses. When you select **DNS** or **E-mail** in the **Local ID Type** field, type a domain name or e-mail address by which to identify this ZyWALL in the local **Content** field. Use up to 31 ASCII characters including spaces, although trailing spaces are truncated. The domain name or e-mail address is for identification purposes only and can be any string.

Table 87 SECURITY > VPN > VPN Rules (IKE) > Edit Gateway Policy (continued)

LABEL	DESCRIPTION
Peer ID Type	Select from the following when you set **Authentication Key** to **Pre-shared Key**. Select **IP** to identify the remote IPSec router by its IP address. Select **DNS** to identify the remote IPSec router by a domain name. Select **E-mail** to identify the remote IPSec router by an e-mail address. Select from the following when you set **Authentication Key** to **Certificate**. Select **IP** to identify the remote IPSec router by the IP address in the subject alternative name field of the certificate it uses for this VPN connection. Select **DNS** to identify the remote IPSec router by the domain name in the subject alternative name field of the certificate it uses for this VPN connection. Select **E-mail** to identify the remote IPSec router by the e-mail address in the subject alternative name field of the certificate it uses for this VPN connection. Select **Subject Name** to identify the remote IPSec router by the subject name of the certificate it uses for this VPN connection. Select **Any** to have the ZyWALL not check the remote IPSec router's ID.
Content	The configuration of the peer content depends on the peer ID type. Do the following when you set **Authentication Key** to **Pre-shared Key**. For **IP**, type the IP address of the computer with which you will make the VPN connection. If you configure this field to **0.0.0.0** or leave it blank, the ZyWALL will use the address in the **Primary Remote Gateway** field (refer to the **Primary Remote Gateway** field description). For **DNS** or **E-mail**, type a domain name or e-mail address by which to identify the remote IPSec router. Use up to 31 ASCII characters including spaces, although trailing spaces are truncated. The domain name or e-mail address is for identification purposes only and can be any string. It is recommended that you type an IP address other than **0.0.0.0** or use the **DNS** or **E-mail** ID type in the following situations: 1. When there is a NAT router between the two IPSec routers. 2. When you want the ZyWALL to distinguish between VPN connection requests that come in from remote IPSec routers with dynamic WAN IP addresses. Do the following when you set **Authentication Key** to **Certificate**. 1. For **IP**, type the IP address from the subject alternative name field of the certificate the remote IPSec router will use for this VPN connection. If you configure this field to **0.0.0.0** or leave it blank, the ZyWALL will use the address in the **Primary Remote Gateway** field (refer to the **Primary Remote Gateway** field description). 2. For **DNS** or **E-mail**, type the domain name or e-mail address from the subject alternative name field of the certificate the remote IPSec router will use for this VPN connection. 3. For **Subject Name**, type the subject name of the certificate the remote IPSec router will use for this VPN connection. Use up to255 ASCII characters including spaces. 4. For **Any**, the peer **Content** field is not available. 5. Regardless of how you configure the **ID Type** and **Content** fields, two active IPSec SAs cannot have both the local and remote IP address ranges overlap between rules.
Extended Authentication	
Enable Extended Authentication	Select this check box to activate extended authentication.

Table 87 SECURITY > VPN > VPN Rules (IKE) > Edit Gateway Policy (continued)

LABEL	DESCRIPTION
Server Mode	Select **Server Mode** to have this ZyWALL authenticate extended authentication clients that request this VPN connection. You must also configure the extended authentication clients' usernames and passwords in the authentication server's local user database or a RADIUS server (see Chapter 16 on page 379). Click **Local User** to go to the **Local User Database** screen where you can view and/or edit the list of user names and passwords. Click **RADIUS** to go to the **RADIUS** screen where you can configure the ZyWALL to check an external RADIUS server. During authentication, if the ZyWALL (in server mode) does not find the extended authentication clients' user name in its internal user database and an external RADIUS server has been enabled, it attempts to authenticate the client through the RADIUS server.
Client Mode	Select **Client Mode** to have your ZyWALL use a username and password when initiating this VPN connection to the extended authentication server ZyWALL. Only a VPN extended authentication client can initiate this VPN connection.
User Name	Enter a user name for your ZyWALL to be authenticated by the VPN peer (in server mode). The user name can be up to 31 case-sensitive ASCII characters, but spaces are not allowed. You must enter a user name and password when you select client mode.
Password	Enter the corresponding password for the above user name. The password can be up to 31 case-sensitive ASCII characters, but spaces are not allowed.
IKE Proposal	
Negotiation Mode	Select **Main** or **Aggressive** from the drop-down list box. Multiple SAs connecting through a secure gateway must have the same negotiation mode.
Encryption Algorithm	Select which key size and encryption algorithm to use in the IKE SA. Choices are: **DES** - a 56-bit key with the DES encryption algorithm **3DES** - a 168-bit key with the DES encryption algorithm **AES** - a 128-bit key with the AES encryption algorithm The ZyWALL and the remote IPSec router must use the same algorithms and keys. Longer keys require more processing power, resulting in increased latency and decreased throughput.
Authentication Algorithm	Select which hash algorithm to use to authenticate packet data in the IKE SA. Choices are **SHA1** and **MD5**. **SHA1** is generally considered stronger than **MD5**, but it is also slower.
SA Life Time (Seconds)	Define the length of time before an IKE SA automatically renegotiates in this field. It may range from 180 to 3,000,000 seconds (almost 35 days). A short SA Life Time increases security by forcing the two VPN gateways to update the encryption and authentication keys. However, every time the VPN tunnel renegotiates, all users accessing remote resources are temporarily disconnected.
Key Group	Select which Diffie-Hellman key group (DH*x*) you want to use for encryption keys. Choices are: **DH1** - use a 768-bit random number **DH2** - use a 1024-bit random number
Enable Multiple Proposals	Select this to allow the ZyWALL to use any of its phase 1 key groups and encryption and authentication algorithms when negotiating an IKE SA. When you enable multiple proposals, the ZyWALL allows the remote IPSec router to select which phase 1 key groups and encryption and authentication algorithms to use for the IKE SA, even if they are less secure than the ones you configure for the VPN rule. Clear this to have the ZyWALL use only the configured phase 1 key groups and encryption and authentication algorithms when negotiating an IKE SA.

Table 87 SECURITY > VPN > VPN Rules (IKE) > Edit Gateway Policy (continued)

LABEL	DESCRIPTION
Associated Network Policies	The following table shows the policy(ies) you configure for this rule. To add a VPN policy, click the add network policy ( ) icon in the **VPN Rules (IKE)** screen (see Figure 193 on page 304). Refer to Section 14.8 on page 326 for more information.
#	This field displays the policy index number.
Name	This field displays the policy name.
Local Network	This field displays one or a range of IP address(es) of the computer(s) behind the ZyWALL.
Remote Network	This field displays one or a range of IP address(es) of the remote network behind the remote IPsec router.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Cancel	Click **Cancel** to exit this screen without saving.

14.6 IPSec SA Overview

Once the ZyWALL and remote IPSec router have established the IKE SA, they can securely negotiate an IPSec SA through which to send data between computers on the networks.

The IPSec SA stays connected even if the underlying IKE SA is not available anymore.

This section introduces the key components of an IPSec SA.

14.6.1 Local and Remote Networks

In an IPSec SA, the local network consists of devices connected to the ZyWALL and may be called the local policy. Similarly, the remote network consists of the devices connected to the remote IPSec router and may be called the remote policy.

You can configure a remote network as 0.0.0.0 (any) when:

- Forwarding all outgoing traffic to the remote gateway.
- The remote network's addresses are unknown or there are many remote networks using one VPN rule (see Section 14.18.1 on page 342 for an example of telecommuters sharing one VPN rule).

It is not recommended to set a VPN rule's local and remote network settings both to 0.0.0.0 (any).

In most cases you should use virtual address mapping (see Section 14.6.2 on page 319) to avoid overlapping local and remote network IP addresses. See Section 14.17 on page 338 for how the ZyWALL handles overlapping local and remote network IP addresses.

14.6.2 Virtual Address Mapping

Virtual address mapping (NAT over IPSec) changes the source IP addresses of packets from your local devices to virtual IP addresses before sending them through the VPN tunnel.


14.6.2.1 Avoiding Overlapping Local And Remote Network IP Addresses

If both IPSec routers support virtual address mapping, you can access devices on both networks, even if their IP addresses overlap. You map the ZyWALL's local network addresses to virtual IP addresses and map the remote IPSec router's local IP addresses to other (non-overlapping) virtual IP addresses.

The following diagram shows an example of using virutal address mapping to avoid overlapping local and remote IP addresses. You can set up virtual address mapping on both IPSec routers to allow computers on network **X** to access network **X** and network **Y** computers with the same IP address.

- You set ZyWALL **A** to change the source IP addresses of packets from local network **X** (192.168.1.2 to 192.168.1.4) to virtual IP addresses 10.0.0.2 to 10.0.0.4 before sending them through the VPN tunnel.
- You set ZyWALL **B** to change the source IP addresses of packets from the remote network **Y** (192.168.1.2 to 192.168.1.27) to virtual IP addresses 172.21.2.2 to 172.21.2.27 before sending them through the VPN tunnel.
- On ZyWALL **A**, you specify 172.21.2.2 to 172.21.2.27 as the remote network. On ZyWALL **B**, you specify 10.0.0.2 to 10.0.0.4 as the remote network.

Figure 200 Virtual Mapping of Local and Remote Network IP Addresses

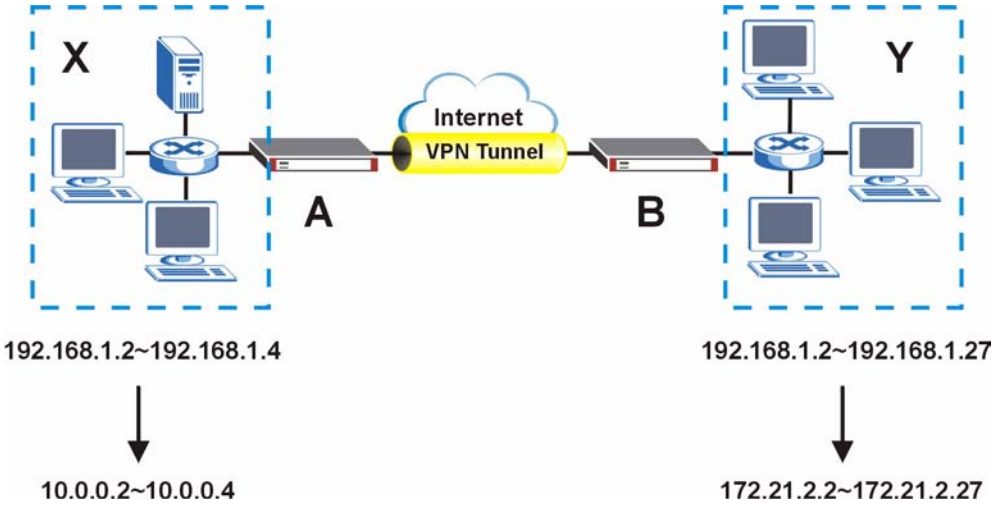

Computers on network **X** use IP addresses 192.168.1.2 to 192.168.1.4 to access local network devices and IP addresses 172.21.2.2 to 172.21.2.27 to access the remote network devices.

Computers on network **Y** use IP addresses 192.168.1.2 to 192.168.1.27 to access local network devices and IP addresses 10.0.0.2 to 10.0.0.4 to access the remote network devices.

14.6.3 Active Protocol

The active protocol controls the format of each packet. It also specifies how much of each packet is protected by the encryption and authentication algorithms. IPSec VPN includes two active protocols, AH (Authentication Header, RFC 2402) and ESP (Encapsulating Security Payload, RFC 2406).

The ZyWALL and remote IPSec router must use the same active protocol.

Usually, you should select ESP. AH does not support encryption, and ESP is more suitable with NAT.


14.6.4 Encapsulation

There are two ways to encapsulate packets. Usually, you should use tunnel mode because it is more secure. Transport mode is only used when the IPSec SA is used for communication between the ZyWALL and remote IPSec router (for example, for remote management), not between computers on the local and remote networks.

The ZyWALL and remote IPSec router must use the same encapsulation.

These modes are illustrated below.

Figure 201 VPN: Transport and Tunnel Mode Encapsulation

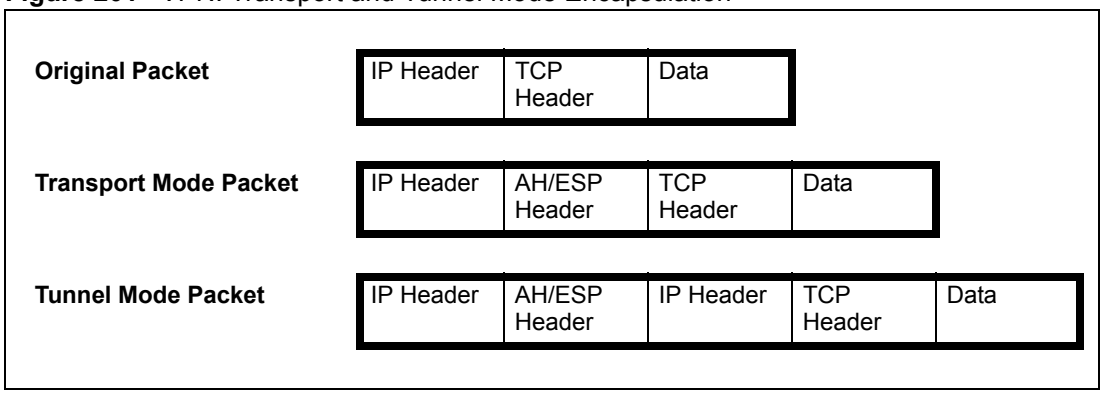

In tunnel mode, the ZyWALL uses the active protocol to encapsulate the entire IP packet. As a result, there are two IP headers:

- Outside header: The outside IP header contains the IP address of the ZyWALL or remote IPSec router, whichever is the destination.
- Inside header: The inside IP header contains the IP address of the computer behind the ZyWALL or remote IPSec router. The header for the active protocol (AH or ESP) appears between the IP headers.

In transport mode, the encapsulation depends on the active protocol. With AH, the ZyWALL includes part of the original IP header when it encapsulates the packet. With ESP, however, the ZyWALL does not include the IP header when it encapsulates the packet, so it is not possible to verify the integrity of the source IP address.

14.6.5 IPSec SA Proposal and Perfect Forward Secrecy

An IPSec SA proposal is similar to an IKE SA proposal (see Section 14.3.1 on page 305), except that you also have the choice whether or not the ZyWALL and remote IPSec router perform a new DH key exchange every time an IPSec SA is established. This is called Perfect Forward Secrecy (PFS).

If you enable PFS, the ZyWALL and remote IPSec router perform a DH key exchange every time an IPSec SA is established, changing the root key from which encryption keys are generated. As a result, if one encryption key is compromised, other encryption keys remain secure.


If you do not enable PFS, the ZyWALL and remote IPSec router use the same root key that was generated when the IKE SA was established to generate encryption keys.

The DH key exchange is time-consuming and may be unnecessary for data that does not require such security.

14.7 VPN Rules (IKE) Network Policy Edit

Click **SECURITY > VPN** and the add network policy ( ) icon or a network policy's edit icon in the **VPN Rules (IKE)** screen to display the **VPN-Network Policy -Edit** screen. Use this screen to configure a network policy. A network policy identifies the devices behind the IPSec routers at either end of a VPN tunnel and specifies the authentication, encryption and other settings needed to negotiate a phase 2 IPSec SA.

Figure 202 SECURITY > VPN > VPN Rules (IKE) > Edit Network Policy

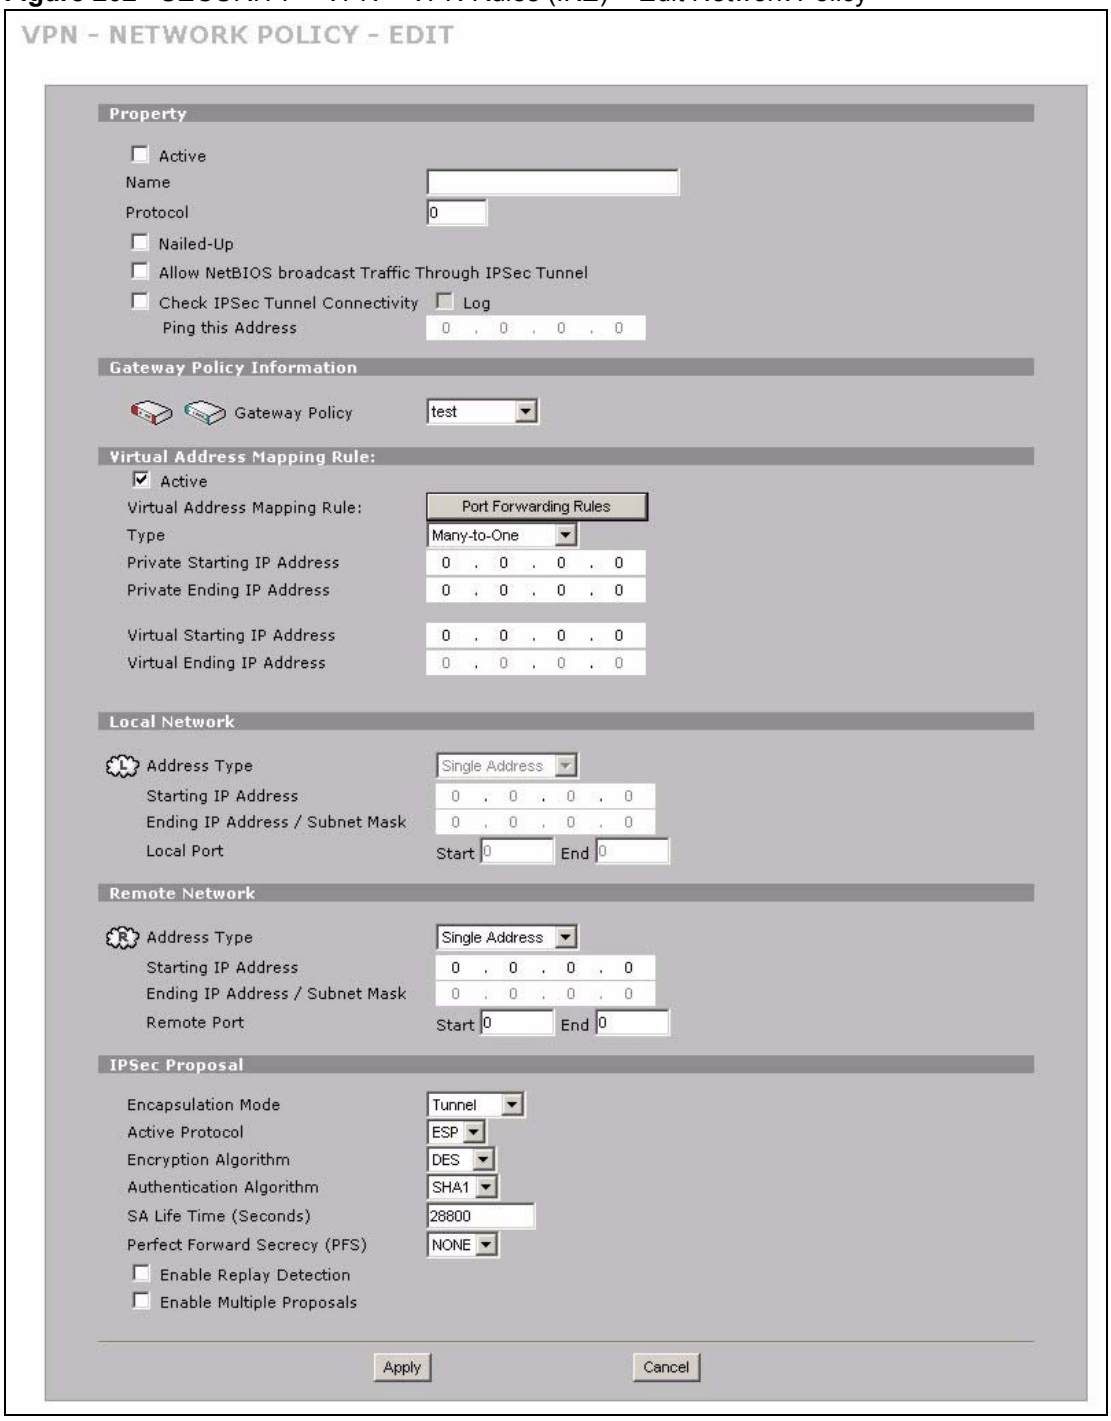

The following table describes the labels in this screen.

Table 88 SECURITY > VPN > VPN Rules (IKE) > Edit Network Policy

LABEL	DESCRIPTION
Active	If the **Active** check box is selected, packets for the tunnel trigger the ZyWALL to build the tunnel. Clear the **Active** check box to turn the network policy off. The ZyWALL does not apply the policy. Packets for the tunnel do not trigger the tunnel. If you clear the **Active** check box while the tunnel is up (and click **Apply**), you turn off the network policy and the tunnel goes down.
Name	Type a name to identify this VPN network policy. You may use any character, including spaces, but the ZyWALL drops trailing spaces.
Protocol	Enter 1 for ICMP, 6 for TCP, 17 for UDP, etc. 0 is the default and signifies any protocol.
Nailed-Up	Select this check box to turn on the nailed up feature for this SA. Turn on nailed up to have the ZyWALL automatically reinitiate the SA after the SA lifetime times out, even if there is no traffic. The ZyWALL also reinitiates the SA when it restarts. The ZyWALL also rebuilds the tunnel if it was disconnected due to the output or input idle timer.
Allow NetBIOS Traffic Through IPSec Tunnel	This field is not available when the ZyWALL is in bridge mode. NetBIOS (Network Basic Input/Output System) are TCP or UDP packets that enable a computer to connect to and communicate with a LAN. It may sometimes be necessary to allow NetBIOS packets to pass through VPN tunnels in order to allow local computers to find computers on the remote network and vice versa. Select this check box to send NetBIOS packets through the VPN connection.
Check IPSec Tunnel Connectivity	Select the check box and configure an IP address in the **Ping this Address** field to have the ZyWALL periodically test the VPN tunnel to the remote IPSec router. The ZyWALL pings the IP address every minute. The ZyWALL starts the IPSec connection idle timeout timer when it sends the ping packet. If there is no traffic from the remote IPSec router by the time the timeout period expires, the ZyWALL disconnects the VPN tunnel.
Log	Select this check box to set the ZyWALL to create logs when it cannot ping the remote device.
Ping this Address	If you select **Check IPSec Tunnel Connectivity**, enter the IP address of a computer at the remote IPSec network. The computer's IP address must be in this IP policy's remote range (see the **Remote Network** fields).
Gateway Policy Information	
Gateway Policy	Select the gateway policy with which to use the VPN policy or store it in the recycle bin (without an association to any gateway policy).
Virtual Address Mapping Rule	Virtual address mapping over VPN is available with the routing mode.
Active	Enable this feature to have the ZyWALL use virtual (translated) IP addresses for the local network for the VPN connection. You do not configure the **Local Network** fields when you enable virtual address mapping. Virtual address mapping allows local and remote networks to have overlapping IP addresses. Virtual address mapping (NAT over IPSec) translates the source IP addresses of computers on your local network to other (virtual) IP addresses before sending the packets to the remote IPSec router. This translation hides the source IP addresses of computers in the local network.

Table 88 SECURITY > VPN > VPN Rules (IKE) > Edit Network Policy (continued)

LABEL	DESCRIPTION
Port Forwarding Rules	If you are configuring a **Many-to-One** rule, click this button to go to a screen where you can configure port forwarding for your VPN tunnels. The VPN network policy port forwarding rules let the ZyWALL forward traffic coming in through the VPN tunnel to the appropriate IP address.
Type	Select **One-to-One** to translate a single (static) IP address on your LAN to a single virtual IP address. Select **Many-to-One** to translate a range of (static) IP addresses on your LAN to a single virtual IP address. Many-to-one rules are for traffic going out from your LAN, through the VPN tunnel, to the remote network. Use port forwarding rules to allow incoming traffic from the remote network. Select **Many One-to-One** to translate a range of (static) IP addresses on your LAN to a range of virtual IP addresses.
Private Starting IP Address	Specify the IP addresses of the devices behind the ZyWALL that can use the VPN tunnel. When you select **One-to-One** in the **Type** field, enter the (static) IP address of a computer on the LAN behind your ZyWALL. When you select **Many-to-One** or **Many One-to-One** in the **Type** field, enter the beginning (static) IP address in a range of computers on the LAN behind your ZyWALL.
Private Ending IP Address	When you select **Many-to-One** or **Many One-to-One** in the **Type** field, enter the ending (static) IP address in a range of computers on the LAN behind your ZyWALL.
Virtual Starting IP Address	Enter the (static) IP addresses that represent the translated private IP addresses. These must correspond to the remote IPSec router's configured remote IP addresses. When you select **One-to-One** or **Many-to-One** in the **Type** field, enter an IP address as the translated IP address. Many-to-one rules are only for traffic going to the remote network. Use port forwarding rules to allow incoming traffic from the remote network. When you select **Many One-to-One** in the **Type** field, enter the beginning IP address of a range of translated IP addresses.
Virtual Ending IP Address	When you select **Many One-to-One** in the **Type** field, enter the ending (static) IP address of a range of translated IP addresses. The size of the private address range must be equal to the size of the translated virtual address range.
Local Network	Specify the IP addresses of the devices behind the ZyWALL that can use the VPN tunnel. The local IP addresses must correspond to the remote IPSec router's configured remote IP addresses. Two active SAs cannot have the local and remote IP address(es) both the same. Two active SAs can have the same local or remote IP address, but not both. You can configure multiple SAs between the same local and remote IP addresses, as long as only one is active at any time.
Address Type	Use the drop-down list box to choose **Single Address**, **Range Address**, or **Subnet Address**. Select **Single Address** for a single IP address. Select **Range Address** for a specific range of IP addresses. Select **Subnet Address** to specify IP addresses on a network by their subnet mask.
Starting IP Address	When the **Address Type** field is configured to **Single Address**, enter a (static) IP address on the LAN behind your ZyWALL. When the **Address Type** field is configured to **Range Address**, enter the beginning (static) IP address, in a range of computers on the LAN behind your ZyWALL. When the **Address Type** field is configured to **Subnet Address**, this is a (static) IP address on the LAN behind your ZyWALL.

Table 88 SECURITY > VPN > VPN Rules (IKE) > Edit Network Policy (continued)

LABEL	DESCRIPTION
Ending IP Address/ Subnet Mask	When the **Address Type** field is configured to **Single Address**, this field is N/A. When the **Address Type** field is configured to **Range Address**, enter the end (static) IP address, in a range of computers on the LAN behind your ZyWALL. When the **Address Type** field is configured to **Subnet Address**, this is a subnet mask on the LAN behind your ZyWALL.
Local Port	0 is the default and signifies any port. Type a port number from 0 to 65535 in the **Start** and **End** fields. Some of the most common IP ports are: 21, FTP; 53, DNS; 23, Telnet; 80, HTTP; 25, SMTP; 110, POP3.
Remote Network	Specify the IP addresses of the devices behind the remote IPSec router that can use the VPN tunnel. The remote IP addresses must correspond to the remote IPSec router's configured local IP addresses. Two active SAs cannot have the local and remote IP address(es) both the same. Two active SAs can have the same local or remote IP address, but not both. You can configure multiple SAs between the same local and remote IP addresses, as long as only one is active at any time.
Address Type	Use the drop-down list box to choose **Single Address**, **Range Address**, or **Subnet Address**. Select **Single Address** with a single IP address. Select **Range Address** for a specific range of IP addresses. Select **Subnet Address** to specify IP addresses on a network by their subnet mask.
Starting IP Address	When the **Address Type** field is configured to **Single Address**, enter a (static) IP address on the network behind the remote IPSec router. When the Addr Type field is configured to **Range Address**, enter the beginning (static) IP address, in a range of computers on the network behind the remote IPSec router. When the **Address Type** field is configured to **Subnet Address**, enter a (static) IP address on the network behind the remote IPSec router.
Ending IP Address/ Subnet Mask	When the **Address Type** field is configured to **Single Address**, this field is N/A. When the **Address Type** field is configured to **Range Address**, enter the end (static) IP address, in a range of computers on the network behind the remote IPSec router. When the **Address Type** field is configured to **Subnet Address**, enter a subnet mask on the network behind the remote IPSec router.
Remote Port	0 is the default and signifies any port. Type a port number from 0 to 65535 in the **Start** and **End** fields. Some of the most common IP ports are: 21, FTP; 53, DNS; 23, Telnet; 80, HTTP; 25, SMTP; 110, POP3.
IPSec Proposal	
Encapsulation Mode	Select **Tunnel** mode or **Transport** mode.
Active Protocol	Select the security protocols used for an SA. Both **AH** and **ESP** increase processing requirements and communications latency (delay).
Encryption Algorithm	Select which key size and encryption algorithm to use in the IKE SA. Choices are: **NULL** - no encryption key or algorithm **DES** - a 56-bit key with the DES encryption algorithm **3DES** - a 168-bit key with the DES encryption algorithm **AES** - a 128-bit key with the AES encryption algorithm The ZyWALL and the remote IPSec router must use the same algorithms and keys. Longer keys require more processing power, resulting in increased latency and decreased throughput.
Authentication Algorithm	Select which hash algorithm to use to authenticate packet data in the IPSec SA. Choices are **SHA1** and **MD5**. **SHA1** is generally considered stronger than **MD5**, but it is also slower.


Table 88 SECURITY > VPN > VPN Rules (IKE) > Edit Network Policy (continued)

LABEL	DESCRIPTION
SA Life Time (Seconds)	Define the length of time before an IPSec SA automatically renegotiates in this field. The minimum value is 180 seconds. A short SA Life Time increases security by forcing the two VPN gateways to update the encryption and authentication keys. However, every time the VPN tunnel renegotiates, all users accessing remote resources are temporarily disconnected.
Perfect Forward Secret (PFS)	Select whether or not you want to enable Perfect Forward Secrecy (PFS) and, if you do, which Diffie-Hellman key group to use for encryption. Choices are: **NONE** - disable PFS **DH1** - enable PFS and use a 768-bit random number **DH2** - enable PFS and use a 1024-bit random number PFS changes the root key that is used to generate encryption keys for each IPSec SA. It is more secure but takes more time.
Enable Replay Detection	As a VPN setup is processing intensive, the system is vulnerable to Denial of Service (DOS) attacks. The IPSec receiver can detect and reject old or duplicate packets to protect against replay attacks. Enable replay detection by selecting this check box.
Enable Multiple Proposals	Select this to allow the ZyWALL to use any of its phase 2 encryption and authentication algorithms when negotiating an IPSec SA. When you enable multiple proposals, the ZyWALL allows the remote IPSec router to select which phase 2 encryption and authentication algorithms to use for the IPSec SA, even if they are less secure than the ones you configure for the VPN rule. Clear this to have the ZyWALL use only the configured phase 2 encryption and authentication algorithms when negotiating an IPSec SA.
Apply	Click **Apply** to save the changes.
Cancel	Click **Cancel** to discard all changes and return to the main VPN screen.

14.8 Network Policy Port Forwarding

Click **SECURITY > VPN** and the add network policy ( ) icon in the **VPN Rules (IKE)** screen to display the **VPN-Network Policy -Edit** screen. Then, under **Virtual Address Mapping Rule**, select **Many-to-One** as the **Type** and click the **Port Forwarding Rules** button to open the following screen. Use this screen to configure port forwarding for your VPN tunnels to let the ZyWALL forward traffic coming in through the VPN tunnel to the appropriate IP address on the LAN.

Figure 203 SECURITY > VPN > VPN Rules (IKE) > Edit Network Policy > Port Forwarding

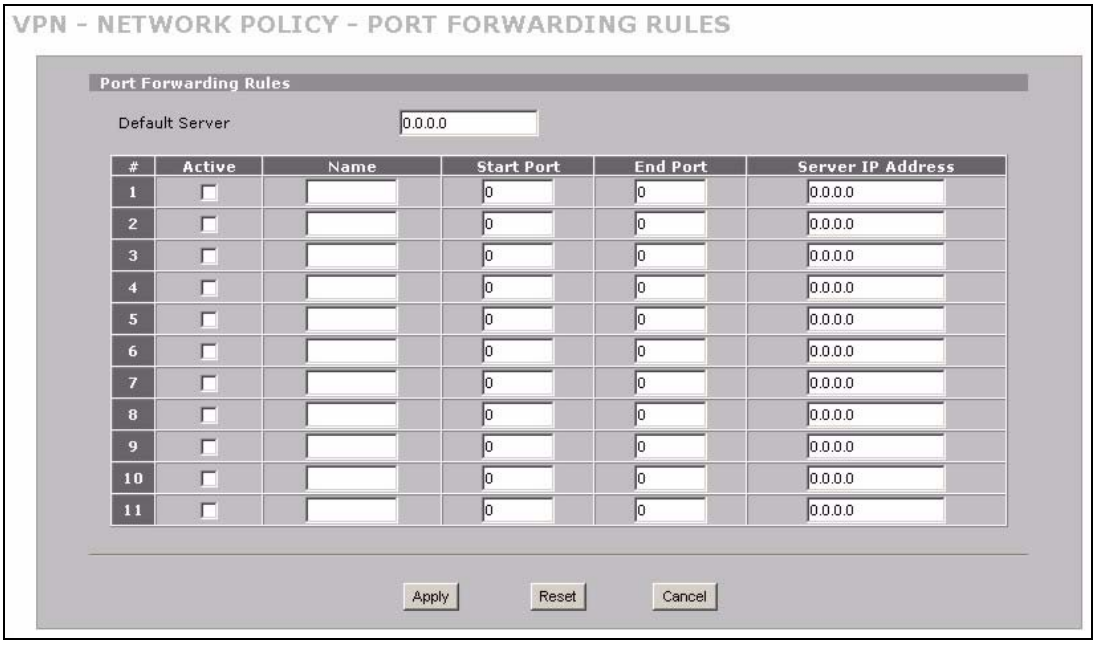

The following table describes the labels in this screen.

Table 89 SECURITY > VPN > VPN Rules (IKE) > Edit Network Policy > Port Forwarding

LABEL	DESCRIPTION
Default Server	In addition to the servers for specified services, NAT supports a default server. A default server receives packets from ports that are not specified in this screen. If you do not assign a default server IP address, all packets received for ports not specified in this screen are discarded.
#	Number of an individual port forwarding server entry.
Active	Select this check box to activate the port forwarding server entry.
Name	Enter a descriptive name for identifying purposes.
Start Port	Type a port number in this field. To forward only one port, type the port number again in the **End Port** field. To forward a series of ports, type the start port number here and the end port number in the **End Port** field.
End Port	Type a port number in this field. To forward only one port, type the port number in the **Start Port** field above and then type it again in this field. To forward a series of ports, type the last port number in a series that begins with the port number in the **Start Port** field above.
Server IP Address	Type your server IP address in this field.
Apply	Click this button to save these settings.
Reset	Click this button to begin configuring this screen afresh.
Cancel	Click this button to return to the **VPN-Network Policy -Edit** screen without saving your changes.

14.9 Network Policy Move


Click the move ( ) icon in the **VPN Rules (IKE)** screen to display the **VPN Rules (IKE): Network Policy Move** screen.

A VPN (Virtual Private Network) tunnel gives you a secure connection to another computer or network. Each VPN tunnel uses a single gateway policy and one or more network policies.

- The gateway policy contains the IKE SA settings. It identifies the IPSec routers at either end of a VPN tunnel.
- The network policy contains the IPSec SA settings. It specifies which devices (behind the IPSec routers) can use the VPN tunnel.

Use this screen to associate a network policy to a gateway policy.

Figure 204 SECURITY > VPN > VPN Rules (IKE) > Move Network Policy

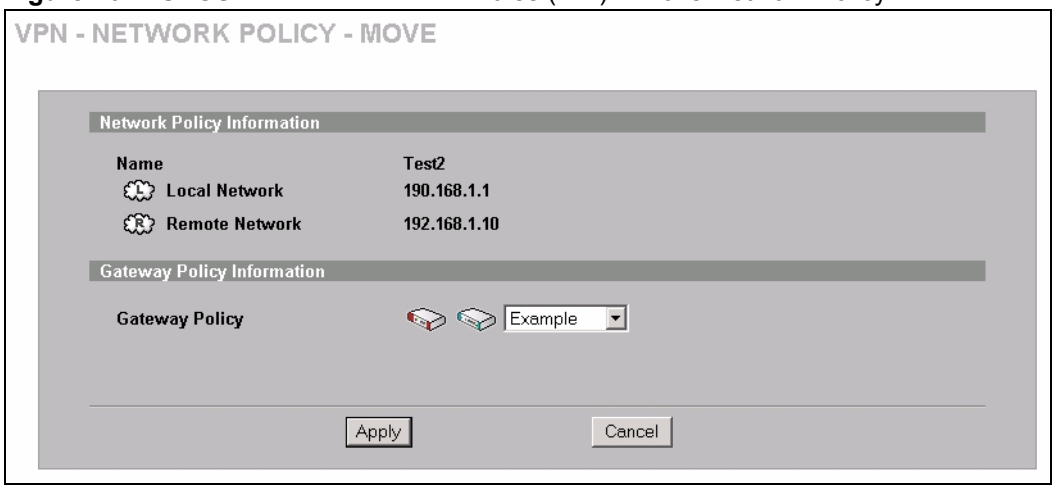

The following table describes the labels in this screen.


Table 90 SECURITY > VPN > VPN Rules (IKE) > Move Network Policy

LABEL	DESCRIPTION
Network Policy Information	The following fields display the general network settings of this VPN policy.
Name	This field displays the policy name.
Local Network	This field displays one or a range of IP address(es) of the computer(s) behind the ZyWALL.
Remote Network	This field displays one or a range of IP address(es) of the remote network behind the remote IPsec router.
Gateway Policy Information	
Gateway Policy	Select the name of a VPN rule (or gateway policy) to which you want to associate this VPN network policy. If you do not want to associate a network policy to any gateway policy, select **Recycle Bin** from the drop-down list box. The **Recycle Bin** gateway policy is a virtual placeholder for any network policy(ies) without an associated gateway policy. When there is a network policy in **Recycle Bin**, the **Recycle Bin** gateway policy automatically displays in the **VPN Rules (IKE)** screen.
Apply	Click **Apply** to save the changes.
Cancel	Click **Cancel** to discard all changes and return to the main VPN screen.

14.10 Dialing the VPN Tunnel via Web Configurator


To test whether the IPSec routers can build the VPN tunnel, click the dial ( ) icon in the **VPN Rules (IKE)** screen to have the IPSec routers set up the tunnel. If you find a disconnect ( ) icon next to the rule you just created in the **VPN Rules (IKE)** screen, the ZyWALL automatically built the VPN tunnel. Go to the **SA Monitor** screen to view a list of connected VPN tunnels. See Section 14.16 on page 338 for more information.

Figure 205 VPN Rule Configured

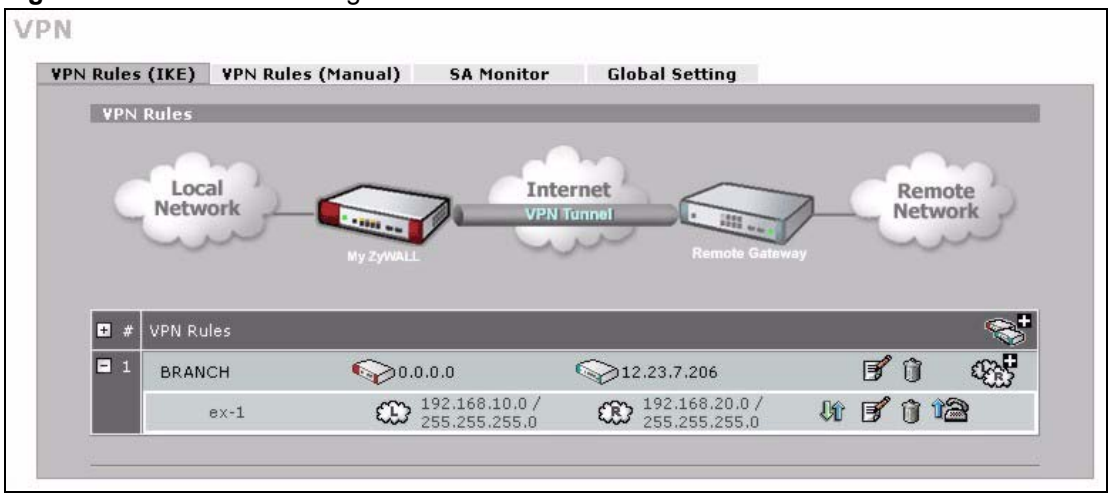


The following screen displays.

Figure 206 VPN Dial

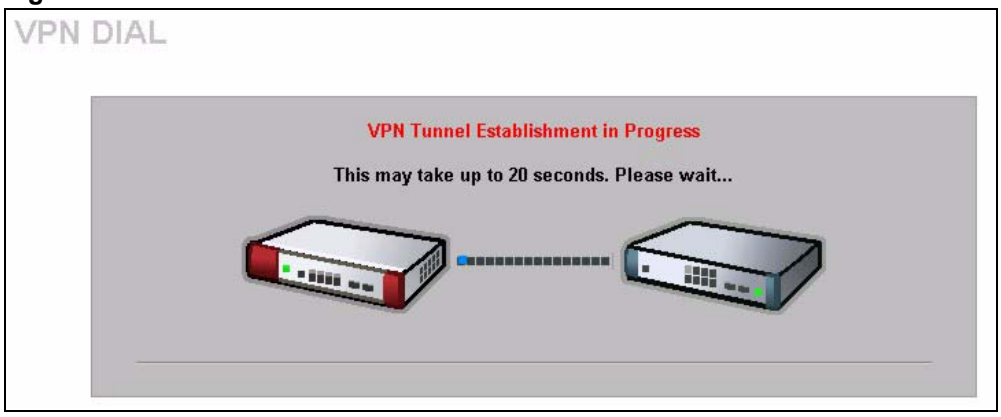

This screen displays later if the IPSec routers can build the VPN tunnel.

Figure 207 VPN Tunnel Established

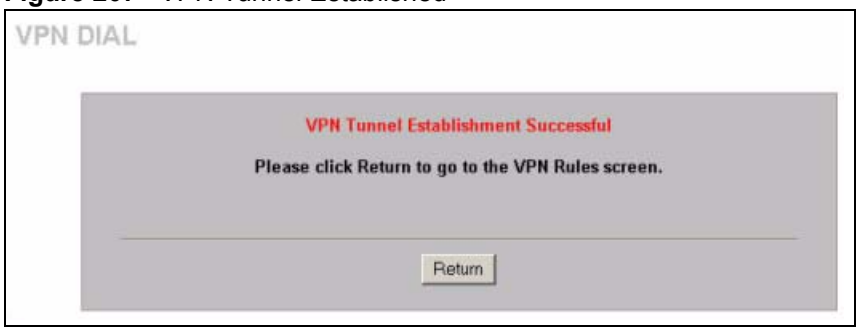

14.11 VPN Troubleshooting

If the IPSec tunnel does not build properly, the problem is likely a configuration error at one of the IPSec routers. Log into the web configurators of both ZyXEL IPSec routers.
Check the settings in each field methodically and slowly.

14.11.1 VPN Log

The system log can often help to identify a configuration problem.
Use the web configurator **LOGS Log Settings** screen to enable IKE and IPSec logging at both ends, clear the log and then build the tunnel.

View the log via the web configurator **LOGS View Log** screen or type `sys log disp` from SMT **Menu 24.8**. See Section 26.5 on page 492 for information on the log messages.

Figure 208 VPN Log Example

```
ras> sys log disp ike ipsec

#  .time                 source                 destination            notes
   message
  0|01/11/2001 18:47:22 |5.6.7.8               |5.1.2.3               |IKE
    Rule [ex-1] Tunnel built successfully
  1|01/11/2001 18:47:22 |5.6.7.8               |5.1.2.3               |IKE
    The cookie pair is : 0xDAC0B43FBDE154F5 / 0xC5156C099C3F7DCA
  2|01/11/2001 18:47:22 |5.6.7.8               |5.1.2.3               |IKE
    Send:[HASH]
  3|01/11/2001 18:47:22 |5.6.7.8               |5.1.2.3               |IKE
    The cookie pair is : 0xDAC0B43FBDE154F5 / 0xC5156C099C3F7DCA
  4|01/11/2001 18:47:22 |5.6.7.8               |5.1.2.3               |IKE
    Adjust TCP MSS to 1398
  5|01/11/2001 18:47:22 |5.1.2.3               |5.6.7.8               |IKE
    Recv:[HASH][SA][NONCE][ID][ID]
  6|01/11/2001 18:47:22 |5.1.2.3               |5.6.7.8               |IKE
    The cookie pair is : 0xDAC0B43FBDE154F5 / 0xC5156C099C3F7DCA
  7|01/11/2001 18:47:21 |5.6.7.8               |5.1.2.3               |IKE
    IKE Packet Retransmit
  8|01/11/2001 18:47:21 |5.6.7.8               |5.1.2.3               |IKE
    The cookie pair is : 0xDAC0B43FBDE154F5 / 0xC5156C099C3F7DCA
  9|01/11/2001 18:47:17 |5.6.7.8               |5.1.2.3               |IKE
    Send:[HASH][SA][NONCE][ID][ID]
 10|01/11/2001 18:47:17 |5.6.7.8               |5.1.2.3               |IKE
    The cookie pair is : 0xDAC0B43FBDE154F5 / 0xC5156C099C3F7DCA
 11|01/11/2001 18:47:17 |5.6.7.8               |5.1.2.3               |IKE
    Start Phase 2: Quick Mode
 12|01/11/2001 18:47:17 |5.6.7.8               |5.1.2.3               |IKE
    The cookie pair is : 0xDAC0B43FBDE154F5 / 0xC5156C099C3F7DCA
 13|01/11/2001 18:47:17 |5.6.7.8               |5.1.2.3               |IKE
    Phase 1 IKE SA process done
 14|01/11/2001 18:47:17 |5.6.7.8               |5.1.2.3               |IKE
    The cookie pair is : 0xDAC0B43FBDE154F5 / 0xC5156C099C3F7DCA
 15|01/11/2001 18:47:17 |5.1.2.3               |5.6.7.8               |IKE
    Recv:[ID][HASH][NOTFY:INIT_CONTACT]9C3F7DCA
 16|01/11/2001 18:47:17 |5.1.2.3               |5.6.7.8               |IKE
    The cookie pair is : 0xDAC0B43FBDE154F5 / 0xC5156C099C3F7DCA
 17|01/11/2001 18:47:15 |5.6.7.8               |5.1.2.3               |IKE
    Send:[ID][HASH][NOTFY:INIT_CONTACT]9C3F7DCA
```

14.12 IPSec Debug

If you are having difficulty building an IPSec tunnel to a non-ZyXEL IPSec router, advanced users may wish to examine the IPSec debug feature (in the commands).



If any of your VPN rules have an active network policy set to nailed-up, using the IPSec debug feature may cause the ZyWALL to continuously display new information. Type `ipsec debug level 0` and press [ENTER] to stop it.

Figure 209 IKE/IPSec Debug Example

```
ras> ipsec debug
type            level           display
ras> ipsec debug type
<0:Disable | 1:Original on|off | 2:IKE on|off | 3: IPSec [SPI]|on|off |
4:XAUTH on|off | 5:CERT on|off | 6: All>
ras> ipsec debug level
<0:None | 1:User | 2:Low | 3:High>

ras> ipsec debug type 1 on
ras> ipsec debug type 2 on
ras> ipsec debug level 3

ras> ipsec dial 1
get_ipsec_sa_by_policyIndex():
Start dialing for tunnel <rule# 1>...
ikeStartNegotiate(): saIndex<0>
peerIp<5.1.2.3> protocol: <IPSEC_ESP>(3)

   peer Ip <5.1.2.3> initiator(): type<IPSEC_ESP>, exch<Main>

   initiator :
   protocol: IPSEC_ESP, exchange mode: Main mode  find_ipsec_sa():
      find ipsec saNot found

      Not found  isadb_is_outstanding_req():
      isakmp is outstanding req : SA not found
isadb_create_entry():  >> INITIATOR

  isadb_get_entry_by_addr():
      Get IKE entry by address:   SA not found

      SA not found  ISAKMP SA created for peer <BRANCH> size<900>

      ISAKMP SA created for peer <BRANCH> size<900>  ISAKMP SA built,
ikePeer.s0

      ISAKMP SA built, index = 0isadb_create_entry(): done

      create IKE entry doneinitiator(): find myIpAddr = 0.0.0.0, use
<5.6.7.8> r
```

14.13 IPSec SA Using Manual Keys

You might set up an IPSec SA using manual keys when you want to establish a VPN tunnel quickly, for example, for troubleshooting. You should only do this as a temporary solution, however, because it is not as secure as a regular IPSec SA.

In IPSec SAs using manual keys, the ZyWALL and remote IPSec router do not establish an IKE SA. They only establish an IPSec SA. As a result, an IPSec SA using manual keys has some characteristics of IKE SA and some characteristics of IPSec SA. There are also some differences between IPSec SA using manual keys and other types of SA.

14.13.1 IPSec SA Proposal Using Manual Keys

In IPSec SA using manual keys, you can only specify one encryption algorithm and one authentication algorithm. You cannot specify several proposals. There is no DH key exchange, so you have to provide the encryption key and the authentication key the ZyWALL and remote IPSec router use.



The ZyWALL and remote IPSec router must use the same encryption key and authentication key.

14.13.2 Authentication and the Security Parameter Index (SPI)

For authentication, the ZyWALL and remote IPSec router use the SPI, instead of pre-shared keys, ID type and content. The SPI is an identification number.



The ZyWALL and remote IPSec router must use the same SPI.


14.14 VPN Rules (Manual)

Refer to Figure 192 on page 303 for a graphical representation of the fields in the web configurator.

Click **SECURITY > VPN** > **VPN Rules (Manual)** to open the **VPN Rules (Manual)** screen.

Use this screen to manage the ZyWALL's list of VPN rules (tunnels) that use manual keys. You may want to configure a VPN rule that uses manual key management if you are having problems with IKE key management.

Figure 210 SECURITY > VPN > VPN Rules (Manual)

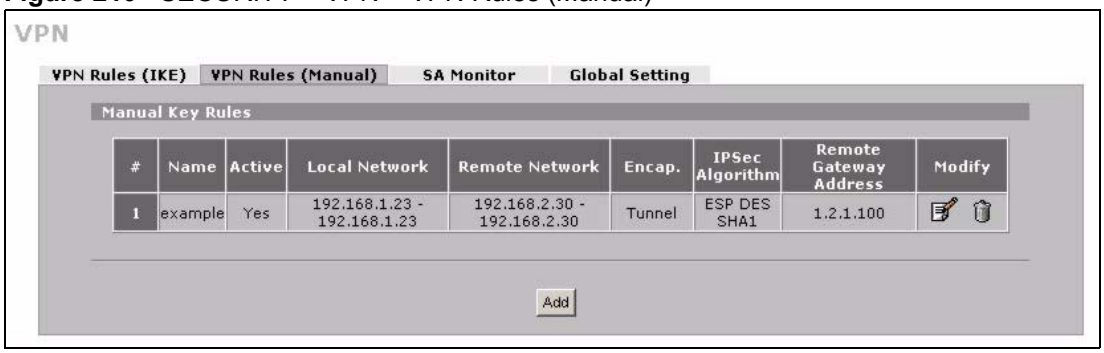

The following table describes the labels in this screen.

Table 91 SECURITY > VPN > VPN Rules (Manual)


LABEL	DESCRIPTION
#	This is the VPN policy index number.
Name	This field displays the identification name for this VPN policy.
Active	This field displays whether the VPN policy is active or not. A **Yes** signifies that this VPN policy is active. **No** signifies that this VPN policy is not active.
Local Network	This is the IP address(es) of computer(s) on your local network behind your ZyWALL. The same (static) IP address is displayed twice when the **Local Network Address Type** field in the **VPN - Manual Key - Edit** screen is configured to **Single Address**. The beginning and ending (static) IP addresses, in a range of computers are displayed when the **Local Network Address Type** field in the **VPN - Manual Key - Edit** screen is configured to **Range Address**. A (static) IP address and a subnet mask are displayed when the **Local Network Address Type** field in the **VPN - Manual Key - Edit** screen is configured to **Subnet Address**.
Remote Network	This is the IP address(es) of computer(s) on the remote network behind the remote IPSec router. This field displays **N/A** when the **Remote Gateway Address** field displays **0.0.0.0**. In this case only the remote IPSec router can initiate the VPN. The same (static) IP address is displayed twice when the **Remote Network Address Type** field in the **VPN - Manual Key - Edit** screen is configured to **Single Address**. The beginning and ending (static) IP addresses, in a range of computers are displayed when the **Remote Network Address Type** field in the **VPN - Manual Key - Edit** screen is configured to **Range Address**. A (static) IP address and a subnet mask are displayed when the **Remote Network Address Type** field in the **VPN - Manual Key - Edit** screen is configured to **Subnet Address**.
Encap.	This field displays **Tunnel** or **Transport** mode (**Tunnel** is the default selection).
IPSec Algorithm	This field displays the security protocols used for an SA. Both **AH** and **ESP** increase ZyWALL processing requirements and communications latency (delay).
Remote Gateway Address	This is the static WAN IP address of the remote IPSec router.
Modify	Click the edit icon to edit the VPN policy. Click the delete icon to remove the VPN policy. A window displays asking you to confirm that you want to delete the VPN rule. When a VPN policy is deleted, subsequent policies move up in the page list.
Add	Click **Add** to add a new VPN policy.

14.15 VPN Rules (Manual) Edit

Click the **Add** button or the edit icon on the **VPN Rules (Manual)** screen to open the following screen. Use this screen to configure VPN rules that use manual keys. Manual key management is useful if you have problems with IKE key management.

See Section 14.13 on page 333 for more information about IPSec SAs using manual keys.

Figure 211 SECURITY > VPN > VPN Rules (Manual) > Edit

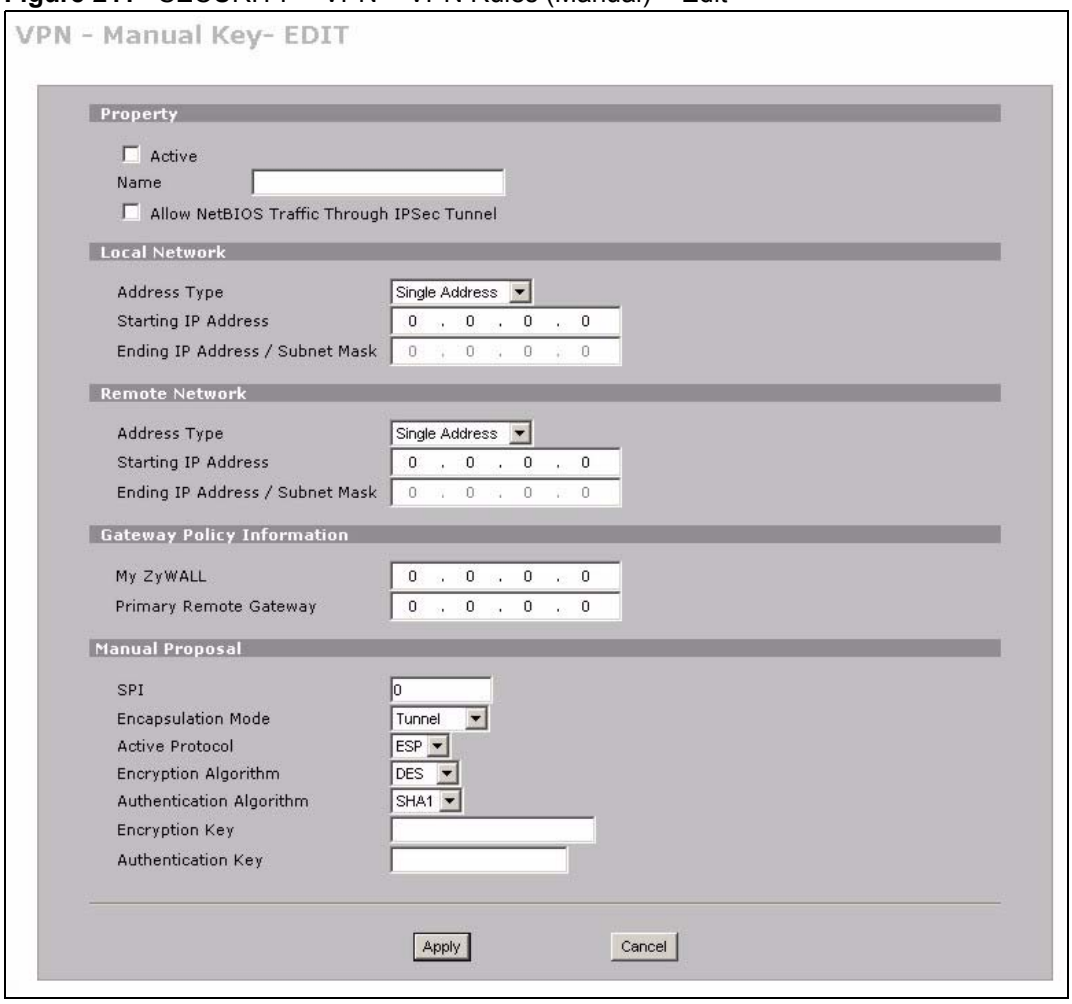

The following table describes the labels in this screen.

Table 92 SECURITY > VPN > VPN Rules (Manual) > Edit

LABEL	DESCRIPTION
Property	
Active	Select this check box to activate this VPN policy.
Name	Type up to 32 characters to identify this VPN policy. You may use any character, including spaces, but the ZyWALL drops trailing spaces.

Table 92 SECURITY > VPN > VPN Rules (Manual) > Edit (continued)

LABEL	DESCRIPTION
Allow NetBIOS Traffic Through IPSec Tunnel	This field is not available when the ZyWALL is in bridge mode. NetBIOS (Network Basic Input/Output System) are TCP or UDP packets that enable a computer to find other computers. It may sometimes be necessary to allow NetBIOS packets to pass through VPN tunnels in order to allow local computers to find computers on the remote network and vice versa. Select this check box to send NetBIOS packets through the VPN connection.
Local Network	Specify the IP addresses of the devices behind the ZyWALL that can use the VPN tunnel. The local IP addresses must correspond to the remote IPSec router's configured remote IP addresses. Two active SAs cannot have the local and remote IP address(es) both the same. Two active SAs can have the same local or remote IP address, but not both. You can configure multiple SAs between the same local and remote IP addresses, as long as only one is active at any time.
Address Type	Use the drop-down list box to choose **Single Address**, **Range Address**, or **Subnet Address**. Select **Single Address** for a single IP address. Select **Range Address** for a specific range of IP addresses. Select **Subnet Address** to specify IP addresses on a network by their subnet mask.
Starting IP Address	When the **Address Type** field is configured to **Single Address**, enter a (static) IP address on the LAN behind your ZyWALL. When the **Address Type** field is configured to **Range Address**, enter the beginning (static) IP address, in a range of computers on the LAN behind your ZyWALL. When the **Address Type** field is configured to **Subnet Address**, this is a (static) IP address on the LAN behind your ZyWALL.
Ending IP Address/Subnet Mask	When the **Address Type** field is configured to **Single Address**, this field is N/A. When the **Address Type** field is configured to **Range Address**, enter the end (static) IP address, in a range of computers on the LAN behind your ZyWALL. When the **Address Type** field is configured to **Subnet Address**, this is a subnet mask on the LAN behind your ZyWALL.
Remote Network	Specify the IP addresses of the devices behind the remote IPSec router that can use the VPN tunnel. The remote IP addresses must correspond to the remote IPSec router's configured local IP addresses. Two active SAs cannot have the local and remote IP address(es) both the same. Two active SAs can have the same local or remote IP address, but not both. You can configure multiple SAs between the same local and remote IP addresses, as long as only one is active at any time.
Address Type	Use the drop-down list box to choose **Single Address**, **Range Address**, or **Subnet Address**. Select **Single Address** with a single IP address. Select **Range Address** for a specific range of IP addresses. Select **Subnet Address** to specify IP addresses on a network by their subnet mask.
Starting IP Address	When the **Address Type** field is configured to **Single Address**, enter a (static) IP address on the network behind the remote IPSec router. When the Addr Type field is configured to **Range Address**, enter the beginning (static) IP address, in a range of computers on the network behind the remote IPSec router. When the **Address Type** field is configured to **Subnet Address**, enter a (static) IP address on the network behind the remote IPSec router.
Ending IP Address/Subnet Mask	When the **Address Type** field is configured to **Single Address**, this field is N/A. When the **Address Type** field is configured to **Range Address**, enter the end (static) IP address, in a range of computers on the network behind the remote IPSec router. When the **Address Type** field is configured to **Subnet Address**, enter a subnet mask on the network behind the remote IPSec router.
Gateway Policy Information	

Table 92 SECURITY > VPN > VPN Rules (Manual) > Edit (continued)


LABEL	DESCRIPTION
My ZyWALL	When the ZyWALL is in router mode, enter the WAN IP address of your ZyWALL or leave the field set to **0.0.0.0**. The ZyWALL uses its current WAN IP address (static or dynamic) in setting up the VPN tunnel if you leave this field as **0.0.0.0**. If the WAN connection goes down, the ZyWALL uses the dial backup IP address for the VPN tunnel when using dial backup or the LAN IP address when using traffic redirect. The VPN tunnel has to be rebuilt if this IP address changes. When the ZyWALL is in bridge mode, this field is read-only and displays the ZyWALL's IP address.
Primary Remote Gateway	Type the WAN IP address of the IPSec router with which you're making the VPN connection.
Manual Proposal	
SPI	Type a unique **SPI** (Security Parameter Index) from one to four characters long. Valid Characters are "0, 1, 2, 3, 4, 5, 6, 7, 8, and 9".
Encapsulation Mode	Select **Tunnel** mode or **Transport** mode from the drop-down list box.
Active Protocol	Select **ESP** if you want to use ESP (Encapsulation Security Payload). The ESP protocol (RFC 2406) provides encryption as well as some of the services offered by **AH**. If you select **ESP** here, you must select options from the **Encryption Algorithm** and **Authentication Algorithm** fields (described next). Select **AH** if you want to use AH (Authentication Header Protocol). The AH protocol (RFC 2402) was designed for integrity, authentication, sequence integrity (replay resistance), and non-repudiation but not for confidentiality, for which the ESP was designed. If you select **AH** here, you must select options from the **Authentication Algorithm** field (described next).
Encryption Algorithm	Select **DES**, **3DES** or **NULL** from the drop-down list box. When **DES** is used for data communications, both sender and receiver must know the **Encryption Key**, which can be used to encrypt and decrypt the message or to generate and verify a message authentication code. The DES encryption algorithm uses a 56-bit key. Triple DES (**3DES**) is a variation on DES that uses a 168-bit key. As a result, **3DES** is more secure than **DES**. It also requires more processing power, resulting in increased latency and decreased throughput. Select **NULL** to set up a tunnel without encryption. When you select **NULL**, you do not enter an encryption key.
Authentication Algorithm	Select **SHA1** or **MD5** from the drop-down list box. **MD5** (Message Digest 5) and **SHA1** (Secure Hash Algorithm) are hash algorithms used to authenticate packet data. The **SHA1** algorithm is generally considered stronger than **MD5**, but is slower. Select **MD5** for minimal security and **SHA-1** for maximum security.
Encryption Key	This field is applicable when you select **ESP** in the **Active Protocol** field above. With **DES**, type a unique key 8 characters long. With **3DES**, type a unique key 24 characters long. Any characters may be used, including spaces, but trailing spaces are truncated.
Authentication Key	Type a unique authentication key to be used by IPSec if applicable. Enter 16 characters for **MD5** authentication or 20 characters for **SHA-1** authentication. Any characters may be used, including spaces, but trailing spaces are truncated.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Cancel	Click **Cancel** to exit this screen without saving.

14.16 VPN SA Monitor

In the web configurator, click **SECURITY > VPN > SA Monitor**. Use this screen to display and manage active VPN connections.

A Security Association (SA) is the group of security settings related to a specific VPN tunnel. This screen displays active VPN connections. Use **Refresh** to display active VPN connections.

Figure 212 SECURITY > VPN > SA Monitor

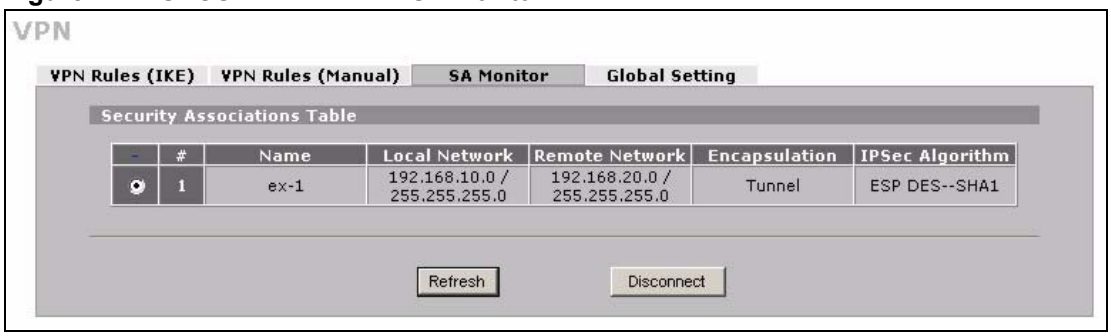

The following table describes the labels in this screen.

Table 93 SECURITY > VPN > SA Monitor

LABEL	DESCRIPTION
#	This is the security association index number.
Name	This field displays the identification name for this VPN policy.
Local Network	This field displays the IP address of the computer using the VPN IPSec feature of your ZyWALL.
Remote Network	This field displays IP address (in a range) of computers on the remote network behind the remote IPSec router.
Encapsulation	This field displays **Tunnel** or **Transport** mode.
IPSec Algorithm	This field displays the security protocols used for an SA. Both AH and ESP increase ZyWALL processing requirements and communications latency (delay).
Refresh	Click **Refresh** to display the current active VPN connection(s).
Disconnect	Select a security association index number that you want to disconnect and then click **Disconnect**.

14.17 VPN Global Setting

Click **SECURITY > VPN > Global Setting** to open the **VPN Global Setting** screen. Use this screen to change settings that apply to all of your VPN tunnels.


14.17.1 Local and Remote IP Address Conflict Resolution

Normally, you do not configure your local VPN policy rule's IP addresses to overlap with the remote VPN policy rule's IP addresses (see Section 14.6.2 on page 319). For example, you usually would not configure both with 192.168.1.0. However, overlapping local and remote network IP addresses can occur with dynamic VPN rules or IP alias.

14.17.1.1 Dynamic VPN Rule

Local and remote network IP addresses can overlap when you configure a dynamic VPN rule for a remote site (see Figure 213). For example, when you configure ZyWALL **X**, you configure the local network as 192.168.1.0/24 and the remote network as any (0.0.0.0). The "any" includes all possible IP addresses. It will forward traffic from network **A** to network **B** even if both the sender (for example 192.168.1.8) and the receiver (for example 192.168.1.9) are in network **A**. Note that the remote access can still use the VPN tunnel to access computers on ZyWALL **X**'s network.

Figure 213 Overlap in a Dynamic VPN Rule

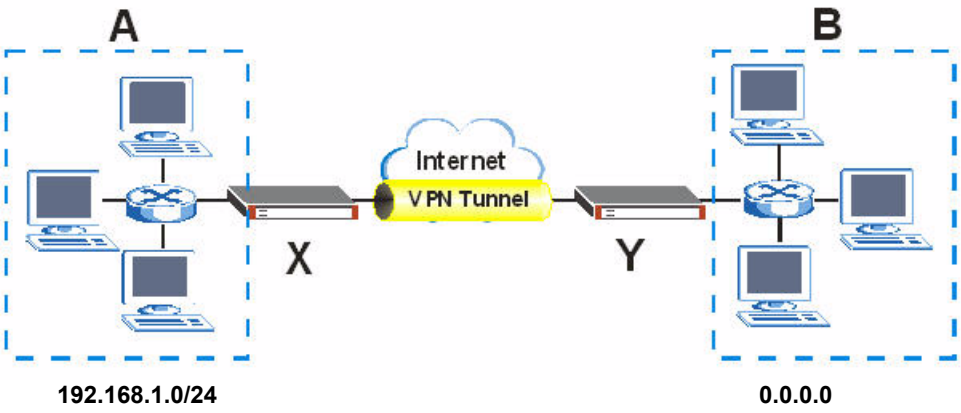


- Setting **Local and Remote IP Address Conflict Resolution** to **The Local Network** has the ZyWALL check if a packet's destination is also at the local network before forwarding the packet. If it is, the ZyWALL sends the traffic to the local network.
- Setting **Local and Remote IP Address Conflict Resolution** to **The Remote Network** disables the checking for local network IP addresses.

14.17.1.2 IP Alias

You could have an IP alias network that overlaps with the VPN remote network (see Figure 214). For example, you have an IP alias network **M** (10.1.2.0/24) in ZyWALL **X**'s LAN. For the VPN rule, you configure the VPN network as follows.


- Local IP address start: 192.168.1.1, end: 192.168.1.254
- Remote IP address start: 10.1.2.240, end: 10.1.2.254
- IP addresses 10.1.2.240 to 10.1.2.254 overlap.

Figure 214 Overlap in IP Alias and VPN Remote Networks

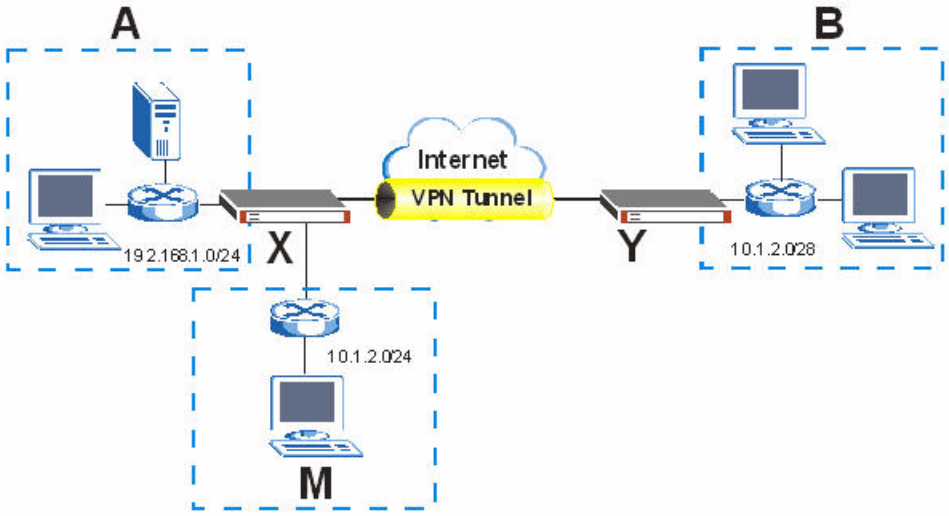

In this case, if you want to send packets from network **A** to an overlapped IP (ex. 10.1.2.241) that is in the IP alias network **M**, you have to set **Local and Remote IP Address Conflict Resolution** to **The Local Network**.

Figure 215 SECURITY > VPN > Global Setting

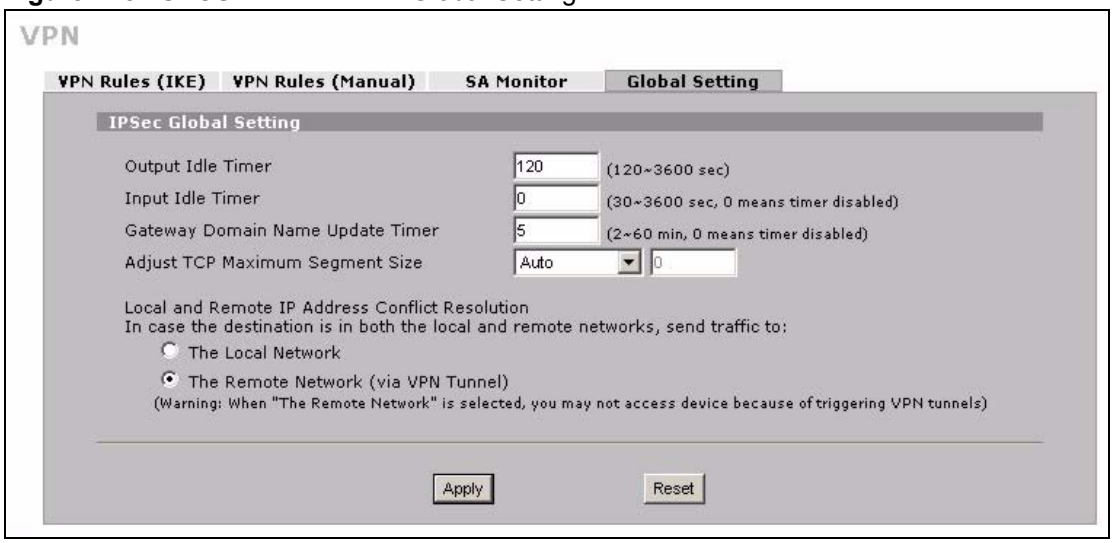

The following table describes the labels in this screen.

Table 94 SECURITY > VPN > Global Setting

LABEL	DESCRIPTION
Output Idle Timer	The ZyWALL disconnects a VPN tunnel if the remote IPSec router does not reply for this number of seconds.
Input Idle Timer	When no traffic is received from a remote IPSec router after the specified time period, the ZyWALL disconnects the VPN tunnel. **0** disables the check (this is the default setting). The output idle timer never takes effect if you set this timer to a shorter period.

Table 94 SECURITY > VPN > Global Setting (continued)

LABEL	DESCRIPTION
Gateway Domain Name Update Timer	If you use dynamic domain names in VPN rules to identify the ZyWALL and/or the remote IPSec router, the IP address mapped to the domain name can change. The VPN tunnel stops working after the IP address changes. Any users of the VPN tunnel are disconnected until the ZyWALL gets the new IP address from a DNS server and rebuilds the VPN tunnel. Enter the time period (between 2 and 60 minutes) to set how often the ZyWALL queries a DNS server to update the IP address and domain name mapping. If the query returns a new IP address for a dynamic domain name, the ZyWALL disconnects the VPN tunnel. The ZyWALL rebuilds the VPN tunnel (using the new IP address) immediately if the IPSec SA is set to nailed up. Otherwise the ZyWALL rebuilds the VPN tunnel when there are packets for it or you manually dial it. If the ZyWALL and all of the remote IPSec routers use static IP addresses or regular domain names, you can enter **0** to disable this feature.
Adjust TCP Maximum Segment Size	The TCP packets are larger after the ZyWALL encrypts them for VPN. The ZyWALL fragments packets that are larger than a connection's MTU (Maximum Transmit Unit). In most cases you should leave this set to **Auto**. The ZyWALL automatically sets the Maximum Segment Size (MSS) of the TCP packets that are to be encrypted by VPN based on the encapsulation type. Select **Off** to not adjust the MSS for the encrypted TCP packets. If your network environment causes fragmentation issues that are affecting your throughput performance, you can manually set a smaller MSS for the TCP packets that are to be encrypted by VPN. Select **User-Defined** and specify a size from 0~1460 bytes. 0 has the ZyWALL use the auto setting.
Local and Remote IP Address Conflict Resolution	Select **The Local Network** to send packets destined for overlapping local and remote IP addresses to the local network (you can access the local devices but not the remote devices). Select **The Remote Network (via VPN Tunnel)** to send packets destined for overlapping local and remote IP addresses to the remote network (you can access the remote devices but not the local devices.) If the remote IPSec router also supports NAT over IPSec, it is recommended that you use NAT over IPSec (see Section 14.6.2 on page 319) if the local and remote IP addresses overlap. If a VPN rule's local and remote network settings are both set to 0.0.0.0 (any), no traffic goes through the VPN tunnel if you select **The Local Network**.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

14.18 Telecommuter VPN/IPSec Examples

The following examples show how multiple telecommuters can make VPN connections to a single ZyWALL at headquarters. The telecommuters use IPSec routers with dynamic WAN IP addresses. The ZyWALL at headquarters has a static public IP address.

14.18.1 Telecommuters Sharing One VPN Rule Example

See the following figure and table for an example configuration that allows multiple telecommuters (**A**, **B** and **C** in the figure) to use one VPN rule to simultaneously access a ZyWALL at headquarters (**HQ** in the figure). The telecommuters do not have domain names mapped to the WAN IP addresses of their IPSec routers. The telecommuters must all use the same IPSec parameters but the local IP addresses (or ranges of addresses) should not overlap.

Figure 216 Telecommuters Sharing One VPN Rule Example

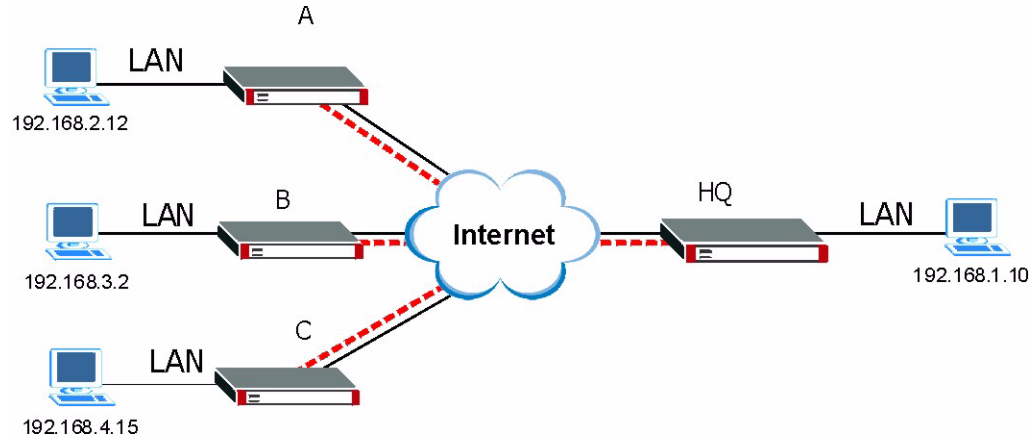


Table 95 Telecommuters Sharing One VPN Rule Example

FIELDS	TELECOMMUTERS	HEADQUARTERS
My ZyWALL:	0.0.0.0 (dynamic IP address assigned by the ISP)	Public static IP address
Remote Gateway Address:	Public static IP address	0.0.0.0 With this IP address only the telecommuter can initiate the IPSec tunnel.
Local Network - Single IP Address:	Telecommuter A: 192.168.2.12 Telecommuter B: 192.168.3.2 Telecommuter C: 192.168.4.15	192.168.1.10
Remote Network - Single IP Address:	192.168.1.10	Not Applicable

14.18.2 Telecommuters Using Unique VPN Rules Example

In this example the telecommuters (A, B and C in the figure) use IPSec routers with domain names that are mapped to their dynamic WAN IP addresses (use Dynamic DNS to do this).

With aggressive negotiation mode (see Section 14.3.1.4 on page 308), the ZyWALL can use the ID types and contents to distinguish between VPN rules. Telecommuters can each use a separate VPN rule to simultaneously access a ZyWALL at headquarters. They can use different IPSec parameters. The local IP addresses (or ranges of addresses) of the rules configured on the ZyWALL at headquarters can overlap. The local IP addresses of the rules configured on the telecommuters' IPSec routers should not overlap.

See the following table and figure for an example where three telecommuters each use a different VPN rule for a VPN connection with a ZyWALL located at headquarters. The ZyWALL at headquarters (HQ in the figure) identifies each incoming SA by its ID type and content and uses the appropriate VPN rule to establish the VPN connection.

The ZyWALL at headquarters can also initiate VPN connections to the telecommuters since it can find the telecommuters by resolving their domain names.

Figure 217 Telecommuters Using Unique VPN Rules Example

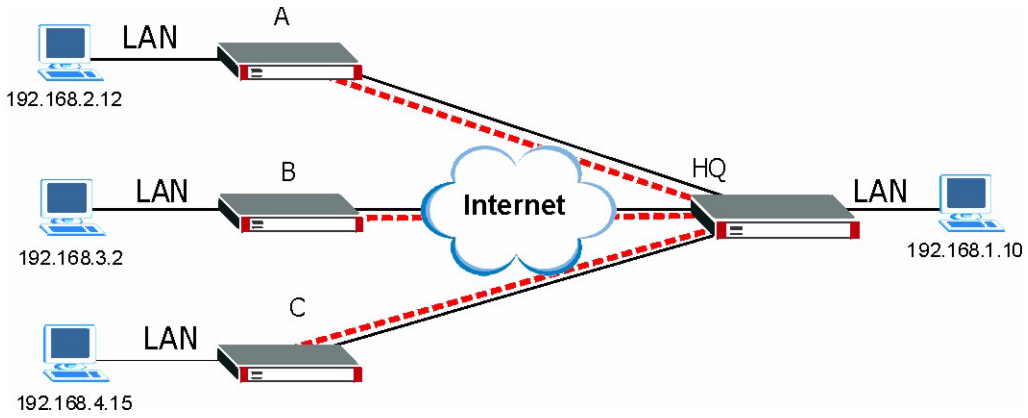


Table 96 Telecommuters Using Unique VPN Rules Example

TELECOMMUTERS	HEADQUARTERS
All Telecommuter Rules:	All Headquarters Rules:
My ZyWALL 0.0.0.0	My ZyWALL: bigcompanyhq.com
Remote Gateway Address: bigcompanyhq.com	Local Network - Single IP Address: 192.168.1.10
Remote Network - Single IP Address: 192.168.1.10	Local ID Type: E-mail
Peer ID Type: E-mail	Local ID Content: bob@bigcompanyhq.com
Peer ID Content: bob@bigcompanyhq.com	
Telecommuter A (telecommutera.dydns.org)	Headquarters ZyWALL Rule 1:
Local ID Type: IP	Peer ID Type: IP
Local ID Content: 192.168.2.12	Peer ID Content: 192.168.2.12
Local IP Address: 192.168.2.12	Remote Gateway Address: telecommutera.dydns.org
	Remote Address 192.168.2.12
Telecommuter B (telecommuterb.dydns.org)	Headquarters ZyWALL Rule 2:
Local ID Type: DNS	Peer ID Type: DNS
Local ID Content: telecommuterb.com	Peer ID Content: telecommuterb.com
Local IP Address: 192.168.3.2	Remote Gateway Address: telecommuterb.dydns.org
	Remote Address 192.168.3.2

Table 96 Telecommuters Using Unique VPN Rules Example


TELECOMMUTERS	HEADQUARTERS
Telecommuter C (telecommuterc.dydns.org)	Headquarters ZyWALL Rule 3:
Local ID Type: E-mail	Peer ID Type: E-mail
Local ID Content: myVPN@myplace.com	Peer ID Content: myVPN@myplace.com
Local IP Address: 192.168.4.15	Remote Gateway Address: telecommuterc.dydns.org
	Remote Address 192.168.4.15

14.19 VPN and Remote Management

You can allow someone to use a service (like Telnet or HTTP) through a VPN tunnel to manage the ZyWALL. One of the ZyWALL's ports must be part of the VPN rule's local network. This can be the ZyWALL's LAN port if you do not want to allow remote management on the WAN port. You also have to configure remote management (**REMOTE MGMT**) to allow management access for the service through the specific port.

In the following example, the VPN rule's local network (A) includes the ZyWALL's LAN IP address of 192.168.1.7. Someone in the remote network (B) can use a service (like HTTP for example) through the VPN tunnel to access the ZyWALL's LAN interface. Remote management must also be configured to allow HTTP access on the ZyWALL's LAN interface.

Figure 218 VPN for Remote Management Example

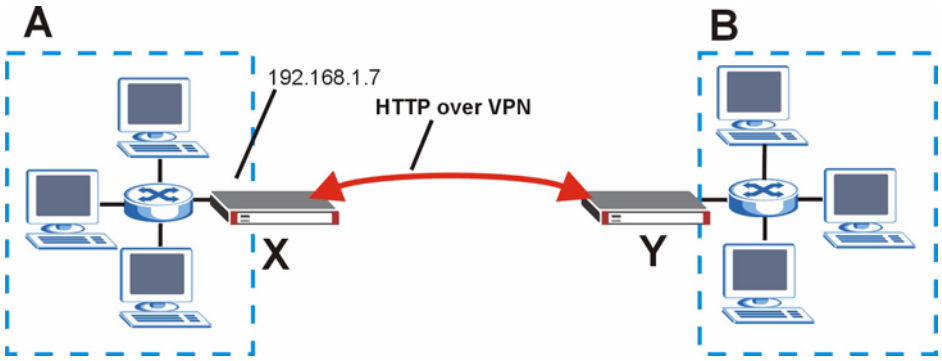


14.20 Hub-and-spoke VPN

Hub-and-spoke VPN connects VPN tunnels to form one secure network.

Figure 219 on page 345 shows some example network topologies. In the first (fully-meshed) approach, there is a VPN connection between every pair of routers. In the second (hub-and-spoke) approach, there is a VPN connection between each spoke router (**B**, **C**, **D**, and **E**) and the hub router (**A**). The hub router routes VPN traffic between the spoke routers and itself.

Figure 219 VPN Topologies

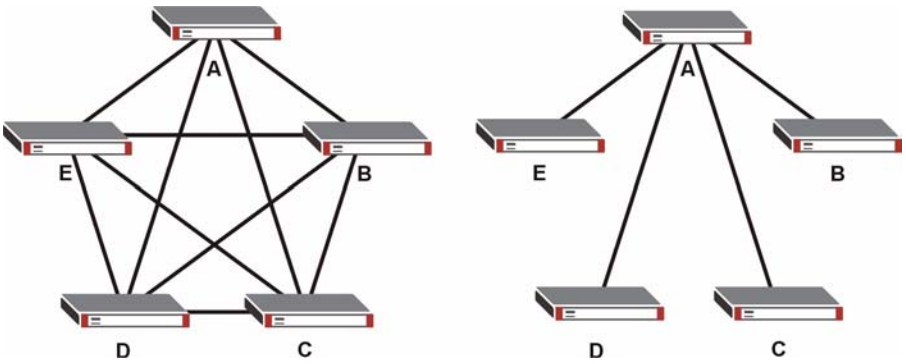


Hub-and-spoke VPN reduces the number of VPN connections that you have to set up and maintain in the network. Small office or telecommuter IPSec routers that support a limited number of VPN tunnels are also able to use VPN to connect to more networks. Hub-and-spoke VPN makes it easier for the hub router to manage the traffic between the spoke routers. If you have the spoke routers access the Internet through the hub-and-spoke VPN tunnel, the hub router can also provide content filtering, IDP, anti-spam and anti-virus protection for the spoke routers.

You should not use a hub-and-spoke VPN in every situation, however. The hub router is a single point of failure, so a hub-and-spoke VPN may not be appropriate if the connection between the spoke routers cannot be down occasionally (for maintenance, for example). In addition, there is a significant burden on the hub router. It receives VPN traffic from one spoke, decrypts it, inspects it to find out where to send it, encrypts it, and sends it to the appropriate spoke. Therefore, a hub-and-spoke VPN is more suitable when there is a minimum amount of traffic between spoke routers.

14.20.1 Hub-and-spoke VPN Example

The following figure shows a basic hub-and-spoke VPN. Branch office A uses one VPN rule to access both the headquarters (HQ) network and branch office B's network. Branch office B uses one VPN rule to access both the headquarters and branch office A's networks.

Figure 220 Hub-and-spoke VPN Example

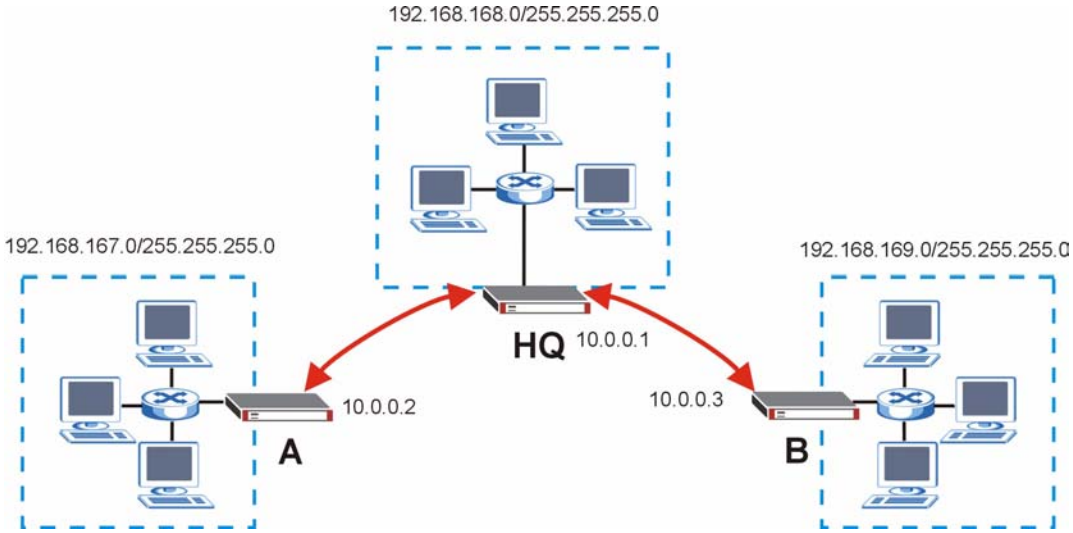

14.20.2 Hub-and-spoke Example VPN Rule Addresses

The VPN rules for this hub-and-spoke example would use the following address settings.

Branch Office A:

- Remote Gateway: 10.0.0.1
- Local IP address: 192.168.167.0/255.255.255.0
- Remote IP address: 192.168.168.0~192.168.169.255

Headquarters:

Rule 1:

- Remote Gateway: 10.0.0.2
- Local IP address: 192.168.168.0~192.168.169.255
- Remote IP address:192.168.167.0/255.255.255.0

Rule 2:

- Remote Gateway: 10.0.0.3
- Local IP address: 192.168.167.0~192.168.168.255
- Remote IP address: 192.168.169.0/255.255.255.0

Branch Office B:

- Remote Gateway: 10.0.0.1
- Local IP address: 192.168.169.0/255.255.255.0
- Remote IP address: 192.168.167.0~192.168.168.255

14.20.3 Hub-and-spoke VPN Requirements and Suggestions

Consider the following when implementing a hub-and-spoke VPN.

The local IP addresses configured in the VPN rules cannot overlap

The hub router must have at least one separate VPN rule for each spoke. In the local IP address, specify the IP addresses of the hub-and-spoke networks with which the spoke is to be able to have a VPN tunnel. This may require you to use more than one VPN rule.

If you want to have the spoke routers access the Internet through the hub-and-spoke VPN tunnel, set the VPN rules in the spoke routers to use 0.0.0.0 (any) as the remote IP address.

Make sure that your **From VPN** and **To VPN** firewall rules do not block the VPN packets.

15

Certificates

This chapter gives background information about public-key certificates and explains how to use them.

15.1 Certificates Overview

The ZyWALL can use certificates (also called digital IDs) to authenticate users. Certificates are based on public-private key pairs. A certificate contains the certificate owner's identity and public key. Certificates provide a way to exchange public keys for use in authentication.

A Certification Authority (CA) issues certificates and guarantees the identity of each certificate owner. There are commercial certification authorities like CyberTrust or VeriSign and government certification authorities. You can use the ZyWALL to generate certification requests that contain identifying information and public keys and then send the certification requests to a certification authority.

When using public-key cryptology for authentication, each host has two keys. One key is public and can be made openly available; the other key is private and must be kept secure. Public-key encryption in general works as follows.

1. Tim wants to send a private message to Jenny. Tim generates a public-private key pair. What is encrypted with one key can only be decrypted using the other.
2. Tim keeps the private key and makes the public key openly available.
3. Tim uses his private key to encrypt the message and sends it to Jenny.
4. Jenny receives the message and uses Tim's public key to decrypt it.
5. Additionally, Jenny uses her own private key to encrypt a message and Tim uses Jenny's public key to decrypt the message.

The ZyWALL uses certificates based on public-key cryptology to authenticate users attempting to establish a connection. The method used to secure the data that you send through an established connection depends on the type of connection. For example, a VPN tunnel might use the triple DES encryption algorithm.

The certification authority uses its private key to sign certificates. Anyone can then use the certification authority's public key to verify the certificates.

A certification path is the hierarchy of certification authority certificates that validate a certificate. The ZyWALL does not trust a certificate if any certificate on its path has expired or been revoked.

Certification authorities maintain directory servers with databases of valid and revoked certificates. A directory of certificates that have been revoked before the scheduled expiration is called a CRL (Certificate Revocation List). The ZyWALL can check a peer's certificate against a directory server's list of revoked certificates. The framework of servers, software, procedures and policies that handles keys is called PKI (public-key infrastructure).

15.1.1 Advantages of Certificates

Certificates offer the following benefits.

- The ZyWALL only has to store the certificates of the certification authorities that you decide to trust, no matter how many devices you need to authenticate.
- Key distribution is simple and very secure since you can freely distribute public keys and you never need to transmit private keys.

15.2 Self-signed Certificates

You can have the ZyWALL act as a certification authority and sign its own certificates.

15.3 Verifying a Certificate


Before you import a trusted CA or trusted remote host certificate into the ZyWALL, you should verify that you have the actual certificate. This is especially true of trusted CA certificates since the ZyWALL also trusts any valid certificate signed by any of the imported trusted CA certificates.

15.3.1 Checking the Fingerprint of a Certificate on Your Computer

A certificate's fingerprints are message digests calculated using the MD5 or SHA1 algorithms. The following procedure describes how to check a certificate's fingerprint to verify that you have the actual certificate.


1. Browse to where you have the certificate saved on your computer.
2. Make sure that the certificate has a ".cer" or ".crt" file name extension.

Figure 221 Certificates on Your Computer

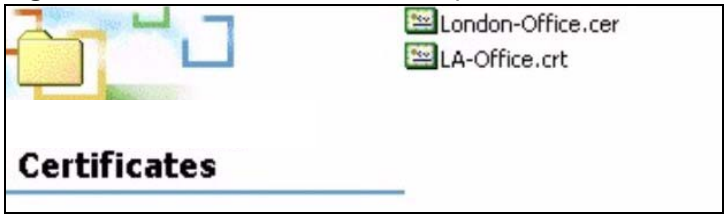

3. Double-click the certificate's icon to open the **Certificate** window. Click the **Details** tab and scroll down to the **Thumbprint Algorithm** and **Thumbprint** fields.

Figure 222 Certificate Details

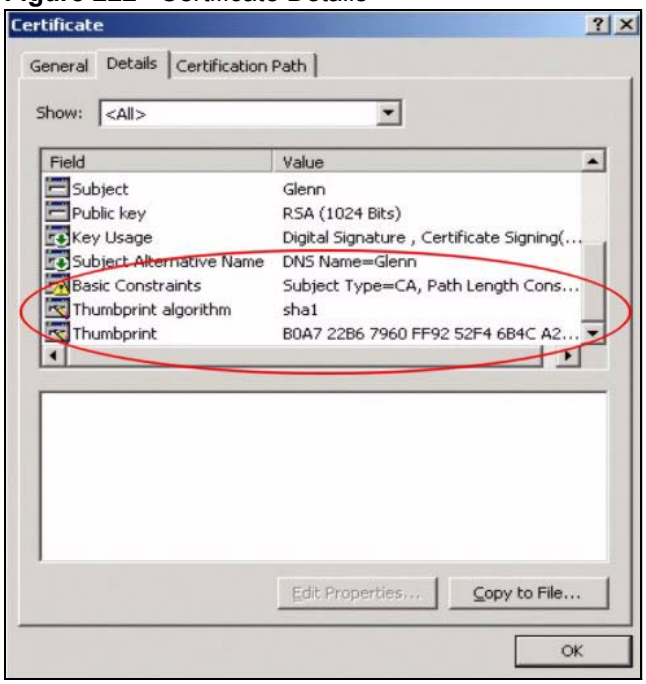


4 Use a secure method to verify that the certificate owner has the same information in the **Thumbprint Algorithm** and **Thumbprint** fields. The secure method may very based on your situation. Possible examples would be over the telephone or through an HTTPS connection.

15.4 Configuration Summary

This section summarizes how to manage certificates on the ZyWALL.

Figure 223 Certificate Configuration Overview

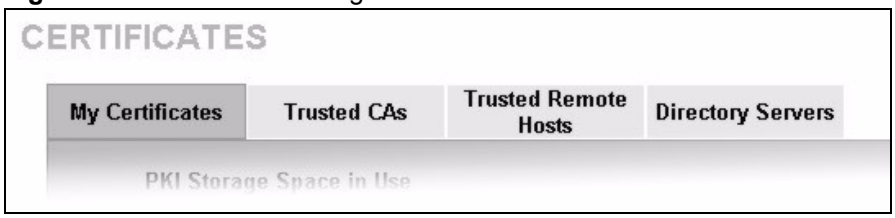

Use the **My Certificate** screens to generate and export self-signed certificates or certification requests and import the ZyWALL's CA-signed certificates.

Use the **Trusted CA** screens to save the certificates of trusted CAs to the ZyWALL. You can also export the certificates to a computer.


Use the **Trusted Remote Hosts** screens to import self-signed certificates from trusted remote hosts.

Use the **Directory Servers** screen to configure a list of addresses of directory servers (that contain lists of valid and revoked certificates).

15.5 My Certificates

Click **SECURITY > CERTIFICATES > My Certificates** to open the **My Certificates** screen. This is the ZyWALL's summary list of certificates and certification requests. Certificates display in black and certification requests display in gray.

Figure 224 SECURITY > CERTIFICATES > My Certificates

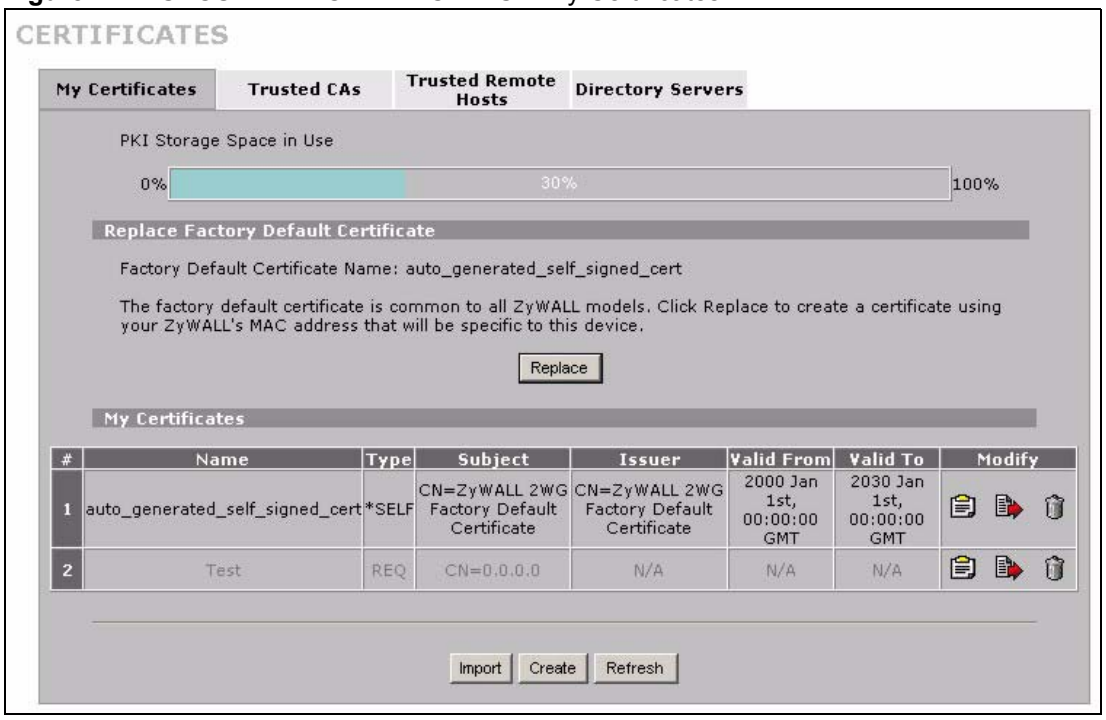

The following table describes the labels in this screen.

Table 97 SECURITY > CERTIFICATES > My Certificates

LABEL	DESCRIPTION
PKI Storage Space in Use	This bar displays the percentage of the ZyWALL's PKI storage space that is currently in use. When the storage space is almost full, you should consider deleting expired or unnecessary certificates before adding more certificates.
Replace	This button displays when the ZyWALL has the factory default certificate. The factory default certificate is common to all ZyWALLs that use certificates. ZyXEL recommends that you use this button to replace the factory default certificate with one that uses your ZyWALL's MAC address.
#	This field displays the certificate index number. The certificates are listed in alphabetical order.
Name	This field displays the name used to identify this certificate. It is recommended that you give each certificate a unique name.
Type	This field displays what kind of certificate this is. **REQ** represents a certification request and is not yet a valid certificate. Send a certification request to a certification authority, which then issues a certificate. Use the **My Certificate Import** screen to import the certificate and replace the request. **SELF** represents a self-signed certificate. ***SELF** represents the default self-signed certificate, which the ZyWALL uses to sign imported trusted remote host certificates. **CERT** represents a certificate issued by a certification authority.

Table 97 SECURITY > CERTIFICATES > My Certificates (continued)

LABEL	DESCRIPTION
Subject	This field displays identifying information about the certificate's owner, such as CN (Common Name), OU (Organizational Unit or department), O (Organization or company) and C (Country). It is recommended that each certificate have unique subject information.
Issuer	This field displays identifying information about the certificate's issuing certification authority, such as a common name, organizational unit or department, organization or company and country. With self-signed certificates, this is the same information as in the **Subject** field.
Valid From	This field displays the date that the certificate becomes applicable. The text displays in red and includes a Not Yet Valid! message if the certificate has not yet become applicable.
Valid To	This field displays the date that the certificate expires. The text displays in red and includes an Expiring! or Expired! message if the certificate is about to expire or has already expired.
Modify	Click the details icon to open a screen with an in-depth list of information about the certificate (or certification request). Click the export icon to save the certificate to a computer. For a certification request, click the export icon and then **Save** in the **File Download** screen. The **Save As** screen opens, browse to the location that you want to use and click **Save**. Click the delete icon to remove the certificate (or certification request). A window displays asking you to confirm that you want to delete the certificate. You cannot delete a certificate that one or more features is configured to use. Do the following to delete a certificate that shows ***SELF** in the **Type** field. 1. Make sure that no other features, such as HTTPS, VPN, SSH are configured to use the ***SELF** certificate. 2. Click the details icon next to another self-signed certificate (see the description on the **Create** button if you need to create a self-signed certificate). 3. Select the **Default self-signed certificate which signs the imported remote host certificates** check box. 4. Click **Apply** to save the changes and return to the **My Certificates** screen. 5. The certificate that originally showed ***SELF** displays **SELF** and you can delete it now. Note that subsequent certificates move up by one when you take this action. The poll now icon displays when the ZyWALL generates a certification request successfully but the CA does not issue a certificate and sends a pending notification to the ZyWALL. If the icon displays, you can manually click the icon to have the ZyWALL query the CA (or RA (Registration Authority)) server for a certificate immediately. Otherwise, the ZyWALL checks with the server and updates the status periodically. The poll now icon disappears after the ZyWALL gets a certificate or the request has failed permanently due to being rejected by the CA server.
Import	Click **Import** to open a screen where you can save the certificate that you have enrolled from a certification authority from your computer to the ZyWALL.
Create	Click **Create** to go to the screen where you can have the ZyWALL generate a certificate or a certification request.
Refresh	Click **Refresh** to display the current validity status of the certificates.

15.6 My Certificate Details

Click **SECURITY** > **CERTIFICATES** > **My Certificates** to open the **My Certificates** screen (see Figure 224 on page 352). Click the details icon to open the **My Certificate Details** screen. You can use this screen to view in-depth certificate information and change the certificate's name.

If it is a self-signed certificate, you can also set the ZyWALL to use the certificate to sign the imported trusted remote host certificates.

Figure 225 SECURITY > CERTIFICATES > My Certificates > Details



The following table describes the labels in this screen.

Table 98 SECURITY > CERTIFICATES > My Certificates > Details

LABEL	DESCRIPTION
Name	This field displays the identifying name of this certificate. If you want to change the name, type up to 31 characters to identify this certificate. You may use any character (not including spaces).
Certificate Information	These read-only fields display detailed information about the certificate.

Table 98 SECURITY > CERTIFICATES > My Certificates > Details (continued)

LABEL	DESCRIPTION
Type	This field displays general information about the certificate. CA-signed means that a Certification Authority signed the certificate. Self-signed means that the certificate's owner signed the certificate (not a certification authority). "X.509" means that this certificate was created and signed according to the ITU-T X.509 recommendation that defines the formats for public-key certificates.
Version	This field displays the X.509 version number.
Serial Number	This field displays the certificate's identification number given by the certification authority or generated by the ZyWALL.
Subject	This field displays information that identifies the owner of the certificate, such as Common Name (CN), Organizational Unit (OU), Organization (O) and Country (C).
Issuer	This field displays identifying information about the certificate's issuing certification authority, such as Common Name, Organizational Unit, Organization and Country. With self-signed certificates, this is the same as the **Subject Name** field.
Signature Algorithm	This field displays the type of algorithm that was used to sign the certificate. The ZyWALL uses rsa-pkcs1-sha1 (RSA public-private key encryption algorithm and the SHA1 hash algorithm). Some certification authorities may use rsa-pkcs1-md5 (RSA public-private key encryption algorithm and the MD5 hash algorithm).
Valid From	This field displays the date that the certificate becomes applicable. The text displays in red and includes a Not Yet Valid! message if the certificate has not yet become applicable.
Valid To	This field displays the date that the certificate expires. The text displays in red and includes an Expiring! or Expired! message if the certificate is about to expire or has already expired.
Key Algorithm	This field displays the type of algorithm that was used to generate the certificate's key pair (the ZyWALL uses RSA encryption) and the length of the key set in bits (1024 bits for example).
Subject Alternative Name	This field displays the certificate owner's IP address (IP), domain name (DNS) or e-mail address (EMAIL).
Key Usage	This field displays for what functions the certificate's key can be used. For example, "DigitalSignature" means that the key can be used to sign certificates and "KeyEncipherment" means that the key can be used to encrypt text.
Basic Constraint	This field displays general information about the certificate. For example, Subject Type=CA means that this is a certification authority's certificate and "Path Length Constraint=1" means that there can only be one certification authority in the certificate's path.
MD5 Fingerprint	This is the certificate's message digest that the ZyWALL calculated using the MD5 algorithm.
SHA1 Fingerprint	This is the certificate's message digest that the ZyWALL calculated using the SHA1 algorithm.
Certificate in PEM (Base-64) Encoded Format	This read-only text box displays the certificate or certification request in Privacy Enhanced Mail (PEM) format. PEM uses 64 ASCII characters to convert the binary certificate into a printable form. You can copy and paste a certification request into a certification authority's web page, an e-mail that you send to the certification authority or a text editor and save the file on a management computer for later manual enrollment. You can copy and paste a certificate into an e-mail to send to friends or colleagues or you can copy and paste a certificate into a text editor and save the file on a management computer for later distribution (via floppy disk for example).

Table 98 SECURITY > CERTIFICATES > My Certificates > Details (continued)

LABEL	DESCRIPTION
Apply	Click **Apply** to save your changes back to the ZyWALL. You can only change the name, except in the case of a self-signed certificate, which you can also set to be the default self-signed certificate that signs the imported trusted remote host certificates.
Cancel	Click **Cancel** to quit and return to the **My Certificates** screen.

15.7 My Certificate Export

Click **SECURITY > CERTIFICATES > My Certificates** and then a certificate's export icon to open the **My Certificate Export** screen. Follow the instructions in this screen to choose the file format to use for saving the certificate from the ZyWALL to a computer.

15.7.1 Certificate File Export Formats

You can export a certificate in one of these file formats:

- Binary X.509: This is an ITU-T recommendation that defines the formats for X.509 certificates.
- Binary PKCS#12: This is a format for transferring public key and private key certificates. The private key in a PKCS #12 file is within a password-encrypted envelope. The file's password is not connected to your certificate's public or private passwords. Exporting a PKCS #12 file creates this and you must provide it to decrypt the contents when you import the file into the ZyWALL.

Figure 226 SECURITY > CERTIFICATES > My Certificates > Export



The following table describes the labels in this screen.

Table 99 SECURITY > CERTIFICATES > My Certificates > Export

LABEL	DESCRIPTION
Export the certificate in binary X.509 format.	Binary X.509 is an ITU-T recommendation that defines the formats for X.509 certificates.
Export the certificate along with the corresponding private key in PKCS#12 format.	PKCS#12 is a format for transferring public key and private key certificates. You can also password-encrypt the private key in the PKCS #12 file. The file's password is not connected to your certificate's public or private passwords.

Table 99 SECURITY > CERTIFICATES > My Certificates > Export (continued)

LABEL	DESCRIPTION
Password	Type the file's password to use for encrypting the private key. The password is optional, although you must specify one if you want to be able to import the PKCS#12 format certificate into Netscape version 7.2.
Retype to confirm	Type the password to make sure that you have entered it correctly.
Apply	Click **Apply** and then **Save** in the **File Download** screen. The **Save As** screen opens, browse to the location that you want to use and click **Save**.
Cancel	Click **Cancel** to quit and return to the **My Certificates** screen.

15.8 My Certificate Import

Click **SECURITY > CERTIFICATES > My Certificates** and then **Import** to open the **My Certificate Import** screen. Follow the instructions in this screen to save an existing certificate from a computer to the ZyWALL.



You can only import a certificate that matches a corresponding certification request that was generated by the ZyWALL (the certification request contains the private key). The certificate you import replaces the corresponding request in the **My Certificates** screen.
One exception is that you can import a PKCS#12 format certificate without a corresponding certification request since the certificate includes the private key.



You must remove any spaces from the certificate's filename before you can import it.

15.8.1 Certificate File Formats

The certification authority certificate that you want to import has to be in one of these file formats:

- Binary X.509: This is an ITU-T recommendation that defines the formats for X.509 certificates.
- PEM (Base-64) encoded X.509: This Privacy Enhanced Mail format uses 64 ASCII characters to convert a binary X.509 certificate into a printable form.
- Binary PKCS#7: This is a standard that defines the general syntax for data (including digital signatures) that may be encrypted. The ZyWALL currently allows the importation of a PKS#7 file that contains a single certificate.
- PEM (Base-64) encoded PKCS#7: This Privacy Enhanced Mail (PEM) format uses 64 ASCII characters to convert a binary PKCS#7 certificate into a printable form.

- Binary PKCS#12: This is a format for transferring public key and private key certificates. The private key in a PKCS #12 file is within a password-encrypted envelope. The file's password is not connected to your certificate's public or private passwords. Exporting a PKCS #12 file creates this and you must provide it to decrypt the contents when you import the file into the ZyWALL.

Be careful to not convert a binary file to text during the transfer process. It is easy for this to occur since many programs use text files by default.

Figure 227 SECURITY > CERTIFICATES > My Certificates > Import



The following table describes the labels in this screen.

Table 100 SECURITY > CERTIFICATES > My Certificates > Import

LABEL	DESCRIPTION
File Path	Type in the location of the file you want to upload in this field or click **Browse** to find it.
Browse	Click **Browse** to find the certificate file you want to upload.
Apply	Click **Apply** to save the certificate on the ZyWALL.
Cancel	Click **Cancel** to quit and return to the **My Certificates** screen.

When you import a binary PKCS#12 format certificate, another screen displays for you to enter the password.

Figure 228 SECURITY > CERTIFICATES > My Certificates > Import: PKCS#12



The following table describes the labels in this screen.

Table 101 SECURITY > CERTIFICATES > My Certificates > Import: PKCS#12

LABEL	DESCRIPTION
Password	Type the file's password that was created when the PKCS #12 file was exported.
Apply	Click **Apply** to save the certificate on the ZyWALL.
Cancel	Click **Cancel** to quit and return to the **My Certificates** screen.

15.9 My Certificate Create

Click **SECURITY** > **CERTIFICATES** > **My Certificates > Create** to open the **My Certificate Create** screen. Use this screen to have the ZyWALL create a self-signed certificate, enroll a certificate with a certification authority or generate a certification request.

Figure 229 SECURITY > CERTIFICATES > My Certificates > Create (Basic)


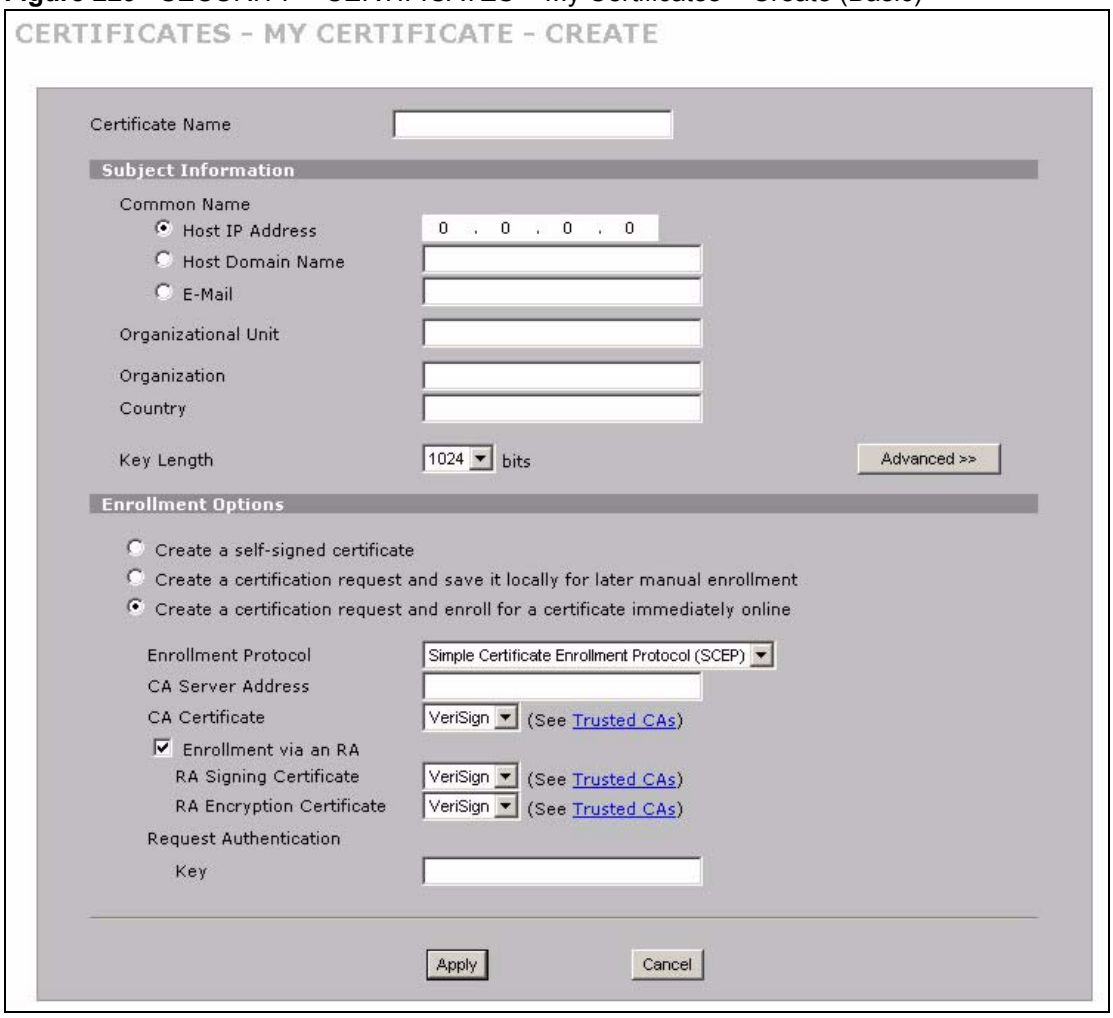


Figure 230 SECURITY > CERTIFICATES > My Certificates > Create (Advanced)

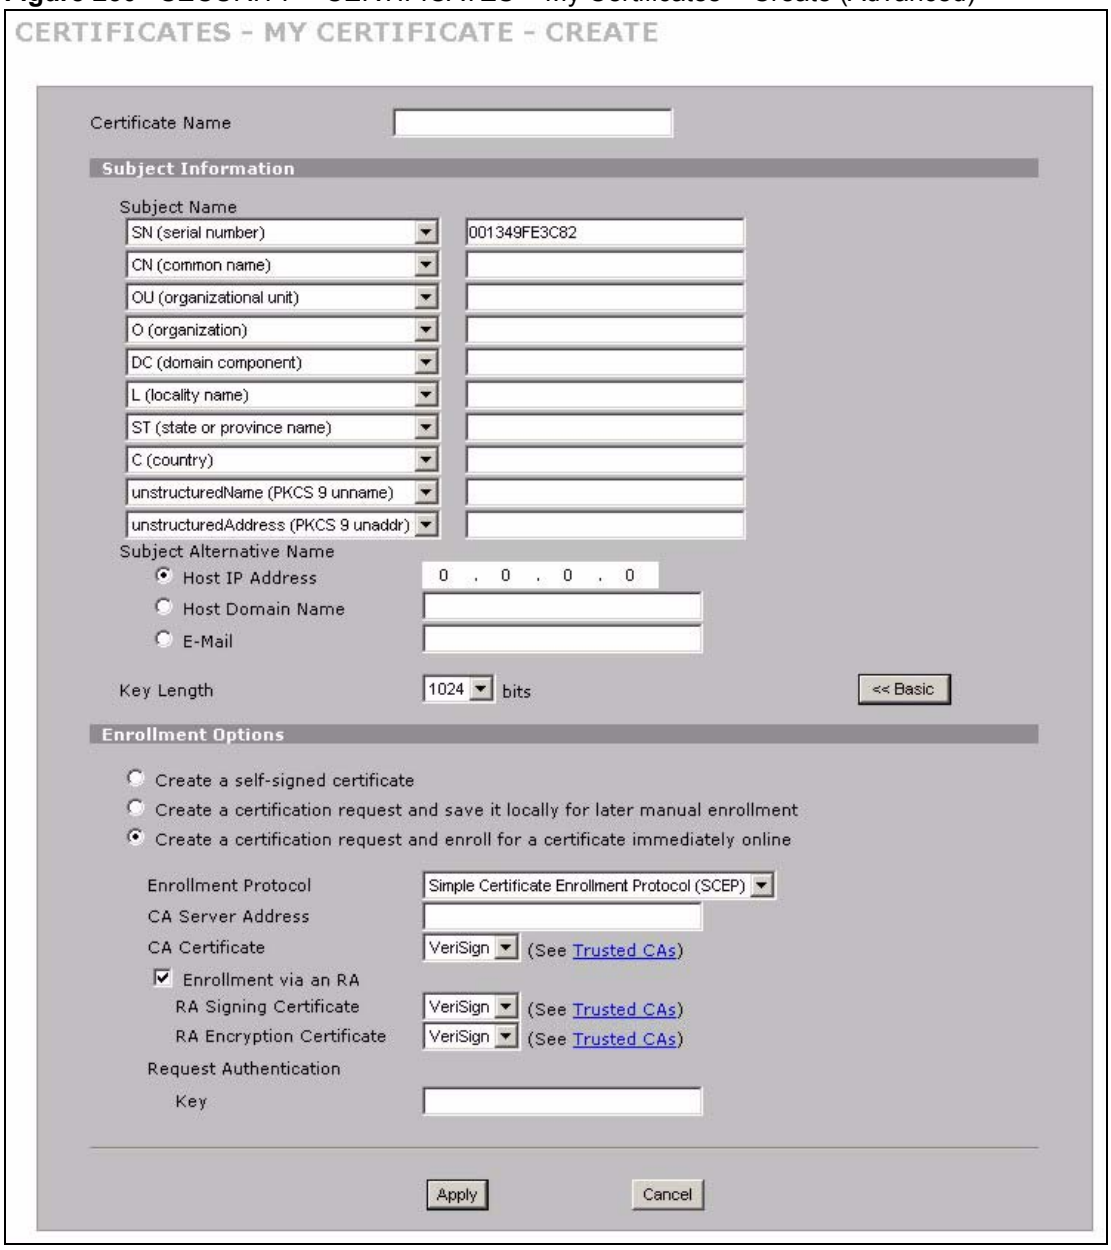

The following table describes the labels in this screen.

Table 102 SECURITY > CERTIFICATES > My Certificates > Create

LABEL	DESCRIPTION
Certificate Name	Type up to 31 ASCII characters (not including spaces) to identify this certificate.
Subject Information	Use these fields to record information that identifies the owner of the certificate. You do not have to fill in every field, but the **Common Name** is mandatory if you click **<< Basic**. The certification authority may add fields (such as a serial number) to the subject information when it issues a certificate. It is recommended that each certificate have unique subject information.
The fields below display when you click **<< Basic**.	

Table 102 SECURITY > CERTIFICATES > My Certificates > Create (continued)

LABEL	DESCRIPTION
Common Name	Select a radio button to identify the certificate's owner by IP address, domain name or e-mail address. Type the IP address (in dotted decimal notation), domain name or e-mail address in the field provided. The domain name or e-mail address can be up to 31 ASCII characters. The domain name or e-mail address is for identification purposes only and can be any string.
Organizational Unit	Type up to 63 characters to identify the organizational unit or department to which the certificate owner belongs. You may use any character, including spaces, but the ZyWALL drops trailing spaces.
Organization	Type up to 63 characters to identify the company or group to which the certificate owner belongs. You may use any character, including spaces, but the ZyWALL drops trailing spaces.
Country	Type up to 63 characters to identify the nation where the certificate owner is located. You may use any character, including spaces, but the ZyWALL drops trailing spaces.
The fields below display when you click **Advanced >>**.	
Subject Name	You must configure at least one of these fields. Select an item from the drop-down list box and enter the corresponding information in the field to the right. **SN (serial number)** - select this and enter the certificate's identification number, such as the ZyWALL's MAC address. You can use up to 63 characters. **CN (common name)** - select this and enter a name to identify the owner of the certificate. You can use up to 63 characters. **OU (organizational unit)** - select this and enter a unit within the organization to identify the owner of the certificate. You can use up to 63 characters. **O (organization)** - select this and enter an organization to identify the owner of the certificate. You can use up to 63 characters. **DC (domain component)** - select this and enter the domain component of a domain to identify the owner of the certificate. For example, if the domain is zyxel.com, the domain component is "zyxel" or "com". You can use up to 63 characters. **L (locality name)** - select this and enter the place where the owner of the certificate resides, such as a city or county. You can use up to 63 characters. **ST (state or province name)** - select this and enter the state or province in which the owner of the certificate resides. You can use up to 63 characters. **C (country)** - select this and enter the name of the country at which the owner of the certificate resides. You can use up to 63 characters. **unstructuredName (PKCS 9 unname)** - select this and enter the name of the owner of the certificate as an unstructured ASCII string. You can use up to 63 characters. Check with the certificate's issuing certification authority for their interpretation in this field if you select to apply to a certification authority for a certificate. **unstructuredAddress (PKCS 9 unaddr)** - select this and enter the address of the owner of the certificate as an unstructured ASCII string. You can use up to 63 characters. Check with the certificate's issuing certification authority for their interpretation in this field if you select to apply to a certification authority for a certificate. **MAILTO (PKCS 9 email address)** - select this and enter the email address of the owner of the certificate. You can use up to 63 characters. Check with the certificate's issuing certification authority for their interpretation in this field if you select to apply to a certification authority for a certificate.

Table 102 SECURITY > CERTIFICATES > My Certificates > Create (continued)

LABEL	DESCRIPTION
Subject Alternative Name	Select a radio button to identify the certificate's owner by IP address, domain name or e-mail address. Type the IP address (in dotted decimal notation), domain name or e-mail address in the field provided. The domain name or e-mail address can be up to 31 ASCII characters. The domain name or e-mail address is for identification purposes only and can be any string.
Key Length	Select a number from the drop-down list box to determine how many bits the key should use (512 to 2048). The longer the key, the more secure it is. A longer key also uses more PKI storage space.
<< Basic/Advanced >>	Click **<< Basic** to configure basic subject information. Click **Advanced >>** to configure more subject information for a certificate.
Enrollment Options	These radio buttons deal with how and when the certificate is to be generated.
Create a self-signed certificate	Select **Create a self-signed certificate** to have the ZyWALL generate the certificate and act as the Certification Authority (CA) itself. This way you do not need to apply to a certification authority for certificates.
Create a certification request and save it locally for later manual enrollment	Select **Create a certification request and save it locally for later manual enrollment** to have the ZyWALL generate and store a request for a certificate. Use the **My Certificate Details** screen to view the certification request and copy it to send to the certification authority. Copy the certification request from the **My Certificate Details** screen (see Section 15.6 on page 354) and then send it to the certification authority.
Create a certification request and enroll for a certificate immediately online	Select **Create a certification request and enroll for a certificate immediately online** to have the ZyWALL generate a request for a certificate and apply to a certification authority for a certificate. You must have the certification authority's certificate already imported in the **Trusted CAs** screen. When you select this option, you must select the certification authority's enrollment protocol and the certification authority's certificate from the drop-down list boxes and enter the certification authority's server address. You also need to fill in the **Reference Number** and **Key** if the certification authority requires them.
Enrollment Protocol	Select the certification authority's enrollment protocol from the drop-down list box. **Simple Certificate Enrollment Protocol (SCEP)** is a TCP-based enrollment protocol that was developed by VeriSign and Cisco. **Certificate Management Protocol (CMP)** is a TCP-based enrollment protocol that was developed by the Public Key Infrastructure X.509 working group of the Internet Engineering Task Force (IETF) and is specified in RFC 2510.
CA Server Address	Enter the IP address (or URL) of the certification authority server.
CA Certificate	Select the certification authority's certificate from the **CA Certificate** drop-down list box. You must have the certification authority's certificate already imported in the **Trusted CAs** screen. Click **Trusted CAs** to go to the **Trusted CAs** screen where you can view (and manage) the ZyWALL's list of certificates of trusted certification authorities.
Enrollment via an RA	If you select **Create a certification request and enroll for a certificate immediately online**, you can select this option to apply for a certificate through a RA (Registration Authority). The RA is an intermediary authorized by a CA to verify each subscriber's identity and forward the requests to the CA. After the CA signs and issues the certificates, the RA distributes the certificates to the subscribers.

Table 102 SECURITY > CERTIFICATES > My Certificates > Create (continued)

LABEL	DESCRIPTION
RA Signing Certificate	If you select **Enrollment via an RA**, select the CA's RA signing certificate from the drop-down list box. You must have the certificate already imported in the **Trusted CAs** screen. Click **Trusted CAs** to go to the **Trusted CAs** screen where you can view (and manage) the ZyWALL's list of certificates of trusted certification authorities.
RA Encryption Certificate	If you select **Enrollment via an RA**, select the CA's RA encryption certificate from the drop-down list box. You must have the certificate already imported in the **Trusted CAs** screen. Click **Trusted CAs** to go to the **Trusted CAs** screen where you can view (and manage) the ZyWALL's list of certificates of trusted certification authorities.
Request Authentication	When you select **Create a certification request and enroll for a certificate immediately online**, the certification authority may want you to include a reference number and key to identify you when you send a certification request. Fill in both the **Reference Number** and the **Key** fields if your certification authority uses CMP enrollment protocol. Just fill in the **Key** field if your certification authority uses the SCEP enrollment protocol.
Reference Number	Enter the reference number that the certification authority gave you. You can use up to 31 ASCII printable characters. Spaces are allowed.
Key	Type the key that the certification authority gave you. You can use up to 31 ASCII printable characters. Spaces are allowed.
Apply	Click **Apply** to begin certificate or certification request generation.
Cancel	Click **Cancel** to quit and return to the **My Certificates** screen.

After you click **Apply** in the **My Certificate Create** screen, you see a screen that tells you the ZyWALL is generating the self-signed certificate or certification request.


After the ZyWALL successfully enrolls a certificate or generates a certification request or a self-signed certificate, you see a screen with a **Return** button that takes you back to the **My Certificates** screen.

If you configured the **My Certificate Create** screen to have the ZyWALL enroll a certificate and the certificate enrollment is not successful, you see a screen with a **Return** button that takes you back to the **My Certificate Create** screen. Click **Return** and check your information in the **My Certificate Create** screen. Make sure that the certification authority information is correct and that your Internet connection is working properly if you want the ZyWALL to enroll a certificate online.

15.10 Trusted CAs

Click **SECURITY** > **CERTIFICATES** > **Trusted CAs** to open the **Trusted CAs** screen. This screen displays a summary list of certificates of the certification authorities that you have set the ZyWALL to accept as trusted. The ZyWALL accepts any valid certificate signed by a certification authority on this list as being trustworthy; thus you do not need to import any certificate that is signed by one of these certification authorities.

Figure 231 SECURITY > CERTIFICATES > Trusted CAs

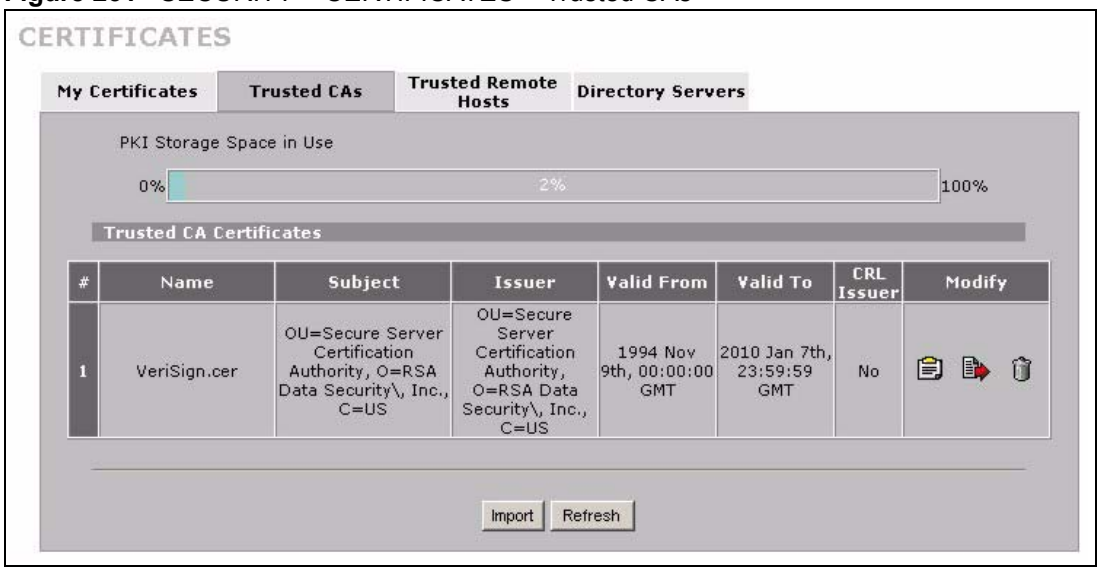

The following table describes the labels in this screen.

Table 103 SECURITY > CERTIFICATES > Trusted CAs

LABEL	DESCRIPTION
PKI Storage Space in Use	This bar displays the percentage of the ZyWALL's PKI storage space that is currently in use. When the storage space is almost full, you should consider deleting expired or unnecessary certificates before adding more certificates.
#	This field displays the certificate index number. The certificates are listed in alphabetical order.
Name	This field displays the name used to identify this certificate.
Subject	This field displays identifying information about the certificate's owner, such as CN (Common Name), OU (Organizational Unit or department), O (Organization or company) and C (Country). It is recommended that each certificate have unique subject information.
Issuer	This field displays identifying information about the certificate's issuing certification authority, such as a common name, organizational unit or department, organization or company and country. With self-signed certificates, this is the same information as in the **Subject** field.
Valid From	This field displays the date that the certificate becomes applicable. The text displays in red and includes a Not Yet Valid! message if the certificate has not yet become applicable.
Valid To	This field displays the date that the certificate expires. The text displays in red and includes an Expiring! or Expired! message if the certificate is about to expire or has already expired.
CRL Issuer	This field displays **Yes** if the certification authority issues CRL (Certificate Revocation Lists) for the certificates that it has issued and you have selected the **Check incoming certificates issued by this CA against a CRL** check box in the certificate's details screen to have the ZyWALL check the CRL before trusting any certificates issued by the certification authority. Otherwise the field displays **No**.


Table 103 SECURITY > CERTIFICATES > Trusted CAs (continued)

LABEL	DESCRIPTION
Modify	Click the details icon to open a screen with an in-depth list of information about the certificate. Use the export icon to save the certificate to a computer. Click the icon and then **Save** in the **File Download** screen. The **Save As** screen opens, browse to the location that you want to use and click **Save**. Click the delete icon to remove the certificate. A window displays asking you to confirm that you want to delete the certificates. Note that subsequent certificates move up by one when you take this action.
Import	Click **Import** to open a screen where you can save the certificate of a certification authority that you trust, from your computer to the ZyWALL.
Refresh	Click this button to display the current validity status of the certificates.

15.11 Trusted CA Details

Click **SECURITY** > **CERTIFICATES** > **Trusted CAs** to open the **Trusted CAs** screen. Click the details icon to open the **Trusted CA Details** screen. Use this screen to view in-depth information about the certification authority's certificate, change the certificate's name and set whether or not you want the ZyWALL to check a certification authority's list of revoked certificates before trusting a certificate issued by the certification authority.

Figure 232 SECURITY > CERTIFICATES > Trusted CAs > Details

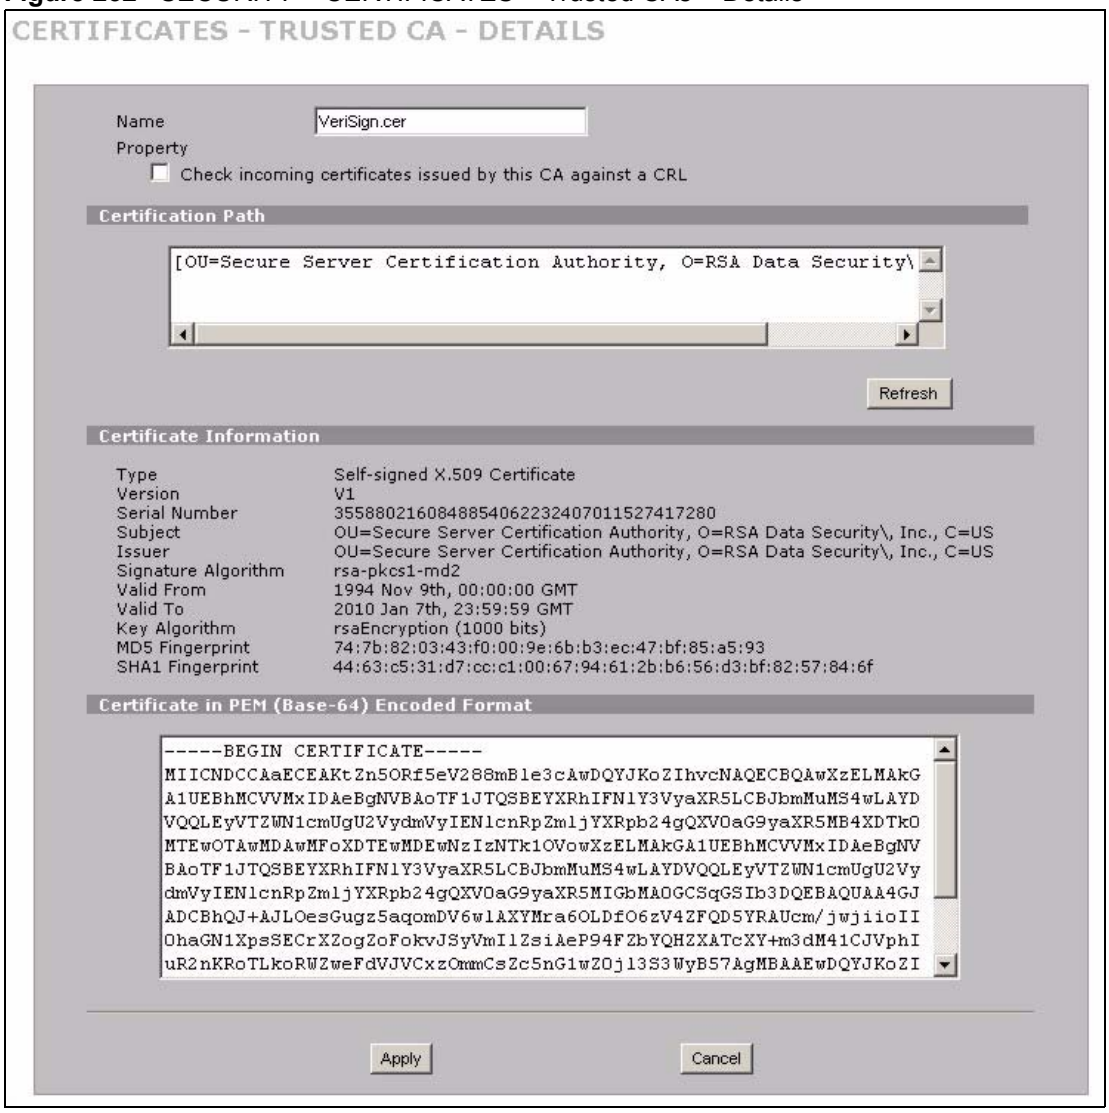

The following table describes the labels in this screen.

Table 104 SECURITY > CERTIFICATES > Trusted CAs > Details

LABEL	DESCRIPTION
Name	This field displays the identifying name of this certificate. If you want to change the name, type up to 31 characters to identify this key certificate. You may use any character (not including spaces).
Property Check incoming certificates issued by this CA against a CRL	Select this check box to have the ZyWALL check incoming certificates that are issued by this certification authority against a Certificate Revocation List (CRL). Clear this check box to have the ZyWALL not check incoming certificates that are issued by this certification authority against a Certificate Revocation List (CRL).

Table 104 SECURITY > CERTIFICATES > Trusted CAs > Details (continued)

LABEL	DESCRIPTION
Certification Path	Click the **Refresh** button to have this read-only text box display the end entity's certificate and a list of certification authority certificates that shows the hierarchy of certification authorities that validate the end entity's certificate. If the issuing certification authority is one that you have imported as a trusted certification authority, it may be the only certification authority in the list (along with the end entity's own certificate). The ZyWALL does not trust the end entity's certificate and displays "Not trusted" in this field if any certificate on the path has expired or been revoked.
Refresh	Click **Refresh** to display the certification path.
Certificate Information	These read-only fields display detailed information about the certificate.
Type	This field displays general information about the certificate. CA-signed means that a Certification Authority signed the certificate. Self-signed means that the certificate's owner signed the certificate (not a certification authority). X.509 means that this certificate was created and signed according to the ITU-T X.509 recommendation that defines the formats for public-key certificates.
Version	This field displays the X.509 version number.
Serial Number	This field displays the certificate's identification number given by the certification authority.
Subject	This field displays information that identifies the owner of the certificate, such as Common Name (CN), Organizational Unit (OU), Organization (O) and Country (C).
Issuer	This field displays identifying information about the certificate's issuing certification authority, such as Common Name, Organizational Unit, Organization and Country. With self-signed certificates, this is the same information as in the **Subject Name** field.
Signature Algorithm	This field displays the type of algorithm that was used to sign the certificate. Some certification authorities use rsa-pkcs1-sha1 (RSA public-private key encryption algorithm and the SHA1 hash algorithm). Other certification authorities may use rsa-pkcs1-md5 (RSA public-private key encryption algorithm and the MD5 hash algorithm).
Valid From	This field displays the date that the certificate becomes applicable. The text displays in red and includes a Not Yet Valid! message if the certificate has not yet become applicable.
Valid To	This field displays the date that the certificate expires. The text displays in red and includes an Expiring! or Expired! message if the certificate is about to expire or has already expired.
Key Algorithm	This field displays the type of algorithm that was used to generate the certificate's key pair (the ZyWALL uses RSA encryption) and the length of the key set in bits (1024 bits for example).
Subject Alternative Name	This field displays the certificate's owner's IP address (IP), domain name (DNS) or e-mail address (EMAIL).
Key Usage	This field displays for what functions the certificate's key can be used. For example, "DigitalSignature" means that the key can be used to sign certificates and "KeyEncipherment" means that the key can be used to encrypt text.
Basic Constraint	This field displays general information about the certificate. For example, Subject Type=CA means that this is a certification authority's certificate and "Path Length Constraint=1" means that there can only be one certification authority in the certificate's path.

Table 104 SECURITY > CERTIFICATES > Trusted CAs > Details (continued)

LABEL	DESCRIPTION
CRL Distribution Points	This field displays how many directory servers with Lists of revoked certificates the issuing certification authority of this certificate makes available. This field also displays the domain names or IP addresses of the servers.
MD5 Fingerprint	This is the certificate's message digest that the ZyWALL calculated using the MD5 algorithm. You can use this value to verify with the certification authority (over the phone for example) that this is actually their certificate.
SHA1 Fingerprint	This is the certificate's message digest that the ZyWALL calculated using the SHA1 algorithm. You can use this value to verify with the certification authority (over the phone for example) that this is actually their certificate.
Certificate in PEM (Base-64) Encoded Format	This read-only text box displays the certificate or certification request in Privacy Enhanced Mail (PEM) format. PEM uses 64 ASCII characters to convert the binary certificate into a printable form. You can copy and paste the certificate into an e-mail to send to friends or colleagues or you can copy and paste the certificate into a text editor and save the file on a management computer for later distribution (via floppy disk for example).
Apply	Click **Apply** to save your changes back to the ZyWALL. You can only change the name and/or set whether or not you want the ZyWALL to check the CRL that the certification authority issues before trusting a certificate issued by the certification authority.
Cancel	Click **Cancel** to quit and return to the **Trusted CAs** screen.

15.12 Trusted CA Import

Click **SECURITY** > **CERTIFICATES** > **Trusted CAs** to open the **Trusted CAs** screen and then click **Import** to open the **Trusted CA Import** screen. Follow the instructions in this screen to save a trusted certification authority's certificate from a computer to the ZyWALL. The ZyWALL trusts any valid certificate signed by any of the imported trusted CA certificates.



You must remove any spaces from the certificate's filename before you can import the certificate.

Figure 233 SECURITY > CERTIFICATES > Trusted CAs > Import



The following table describes the labels in this screen.

Table 105 SECURITY > CERTIFICATES > Trusted CAs Import


LABEL	DESCRIPTION
File Path	Type in the location of the file you want to upload in this field or click **Browse** to find it.
Browse	Click **Browse** to find the certificate file you want to upload.
Apply	Click **Apply** to save the certificate on the ZyWALL.
Cancel	Click **Cancel** to quit and return to the **Trusted CAs** screen.

15.13 Trusted Remote Hosts

Click **SECURITY** > **CERTIFICATES** > **Trusted Remote Hosts** to open the **Trusted Remote Hosts** screen. This screen displays a list of the certificates of peers that you trust but which are not signed by one of the certification authorities on the **Trusted CAs** screen.

You do not need to add any certificate that is signed by one of the certification authorities on the **Trusted CAs** screen since the ZyWALL automatically accepts any valid certificate signed by a trusted certification authority as being trustworthy.

Figure 234 SECURITY > CERTIFICATES > Trusted Remote Hosts

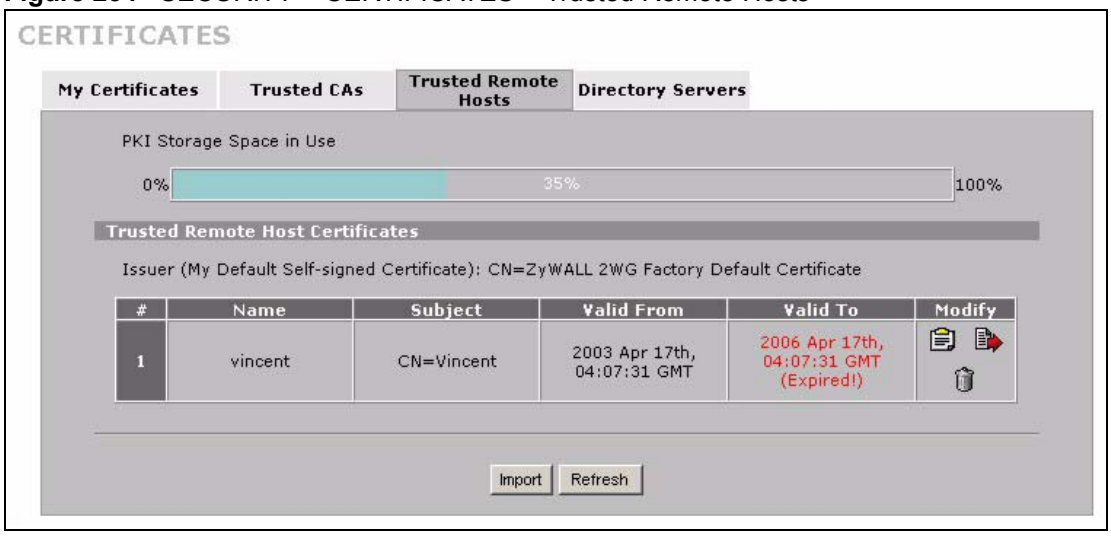

The following table describes the labels in this screen.

Table 106 SECURITY > CERTIFICATES > Trusted Remote Hosts

LABEL	DESCRIPTION
PKI Storage Space in Use	This bar displays the percentage of the ZyWALL's PKI storage space that is currently in use. When the storage space is almost full, you should consider deleting expired or unnecessary certificates before adding more certificates.
Issuer (My Default Self-signed Certificate)	This field displays identifying information about the default self-signed certificate on the ZyWALL that the ZyWALL uses to sign the trusted remote host certificates.
#	This field displays the certificate index number. The certificates are listed in alphabetical order.
Name	This field displays the name used to identify this certificate.
Subject	This field displays identifying information about the certificate's owner, such as CN (Common Name), OU (Organizational Unit or department), O (Organization or company) and C (Country). It is recommended that each certificate have unique subject information.
Valid From	This field displays the date that the certificate becomes applicable. The text displays in red and includes a Not Yet Valid! message if the certificate has not yet become applicable.
Valid To	This field displays the date that the certificate expires. The text displays in red and includes an Expiring! or Expired! message if the certificate is about to expire or has already expired.
Modify	Click the details icon to open a screen with an in-depth list of information about the certificate. Use the export icon to save the certificate to a computer. Click the icon and then **Save** in the **File Download** screen. The **Save As** screen opens, browse to the location that you want to use and click **Save**. Click the delete icon to remove the certificate. A window displays asking you to confirm that you want to delete the certificate. Note that subsequent certificates move up by one when you take this action.
Import	Click **Import** to open a screen where you can save the certificate of a remote host (which you trust) from your computer to the ZyWALL.
Refresh	Click this button to display the current validity status of the certificates.

15.14 Trusted Remote Hosts Import


Click **SECURITY** > **CERTIFICATES** > **Trusted Remote Hosts** to open the **Trusted Remote Hosts** screen and then click **Import** to open the **Trusted Remote Host Import** screen.

You may have peers with certificates that you want to trust, but the certificates were not signed by one of the certification authorities on the **Trusted CAs** screen. Follow the instructions in this screen to save a peer's certificates from a computer to the ZyWALL.

You do not need to add any certificate that is signed by one of the certification authorities on the **Trusted CAs** screen since the ZyWALL automatically accepts any valid certificate signed by a trusted certification authority as being trustworthy.

The trusted remote host certificate must be a self-signed certificate; and you must remove any spaces from its filename before you can import it.

Figure 235 SECURITY > CERTIFICATES > Trusted Remote Hosts > Import

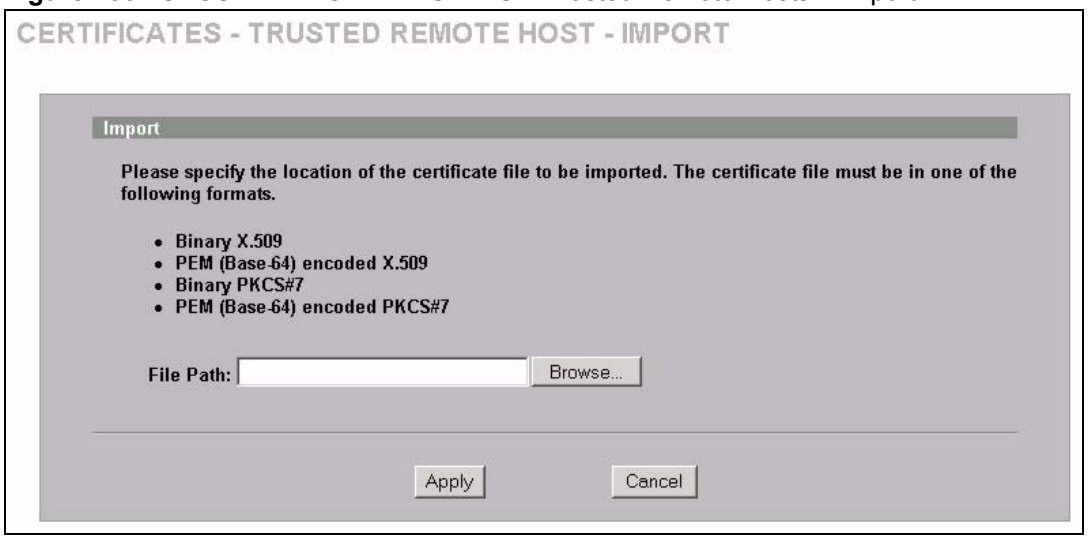

The following table describes the labels in this screen.


Table 107 SECURITY > CERTIFICATES > Trusted Remote Hosts > Import

LABEL	DESCRIPTION
File Path	Type in the location of the file you want to upload in this field or click **Browse** to find it.
Browse	Click **Browse** to find the certificate file you want to upload.
Apply	Click **Apply** to save the certificate on the ZyWALL.
Cancel	Click **Cancel** to quit and return to the **Trusted Remote Hosts** screen.

15.15 Trusted Remote Host Certificate Details

Click **SECURITY** > **CERTIFICATES** > **Trusted Remote Hosts** to open the **Trusted Remote Hosts** screen. Click the details icon to open the **Trusted Remote Host Details** screen. You can use this screen to view in-depth information about the trusted remote host's certificate and/or change the certificate's name.

Figure 236 SECURITY > CERTIFICATES > Trusted Remote Hosts > Details

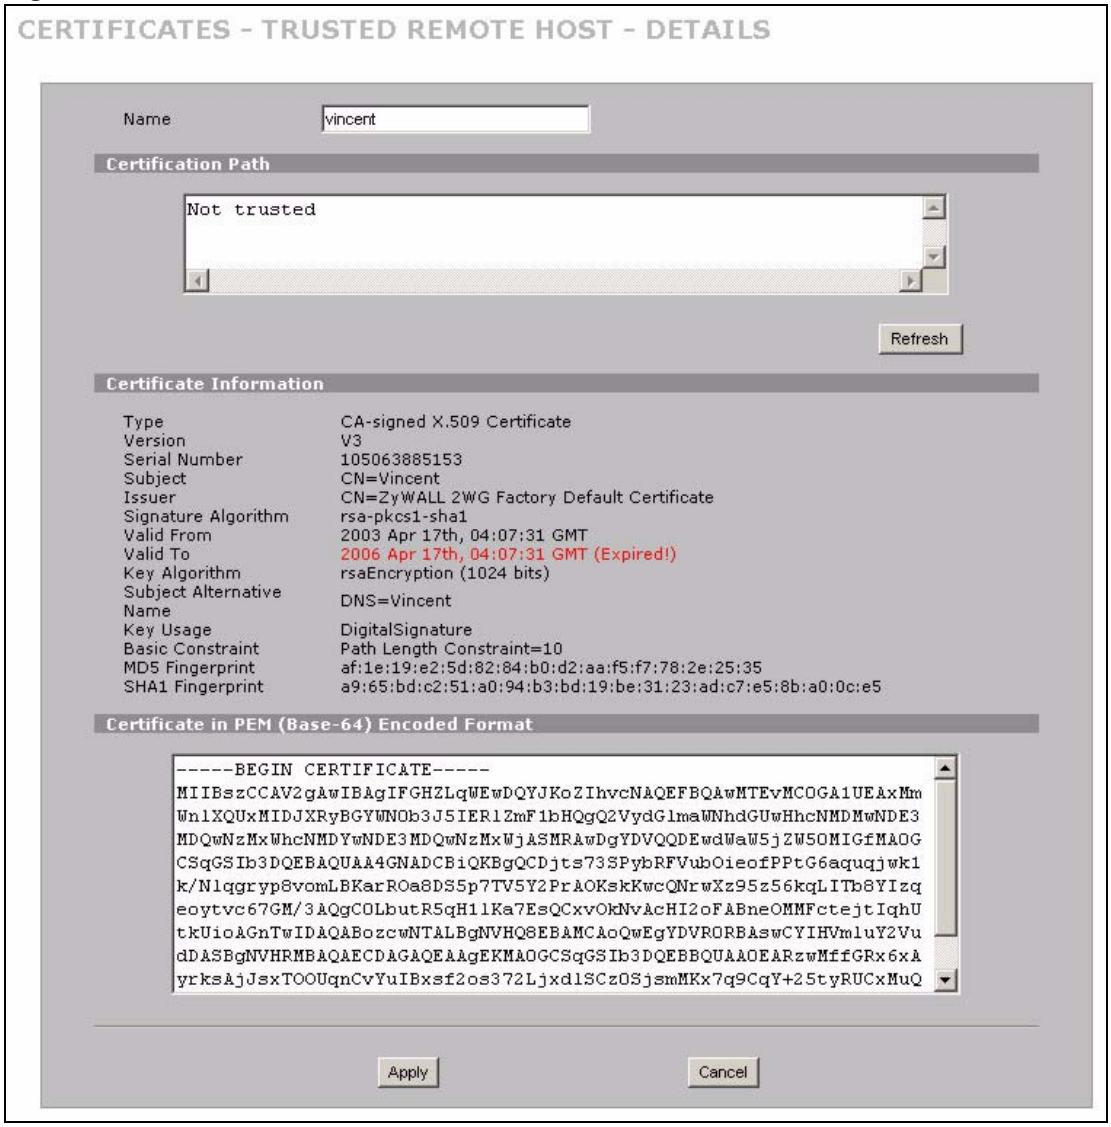

The following table describes the labels in this screen.

Table 108 SECURITY > CERTIFICATES > Trusted Remote Hosts > Details

LABEL	DESCRIPTION
Name	This field displays the identifying name of this certificate. If you want to change the name, type up to 31 characters to identify this key certificate. You may use any character (not including spaces).
Certification Path	Click the **Refresh** button to have this read-only text box display the end entity's own certificate and a list of certification authority certificates in the hierarchy of certification authorities that validate a certificate's issuing certification authority. For a trusted host, the list consists of the end entity's own certificate and the default self-signed certificate that the ZyWALL uses to sign remote host certificates.
Refresh	Click **Refresh** to display the certification path.
Certificate Information	These read-only fields display detailed information about the certificate.
Type	This field displays general information about the certificate. With trusted remote host certificates, this field always displays CA-signed. The ZyWALL is the Certification Authority that signed the certificate. X.509 means that this certificate was created and signed according to the ITU-T X.509 recommendation that defines the formats for public-key certificates.
Version	This field displays the X.509 version number.
Serial Number	This field displays the certificate's identification number given by the device that created the certificate.
Subject	This field displays information that identifies the owner of the certificate, such as Common Name (CN), Organizational Unit (OU), Organization (O) and Country (C).
Issuer	This field displays identifying information about the default self-signed certificate on the ZyWALL that the ZyWALL uses to sign the trusted remote host certificates.
Signature Algorithm	This field displays the type of algorithm that the ZyWALL used to sign the certificate, which is rsa-pkcs1-sha1 (RSA public-private key encryption algorithm and the SHA1 hash algorithm).
Valid From	This field displays the date that the certificate becomes applicable. The text displays in red and includes a Not Yet Valid! message if the certificate has not yet become applicable.
Valid To	This field displays the date that the certificate expires. The text displays in red and includes an Expiring! or Expired! message if the certificate is about to expire or has already expired.
Key Algorithm	This field displays the type of algorithm that was used to generate the certificate's key pair (the ZyWALL uses RSA encryption) and the length of the key set in bits (1024 bits for example).
Subject Alternative Name	This field displays the certificate's owner's IP address (IP), domain name (DNS) or e-mail address (EMAIL).
Key Usage	This field displays for what functions the certificate's key can be used. For example, "DigitalSignature" means that the key can be used to sign certificates and "KeyEncipherment" means that the key can be used to encrypt text.
Basic Constraint	This field displays general information about the certificate. For example, Subject Type=CA means that this is a certification authority's certificate and "Path Length Constraint=1" means that there can only be one certification authority in the certificate's path.


Table 108 SECURITY > CERTIFICATES > Trusted Remote Hosts > Details (continued)

LABEL	DESCRIPTION
MD5 Fingerprint	This is the certificate's message digest that the ZyWALL calculated using the MD5 algorithm. The ZyWALL uses one of its own self-signed certificates to sign the imported trusted remote host certificates. This changes the fingerprint value displayed here (so it does not match the original). See Section 15.3 on page 350 for how to verify a remote host's certificate before you import it into the ZyWALL.
SHA1 Fingerprint	This is the certificate's message digest that the ZyWALL calculated using the SHA1 algorithm. The ZyWALL uses one of its own self-signed certificates to sign the imported trusted remote host certificates. This changes the fingerprint value displayed here (so it does not match the original). See Section 15.3 on page 350 for how to verify a remote host's certificate before you import it into the ZyWALL.
Certificate in PEM (Base-64) Encoded Format	This read-only text box displays the certificate or certification request in Privacy Enhanced Mail (PEM) format. PEM uses 64 ASCII characters to convert the binary certificate into a printable form. You can copy and paste the certificate into an e-mail to send to friends or colleagues or you can copy and paste the certificate into a text editor and save the file on a management computer for later distribution (via floppy disk for example).
Apply	Click **Apply** to save your changes back to the ZyWALL. You can only change the name of the certificate.
Cancel	Click **Cancel** to quit configuring this screen and return to the **Trusted Remote Hosts** screen.

15.16 Directory Servers

Click **SECURITY** > **CERTIFICATES** > **Directory Servers** to open the **Directory Servers** screen. This screen displays a summary list of directory servers (that contain lists of valid and revoked certificates) that have been saved into the ZyWALL. If you decide to have the ZyWALL check incoming certificates against the issuing certification authority's list of revoked certificates, the ZyWALL first checks the server(s) listed in the **CRL Distribution Points** field of the incoming certificate. If the certificate does not list a server or the listed server is not available, the ZyWALL checks the servers listed here.

Figure 237 SECURITY > CERTIFICATES > Directory Servers

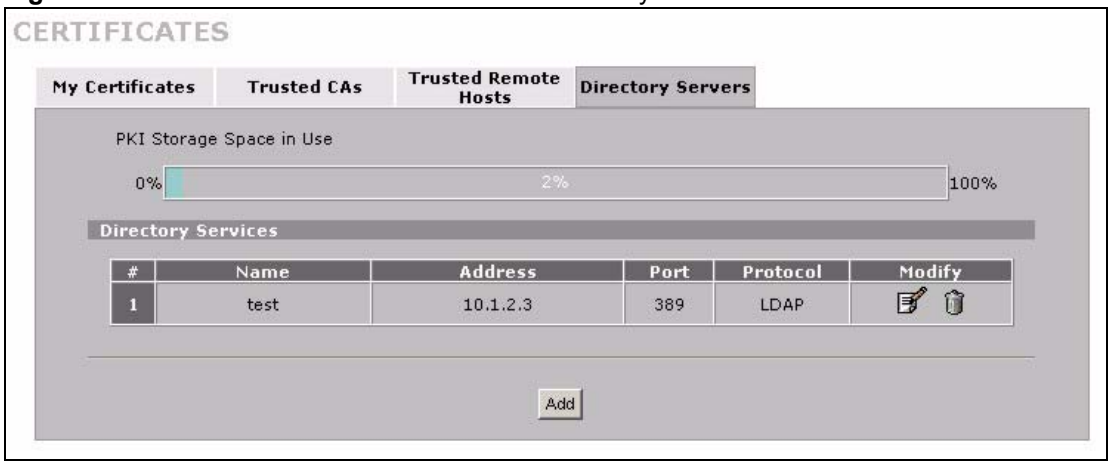

The following table describes the labels in this screen.


Table 109 SECURITY > CERTIFICATES > Directory Servers

LABEL	DESCRIPTION
PKI Storage Space in Use	This bar displays the percentage of the ZyWALL's PKI storage space that is currently in use. When the storage space is almost full, you should consider deleting expired or unnecessary certificates before adding more certificates.
#	The index number of the directory server. The servers are listed in alphabetical order.
Name	This field displays the name used to identify this directory server.
Address	This field displays the IP address or domain name of the directory server.
Port	This field displays the port number that the directory server uses.
Protocol	This field displays the protocol that the directory server uses.
Modify	Click the details icon to open a screen where you can change the information about the directory server. Click the delete icon to remove the directory server entry. A window displays asking you to confirm that you want to delete the directory server. Note that subsequent certificates move up by one when you take this action.
Add	Click **Add** to open a screen where you can configure information about a directory server so that the ZyWALL can access it.

15.17 Directory Server Add or Edit

Click **SECURITY > CERTIFICATES > Directory Servers** to open the **Directory Servers** screen. Click **Add** (or the details icon) to open the **Directory Server Add** screen. Use this screen to configure information about a directory server that the ZyWALL can access.

Figure 238 SECURITY > CERTIFICATES > Directory Server > Add

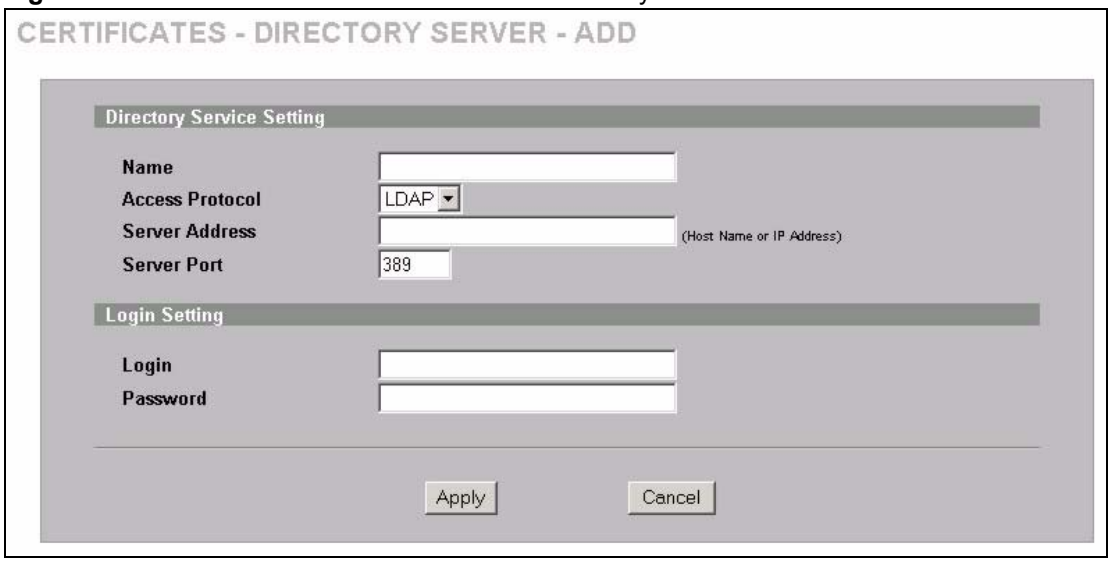

The following table describes the labels in this screen.

Table 110 SECURITY > CERTIFICATES > Directory Server > Add

LABEL	DESCRIPTION
Directory Service Setting	
Name	Type up to 31 ASCII characters (spaces are not permitted) to identify this directory server.
Access Protocol	Use the drop-down list box to select the access protocol used by the directory server. **LDAP** (Lightweight Directory Access Protocol) is a protocol over TCP that specifies how clients access directories of certificates and lists of revoked certificates.[A]
Server Address	Type the IP address (in dotted decimal notation) or the domain name of the directory server.
Server Port	This field displays the default server port number of the protocol that you select in the **Access Protocol** field. You may change the server port number if needed, however you must use the same server port number that the directory server uses. 389 is the default server port number for LDAP.
Login Setting	
Login	The ZyWALL may need to authenticate itself in order to assess the directory server. Type the login name (up to 31 ASCII characters) from the entity maintaining the directory server (usually a certification authority).
Password	Type the password (up to 31 ASCII characters) from the entity maintaining the directory server (usually a certification authority).
Apply	Click **Apply** to save your changes back to the ZyWALL.
Cancel	Click **Cancel** to quit configuring this screen and return to the **Directory Servers** screen.

A. At the time of writing, LDAP is the only choice of directory server access protocol.

16

Authentication Server

This chapter discusses how to configure the ZyWALL's authentication server feature.

16.1 Authentication Server Overview

A ZyWALL set to be a VPN extended authentication server can use either the local user database internal to the ZyWALL or an external RADIUS server for an unlimited number of users. The ZyWALL uses the same local user database for VPN extended authentication and wireless LAN security. See Appendix E on page 741 for more information about RADIUS.

16.1.1 Local User Database

By storing user profiles locally on the ZyWALL, your ZyWALL is able to authenticate users without interacting with a network RADIUS server. However, there is a limit on the number of users you may authenticate in this way.


16.1.2 RADIUS

The ZyWALL can use an external RADIUS server to authenticate an unlimited number of users.

16.2 Local User Database

Click **SECURITY** > **AUTH SERVER** to open the **Local User Database** screen. The local user database is a list of user profiles stored on the ZyWALL. The ZyWALL can use this list of user profiles to authenticate users. Use this screen to change your ZyWALL's list of user profiles.

Figure 239 SECURITY > AUTH SERVER > Local User Database

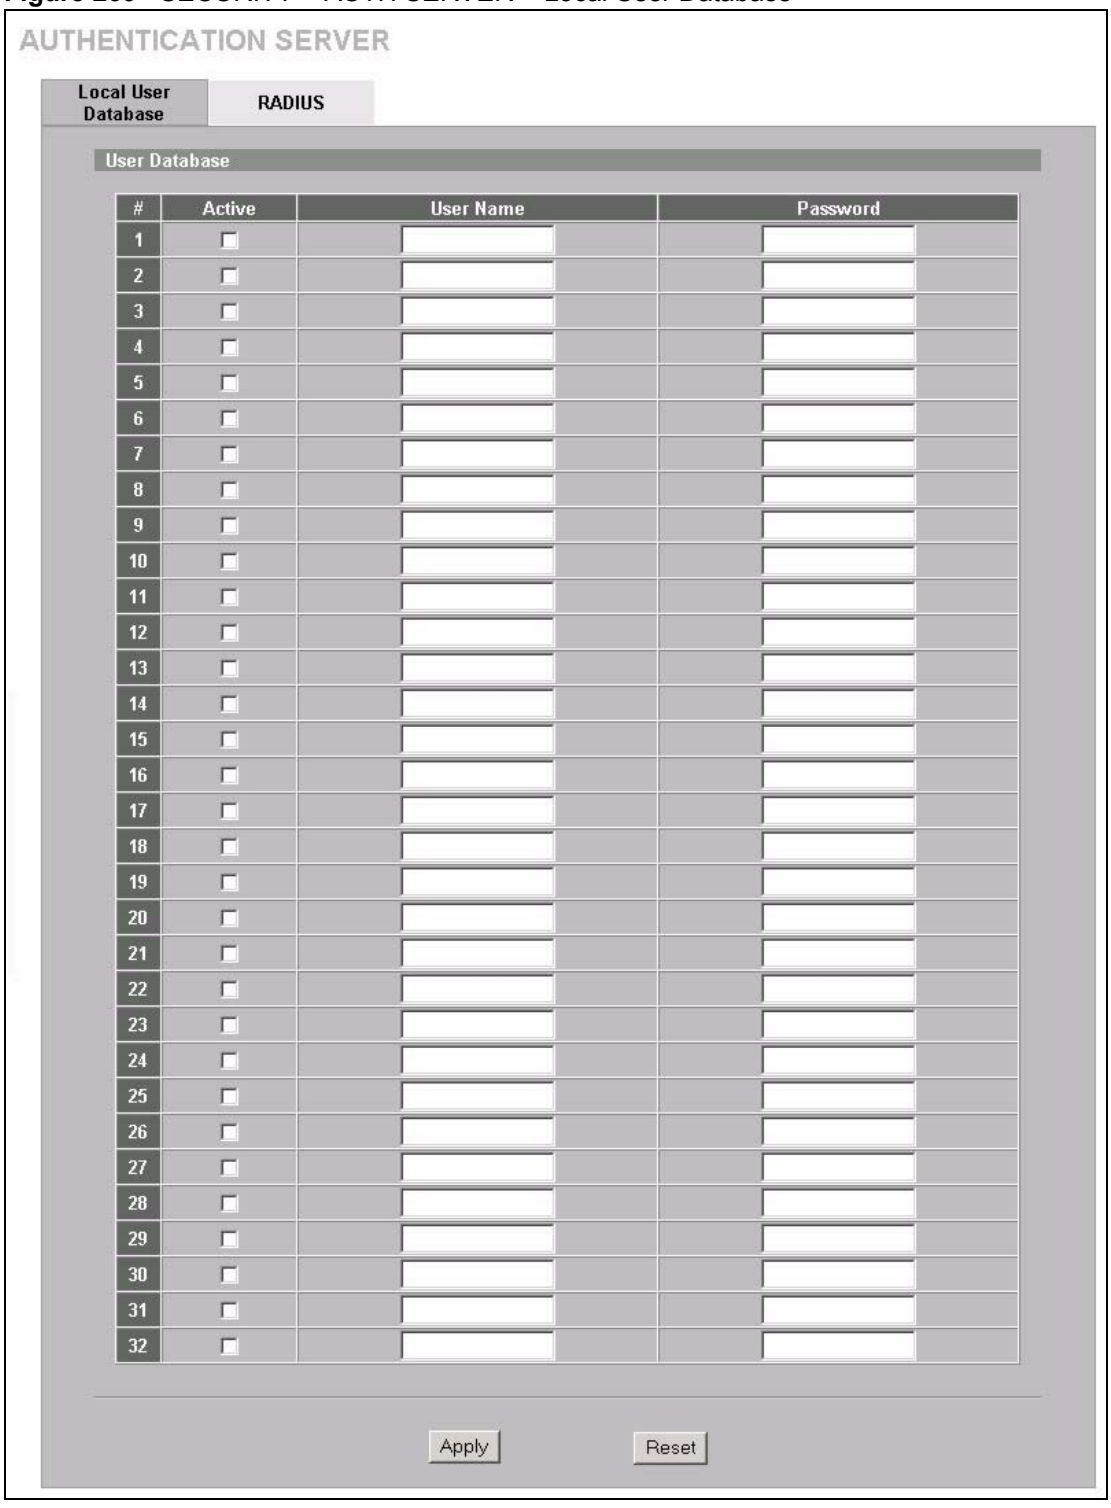

The following table describes the labels in this screen.


Table 111 SECURITY > AUTH SERVER > Local User Database

LABEL	DESCRIPTION
Active	Select this check box to enable the user profile.
User Name	Enter the user name of the user profile.
Password	Enter a password up to 31 characters long for this user profile.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

16.3 RADIUS

Click **SECURITY** > **AUTH SERVER** > **RADIUS** to open the **RADIUS** screen. Configure this screen to use an external RADIUS server to authenticate users.

Figure 240 SECURITY > AUTH SERVER > RADIUS

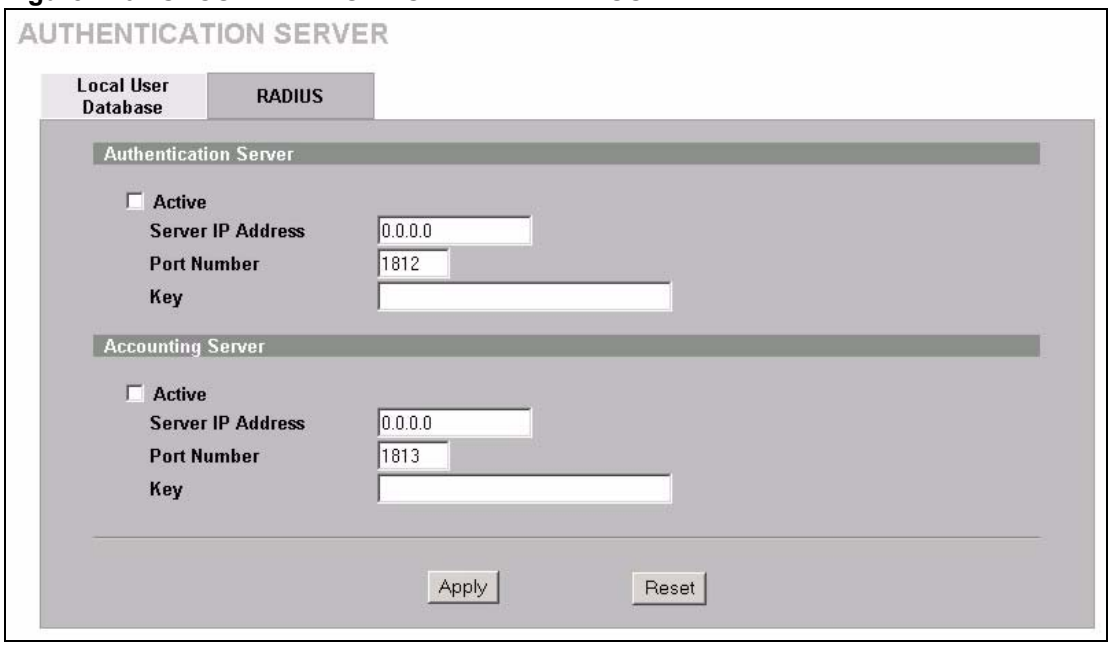

The following table describes the labels in this screen.

Table 112 SECURITY > AUTH SERVER > RADIUS

LABEL	DESCRIPTION
Authentication Server	
Active	Select the check box to enable user authentication through an external authentication server. Clear the check box to enable user authentication using the local user profile on the ZyWALL.
Server IP Address	Enter the IP address of the external authentication server in dotted decimal notation.
Port Number	The default port of the RADIUS server for authentication is **1812**. You need not change this value unless your network administrator instructs you to do so with additional information.

Table 112 SECURITY > AUTH SERVER > RADIUS

LABEL	DESCRIPTION
Key	Enter a password (up to 31 alphanumeric characters) as the key to be shared between the external authentication server and the ZyWALL. The key is not sent over the network. This key must be the same on the external authentication server and ZyWALL.
Accounting Server	
Active	Select the check box to enable user accounting through an external authentication server.
Server IP Address	Enter the IP address of the external accounting server in dotted decimal notation.
Port Number	The default port of the RADIUS server for accounting is **1813**. You need not change this value unless your network administrator instructs you to do so with additional information.
Key	Enter a password (up to 31 alphanumeric characters) as the key to be shared between the external accounting server and the ZyWALL. The key is not sent over the network. This key must be the same on the external accounting server and ZyWALL.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

PART IV
Advanced

Network Address Translation (NAT) (385)
Static Route (401)
Policy Route (405)
Bandwidth Management (411)
DNS (427)
Remote Management (439)
UPnP (461)
Custom Application (471)
ALG Screen (473)

17

Network Address Translation (NAT)

This chapter discusses how to configure NAT on the ZyWALL.

17.1 NAT Overview

NAT (Network Address Translation - NAT, RFC 1631) is the translation of the IP address of a host in a packet. For example, the source address of an outgoing packet, used within one network is changed to a different IP address known within another network.

17.1.1 NAT Definitions

Inside/outside denotes where a host is located relative to the ZyWALL. For example, the computers of your subscribers are the inside hosts, while the web servers on the Internet are the outside hosts.

Global/local denotes the IP address of a host in a packet as the packet traverses a router. For example, the local address refers to the IP address of a host when the packet is in the local network, while the global address refers to the IP address of the host when the same packet is traveling in the WAN side.

Note that inside/outside refers to the location of a host, while global/local refers to the IP address of a host used in a packet. Thus, an inside local address (ILA) is the IP address of an inside host in a packet when the packet is still in the local network, while an inside global address (IGA) is the IP address of the same inside host when the packet is on the WAN side. The following table summarizes this information.

Table 113 NAT Definitions

TERM	DESCRIPTION
Inside	This refers to the host on the LAN.
Outside	This refers to the host on the WAN.
Local	This refers to the packet address (source or destination) as the packet travels on the LAN.
Global	This refers to the packet address (source or destination) as the packet travels on the WAN.



NAT never changes the IP address (either local or global) of an **outside** host.

17.1.2 What NAT Does


In the simplest form, NAT changes the source IP address in a packet received from a subscriber (the inside local address) to another (the inside global address) before forwarding the packet to the WAN side. When the response comes back, NAT translates the destination address (the inside global address) back to the inside local address before forwarding it to the original inside host. Note that the IP address (either local or global) of an outside host is never changed.

The global IP addresses for the inside hosts can be either static or dynamically assigned by the ISP. In addition, you can designate servers (for example a web server and a telnet server) on your local network and make them accessible to the outside world. Although you can make designated servers on the LAN accessible to the outside world, it is strongly recommended that you attach those servers to the DMZ port instead. If you do not define any servers (for Many-to-One and Many-to-Many Overload mapping), NAT offers the additional benefit of firewall protection. With no servers defined, your ZyWALL filters out all incoming inquiries, thus preventing intruders from probing your network. For more information on IP address translation, refer to RFC 1631, The IP Network Address Translator (NAT).

17.1.3 How NAT Works

Each packet has two addresses – a source address and a destination address. For outgoing packets, the ILA (Inside Local Address) is the source address on the LAN, and the IGA (Inside Global Address) is the source address on the WAN. For incoming packets, the ILA is the destination address on the LAN, and the IGA is the destination address on the WAN. NAT maps private (local) IP addresses to globally unique ones required for communication with hosts on other networks. It replaces the original IP source address (and TCP or UDP source port numbers for Many-to-One and Many-to-Many Overload NAT mapping) in each packet and then forwards it to the Internet. The ZyWALL keeps track of the original addresses and port numbers so incoming reply packets can have their original values restored. The following figure illustrates this.


Figure 241 How NAT Works

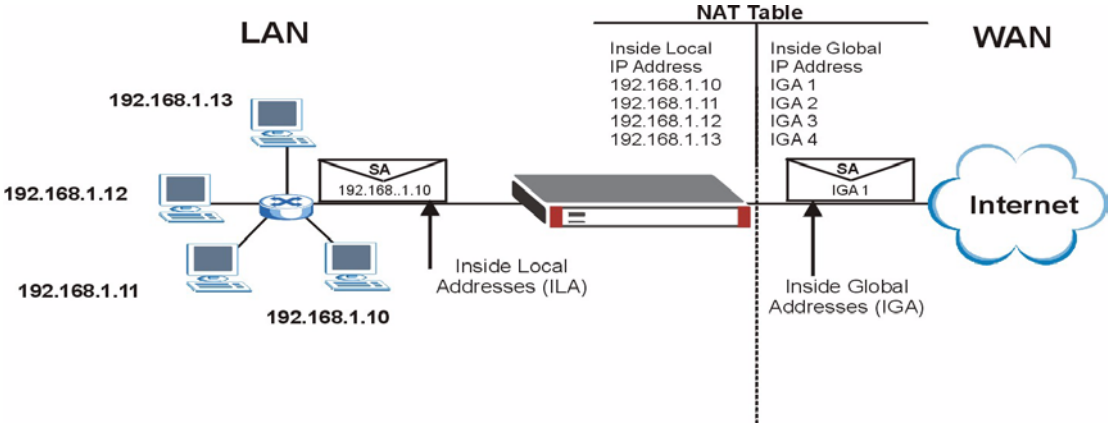

17.1.4 NAT Application

The following figure illustrates a possible NAT application, where three inside LANs (logical LANs using IP alias) behind the ZyWALL can communicate with three distinct WAN networks. More examples follow at the end of this chapter.

Figure 242 NAT Application With IP Alias

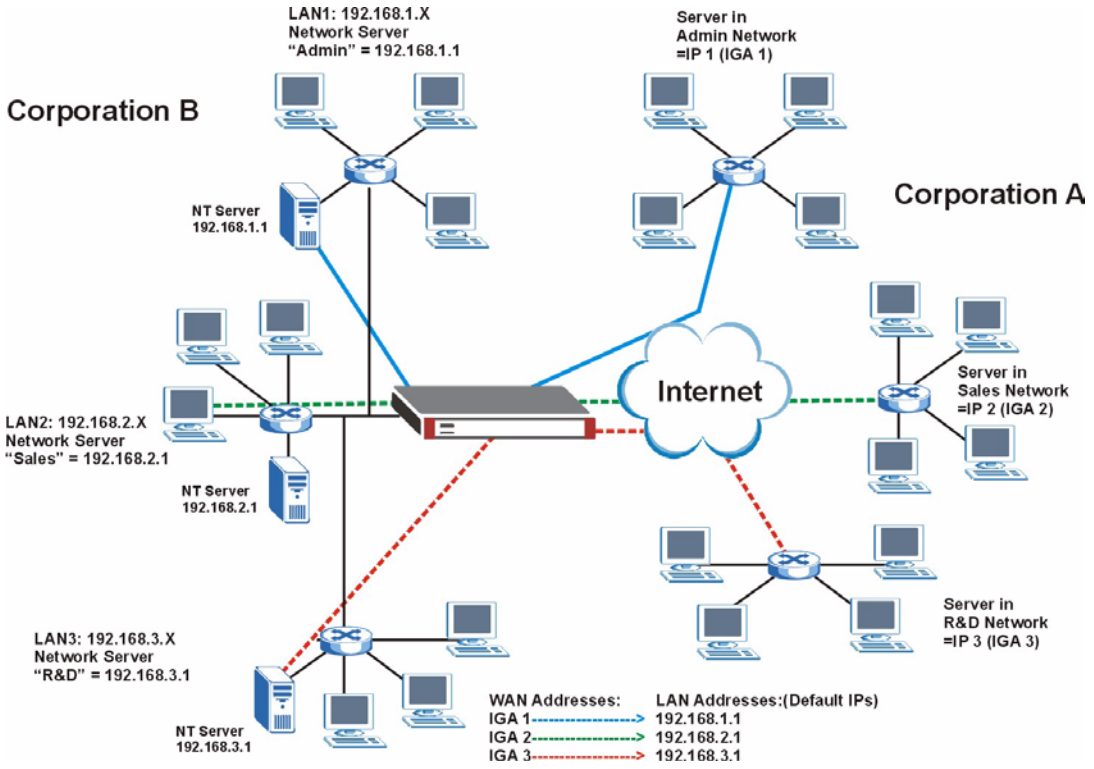

17.1.5 Port Restricted Cone NAT


ZyWALL ZyNOS version 4.00 and later uses port restricted cone NAT. Port restricted cone NAT maps all outgoing packets from an internal IP address and port to a single IP address and port on the external network. In the following example, the ZyWALL maps the source address of all packets sent from internal IP address **1** and port **A** to IP address **2** and port **B** on the external network. A host on the external network (IP address **3** and Port **C** for example) can only send packets to the internal host if the internal host has already sent a packet to the external host's IP address and port.

A server with IP address **1** and port **A** sends packets to IP address **3**, port **C** and IP address **4**, port **D**. The ZyWALL changes the server's IP address to **2** and port to **B**.

Since **1**, **A** has already sent packets to **3**, **C** and **4**, **D,** they can send packets back to **2**, **B** and the ZyWALL will perform NAT on them and send them to the server at IP address **1**, port **A**.

Packets have not been sent from **1**, **A** to **4**, **E** or **5**, so they cannot send packets to **1**, **A**.

Figure 243 Port Restricted Cone NAT Example

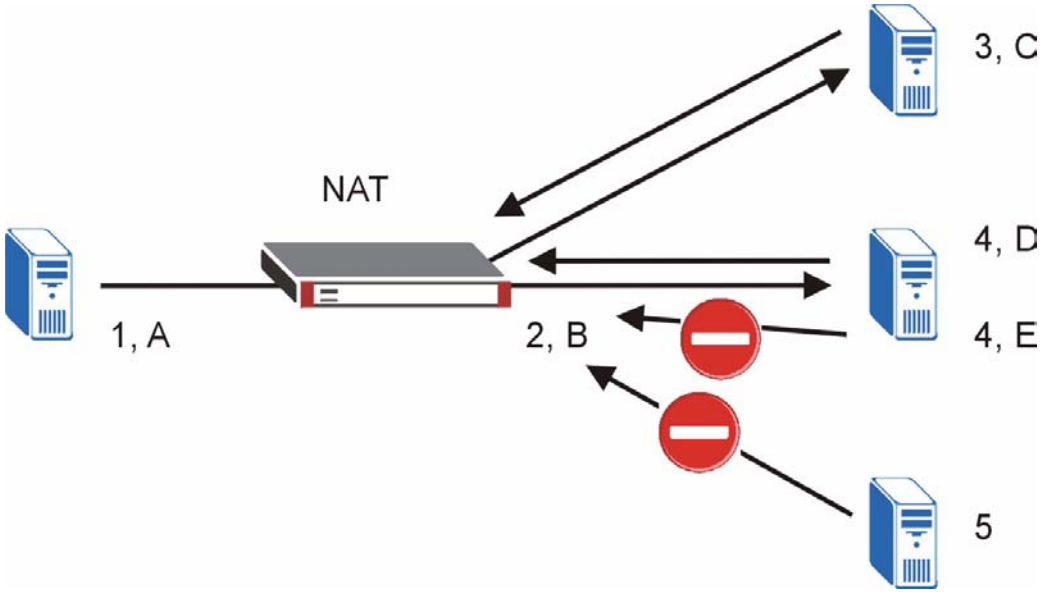

17.1.6 NAT Mapping Types

NAT supports five types of IP/port mapping. They are:

- **One to One**: In One-to-One mode, the ZyWALL maps one local IP address to one global IP address.
- **Many to One**: In Many-to-One mode, the ZyWALL maps multiple local IP addresses to one global IP address. This is equivalent to SUA (i.e., PAT, port address translation), ZyXEL's Single User Account feature (the **SUA** option).
- **Many to Many Overload**: In Many-to-Many Overload mode, the ZyWALL maps the multiple local IP addresses to shared global IP addresses.
- **Many One to One**: In Many-One-to-One mode, the ZyWALL maps each local IP address to a unique global IP address.

- **Server**: This type allows you to specify inside servers of different services behind the NAT to be accessible to the outside world although, it is highly recommended that you use the DMZ port for these servers instead.



Port numbers do **not** change for **One-to-One** and **Many-One-to-One** NAT mapping types.

The following table summarizes the NAT mapping types.

Table 114 NAT Mapping Types

TYPE	IP MAPPING	SMT ABBREVIATION
One-to-One	ILA1 ←→ IGA1	1-1
Many-to-One (SUA/PAT)	ILA1 ←→ IGA1 ILA2 ←→ IGA1 …	M-1
Many-to-Many Overload	ILA ←→ IGA1 ILA2 ←→ IGA2 ILA3 ←→ IGA1 ILA4 ←→ IGA2 …	M-M Ov
Many-One-to-One	ILA1 ←→ IGA1 ILA2 ←→ IGA2 ILA3 ←→ IGA3 …	M-1-1
Server	Server 1 IP ←→ IGA1 Server 2 IP ←→ IGA1 Server 3 IP ←→ IGA1	Server

17.2 Using NAT



You must create a firewall rule in addition to setting up SUA/NAT, to allow traffic from the WAN to be forwarded through the ZyWALL.

17.2.1 SUA (Single User Account) Versus NAT


SUA (Single User Account) is a ZyNOS implementation of a subset of NAT that supports two types of mapping, **Many-to-One** and **Server**. The ZyWALL also supports **Full Feature** NAT to map multiple global IP addresses to multiple private LAN IP addresses of clients or servers using mapping types. Select either **SUA** or **Full Feature** in **NAT Overview**.

Selecting **SUA** means (latent) multiple WAN-to-LAN and WAN-to-DMZ address translation. That means that computers on your DMZ with public IP addresses will still have to undergo NAT mapping if you're using **SUA** NAT mapping. If this is not your intention, then select **Full Feature** NAT and don't configure NAT mapping rules to those computers with public IP addresses on the DMZ.

17.3 NAT Overview Screen

Click **ADVANCED > NAT** to open the **NAT Overview** screen.

Figure 244 ADVANCED > NAT > NAT Overview

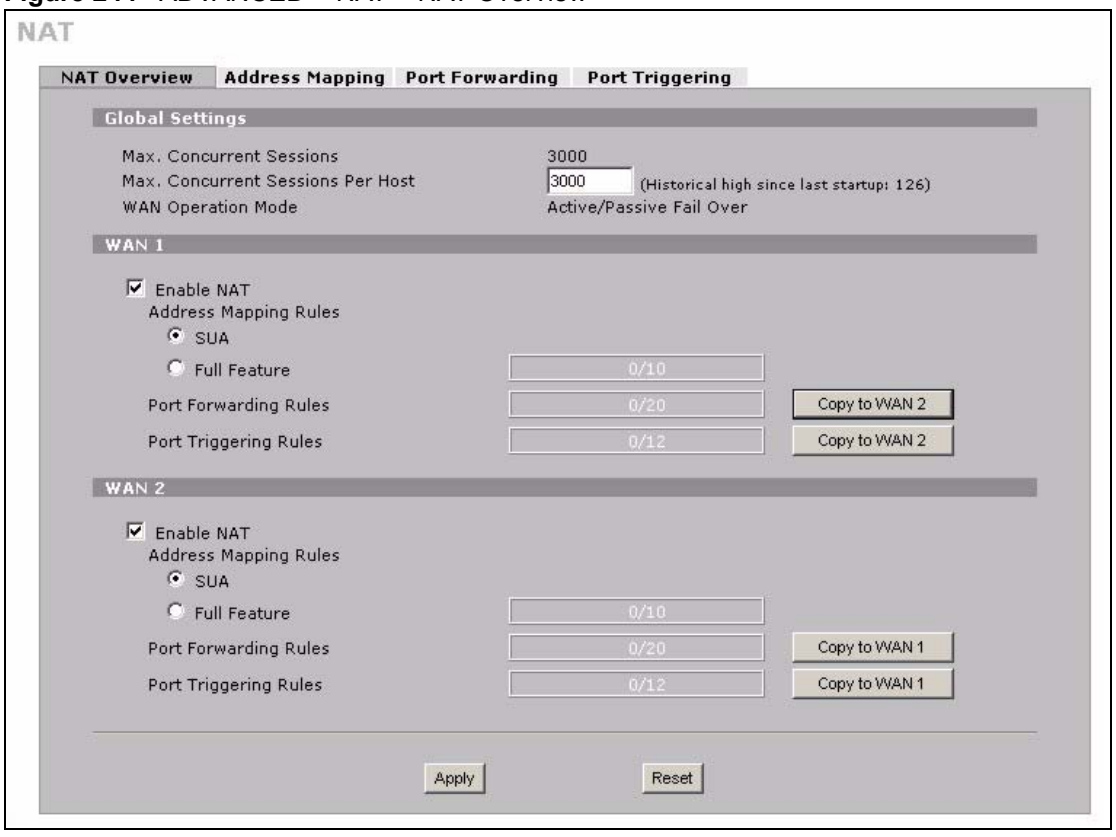

The following table describes the labels in this screen.

Table 115 ADVANCED > NAT > NAT Overview

LABEL	DESCRIPTION
Global Settings	
Max. Concurrent Sessions	This read-only field displays the highest number of NAT sessions that the ZyWALL will permit at one time.
Max. Concurrent Sessions Per Host	Use this field to set the highest number of NAT sessions that the ZyWALL will permit a host to have at one time.
WAN Operation Mode	This read-only field displays the operation mode of the ZyWALL's WAN interfaces.

Table 115 ADVANCED > NAT > NAT Overview (continued)

LABEL	DESCRIPTION
WAN 1, 2	
Enable NAT	Select this check box to turn on the NAT feature for the WAN interface. Clear this check box to turn off the NAT feature for the WAN interface.
Address Mapping Rules	Select **SUA** if you have just one public WAN IP address for your ZyWALL. This lets the ZyWALL use its permanent, pre-defined NAT address mapping rules. Select **Full Feature** if you have multiple public WAN IP addresses for your ZyWALL. This lets the ZyWALL use the address mapping rules that you configure. This is the equivalent of what used to be called full feature NAT or multi-NAT. The bar displays how many of the ZyWALL's possible address mapping rules are configured. The first number shows how many address mapping rules are configured on the ZyWALL. The second number shows the maximum number of address mapping rules that can be configured on the ZyWALL.
Port Forwarding Rules	The bar displays how many of the ZyWALL's possible port forwarding rules are configured. The first number shows how many port forwarding rules are configured on the ZyWALL. The second number shows the maximum number of port forwarding rules that can be configured on the ZyWALL.
Port Triggering Rules	The bar displays how many of the ZyWALL's possible trigger port rules are configured. The first number shows how many trigger port rules are configured on the ZyWALL. The second number shows the maximum number of trigger port rules that can be configured on the ZyWALL.
Copy to WAN 2 (and Copy to WAN 1)	Click **Copy to WAN 2** (or **Copy to WAN 1**) to duplicate this WAN interface's NAT port forwarding or trigger port rules on the other WAN interface. Note: Using the copy button overwrites the other WAN interface's existing rules. The copy button is best suited for initial NAT configuration where you have configured NAT port forwarding or trigger port rules for one interface and want to use similar rules for the other WAN interface. You can use the other NAT screens to edit the NAT rules after you copy them from one WAN interface to the other.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

17.4 NAT Address Mapping

Click **ADVANCED** > **NAT** > **Address Mapping** to open the following screen.

17.4.1 What NAT Does


In the simplest form, NAT changes the source IP address in a packet received from a subscriber (the inside local address) to another (the inside global address) before forwarding the packet to the WAN side. When the response comes back, NAT translates the destination address (the inside global address) back to the inside local address before forwarding it to the original inside host. Note that the IP address (either local or global) of an outside host is never changed.

See Section 17.1 on page 385 for more on NAT.

Use this screen to change your ZyWALL's address mapping settings.

Ordering your rules is important because the ZyWALL applies the rules in the order that you specify. When a rule matches the current packet, the ZyWALL takes the corresponding action and the remaining rules are ignored. If there are any empty rules before your new configured rule, your configured rule will be pushed up by that number of empty rules. For example, if you have already configured rules 1 to 6 in your current set and now you configure rule number 9. In the set summary screen, the new rule will be rule 7, not 9. Now if you delete rule 4, rules 5 to 7 will be pushed up by 1 rule, so old rules 5, 6 and 7 become new rules 4, 5 and 6.

Figure 245 ADVANCED > NAT > Address Mapping

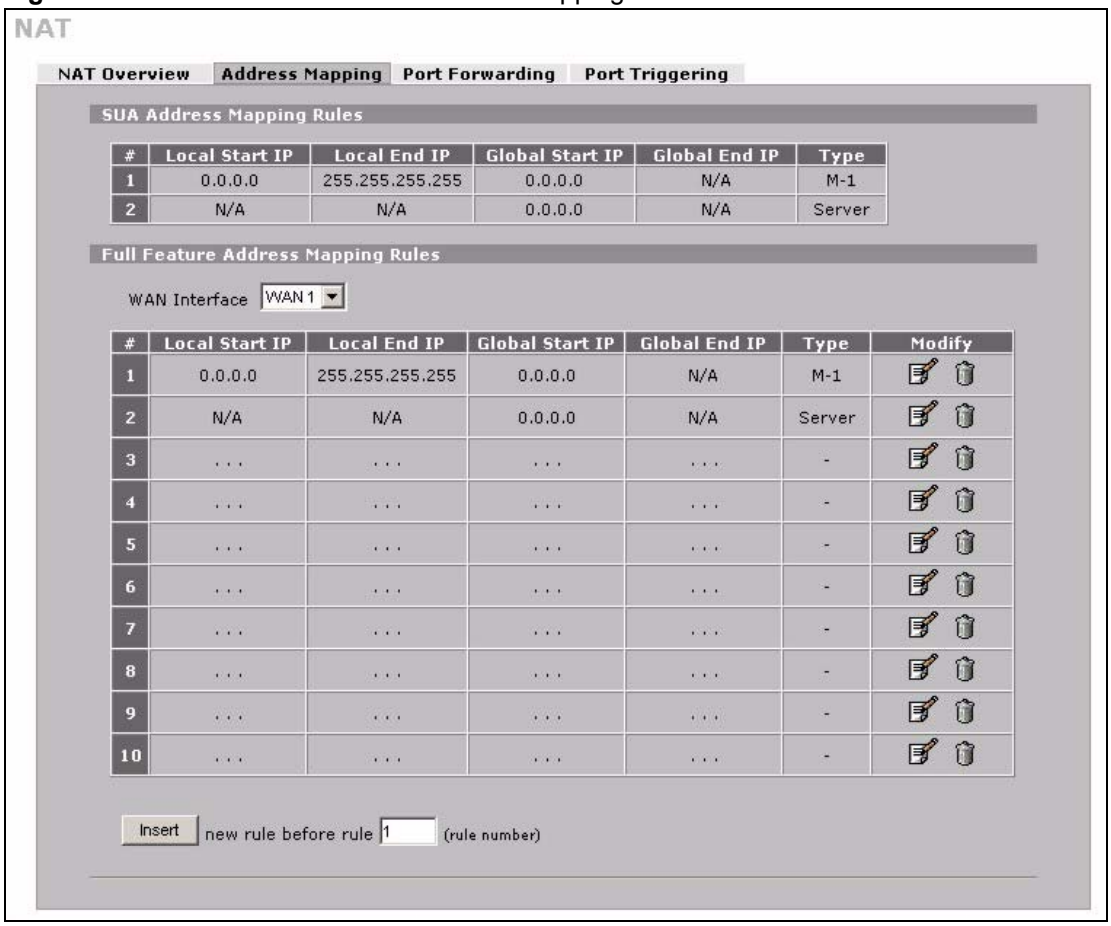

The following table describes the labels in this screen.

Table 116 ADVANCED > NAT > Address Mapping

LABEL	DESCRIPTION
SUA Address Mapping Rules	This read-only table displays the default address mapping rules.
Full Feature Address Mapping Rules	
WAN Interface	Select the WAN interface for which you want to view or configure address mapping rules.
#	This is the rule index number.


Table 116 ADVANCED > NAT > Address Mapping (continued)

LABEL	DESCRIPTION
Local Start IP	This refers to the Inside Local Address (ILA), which is the starting local IP address. If the rule is for all local IP addresses, then this field displays 0.0.0.0 as the **Local Start IP** address. Local IP addresses are **N/A** for **Server** port mapping.
Local End IP	This is the end Inside Local Address (ILA). If the rule is for all local IP addresses, then this field displays 255.255.255.255 as the **Local End IP** address. This field is **N/A** for **One-to-One** and **Server** mapping types.
Global Start IP	This refers to the Inside Global IP Address (IGA), that is the starting global IP address. 0.0.0.0 is for a dynamic IP address from your ISP with **Many-to-One** and **Server** mapping types.
Global End IP	This is the ending Inside Global Address (IGA). This field is **N/A** for **One-to-One**, **Many-to-One** and **Server** mapping types.
Type	1. **One-to-One** mode maps one local IP address to one global IP address. Note that port numbers do not change for the One-to-One NAT mapping type. 2. **Many-to-One** mode maps multiple local IP addresses to one global IP address. This is equivalent to SUA (i.e., PAT, port address translation), ZyXEL's Single User Account feature that previous ZyXEL routers supported only. 3. **Many-to-Many Overload** mode maps multiple local IP addresses to shared global IP addresses. 4. **Many One-to-One** mode maps each local IP address to unique global IP addresses. 5. **Server** allows you to specify inside servers of different services behind the NAT to be accessible to the outside world.
Modify	Click the edit icon to go to the screen where you can edit the address mapping rule. Click the delete icon to delete an existing address mapping rule. A window display asking you to confirm that you want to delete the address mapping rule. Note that subsequent address mapping rules move up by one when you take this action.
Insert	Click **Insert** to insert a new mapping rule before an existing one.

17.4.2 NAT Address Mapping Edit

Click the edit icon to display the **NAT Address Mapping Edit** screen. Use this screen to edit an address mapping rule. See Section 17.1 on page 385 for information on NAT and address mapping.

Figure 246 ADVANCED > NAT > Address Mapping > Edit

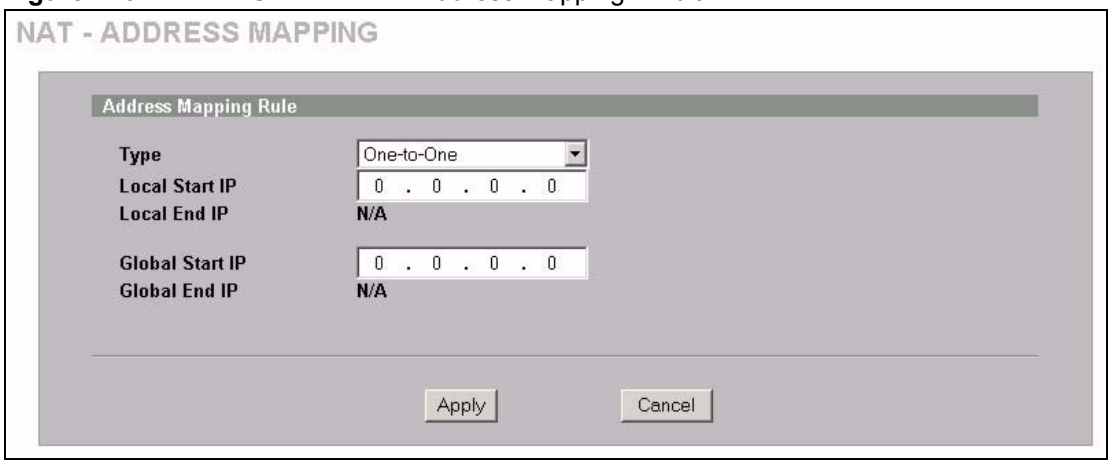

The following table describes the labels in this screen.

Table 117 ADVANCED > NAT > Address Mapping > Edit

LABEL	DESCRIPTION
Type	Choose the port mapping type from one of the following. 1. **One-to-One**: One-to-One mode maps one local IP address to one global IP address. Note that port numbers do not change for One-to-One NAT mapping type. 2. **Many-to-One**: Many-to-One mode maps multiple local IP addresses to one global IP address. This is equivalent to SUA (i.e., PAT, port address translation), ZyXEL's Single User Account feature. 3. **Many-to-Many Overload**: Many-to-Many Overload mode maps multiple local IP addresses to shared global IP addresses. 4. **Many One-to-One**: Many One-to-One mode maps each local IP address to unique global IP addresses. 5. **Server**: This type allows you to specify inside servers of different services behind the NAT to be accessible to the outside world.
Local Start IP	This is the starting Inside Local IP Address (ILA). Local IP addresses are **N/A** for **Server** port mapping.
Local End IP	This is the end Inside Local IP Address (ILA). If your rule is for all local IP addresses, then enter 0.0.0.0 as the **Local Start IP** address and 255.255.255.255 as the **Local End IP** address. This field is **N/A** for **One-to-One** and **Server** mapping types.
Global Start IP	This is the starting Inside Global IP Address (IGA). Enter **0.0.0.0** here if you have a dynamic IP address from your ISP.
Global End IP	This is the ending Inside Global IP Address (IGA). This field is **N/A** for **One-to-One**, **Many-to-One** and **Server** mapping types.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Cancel	Click **Cancel** to exit this screen without saving.

17.5 Port Forwarding

A port forwarding set is a list of inside (behind NAT on the LAN) servers, for example, web or FTP, that you can make visible to the outside world even though NAT makes your whole inside network appear as a single computer to the outside world.

You may enter a single port number or a range of port numbers to be forwarded, and the local IP address of the desired server. The port number identifies a service; for example, web service is on port 80 and FTP on port 21. In some cases, such as for unknown services or where one server can support more than one service (for example both FTP and web service), it might be better to specify a range of port numbers. You can allocate a server IP address that corresponds to a port or a range of ports.

Many residential broadband ISP accounts do not allow you to run any server processes (such as a Web or FTP server) from your location. Your ISP may periodically check for servers and may suspend your account if it discovers any active services at your location. If you are unsure, refer to your ISP.

17.5.1 Default Server IP Address

In addition to the servers for specified services, NAT supports a default server IP address. A default server receives packets from ports that are not specified in this screen.



If you do not assign a **Default Server** IP address, the ZyWALL discards all packets received for ports that are not specified here or in the remote management setup.

17.5.2 Port Forwarding: Services and Port Numbers

The ZyWALL provides the additional safety of the DMZ ports for connecting your publicly accessible servers. This makes the LAN more secure by physically separating it from your public servers.

Use the **Port Forwarding** screen to forward incoming service requests to the server(s) on your local network.

The most often used port numbers are shown in the following table. Please refer to RFC 1700 for further information about port numbers.


Table 118 Services and Port Numbers

SERVICES	PORT NUMBER
ECHO	7
FTP (File Transfer Protocol)	21
SMTP (Simple Mail Transfer Protocol)	25
DNS (Domain Name System)	53
Finger	79
HTTP (Hyper Text Transfer protocol or WWW, Web)	80
POP3 (Post Office Protocol)	110
NNTP (Network News Transport Protocol)	119
SNMP (Simple Network Management Protocol)	161
SNMP trap	162
PPTP (Point-to-Point Tunneling Protocol)	1723

17.5.3 Configuring Servers Behind Port Forwarding (Example)

Let's say you want to assign ports 21-25 to one FTP, Telnet and SMTP server (**A** in the example), port 80 to another (**B** in the example) and assign a default server IP address of 192.168.1.35 to a third (**C** in the example). You assign the LAN IP addresses and the ISP assigns the WAN IP address. The NAT network appears as a single host on the Internet.

Figure 247 Multiple Servers Behind NAT Example

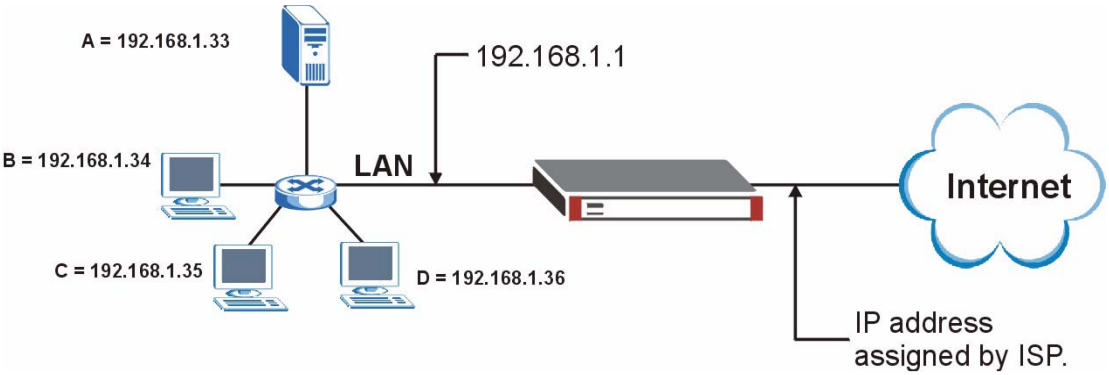

17.5.4 NAT and Multiple WAN

The ZyWALL has two WAN interfaces. You can configure port forwarding and trigger port rule sets for the first WAN interface and separate sets of rules for the second WAN interface.

17.5.5 Port Translation


The ZyWALL can translate the destination port number or a range of port numbers of packets coming from the WAN to another destination port number or range of port numbers on the local network. When you use port forwarding without port translation, a single server on the local network can use a specific port number and be accessible to the outside world through a single WAN IP address. When you use port translation with port forwarding, multiple servers on the local network can use the same port number and still be accessible to the outside world through a single WAN IP address.

The following example has two web servers on a LAN. Server **A** uses IP address 192.168.1.33 and server **B** uses 192.168.1.34. Both servers use port 80. The letters a.b.c.d represent the WAN port's IP address. The ZyWALL translates port 8080 of traffic received on the WAN port (IP address a.b.c.d) to port 80 and sends it to server **A** (IP address 192.168.1.33). The ZyWALL also translates port 8100 of traffic received on the WAN port (also IP address a.b.c.d) to port 80, but sends it to server **B** (IP address 192.168.1.34).



In this example, anyone wanting to access server A from the Internet must use port 8080. Anyone wanting to access server B from the Internet must use port 8100.

Figure 248 Port Translation Example

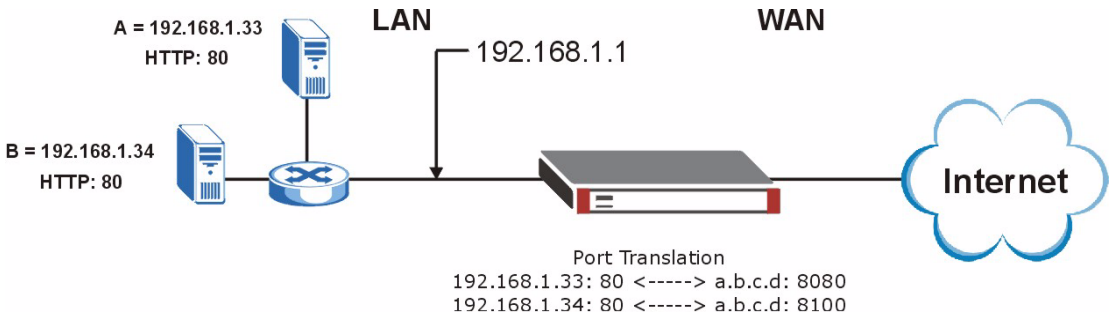

17.6 Port Forwarding Screen


Click **ADVANCED** > **NAT** > **Port Forwarding** to open the **Port Forwarding** screen.

If you do not assign a **Default Server** IP address, the ZyWALL discards all packets received for ports that are not specified here or in the remote management setup.

Refer to Figure 118 on page 395 for port numbers commonly used for particular services.

The last port forwarding rule is reserved for Roadrunner services. The rule is activated only when you set the **WAN Encapsulation** to **Ethernet** and the **Service Type** to something other than **Standard**.

Figure 249 ADVANCED > NAT > Port Forwarding

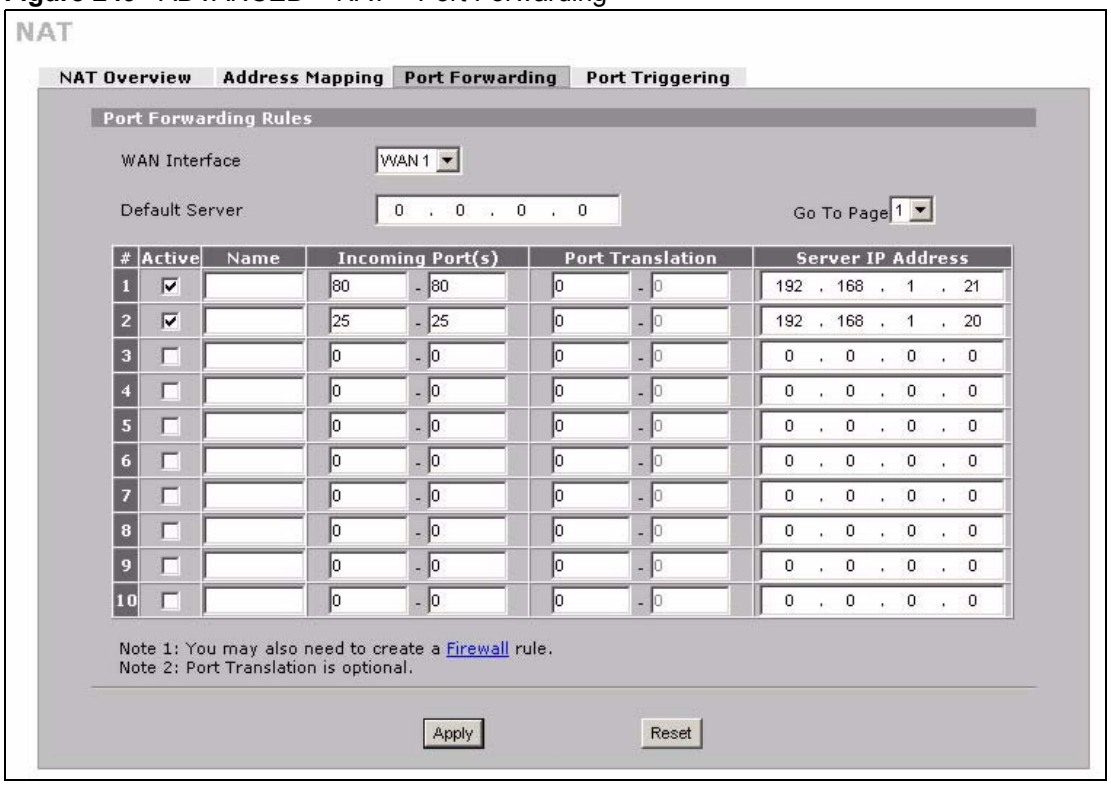

The following table describes the labels in this screen.

Table 119 ADVANCED > NAT > Port Forwarding

LABEL	DESCRIPTION
WAN Interface	Select the WAN interface for which you want to view or configure address mapping rules.
Default Server	In addition to the servers for specified services, NAT supports a default server. A default server receives packets from ports that are not specified in this screen. If you do not assign a **Default Server** IP address, the ZyWALL discards all packets received for ports that are not specified here or in the remote management setup.
Go To Page	Choose a page from the drop-down list box to display the corresponding summary page of the port forwarding servers.
#	This is the number of an individual port forwarding server entry.
Active	Select this check box to enable the port forwarding server entry. Clear this check box to disallow forwarding of these ports to an inside server without having to delete the entry.
Name	Enter a name to identify this port-forwarding rule.
Incoming Port(s)	Enter a port number here. To forward only one port, enter it again in the second field. To specify a range of ports, enter the last port to be forwarded in the second field.
Port Translation	Enter the port number here to which you want the ZyWALL to translate the incoming port. For a range of ports, you only need to enter the first number of the range to which you want the incoming ports translated, the ZyWALL automatically calculates the last port of the translated port range.
Server IP Address	Enter the inside IP address of the server here.

Table 119 ADVANCED > NAT > Port Forwarding

LABEL	DESCRIPTION
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.


17.7 Port Triggering

Some services use a dedicated range of ports on the client side and a dedicated range of ports on the server side. With regular port forwarding you set a forwarding port in NAT to forward a service (coming in from the server on the WAN) to the IP address of a computer on the client side (LAN). The problem is that port forwarding only forwards a service to a single LAN IP address. In order to use the same service on a different LAN computer, you have to manually replace the LAN computer's IP address in the forwarding port with another LAN computer's IP address.

Trigger port forwarding solves this problem by allowing computers on the LAN to dynamically take turns using the service. The ZyWALL records the IP address of a LAN computer that sends traffic to the WAN to request a service with a specific port number and protocol (a "trigger" port). When the ZyWALL's WAN port receives a response with a specific port number and protocol ("incoming" port), the ZyWALL forwards the traffic to the LAN IP address of the computer that sent the request. After that computer’s connection for that service closes, another computer on the LAN can use the service in the same manner. This way you do not need to configure a new IP address each time you want a different LAN computer to use the application.

For example:


Figure 250 Trigger Port Forwarding Process: Example

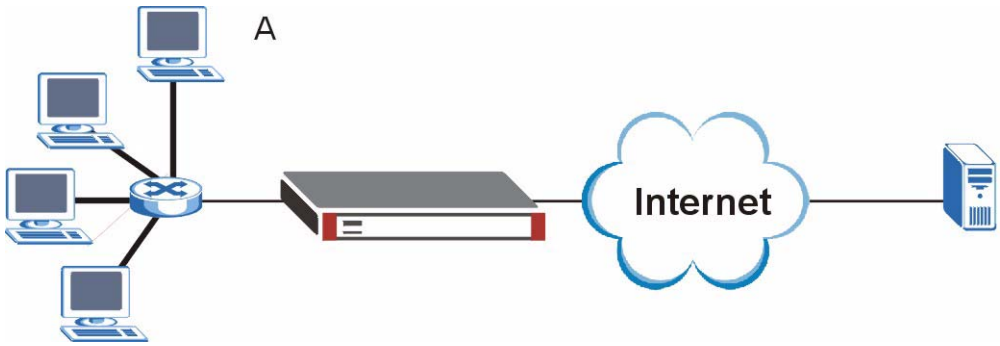

1. Jane (A) requests a file from the Real Audio server (port 7070).
2. Port 7070 is a “trigger” port and causes the ZyWALL to record Jane’s computer IP address. The ZyWALL associates Jane's computer IP address with the "incoming" port range of 6970-7170.
3. The Real Audio server responds using a port number ranging between 6970-7170.
4. The ZyWALL forwards the traffic to Jane’s computer IP address.
5. Only Jane can connect to the Real Audio server until the connection is closed or times out. The ZyWALL times out in three minutes with UDP (User Datagram Protocol) or two hours with TCP/IP (Transfer Control Protocol/Internet Protocol).

Click **ADVANCED** > **NAT** > **Port Triggering** to open the following screen. Use this screen to change your ZyWALL's trigger port settings.

Figure 251 ADVANCED > NAT > Port Triggering

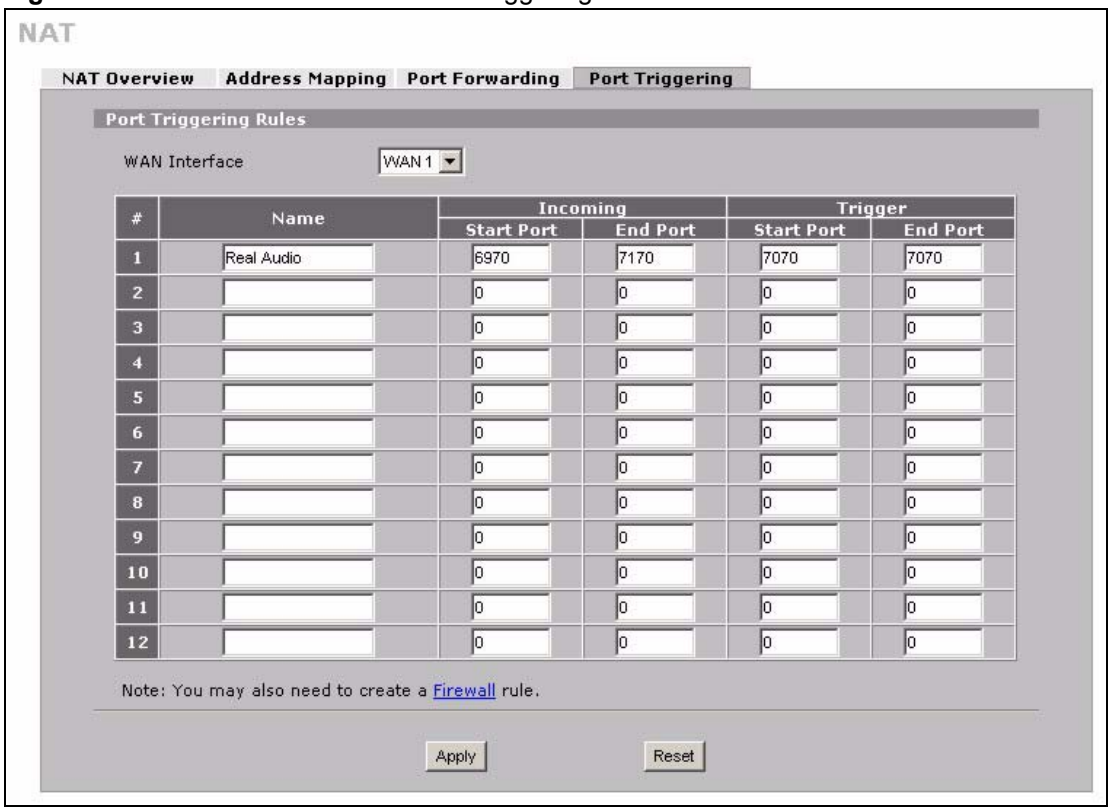

The following table describes the labels in this screen.

Table 120 ADVANCED > NAT > Port Triggering

LABEL	DESCRIPTION
WAN Interface	Select the WAN interface for which you want to view or configure address mapping rules.
#	This is the rule index number (read-only).
Name	Type a unique name (up to 15 characters) for identification purposes. All characters are permitted - including spaces.
Incoming	Incoming is a port (or a range of ports) that a server on the WAN uses when it sends out a particular service. The ZyWALL forwards the traffic with this port (or range of ports) to the client computer on the LAN that requested the service.
Start Port	Type a port number or the starting port number in a range of port numbers.
End Port	Type a port number or the ending port number in a range of port numbers.
Trigger	The trigger port is a port (or a range of ports) that causes (or triggers) the ZyWALL to record the IP address of the LAN computer that sent the traffic to a server on the WAN.
Start Port	Type a port number or the starting port number in a range of port numbers.
End Port	Type a port number or the ending port number in a range of port numbers.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

18

Static Route


This chapter shows you how to configure static routes for your ZyWALL.

18.1 IP Static Route

The ZyWALL usually uses the default gateway to route outbound traffic from local computers to the Internet. To have the ZyWALL send data to devices not reachable through the default gateway, use static routes.

For example, the next figure shows a computer (**A**) connected to the ZyWALL's LAN interface. The ZyWALL routes most traffic from **A** to the Internet through the default gateway (**R1**). You create one static route to connect to services offered by your ISP behind router **R2**. You create another static route to communicate with a separate network behind a router (**R3**) connected to the LAN.

Figure 252 Example of Static Routing Topology

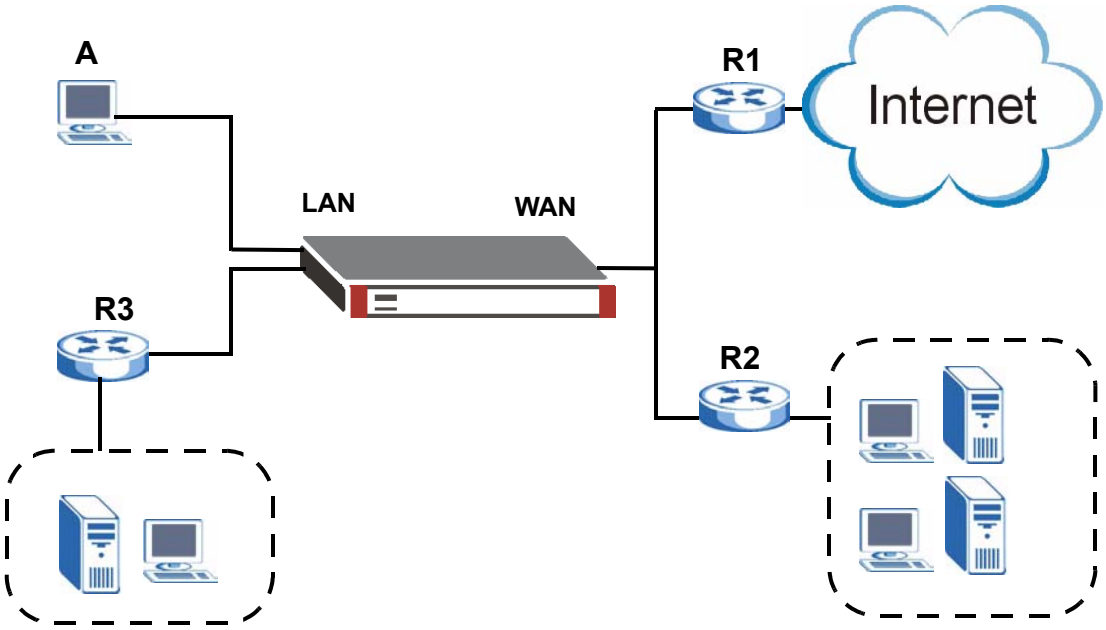


18.2 IP Static Route

Click **ADVANCED** > **STATIC ROUTE** to open the **IP Static Route** screen.

The first two static route entries are for default WAN 1 and WAN 2 routes on a ZyWALL with multiple WAN interfaces. You cannot modify or delete a static default route.

The default route is disabled after you change the static WAN IP address to a dynamic WAN IP address.

Figure 253 ADVANCED > STATIC ROUTE > IP Static Route

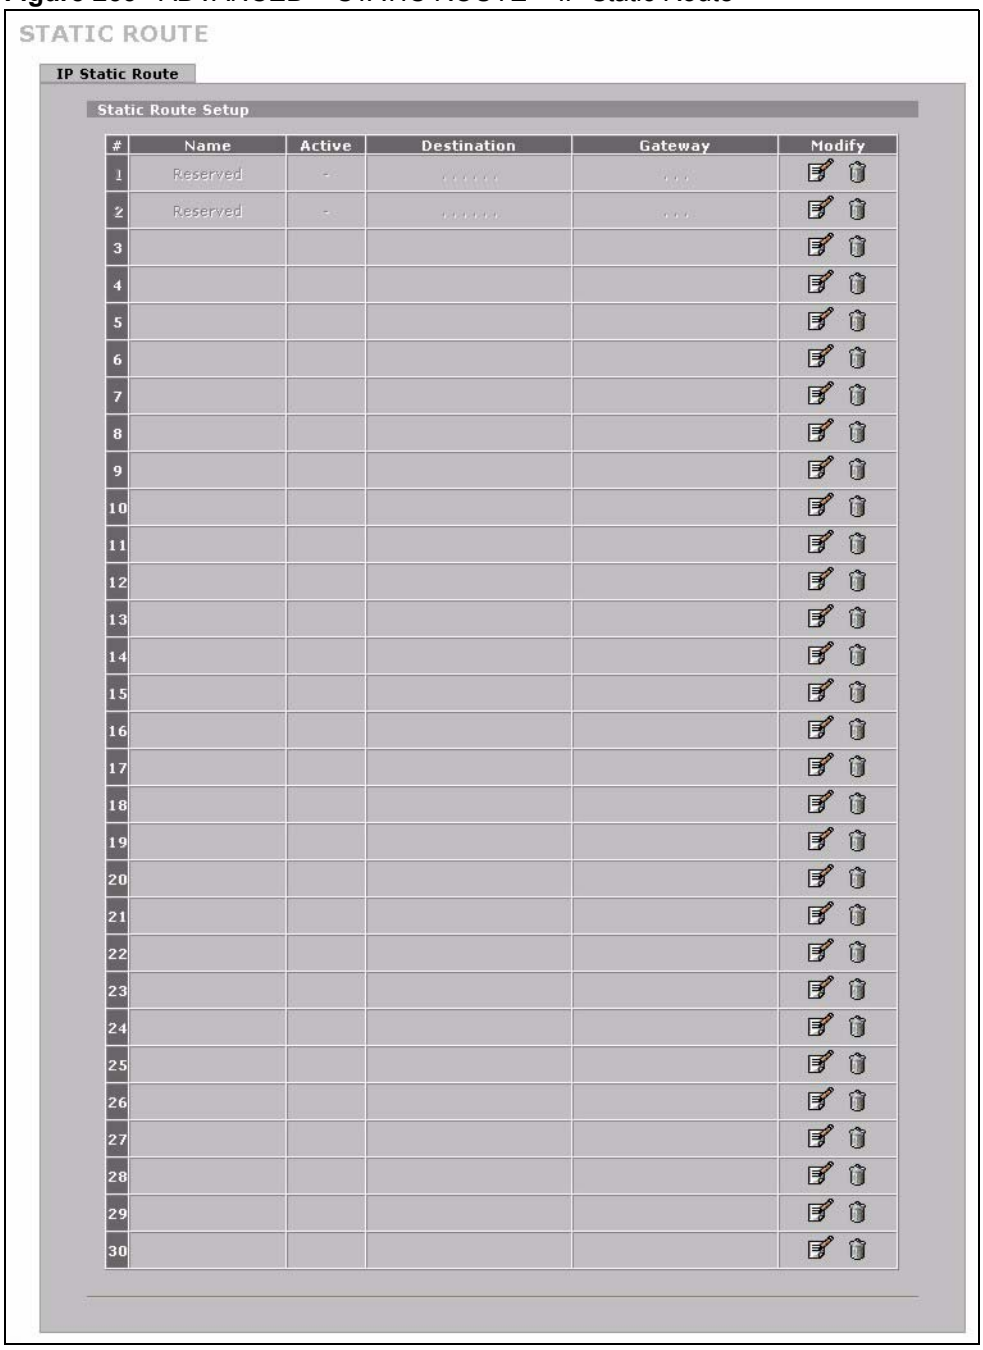

The following table describes the labels in this screen.


Table 121 ADVANCED > STATIC ROUTE > IP Static Route

LABEL	DESCRIPTION
#	This is the number of an individual static route.
Name	This is the name that describes or identifies this route.
Active	This field shows whether this static route is active (**Yes**) or not (**No**).
Destination	This parameter specifies the IP network address of the final destination. Routing is always based on network number.
Gateway	This is the IP address of the gateway. The gateway is a router or switch on the same network segment as the ZyWALL's interface. The gateway helps forward packets to their destinations.
Modify	Click the edit icon to go to the screen where you can set up a static route on the ZyWALL. Click the delete icon to remove a static route from the ZyWALL. A window displays asking you to confirm that you want to delete the route.

18.2.1 IP Static Route Edit

Click the edit icon in the **IP Static Route** screen. The screen shown next appears. Use this screen to configure the required information for a static route.

Figure 254 ADVANCED > STATIC ROUTE > IP Static Route > Edit

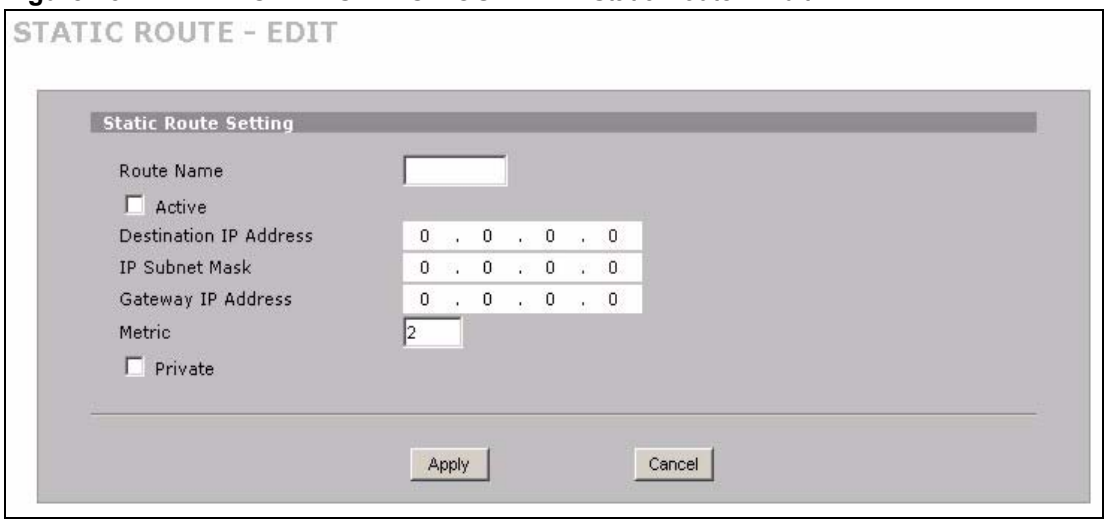

The following table describes the labels in this screen.

Table 122 ADVANCED > STATIC ROUTE > IP Static Route > Edit

LABEL	DESCRIPTION
Route Name	Enter the name of the IP static route. Leave this field blank to delete this static route.
Active	This field allows you to activate/deactivate this static route.
Destination IP Address	This parameter specifies the IP network address of the final destination. Routing is always based on network number. If you need to specify a route to a single host, use a subnet mask of 255.255.255.255 in the subnet mask field to force the network number to be identical to the host ID.
IP Subnet Mask	Enter the IP subnet mask here.

Table 122 ADVANCED > STATIC ROUTE > IP Static Route > Edit

LABEL	DESCRIPTION
Gateway IP Address	Enter the IP address of the gateway. The gateway is a router or switch on the same network segment as the device's LAN or WAN port. The gateway helps forward packets to their destinations.
Metric	Metric represents the “cost” of transmission for routing purposes. IP routing uses hop count as the measurement of cost, with a minimum of 1 for directly connected networks. Enter a number that approximates the cost for this link. The number need not be precise, but it must be between 1 and 15. In practice, 2 or 3 is usually a good number.
Private	This parameter determines if the ZyWALL will include this route to a remote node in its RIP broadcasts. Select this check box to keep this route private and not included in RIP broadcasts. Clear this check box to propagate this route to other hosts through RIP broadcasts.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Cancel	Click **Cancel** to exit this screen without saving.

19

Policy Route

This chapter covers setting and applying policies used for IP routing.

19.1 Policy Route

Traditionally, routing is based on the destination address only and the ZyWALL takes the shortest path to forward a packet. IP Policy Routing (IPPR) provides a mechanism to override the default routing behavior and alter the packet forwarding based on the policy defined by the network administrator. Policy-based routing is applied to incoming packets on a per interface basis, prior to the normal routing.

19.2 Benefits

- Source-Based Routing – Network administrators can use policy-based routing to direct traffic from different users through different connections.
- Quality of Service (QoS) – Organizations can differentiate traffic by setting the precedence or ToS (Type of Service) values in the IP header at the periphery of the network to enable the backbone to prioritize traffic.
- Cost Savings – IPPR allows organizations to distribute interactive traffic on high-bandwidth, high-cost paths while using low-cost paths for batch traffic.
- Load Sharing – Network administrators can use IPPR to distribute traffic among multiple paths.

19.3 Routing Policy

Individual routing policies are used as part of the overall IPPR process. A policy defines the matching criteria and the action to take when a packet meets the criteria. The action is taken only when all the criteria are met. The criteria include the source address and port, IP protocol (ICMP, UDP, TCP, etc.), destination address and port, ToS and precedence (fields in the IP header) and length. The inclusion of length criterion is to differentiate between interactive and bulk traffic. Interactive applications, e.g., telnet, tend to have short packets, while bulk traffic, e.g., file transfer, tends to have large packets.

The actions that can be taken include:


- Routing the packet to a different gateway (and hence the outgoing interface).
- Setting the ToS and precedence fields in the IP header.

IPPR follows the existing packet filtering facility of RAS in style and in implementation.

19.4 IP Routing Policy Setup

Click **ADVANCED > POLICY ROUTE** to open the **Policy Route Summary** screen.

Figure 255 ADVANCED > POLICY ROUTE > Policy Route Summary

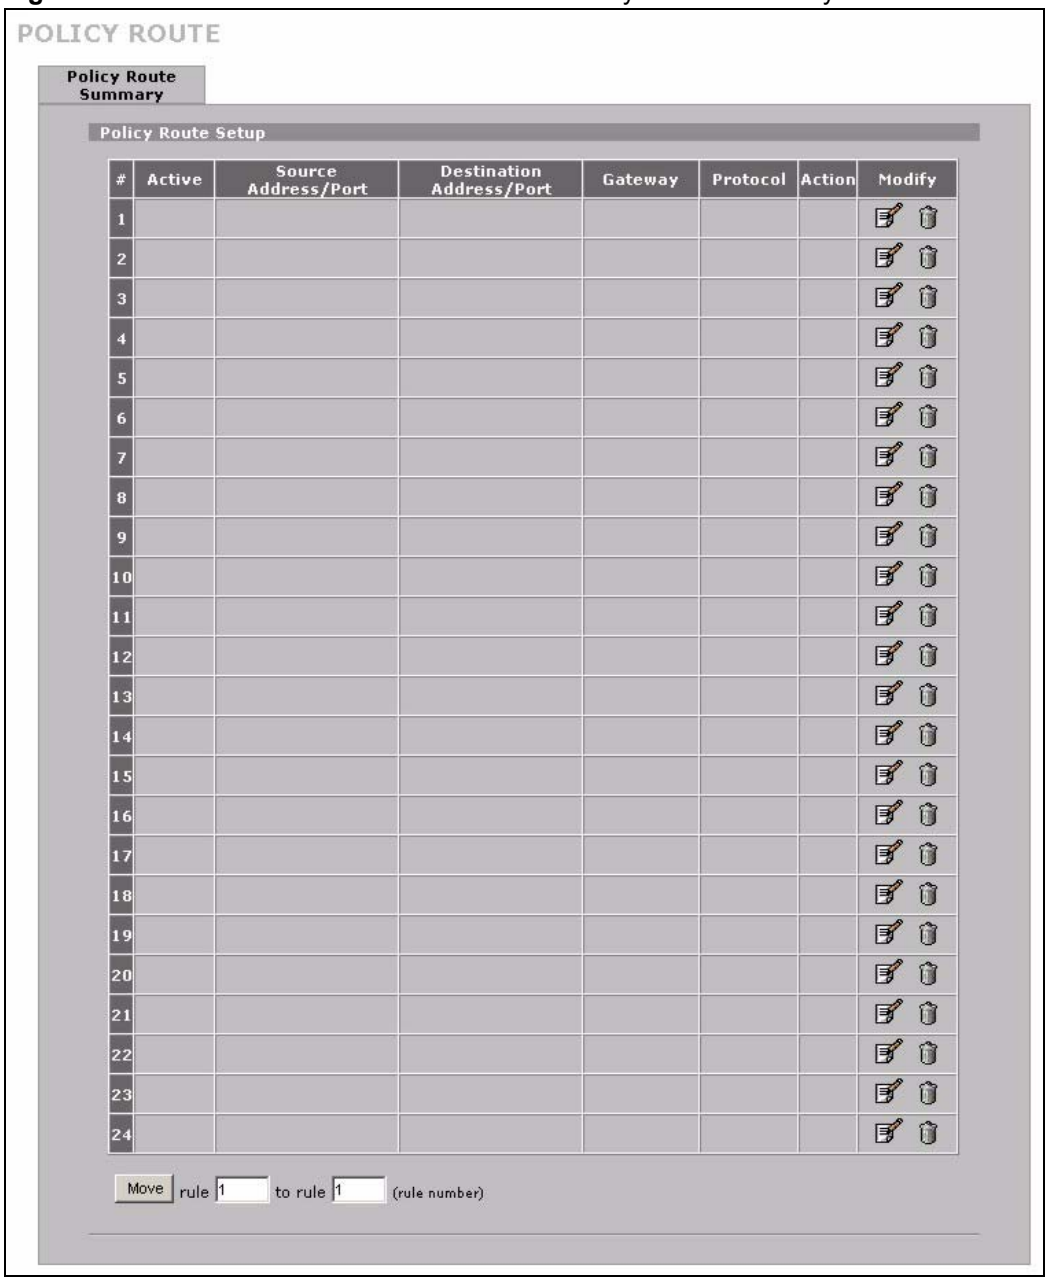

The following table describes the labels in this screen.

Table 123 ADVANCED > POLICY ROUTE > Policy Route Summary


LABEL	DESCRIPTION
#	This is the number of an individual policy route.
Active	This field shows whether the policy is active or inactive.
Source Address/Port	This is the source IP address range and/or port number range.
Destination Address/Port	This is the destination IP address range and/or port number range.
Gateway	Enter the IP address of the gateway. The gateway is a router or switch on the same network segment as the device's LAN or WAN port. The gateway helps forward packets to their destinations.
Protocol	This is the IP protocol and can be **ALL(0)**, **ICMP(1)**, **IGMP(2)**, **TCP(6)**, **UDP(17)**, **GRE(47)**, **ESP(50)** or **AH(51)**.
Action	This field specifies whether action should be taken on criteria **Matched** or **Not Matched**.
Modify	Click the edit icon to go to the screen where you can edit the routing policy on the ZyWALL. Click the delete icon to remove an existing routing policy from the ZyWALL. A window display asking you to confirm that you want to delete the routing policy.
Move	Type a policy route's index number and the number for where you want to put that rule. Click **Move** to move the rule to the number that you typed. The ordering of your rules is important as they are applied in order of their numbering.

19.5 Policy Route Edit

Click **ADVANCED > POLICY ROUTE** to open the **Policy Route Summary** screen. Then click the edit icon to open the **Edit IP Policy Route** screen. WAN 2 refers to the 3G card on the supported ZyWALL in router mode.

Use this screen to configure a policy route to override the default (shortest path) routing behavior and forward packets based on the criteria you specify. A policy route defines the matching criteria and the action to take when a packet meets the criteria. The action is taken only when all the criteria are met. Policy-based routing is applied to incoming packets on a per interface basis before normal routing. The ZyWALL does not perform normal routing on packets that match any of the policy routes.

Figure 256 Edit IP Policy Route

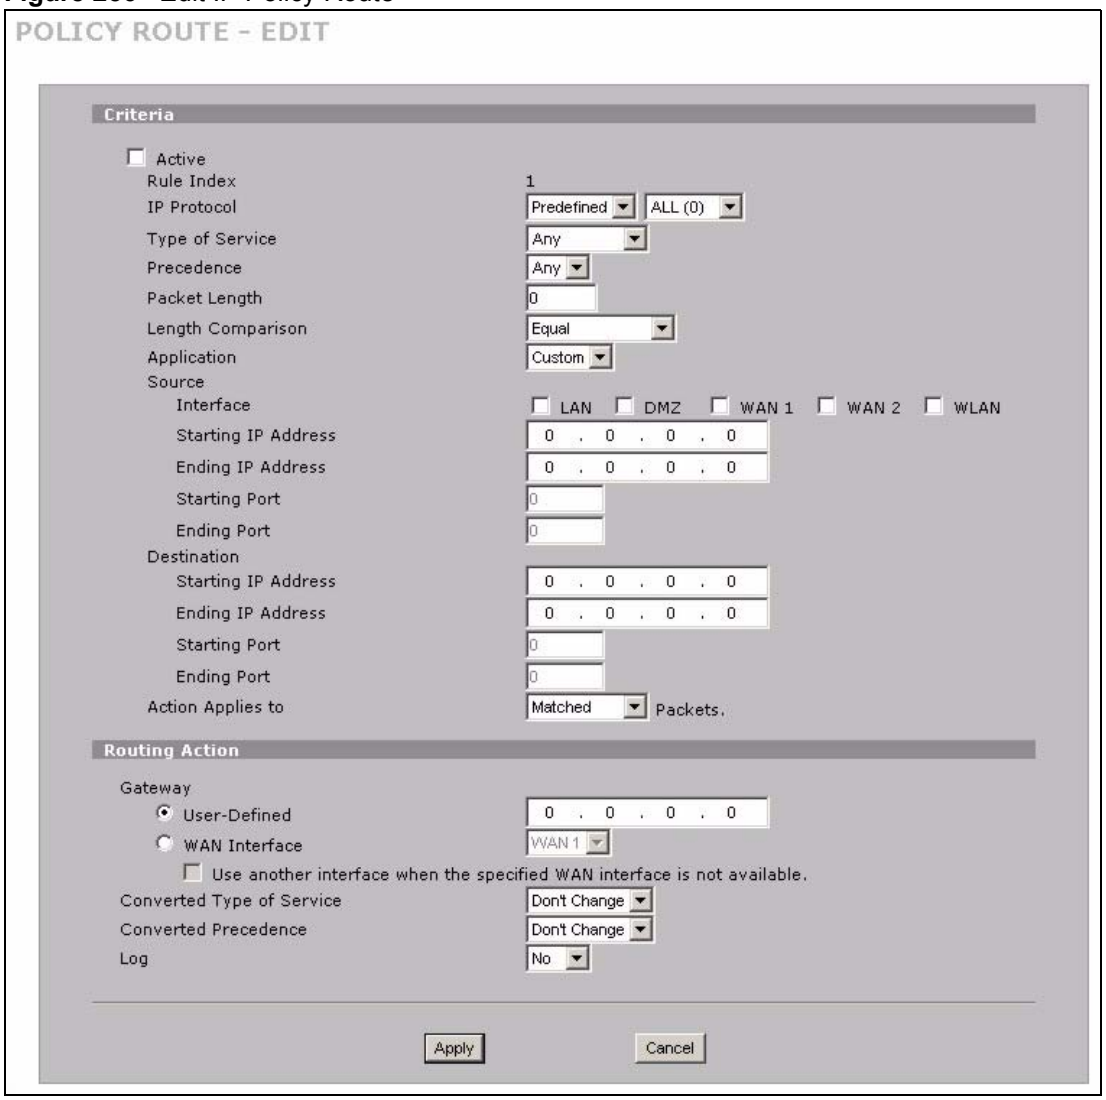

The following table describes the labels in this screen.

Table 124 ADVANCED > POLICY ROUTE > Edit

LABEL	DESCRIPTION
Criteria	
Active	Select the check box to activate the policy.
Rule Index	This is the index number of the policy route.
IP Protocol	Select **Predefined** and then the IP protocol from **ALL(0)**, **ICMP(1)**, **IGMP(2)**, **TCP(6)**, **UDP(17)**, **GRE(47)**, **ESP(50)** or **AH(51)**. Otherwise, select **Custom** and enter a number from 0 to 255.
Type of Service	Prioritize incoming network traffic by choosing from **Any**, **Normal**, **Min Delay**, **Max Thruput**, **Max Reliable** or **Mix Cost**.
Precedence	Precedence value of the incoming packet. Select a value from **0** to **7** or **Any**.
Packet Length	Type a length of packet (in bytes). The operators in the **Len Compare** field apply to incoming packets of this length.

Table 124 ADVANCED > POLICY ROUTE > Edit (continued)

LABEL	DESCRIPTION
Length Comparison	Choose from **Equal**, **Not Equal**, **Less**, **Greater**, **Less or Equal** or **Greater or Equal**.
Application	Select a predefined application (**FTP**, **H.323** or **SIP**) for the policy rule. If you do not want to use a predefined application, select **Custom**. You can also configure the source and destination port numbers if you set **IP protocol** to **TCP** or **UDP**. **FTP** (File Transfer Program) is a program to enable fast transfer of files, including large files that may not be possible by e-mail. Select **FTP** to configure the policy rule for TCP packets with a port 21 destination. **H.323** is a protocol used for multimedia communications over networks, for example NetMeeting. Select **H.323** to configure the policy rule for TCP packets with a port 1720 destination. Note: If you select **H.323**, make sure you also use the **ALG** screen to turn on the H.323 ALG. **SIP** (Session Initiation Protocol) is a signaling protocol used in Internet telephony, instant messaging, events notification and conferencing. The ZyWALL supports SIP traffic pass-through. Select **SIP** to configure the policy rule for UDP packets with a port 5060 destination. Note: If you select **SIP**, make sure you also use the **ALG** screen to turn on the SIP ALG.
Source	
Interface	Use the check box to select **LAN**, **DMZ**, **WAN 1**, **WAN 2** and/or **WLAN**.
Starting IP Address	Enter the source starting IP address.
Ending IP Address	Enter the source ending IP address.
Starting Port	Enter the source starting port number. This field is applicable only when you select **TCP** or **UDP** in the **IP Protocol** field and **Custom** in the **Application** field.
Ending Port	Enter the source ending port number. This field is applicable only when you select **TCP** or **UDP** in the **IP Protocol** field and **Custom** in the **Application** field.
Destination	
Starting IP Address	Enter the destination starting IP address.
Ending IP Address	Enter the destination ending IP address.
Starting Port	Enter the destination starting port number. This field is applicable only when you select **TCP** or **UDP** in the **IP Protocol** field and **Custom** in the **Application** field.
Ending Port	Enter the destination ending port number. This field is applicable only when you select **TCP** or **UDP** in the **IP Protocol** field and **Custom** in the **Application** field.
Action Applies to	Specifies whether action should be taken on criteria **Matched** or **Not Matched**.
Routing Action	

Table 124 ADVANCED > POLICY ROUTE > Edit (continued)

LABEL	DESCRIPTION
Gateway	Select **User-Defined** and enter the IP address of the gateway if you want to specify the IP address of the gateway. The gateway is an immediate neighbor of your ZyWALL that will forward the packet to the destination. The gateway must be a router on the same segment as your ZyWALL's LAN or WAN interface. Select **WAN Interface** to have the ZyWALL send traffic that matches the policy route through a specific WAN interface. Select the WAN interface from the drop-down list box. Select the **Use another interface when the specified WAN interface is not available.** check box to have the ZyWALL send traffic that matches the policy route through the other WAN interface if it cannot send the traffic through the WAN interface you selected. This option is only available when you select **WAN Interface**.
Converted Type of Service	Set the new TOS value of the outgoing packet. Prioritize incoming network traffic by choosing **Don't Change**, **Normal**, **Min Delay**, **Max Thruput**, **Max Reliable** or **Min Cost**.
Converted Precedence	Set the new outgoing packet precedence value. Values are **0** to **7** or **Don't Change**.
Log	Select **Yes** from the drop-down list box to make an entry in the system log when a policy is executed.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Cancel	Click **Cancel** to exit this screen without saving.

20

Bandwidth Management

This chapter describes the functions and configuration of bandwidth management with multiple levels of sub-classes.

20.1 Bandwidth Management Overview

Bandwidth management allows you to allocate an interface's outgoing capacity to specific types of traffic. It can also help you make sure that the ZyWALL forwards certain types of traffic (especially real-time applications) with minimum delay. With the use of real-time applications such as Voice-over-IP (VoIP) increasing, the requirement for bandwidth allocation is also increasing.

Bandwidth management addresses questions such as:

- Who gets how much access to specific applications?
- What priority level should you give to each type of traffic?
- Which traffic must have guaranteed delivery?
- How much bandwidth should be allotted to guarantee delivery?

Bandwidth management also allows you to configure the allowed output for an interface to match what the network can handle. This helps reduce delays and dropped packets at the next routing device. For example, you can set the WAN interface speed to 1024 kbps (or less) if the broadband device connected to the WAN port has an upstream speed of 1024 kbps.

20.2 Bandwidth Classes and Filters

Use bandwidth classes and sub-classes to allocate specific amounts of bandwidth capacity (bandwidth budgets). Configure a bandwidth filter to define a bandwidth class (or sub-class) based on a specific application and/or subnet. Use the **Class Setup** screen (see Section 20.12.1 on page 420) to set up a bandwidth class's name, bandwidth allotment, and bandwidth filter. You can configure up to one bandwidth filter per bandwidth class. You can also configure bandwidth classes without bandwidth filters. However, it is recommended that you configure sub-classes with filters for any classes that you configure without filters. The ZyWALL leaves the bandwidth budget allocated and unused for a class that does not have a filter or sub-classes with filters. View your configured bandwidth classes and sub-classes in the **Class Setup** screen (see Section 20.12 on page 419 for details).

The total of the configured bandwidth budgets for sub-classes cannot exceed the configured bandwidth budget speed of the parent class.

20.3 Proportional Bandwidth Allocation

Bandwidth management allows you to define how much bandwidth each class gets; however, the actual bandwidth allotted to each class decreases or increases in proportion to actual available bandwidth.

20.4 Application-based Bandwidth Management


You can create bandwidth classes based on individual applications (like VoIP, Web, FTP, E-mail and Video for example).

20.5 Subnet-based Bandwidth Management

You can create bandwidth classes based on subnets.

The following figure shows LAN subnets. You could configure one bandwidth class for subnet A and another for subnet B.

Figure 257 Subnet-based Bandwidth Management Example

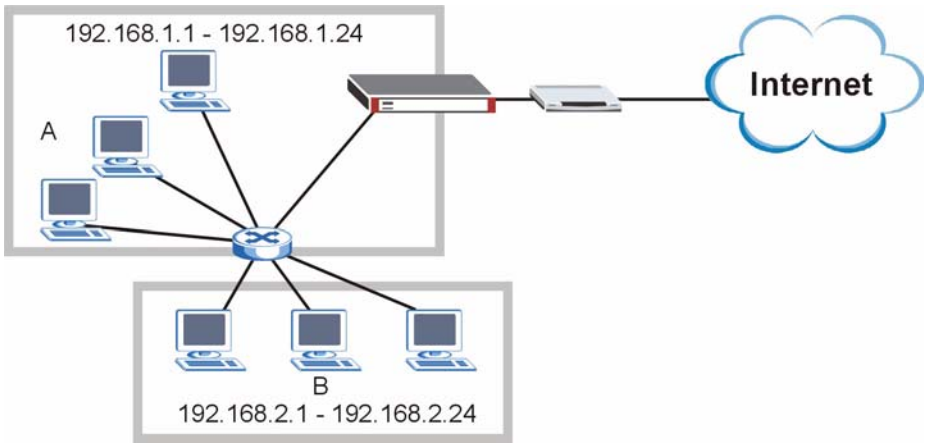

20.6 Application and Subnet-based Bandwidth Management

You could also create bandwidth classes based on a combination of a subnet and an application. The following example table shows bandwidth allocations for application specific traffic from separate LAN subnets.

Table 125 Application and Subnet-based Bandwidth Management Example

TRAFFIC TYPE	FROM SUBNET A	FROM SUBNET B
VoIP	64 Kbps	64 Kbps
Web	64 Kbps	64 Kbps
FTP	64 Kbps	64 Kbps

Table 125 Application and Subnet-based Bandwidth Management Example

TRAFFIC TYPE	FROM SUBNET A	FROM SUBNET B
E-mail	64 Kbps	64 Kbps
Video	64 Kbps	64 Kbps

20.7 Scheduler

The scheduler divides up an interface's bandwidth among the bandwidth classes. The ZyWALL has two types of scheduler: fairness-based and priority-based.

20.7.1 Priority-based Scheduler

With the priority-based scheduler, the ZyWALL forwards traffic from bandwidth classes according to the priorities that you assign to the bandwidth classes. The larger a bandwidth class's priority number is, the higher the priority. Assign real-time applications (like those using audio or video) a higher priority number to provide smoother operation.

20.7.2 Fairness-based Scheduler

The ZyWALL divides bandwidth equally among bandwidth classes when using the fairness-based scheduler; thus preventing one bandwidth class from using all of the interface's bandwidth.

20.7.3 Maximize Bandwidth Usage

The maximize bandwidth usage option allows the ZyWALL to divide up any available bandwidth on the interface (including unallocated bandwidth and any allocated bandwidth that a class is not using) among the bandwidth classes that require more bandwidth.

When you enable maximize bandwidth usage, the ZyWALL first makes sure that each bandwidth class gets up to its bandwidth allotment. Next, the ZyWALL divides up an interface's available bandwidth (bandwidth that is unbudgeted or unused by the classes) depending on how many bandwidth classes require more bandwidth and on their priority levels. When only one class requires more bandwidth, the ZyWALL gives extra bandwidth to that class.

When multiple classes require more bandwidth, the ZyWALL gives the highest priority classes the available bandwidth first (as much as they require, if there is enough available bandwidth), and then to lower priority classes if there is still bandwidth available. The ZyWALL distributes the available bandwidth equally among classes with the same priority level.

20.7.4 Reserving Bandwidth for Non-Bandwidth Class Traffic

Do the following three steps to configure the ZyWALL to allow bandwidth for traffic that is not defined in a bandwidth filter.

1 Leave some of the interface's bandwidth unbudgeted.

2 Do not enable the interface's **Maximize Bandwidth Usage** option.
3 Do not enable bandwidth borrowing on the sub-classes that have the root class as their parent (see Section 20.8 on page 415).

20.7.5 Maximize Bandwidth Usage Example

Here is an example of a ZyWALL that has maximize bandwidth usage enabled on an interface. The following table shows each bandwidth class's bandwidth budget. The classes are set up based on subnets. The interface is set to 10240 kbps. Each subnet is allocated 2048 kbps. The unbudgeted 2048 kbps allows traffic not defined in any of the bandwidth filters to go out when you do not select the maximize bandwidth option.

Table 126 Maximize Bandwidth Usage Example

BANDWIDTH CLASSES AND ALLOTMENTS	
Root Class: 10240 kbps	Administration: 2048 kbps
	Sales: 2048 kbps
	Marketing: 2048 kbps
	Research: 2048 kbps

The ZyWALL divides up the unbudgeted 2048 kbps among the classes that require more bandwidth. If the administration department only uses 1024 kbps of the budgeted 2048 kbps, the ZyWALL also divides the remaining 1024 kbps among the classes that require more bandwidth. Therefore, the ZyWALL divides a total of 3072 kbps of unbudgeted and unused bandwidth among the classes that require more bandwidth.

20.7.5.1 Priority-based Allotment of Unused and Unbudgeted Bandwidth

The following table shows the priorities of the bandwidth classes and the amount of bandwidth that each class gets.

Table 127 Priority-based Allotment of Unused and Unbudgeted Bandwidth Example

BANDWIDTH CLASSES, PRIORITIES AND ALLOTMENTS	
Root Class: 10240 kbps	Administration: Priority 4, 1024 kbps
	Sales: Priority 6, 3584 kbps
	Marketing: Priority 6, 3584 kbps
	Research: Priority 5, 2048 kbps

Suppose that all of the classes except for the administration class need more bandwidth.

- Each class gets up to its budgeted bandwidth. The administration class only uses 1024 kbps of its budgeted 2048 kbps.
- The sales and marketing are first to get extra bandwidth because they have the highest priority (6). If they each require 1536 kbps or more of extra bandwidth, the ZyWALL divides the total 3072 kbps total of unbudgeted and unused bandwidth equally between the sales and marketing departments (1536 kbps extra to each for a total of 3584 kbps for each) because they both have the highest priority level.
- Research requires more bandwidth but only gets its budgeted 2048 kbps because all of the unbudgeted and unused bandwidth goes to the higher priority sales and marketing classes.

20.7.5.2 Fairness-based Allotment of Unused and Unbudgeted Bandwidth

The following table shows the amount of bandwidth that each class gets.

Table 128 Fairness-based Allotment of Unused and Unbudgeted Bandwidth Example

BANDWIDTH CLASSES AND ALLOTMENTS	
Root Class: 10240 kbps	Administration: 1024 kbps
	Sales: 3072 kbps
	Marketing: 3072 kbps
	Research: 3072 kbps

Suppose that all of the classes except for the administration class need more bandwidth.

- Each class gets up to its budgeted bandwidth. The administration class only uses 1024 kbps of its budgeted 2048 kbps.
- The ZyWALL divides the total 3072 kbps total of unbudgeted and unused bandwidth equally among the other classes. 1024 kbps extra goes to each so the other classes each get a total of 3072 kbps.

20.8 Bandwidth Borrowing

Bandwidth borrowing allows a sub-class to borrow unused bandwidth from its parent class, whereas maximize bandwidth usage allows bandwidth classes to borrow any unused or unbudgeted bandwidth on the whole interface.

Enable bandwidth borrowing on a sub-class to allow the sub-class to use its parent class's unused bandwidth. A parent class's unused bandwidth is given to the highest priority sub-class first. The sub-class can also borrow bandwidth from a higher parent class (grandparent class) if the sub-class's parent class is also configured to borrow bandwidth from its parent class. This can go on for as many levels as are configured to borrow bandwidth from their parent class (see Section 20.8.1 on page 415).

The total of the bandwidth allotments for sub-classes cannot exceed the bandwidth allotment of their parent class. The ZyWALL uses the scheduler to divide a parent class's unused bandwidth among the sub-classes.

20.8.1 Bandwidth Borrowing Example

Here is an example of bandwidth management with classes configured for bandwidth borrowing. The classes are set up based on departments and individuals within certain departments.

Refer to the product specifications in the appendix to see how many class levels you can configure on your ZyWALL.

Table 129 Bandwidth Borrowing Example

BANDWIDTH CLASSES AND BANDWIDTH BORROWING SETTINGS			
Root Class:	Administration: Borrowing Enabled		
	Sales: Borrowing Disabled	Sales USA: Borrowing Enabled	Bill: Borrowing Enabled
			Amy: Borrowing Disabled
		Sales Asia: Borrowing Disabled	Tina: Borrowing Enabled
			Fred: Borrowing Disabled
	Marketing: Borrowing Enabled		
	Research: Borrowing Enabled	Software: Borrowing Enabled	
		Hardware: Borrowing Enabled	

- The Bill class can borrow unused bandwidth from the Sales USA class because the Bill class has bandwidth borrowing enabled.
- The Bill class can also borrow unused bandwidth from the Sales class because the Sales USA class also has bandwidth borrowing enabled.
- The Bill class cannot borrow unused bandwidth from the Root class because the Sales class has bandwidth borrowing disabled.
- The Amy class cannot borrow unused bandwidth from the Sales USA class because the Amy class has bandwidth borrowing disabled.
- The Research Software and Hardware classes can both borrow unused bandwidth from the Research class because the Research Software and Hardware classes both have bandwidth borrowing enabled.
- The Research Software and Hardware classes can also borrow unused bandwidth from the Root class because the Research class also has bandwidth borrowing enabled.

20.9 Maximize Bandwidth Usage With Bandwidth Borrowing

If you configure both maximize bandwidth usage (on the interface) and bandwidth borrowing (on individual sub-classes), the ZyWALL functions as follows.

1. The ZyWALL sends traffic according to each bandwidth class's bandwidth budget.
2. The ZyWALL assigns a parent class's unused bandwidth to its sub-classes that have more traffic than their budgets and have bandwidth borrowing enabled. The ZyWALL gives priority to sub-classes of higher priority and treats classes of the same priority equally.
3. The ZyWALL assigns any remaining unused or unbudgeted bandwidth on the interface to any class that requires it. The ZyWALL gives priority to classes of higher priority and treats classes of the same level equally.

4 If the bandwidth requirements of all of the traffic classes are met and there is still some unbudgeted bandwidth, the ZyWALL assigns it to traffic that does not match any of the classes.

20.10 Over Allotment of Bandwidth

It is possible to set the bandwidth management speed for an interface higher than the interface's actual transmission speed. Higher priority traffic gets to use up to its allocated bandwidth, even if it takes up all of the interface's available bandwidth. This could stop lower priority traffic from being sent. The following is an example.

Table 130 Over Allotment of Bandwidth Example

BANDWIDTH CLASSES, ALLOTMENTS		PRIORITIES
Actual outgoing bandwidth available on the interface: 1000 kbps		
Root Class: 1500 kbps (same as Speed setting)	VoIP traffic (Service = SIP): 500 Kbps	7
	NetMeeting traffic (Service = H.323): 500 kbps	7
	FTP (Service = FTP): 500 Kbps	3

If you use VoIP and NetMeeting at the same time, the device allocates up to 500 Kbps of bandwidth to each of them before it allocates any bandwidth to FTP. As a result, FTP can only use bandwidth when VoIP and NetMeeting do not use all of their allocated bandwidth.


Suppose you try to browse the web too. In this case, VoIP, NetMeeting and FTP all have higher priority, so they get to use the bandwidth first. You can only browse the web when VoIP, NetMeeting, and FTP do not use all 1000 Kbps of available bandwidth.

20.11 Configuring Summary

Click **ADVANCED > BW MGMT** to open the **Summary** screen.

Enable bandwidth management on an interface and set the maximum allowed bandwidth for that interface.

Figure 258 ADVANCED > BW MGMT > Summary

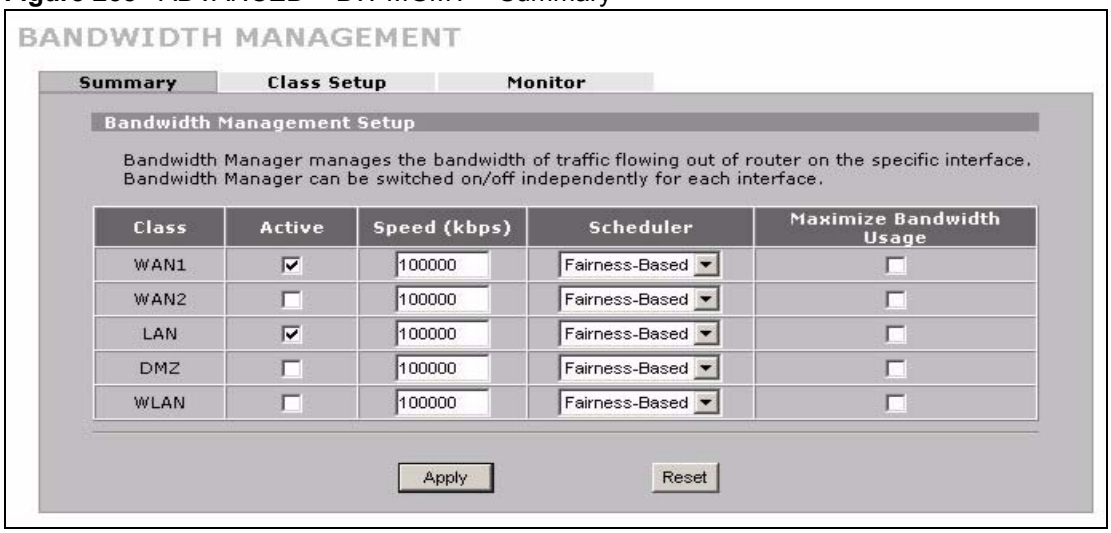

The following table describes the labels in this screen.

Table 131 ADVANCED > BW MGMT > Summary


LABEL	DESCRIPTION
Class	These read-only labels represent the physical interfaces. Select an interface's check box to enable bandwidth management on that interface. Bandwidth management applies to all traffic flowing out of the router through the interface, regardless of the traffic's source. Traffic redirect or IP alias may cause LAN-to-LAN or DMZ-to-DMZ traffic to pass through the ZyWALL and be managed by bandwidth management.
Active	Select an interface's check box to enable bandwidth management on that interface.
Speed (kbps)	Enter the amount of bandwidth for this interface that you want to allocate using bandwidth management. This appears as the bandwidth budget of the interface's root class (see Section 20.12 on page 419). The recommendation is to set this speed to match what the device connected to the port can handle. For example, set the WAN interface speed to 1000 kbps if the broadband device connected to the WAN port has an upstream speed of 1000 kbps. The recommendation is to set this speed to match the interface's actual transmission speed. For example, set the WAN interface speed to 1000 kbps if your Internet connection has an upstream transmission speed of 1 Mbps. You can set this number higher than the interface's actual transmission speed. This will stop lower priority traffic from being sent if higher priority traffic uses all of the actual bandwidth. You can also set this number lower than the interface's actual transmission speed. If you do not enable **Maximize Bandwidth Usage**, this will cause the ZyWALL to not use some of the interface's available bandwidth.
Scheduler	Select either **Priority-Based** or **Fairness-Based** from the drop-down menu to control the traffic flow. Select **Priority-Based** to give preference to bandwidth classes with higher priorities. Select **Fairness-Based** to treat all bandwidth classes equally. See Section 20.7 on page 413.
Maximize Bandwidth Usage	Select this check box to have the ZyWALL divide up all of the interface's unallocated and/or unused bandwidth among the bandwidth classes that require bandwidth. Do not select this if you want to reserve bandwidth for traffic that does not match a bandwidth class (see Section 20.7.4 on page 413) or you want to limit the speed of this interface (see the **Speed** field description).
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

20.12 Configuring Class Setup

The **Class Setup** screen displays the configured bandwidth classes by individual interface. Select an interface and click the buttons to perform the actions described next. Click "+" to expand the class tree or click "-" to collapse the class tree. Each interface has a permanent root class. The bandwidth budget of the root class is equal to the speed you configured on the interface (see Section 20.11 on page 417 to configure the speed of the interface). Configure sub-class layers for the root class.

To add or delete child classes on an interface, click **ADVANCED** > **BW MGMT** > **Class Setup**. The screen is shown here with example classes.

Figure 259 ADVANCED > BW MGMT > Class Setup

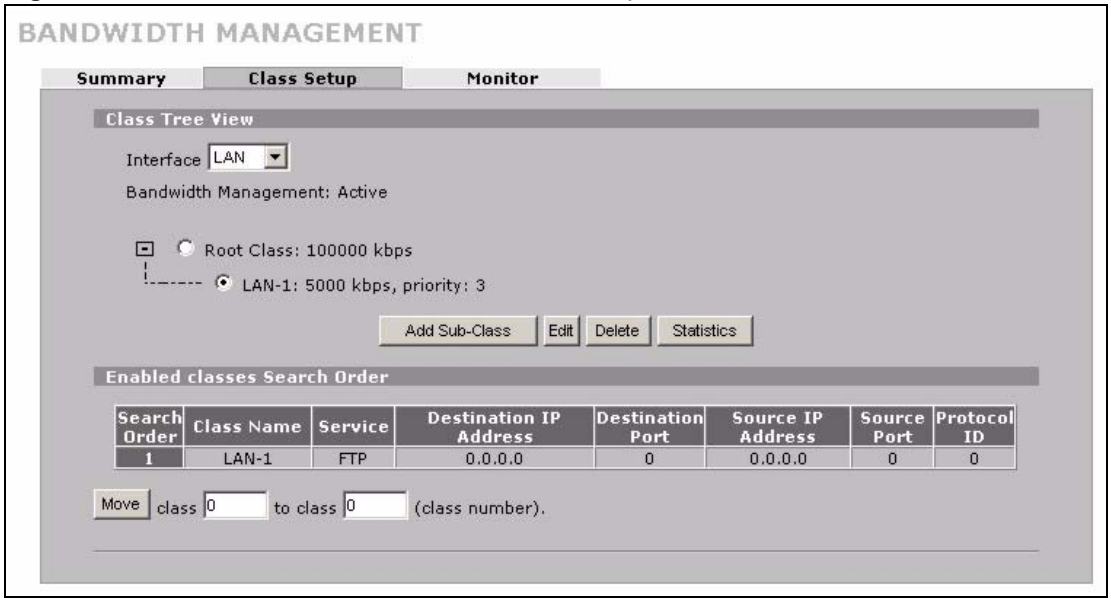

The following table describes the labels in this screen.

Table 132 ADVANCED > BW MGMT > Class Setup

LABEL	DESCRIPTION
Interface	Select an interface for which you want to set up bandwidth management classes. Bandwidth management controls outgoing traffic on an interface, not incoming. So, in order to limit the download bandwidth of the LAN users, set the bandwidth management class on the LAN. In order to limit the upload bandwidth, set the bandwidth management class on the corresponding WAN interface.
Bandwidth Management	This field displays whether bandwidth management on the interface you selected in the field above is enabled (**Active**) or not (**Inactive**).
	After you select an interface, the bandwidth management classes configured for the interface display. The name, bandwidth and priority display for each class. "borrow" also displays if the class is set to use bandwidth from its parent class if the parent class is not using up its bandwidth budget.
Add Sub-Class	Click **Add Sub-class** to add a sub-class.
Edit	Click **Edit** to configure the selected class. You cannot edit the root class.
Delete	Click **Delete** to delete the class and all its sub-classes. You cannot delete the root class.
Statistics	Click **Statistics** to display the status of the selected class.

Table 132 ADVANCED > BW MGMT > Class Setup (continued)


LABEL	DESCRIPTION
Enabled classes Search Order	This list displays the interface's active bandwidth management classes (the ones that have the bandwidth filter enabled). The ZyWALL applies the classes in the order that they appear here. Once a connection matches a bandwidth management class, the ZyWALL applies the class's rules and does not check the connection against any other bandwidth management classes.
Search Order	This is the index number of an individual bandwidth management class.
Class Name	This is the name that identifies a bandwidth management class.
Service	This is the service that this bandwidth management class is configured to manage.
Destination IP Address	This is the destination IP address for connections to which this bandwidth management class applies.
Destination Port	This is the destination port for connections to which this bandwidth management class applies.
Source IP Address	This is the source IP address for connections to which this bandwidth management class applies.
Source Port	This is the source port for connections to which this bandwidth management class applies.
Protocol ID	This is the protocol ID (service type) number for connections to which this bandwidth management class applies. For example: 1 for ICMP, 6 for TCP or 17 for UDP.
Move	Type a class's index number and the number for where you want to put that class. Click **Move** to move the class to the number that you typed. The ordering of your classes is important as they are applied in order of their numbering.

20.12.1 Bandwidth Manager Class Configuration

Configure a bandwidth management class in the **Class Setup** screen. You must use the **Summary** screen to enable bandwidth management on an interface before you can configure classes for that interface.

Click **ADVANCED** > **BW MGMT** > **Class Setup** > **Add Sub-Class** or **Edit** to open the following screen. Use this screen to add a child class.

Figure 260 ADVANCED > BW MGMT > Class Setup > Add Sub-Class

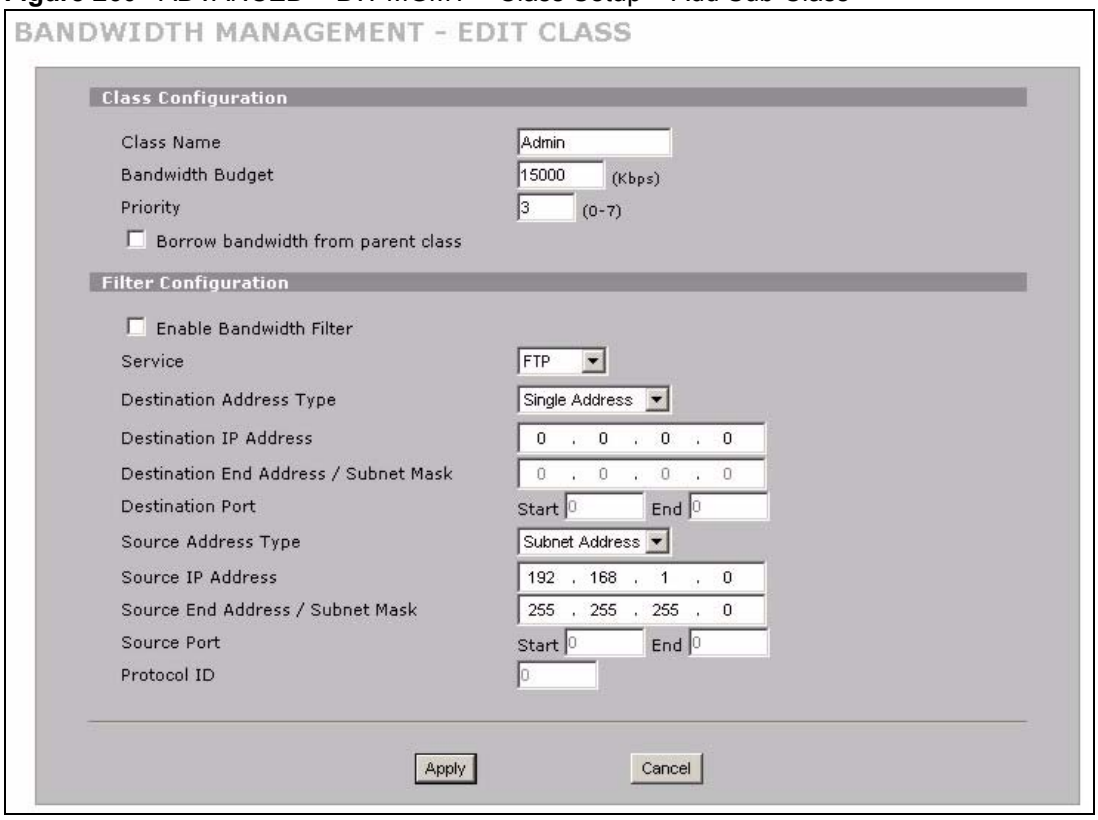

The following table describes the labels in this screen.

Table 133 ADVANCED > BW MGMT > Class Setup > Add Sub-Class

LABEL	DESCRIPTION
Class Configuration	
Class Name	Use the auto-generated name or enter a descriptive name of up to 20 alphanumeric characters, including spaces.
Bandwidth Budget (kbps)	Specify the maximum bandwidth allowed for the class in kbps. The recommendation is a setting between 20 kbps and 20000 kbps for an individual class.
Priority	Enter a number between 0 and 7 to set the priority of this class. The higher the number, the higher the priority. The default setting is 3.
Borrow bandwidth from parent class	Select this option to allow a sub-class to borrow bandwidth from its parent class if the parent class is not using up its bandwidth budget. Bandwidth borrowing is governed by the priority of the sub-classes. That is, a sub-class with the highest priority (7) is the first to borrow bandwidth from its parent class. Do not select this for the classes directly below the root class if you want to leave bandwidth available for other traffic types (see Section 20.7.4 on page 413) or you want to set the interface's speed to match what the next device in network can handle (see the **Speed** field description in Table 131 on page 418).
Filter Configuration	

Table 133 ADVANCED > BW MGMT > Class Setup > Add Sub-Class (continued)

LABEL	DESCRIPTION
Enable Bandwidth Filter	Select **Enable Bandwidth Filter** to have the ZyWALL use this bandwidth filter when it performs bandwidth management. You must enter a value in at least one of the following fields (other than the **Subnet Mask** fields which are only available when you enter the destination or source IP address).
Service	This field simplifies bandwidth class configuration by allowing you to select a predefined application. When you select a predefined application, you do not configure the rest of the bandwidth filter fields (other than enabling or disabling the filter). **FTP** (File Transfer Program) is a program to enable fast transfer of files, including large files that may not be possible by e-mail. Select FTP from the drop-down list box to configure the bandwidth filter for TCP packets with a port 21 destination. **H.323** is a protocol used for multimedia communications over networks, for example NetMeeting. Select **H.323** from the drop-down list box to configure the bandwidth filter for TCP packets with a port 1720 destination. Note: If you select **H.323**, make sure you also use the **ALG** screen to turn on the H.323 ALG. **SIP** (Session Initiation Protocol) is a signaling protocol used in Internet telephony, instant messaging, events notification and conferencing. The ZyWALL supports SIP traffic pass-through. Select **SIP** from the drop-down list box to configure this bandwidth filter for UDP packets with a port 5060 destination. This option makes it easier to manage bandwidth for SIP traffic and is useful for example when there is a VoIP (Voice over Internet Protocol) device on your LAN. Note: If you select **SIP**, make sure you also use the **ALG** screen to turn on the SIP ALG. Select **Custom** from the drop-down list box if you do not want to use a predefined application for the bandwidth class. When you select **Custom**, you need to configure at least one of the following fields (other than the **Subnet Mask** fields which you only enter if you also enter a corresponding destination or source IP address).
Destination Address Type	Do you want your rule to apply to packets coming going to a particular (single) IP, a range of IP addresses (for example 192.168.1.10 to 192.169.1.50) or a subnet? Select **Single Address, Range Address** or **Subnet Address**.
Destination IP Address	Enter the single IP address or the starting IP address in a range here.
Destination End Address / Subnet Mask	If you are configuring a range of IP addresses, enter the ending IP address here. If you are configuring a subnet of addresses, enter the subnet mask here. Refer to Appendix C on page 729 for more information on IP subnetting.
Destination Port	Enter the starting and ending destination port numbers. Enter the same port number in both fields to specify a single port number. See Appendix D on page 737 for a table of services and port numbers.
Source Address Type	Do you want your rule to apply to packets coming from a particular (single) IP, a range of IP addresses (for example 192.168.1.10 to 192.169.1.50) or a subnet? Select **Single Address, Range Address** or **Subnet Address**.
Source IP Address	Enter the single IP address or the starting IP address in a range here.

Table 133 ADVANCED > BW MGMT > Class Setup > Add Sub-Class (continued)

LABEL	DESCRIPTION
Source End Address / Subnet Mask	If you are configuring a range of IP addresses, enter the ending IP address here. If you are configuring a subnet of addresses, enter the subnet mask here. Refer to Appendix C on page 729 for more information on IP subnetting.
Source Port	Enter the starting and ending destination port numbers. Enter the same port number in both fields to specify a single port number. See Appendix D on page 737 for a table of services and port numbers.
Protocol ID	Enter the protocol ID (service type) number, for example: 1 for ICMP, 6 for TCP or 17 for UDP.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Cancel	Click **Cancel** to exit this screen without saving.


Table 134 Services and Port Numbers

SERVICES	PORT NUMBER
ECHO	7
FTP (File Transfer Protocol)	21
SMTP (Simple Mail Transfer Protocol)	25
DNS (Domain Name System)	53
Finger	79
HTTP (Hyper Text Transfer protocol or WWW, Web)	80
POP3 (Post Office Protocol)	110
NNTP (Network News Transport Protocol)	119
SNMP (Simple Network Management Protocol)	161
SNMP trap	162
PPTP (Point-to-Point Tunneling Protocol)	1723

20.12.2 Bandwidth Management Statistics

Click **ADVANCED** > **BW MGMT** > **Class Setup** > **Statistics** to open the **Bandwidth Management Statistics** screen. This screen displays the selected bandwidth class's bandwidth usage and allotments.

Figure 261 ADVANCED > BW MGMT > Class Setup > Statistics

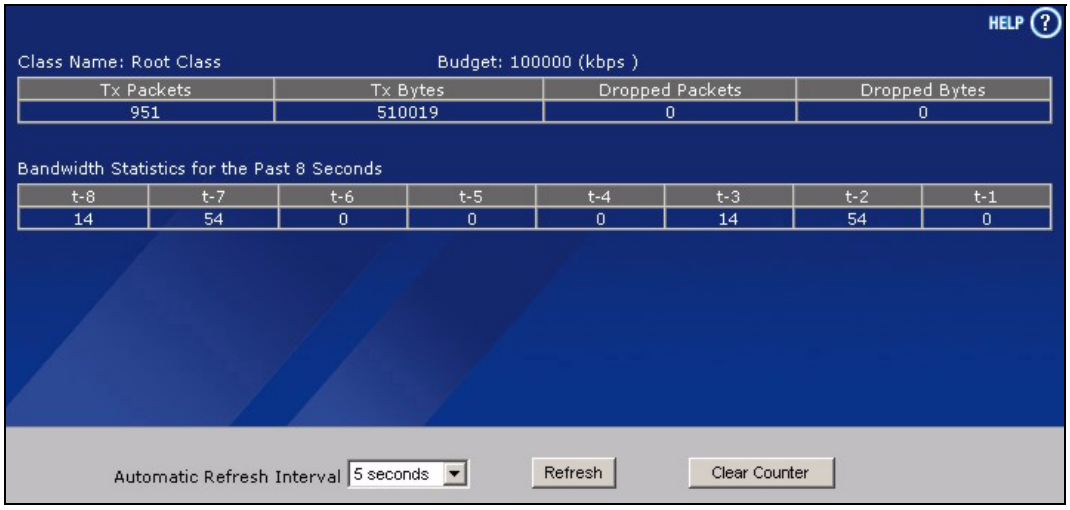

The following table describes the labels in this screen.


Table 135 ADVANCED > BW MGMT > Class Setup > Statistics

LABEL	DESCRIPTION
Class Name	This field displays the name of the class the statistics page is showing.
Budget (kbps)	This field displays the amount of bandwidth allocated to the class.
Tx Packets	This field displays the total number of packets transmitted.
Tx Bytes	This field displays the total number of bytes transmitted.
Dropped Packets	This field displays the total number of packets dropped.
Dropped Bytes	This field displays the total number of bytes dropped.
Bandwidth Statistics for the Past 8 Seconds (t-8 to t-1)	
This field displays the bandwidth statistics (in bps) for the past one to eight seconds. For example, t-1 means one second ago.	
Automatic Refresh Interval	Select a number of seconds or **None** from the drop-down list box to update all screen statistics automatically at the end of every time interval or to not update the screen statistics.
Refresh	Click this button to update the screen's statistics immediately.
Clear Counter	Click **Clear Counter** to clear all of the bandwidth management statistics.

20.13 Bandwidth Manager Monitor

Click **ADVANCED** > **BW MGMT** > **Monitor** to open the following screen. Use this screen to view the device's bandwidth usage and allotments.

Figure 262 ADVANCED > BW MGMT > Monitor

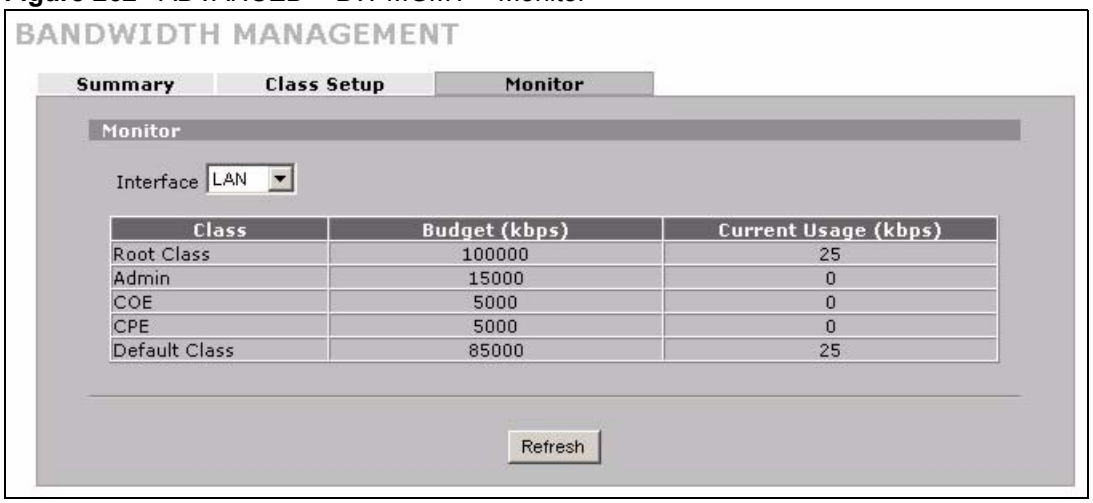

The following table describes the labels in this screen.

Table 136 ADVANCED > BW MGMT > Monitor

LABEL	DESCRIPTION
Interface	Select an interface from the drop-down list box to view the bandwidth usage of its bandwidth classes.
Class	This field displays the name of the bandwidth class. A **Default Class** automatically displays for all the bandwidth in the **Root Class** that is not allocated to bandwidth classes. If you do not enable maximize bandwidth usage on an interface, the ZyWALL uses the bandwidth in this default class to send traffic that does not match any of the bandwidth classes.[A]
Budget (kbps)	This field displays the amount of bandwidth allocated to the bandwidth class.
Current Usage (kbps)	This field displays the amount of bandwidth that each bandwidth class is using.
Refresh	Click **Refresh** to update the page.

A. If you allocate all the root class's bandwidth to the bandwidth classes, the default class still displays a budget of 2 kbps (the minimum amount of bandwidth that can be assigned to a bandwidth class).

21 DNS

This chapter shows you how to configure the DNS screens.

21.1 DNS Overview

DNS (Domain Name System) is for mapping a domain name to its corresponding IP address and vice versa. The DNS server is extremely important because without it, you must know the IP address of a machine before you can access it. The ZyWALL uses a system DNS server (in the order you specify in the **DNS System** screen) to resolve domain names, for example, VPN, DDNS and the time server.

21.2 DNS Server Address Assignment

The ZyWALL can get the DNS server addresses in the following ways.

1. The ISP tells you the DNS server addresses, usually in the form of an information sheet, when you sign up. If your ISP gives you DNS server addresses, manually enter them in the DNS server fields.
2. If your ISP dynamically assigns the DNS server IP addresses (along with the ZyWALL's WAN IP address), set the DNS server fields to get the DNS server address from the ISP.
3. You can manually enter the IP addresses of other DNS servers. These servers can be public or private. A DNS server could even be behind a remote IPSec router (see Section 21.5.1 on page 428).

21.3 DNS Servers

There are three places where you can configure DNS setup on the ZyWALL.

1. Use the **DNS System** screen to configure the ZyWALL to use a DNS server to resolve domain names for ZyWALL system features like VPN, DDNS and the time server.
2. Use the **DNS DHCP** screen to configure the DNS server information that the ZyWALL sends to the DHCP client devices on the LAN, DMZ or WLAN.
3. Use the **REMOTE MGMT DNS** screen to configure the ZyWALL (in router mode) to accept or discard DNS queries.

21.4 Address Record

An address record contains the mapping of a fully qualified domain name (FQDN) to an IP address. An FQDN consists of a host and domain name and includes the top-level domain. For example, www.zyxel.com.tw is a fully qualified domain name, where “www” is the host, “zyxel” is the second-level domain, and “com.tw” is the top level domain. mail.myZyXEL.com.tw is also a FQDN, where "mail" is the host, "myZyXEL" is the second-level domain, and "com.tw" is the top level domain.

The ZyWALL allows you to configure address records about the ZyWALL itself or another device. This way you can keep a record of DNS names and addresses that people on your network may use frequently. If the ZyWALL receives a DNS query for an FQDN for which the ZyWALL has an address record, the ZyWALL can send the IP address in a DNS response without having to query a DNS name server.

21.4.1 DNS Wildcard

Enabling the wildcard feature for your host causes *.yourhost.com to be aliased to the same IP address as yourhost.com. This feature is useful if you want to be able to use, for example, www.yourhost.com and still reach your hostname.

21.5 Name Server Record


A name server record contains a DNS server’s IP address. The ZyWALL can query the DNS server to resolve domain names for features like VPN, DDNS and the time server. A domain zone may also be included. A domain zone is a fully qualified domain name without the host. For example, zyxel.com.tw is the domain zone for the www.zyxel.com.tw fully qualified domain name.

21.5.1 Private DNS Server

In cases where you want to use domain names to access Intranet servers on a remote private network that has a DNS server, you must identify that DNS server. You cannot use DNS servers on the LAN or from the ISP since these DNS servers cannot resolve domain names to private IP addresses on the remote private network.

The following figure depicts an example where three VPN tunnels are created from ZyWALL A; one to branch office **2**, one to branch office **3** and another to headquarters (**HQ**). In order to access computers that use private domain names on the **HQ** network, the ZyWALL at branch office **1** uses the Intranet DNS server in headquarters.

Figure 263 Private DNS Server Example

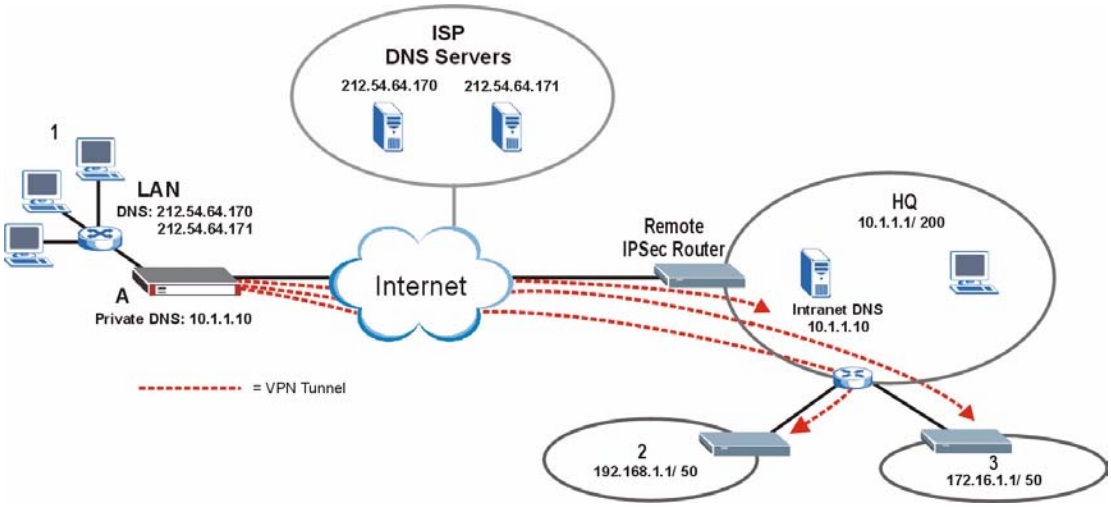


If you do not specify an Intranet DNS server on the remote network, then the VPN host must use IP addresses to access the computers on the remote private network.

21.6 System Screen

Click **ADVANCED** > **DNS** to display the following screen. Use this screen to configure your ZyWALL's DNS address and name server records.

Figure 264 ADVANCED > DNS > System DNS

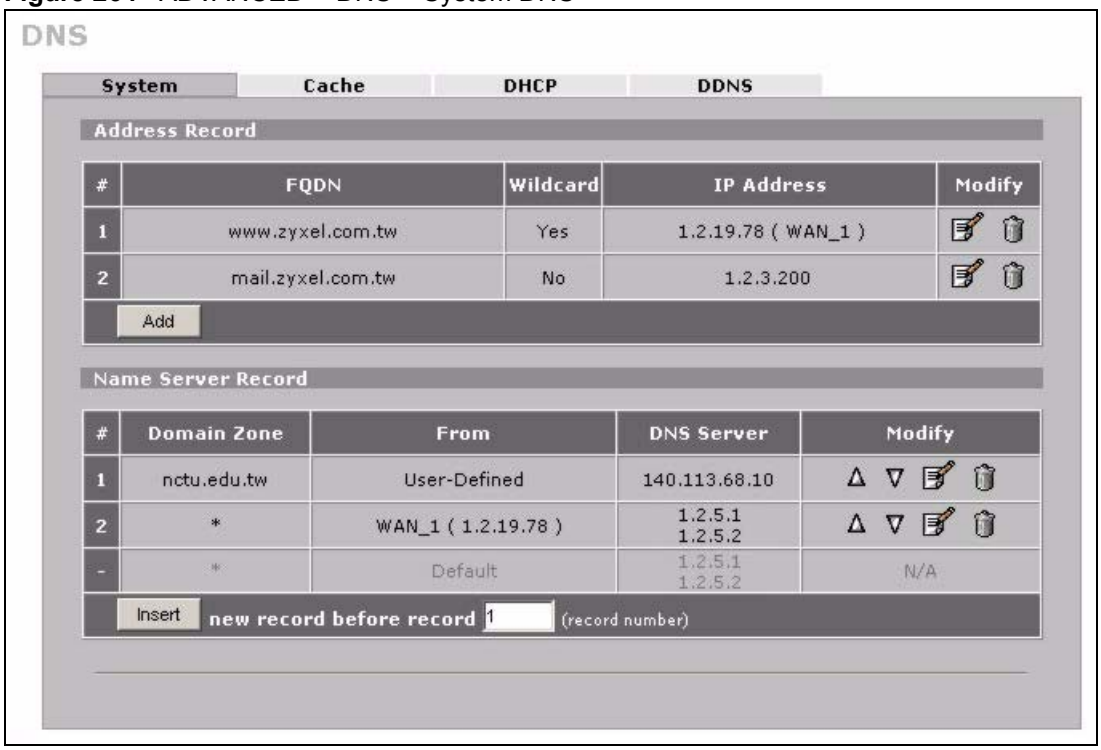

The following table describes the labels in this screen.

Table 137 ADVANCED > DNS > System DNS

LABEL	DESCRIPTION
Address Record	An address record specifies the mapping of a fully qualified domain name (FQDN) to an IP address. An FQDN consists of a host and domain name and includes the top-level domain. For example, www.zyxel.com.tw is a fully qualified domain name, where “www” is the host, “zyxel” is the second-level domain, and “com.tw” is the top level domain.
#	This is the index number of the address record.
FQDN	This is a host’s fully qualified domain name.
Wildcard	This column displays whether or not the DNS wildcard feature is enabled for this domain name.
IP Address	This is the IP address of a host.
Modify	Click the edit icon to go to the screen where you can edit the record. Click the delete icon to remove an existing record. A window display asking you to confirm that you want to delete the record. Note that subsequent records move up by one when you take this action.
Add	Click **Add** to open a screen where you can add a new address record. Refer to Table 138 on page 432 for information on the fields.

Table 137 ADVANCED > DNS > System DNS


LABEL	DESCRIPTION
Name Server Record	A name server record contains a DNS server's IP address. The ZyWALL can query the DNS server to resolve domain names for features like VPN, DDNS and the time server. When the ZyWALL needs to resolve a domain name, it checks it against the name server record entries in the order that they appear in this list. A "*" indicates a name server record without a domain zone. The default record is grayed out. The ZyWALL uses this default record if the domain name that needs to be resolved does not match any of the other name server records. A name server record with a domain zone is always put before a record without a domain zone.
#	This is the index number of the name server record.
Domain Zone	A domain zone is a fully qualified domain name without the host. For example, zyxel.com.tw is the domain zone for the www.zyxel.com.tw fully qualified domain name.
From	This field displays whether the IP address of a DNS server is from a WAN interface (and which it is) or specified by the user.
DNS Server	This is the IP address of a DNS server.
Modify	Click a triangle icon to move the record up or down in the list. Click the edit icon to go to the screen where you can edit the record. Click the delete icon to remove an existing record. A window display asking you to confirm that you want to delete the record. Note that subsequent records move up by one when you take this action.
Insert	Click **Insert** to open a screen where you can insert a new name server record. Refer to Table 139 on page 433 for information on the fields.

21.6.1 Adding an Address Record

Click **Add** in the **System** screen to open this screen. Use this screen to add an address record.

An address record contains the mapping of a fully qualified domain name (FQDN) to an IP address. Configure address records about the ZyWALL itself or another device to keep a record of DNS names and addresses that people on your network may use frequently. If the ZyWALL receives a DNS query for an FQDN for which the ZyWALL has an address record, the ZyWALL can send the IP address in a DNS response without having to query a DNS name server. See Section 21.4 on page 428 for more on address records.

Figure 265 ADVANCED > DNS > Add (Address Record)

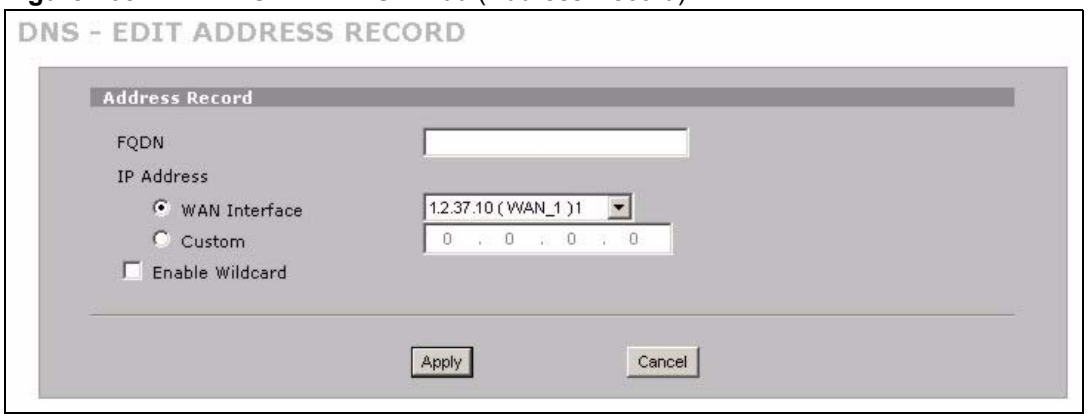

The following table describes the labels in this screen.


Table 138 ADVANCED > DNS > Add (Address Record)

LABEL	DESCRIPTION
FQDN	Type a fully qualified domain name (FQDN) of a server. An FQDN starts with a host name and continues all the way up to the top-level domain name. For example, www.zyxel.com.tw is a fully qualified domain name, where “www” is the host, “zyxel” is the second-level domain, and “com.tw” is the top level domain.
IP Address	If this entry is for one of the WAN ports on a ZyWALL with multiple WAN ports, select **WAN Interface** and select WAN 1 or WAN 2 from the drop-down list box. If this entry is for the WAN port on a ZyWALL with a single WAN port, select **WAN Interface**. For entries that are not for the WAN port(s), select **Custom** and enter the IP address of the host in dotted decimal notation.
Enable Wildcard	Select the check box to enable DNS wildcard.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Cancel	Click **Cancel** to exit this screen without saving.

21.6.2 Inserting a Name Server Record

Click **Insert** in the **System** screen to open this screen. Use this screen to insert a name server record. A name server record contains a DNS server’s IP address. The ZyWALL can query the DNS server to resolve domain names for features like VPN, DDNS and the time server. A domain zone may also be included. A domain zone is a fully qualified domain name without the host. For example, zyxel.com.tw is the domain zone for the www.zyxel.com.tw fully qualified domain name.

Figure 266 ADVANCED > DNS > Insert (Name Server Record)

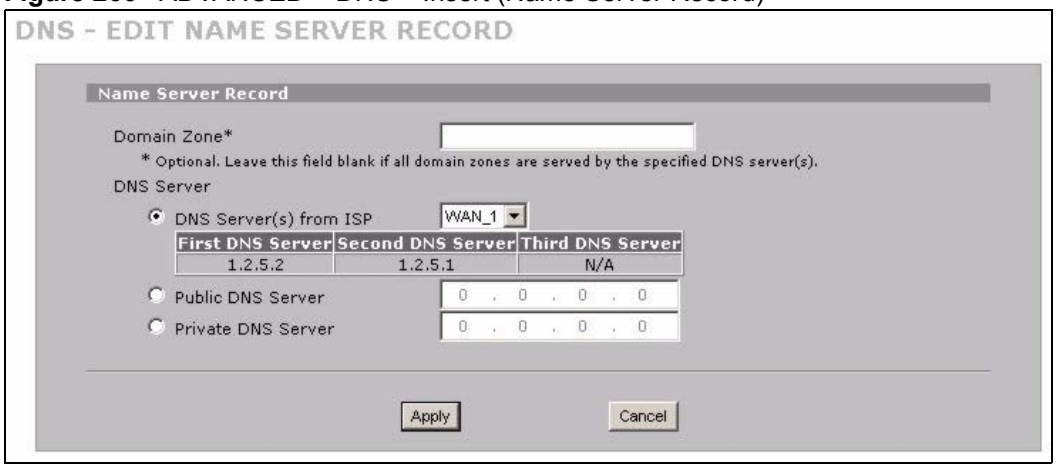

The following table describes the labels in this screen.

Table 139 ADVANCED > DNS > Insert (Name Server Record)

LABEL	DESCRIPTION
Domain Zone	This field is optional. A domain zone is a fully qualified domain name without the host. For example, zyxel.com.tw is the domain zone for the www.zyxel.com.tw fully qualified domain name. For example, whenever the ZyWALL receives needs to resolve a zyxel.com.tw domain name, it can send a query to the recorded name server IP address. Leave this field blank if all domain zones are served by the specified DNS server(s).
DNS Server	Select the **DNS Server(s) from ISP** radio button if your ISP dynamically assigns DNS server information. You also need to select an interface through which the ISP provides the DNS server IP address(es). The interface should be activated and set as a DHCP client.The fields below display the (read-only) DNS server IP address(es) that the ISP assigns. **N/A** displays for any DNS server IP address fields for which the ISP does not assign an IP address. **N/A** displays for all of the DNS server IP address fields if the ZyWALL has a fixed WAN IP address. Select **Public DNS Server** if you have the IP address of a DNS server. The IP address must be public or a private address on your local LAN. Enter the DNS server's IP address in the field to the right. **Public DNS Server** entries with the IP address set to 0.0.0.0 are not allowed. Select **Private DNS Server** if the DNS server has a private IP address and is located behind a VPN peer. Enter the DNS server's IP address in the field to the right. With a private DNS server, you must also configure the first DNS server entry for the LAN, DMZ and/or WLAN in the **DNS DHCP** screen to use **DNS Relay**. You must also configure a VPN rule since the ZyWALL uses a VPN tunnel when it relays DNS queries to the private DNS server. The rule must include the LAN IP address of the ZyWALL as a local IP address and the IP address of the DNS server as a remote IP address. **Private DNS Server** entries with the IP address set to 0.0.0.0 are not allowed.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Cancel	Click **Cancel** to exit this screen without saving.

21.7 DNS Cache


DNS cache is the temporary storage area where a router stores responses from DNS servers. When the ZyWALL receives a positive or negative response for a DNS query, it records the response in the DNS cache. A positive response means that the ZyWALL received the IP address for a domain name that it checked with a DNS server within the five second DNS timeout period. A negative response means that the ZyWALL did not receive a response for a query it sent to a DNS server within the five second DNS timeout period.

When the ZyWALL receives DNS queries, it compares them against the DNS cache before querying a DNS server. If the DNS query matches a positive entry, the ZyWALL responses with the IP address from the entry. If the DNS query matches a negative entry, the ZyWALL replies that the DNS query failed.

21.8 Configure DNS Cache

To configure your ZyWALL's DNS caching, click **ADVANCED** > **DNS** > **Cache**. The screen appears as shown.

Figure 267 ADVANCED > DNS > Cache

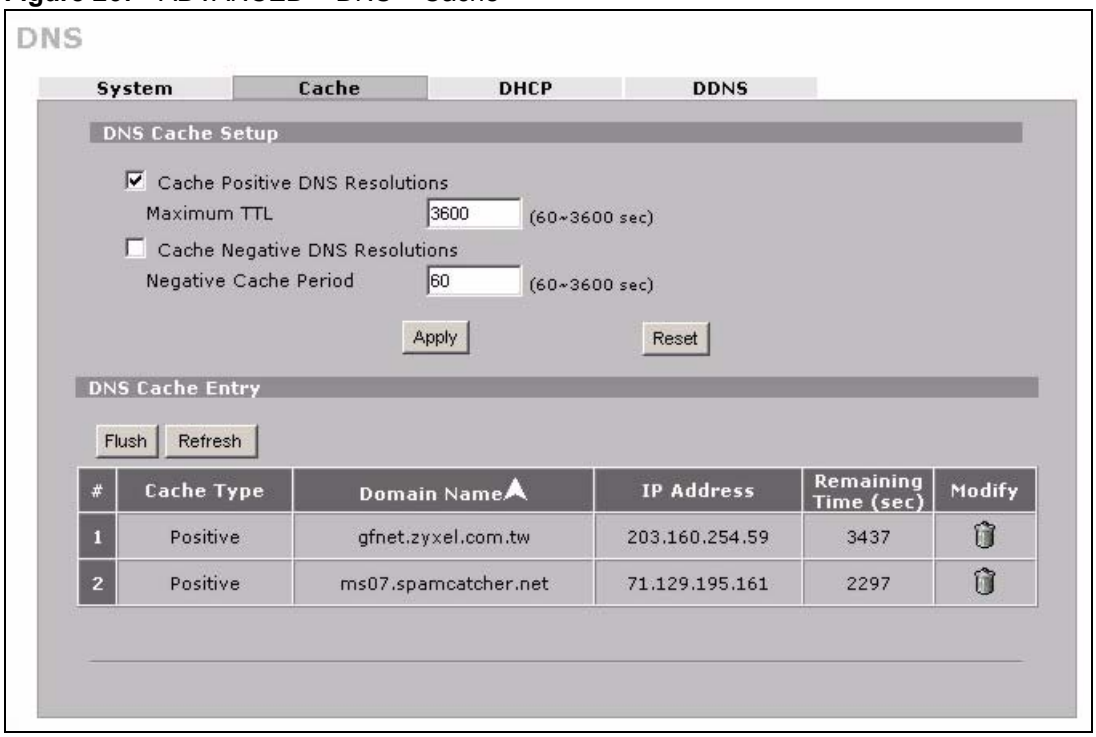

The following table describes the labels in this screen.

Table 140 ADVANCED > DNS > Cache

LABEL	DESCRIPTION
DNS Cache Setup	
Cache Positive DNS Resolutions	Select the check box to record the positive DNS resolutions in the cache. Caching positive DNS resolutions helps speed up the ZyWALL's processing of commonly queried domain names and reduces the amount of traffic that the ZyWALL sends out to the WAN.
Maximum TTL	Type the maximum time to live (TTL) (60 to 3600 seconds). This sets how long the ZyWALL is to allow a positive resolution entry to remain in the DNS cache before discarding it.
Cache Negative DNS Resolutions	Caching negative DNS resolutions helps speed up the ZyWALL's processing of commonly queried domain names (for which DNS resolution has failed) and reduces the amount of traffic that the ZyWALL sends out to the WAN.
Negative Cache Period	Type the time (60 to 3600 seconds) that the ZyWALL is to allow a negative resolution entry to remain in the DNS cache before discarding it.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.
DNS Cache Entry	
Flush	Click this button to clear the cache manually. After you flush the cache, the ZyWALL must query the DNS servers again for any domain names that had been previously resolved.
Refresh	Click this button to reload the cache.
#	This is the index number of a record.
Cache Type	This displays whether the response for the DNS request is positive or negative.
Domain Name	This is the domain name of a host.


Table 140 ADVANCED > DNS > Cache

LABEL	DESCRIPTION
IP Address	This is the (resolved) IP address of a host. This field displays **0.0.0.0** for negative DNS resolution entries.
Remaining Time (sec)	This is the number of seconds left before the DNS resolution entry is discarded from the cache.
Modify	Click the delete icon to remove the DNS resolution entry from the cache.

21.9 Configuring DNS DHCP

Click **ADVANCED** > **DNS** > **DHCP** to open the **DNS DHCP** screen shown next. Use this screen to configure the DNS server information that the ZyWALL sends to its LAN, DMZ or WLAN DHCP clients.

Figure 268 ADVANCED > DNS > DHCP

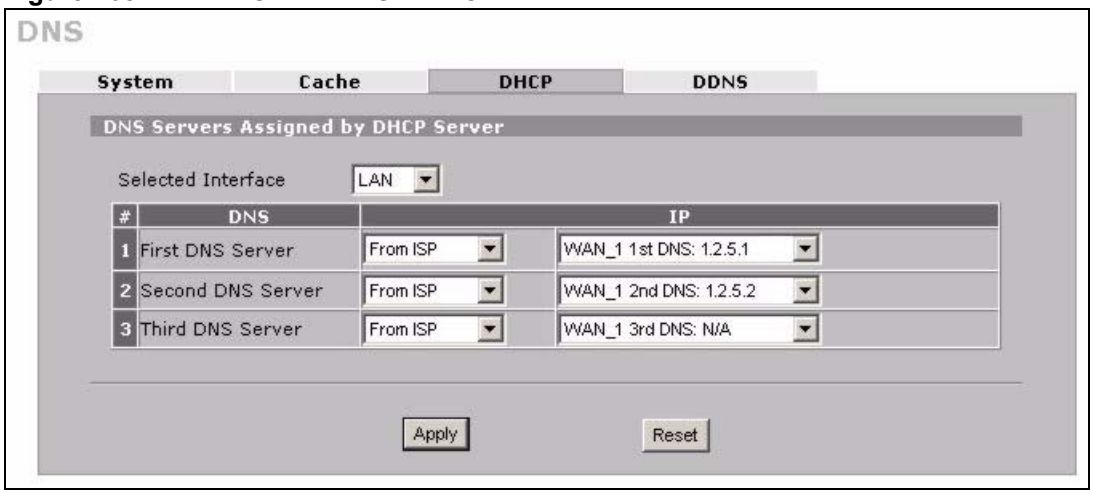

The following table describes the labels in this screen.

Table 141 ADVANCED > DNS > DHCP

LABEL	DESCRIPTION
DNS Servers Assigned by DHCP Server	The ZyWALL passes a DNS (Domain Name System) server IP address to the DHCP clients.
Selected Interface	Select an interface from the drop-down list box to configure the DNS servers for the specified interface.
DNS	These read-only labels represent the DNS servers.

Table 141 ADVANCED > DNS > DHCP

LABEL	DESCRIPTION
IP	Select **From ISP** if your ISP dynamically assigns DNS server information (and the ZyWALL's WAN IP address). Use the drop-down list box to select a DNS server IP address that the ISP assigns in the field to the right. Select **User-Defined** if you have the IP address of a DNS server. Enter the DNS server's IP address in the field to the right. If you chose **User-Defined**, but leave the IP address set to 0.0.0.0, **User-Defined** changes to **None** after you click **Apply**. If you set a second choice to **User-Defined**, and enter the same IP address, the second **User-Defined** changes to **None** after you click **Apply**. Select **DNS Relay** to have the ZyWALL act as a DNS proxy. The ZyWALL's LAN, DMZ or WLAN IP address displays in the field to the right (read-only). The ZyWALL tells the DHCP clients on the LAN, DMZ or WLAN that the ZyWALL itself is the DNS server. When a computer on the LAN, DMZ or WLAN sends a DNS query to the ZyWALL, the ZyWALL forwards the query to the ZyWALL's system DNS server (configured in the **DNS System** screen) and relays the response back to the computer. You can only select **DNS Relay** for one of the three servers; if you select DNS Relay for a second or third DNS server, that choice changes to **None** after you click **Apply**. Select **None** if you do not want to configure DNS servers. You must have another DHCP sever on your LAN, or else the computers must have their DNS server addresses manually configured. If you do not configure a DNS server, you must know the IP address of a computer in order to access it.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

21.10 Dynamic DNS

Dynamic DNS allows you to update your current dynamic IP address with one or many dynamic DNS services so that anyone can contact you (in NetMeeting, CU-SeeMe, etc.). You can also access your FTP server or Web site on your own computer using a domain name (for instance myhost.dhs.org, where myhost is a name of your choice) that will never change instead of using an IP address that changes each time you reconnect. Your friends or relatives will always be able to call you even if they don't know your IP address.

First of all, you need to have registered a dynamic DNS account with www.dyndns.org. This is for people with a dynamic IP from their ISP or DHCP server that would still like to have a domain name. The Dynamic DNS service provider will give you a password or key.



You must go to the Dynamic DNS service provider’s website and register a user account and a domain name before you can use the Dynamic DNS service with your ZyWALL.

21.10.1 DYNDNS Wildcard

Enabling the wildcard feature for your host causes *.yourhost.dyndns.org to be aliased to the same IP address as yourhost.dyndns.org. This feature is useful if you want to be able to use, for example, www.yourhost.dyndns.org and still reach your hostname.

If you have a private WAN IP address, then you cannot use Dynamic DNS.


21.10.2 High Availability

A DNS server maps a domain name to a port's IP address. If that WAN port loses its connection, high availability allows the router to substitute another port's IP address for the domain name mapping.

21.11 Configuring Dynamic DNS

To change your ZyWALL's DDNS, click **ADVANCED** > **DNS** > **DDNS**. The screen appears as shown.

Figure 269 ADVANCED > DNS > DDNS

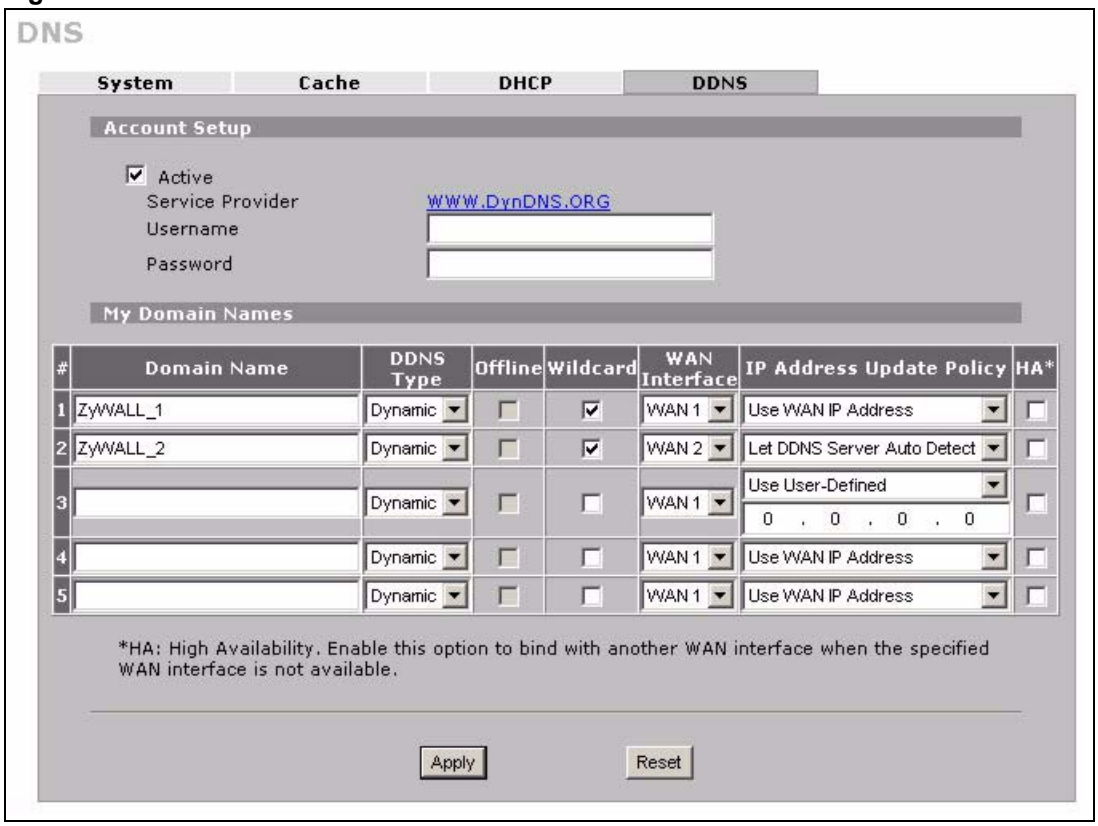

The following table describes the labels in this screen.

Table 142 ADVANCED > DNS > DDNS

LABEL	DESCRIPTION
Account Setup	
Active	Select this check box to use dynamic DNS.
Service Provider	This is the name of your Dynamic DNS service provider.

Table 142 ADVANCED > DNS > DDNS

LABEL	DESCRIPTION
Username	Enter your user name. You can use up to 31 alphanumeric characters (and the underscore). Spaces are not allowed.
Password	Enter the password associated with the user name above. You can use up to 31 alphanumeric characters (and the underscore). Spaces are not allowed.
My Domain Names	
Domain Name 1~5	Enter the host names in these fields.
DDNS Type	Select the type of service that you are registered for from your Dynamic DNS service provider. Select **Dynamic** if you have the Dynamic DNS service. Select **Static** if you have the Static DNS service. Select **Custom** if you have the Custom DNS service.
Offline	This option is available when **Custom** is selected in the **DDNS Type** field. Check with your Dynamic DNS service provider to have traffic redirected to a URL (that you can specify) while you are off line.
Wildcard	Select the check box to enable DYNDNS Wildcard.
WAN Interface	Select the WAN interface to use for updating the IP address of the domain name.
IP Address Update Policy	Select **Use WAN IP Address** to have the ZyWALL update the domain name with the WAN interface's IP address. Select **Use User-Defined** and enter the IP address if you have a static IP address. Select **Let DDNS Server Auto Detect** only when there are one or more NAT routers between the ZyWALL and the DDNS server. This feature has the DDNS server automatically detect and use the IP address of the NAT router that has a public IP address. Note: The DDNS server may not be able to detect the proper IP address if there is an HTTP proxy server between the ZyWALL and the DDNS server.
HA	Select this check box to enable the high availability (HA) feature. High availability has the ZyWALL update a domain name with another interface's IP address when the normal WAN interface does not have a connection. If the WAN interface specified in the **WAN Interface** field does not have a connection, the ZyWALL will attempt to use the IP address of another WAN interface to update the domain name. When the WAN interfaces are in the active/passive operating mode, the ZyWALL will update the domain name with the IP address of whichever WAN interface has a connection, regardless of the setting in the **WAN Interface** field. Disable this feature and the ZyWALL will only update the domain name with an IP address of the WAN interface specified in the **WAN Interface** field. If that WAN interface does not have a connection, the ZyWALL will not update the domain name with another port's IP address. Note: If you enable high availability, DDNS can also function when the ZyWALL uses the dial backup port. DDNS does not function when the ZyWALL uses traffic redirect.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

22

Remote Management


This chapter provides information on the Remote Management screens.

22.1 Remote Management Overview

Remote management allows you to determine which services/protocols can access which ZyWALL interface (if any) from which computers.

The following figure shows secure and insecure management of the ZyWALL coming in from the WAN. HTTPS and SSH access are secure. HTTP and Telnet access are not secure.

Figure 270 Secure and Insecure Remote Management From the WAN

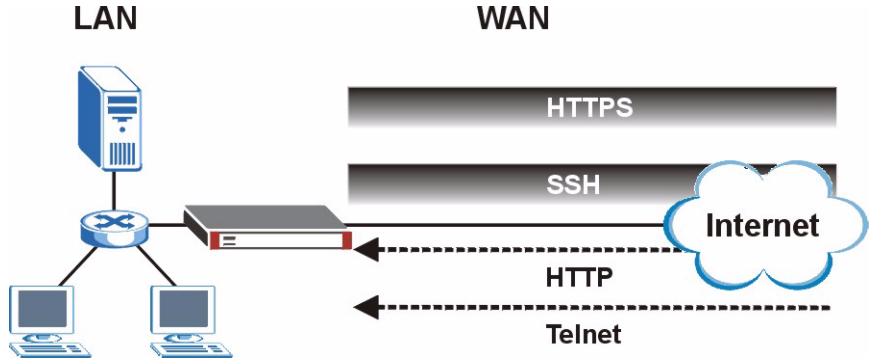

When you configure remote management to allow management from any network except the LAN, you still need to configure a firewall rule to allow access. See Chapter 11 on page 239 for details on configuring firewall rules.

You can also disable a service on the ZyWALL by not allowing access for the service/protocol through any of the ZyWALL interfaces.

You may only have one remote management session running at a time. The ZyWALL automatically disconnects a remote management session of lower priority when another remote management session of higher priority starts. The priorities for the different types of remote management sessions are as follows.

1. Console port
2. SSH

3 Telnet
4 HTTPS and HTTP

22.1.1 Remote Management Limitations

Remote management does not work when:

1 You have not enabled that service on the interface in the corresponding remote management screen.
2 You have disabled that service in one of the remote management screens.
3 The IP address in the **Secure Client IP Address** field does not match the client IP address. If it does not match, the ZyWALL will disconnect the session immediately.
4 There is already another remote management session with an equal or higher priority running. You may only have one remote management session running at one time.
5 There is a firewall rule that blocks it.
6 A filter is applied (through the SMT or the commands) to block a Telnet, FTP or Web service.

22.1.2 System Timeout

There is a default system management idle timeout of five minutes (three hundred seconds). The ZyWALL automatically logs you out if the management session remains idle for longer than this timeout period. The management session does not time out when a statistics screen is polling. You can change the timeout period in the **MAINTENANCE** > **General** screen.

22.2 WWW (HTTP and HTTPS)

HTTPS (HyperText Transfer Protocol over Secure Socket Layer, or HTTP over SSL) is a web protocol that encrypts and decrypts web pages. Secure Socket Layer (SSL) is an application-level protocol that enables secure transactions of data by ensuring confidentiality (an unauthorized party cannot read the transferred data), authentication (one party can identify the other party) and data integrity (you know if data has been changed).

It relies upon certificates, public keys, and private keys (see Chapter 15 on page 349 for more information).


HTTPS on the ZyWALL is used so that you may securely access the ZyWALL using the web configurator. The SSL protocol specifies that the SSL server (the ZyWALL) must always authenticate itself to the SSL client (the computer which requests the HTTPS connection with the ZyWALL), whereas the SSL client only should authenticate itself when the SSL server requires it to do so (select **Authenticate Client Certificates** in the **REMOTE MGMT > WWW** screen). **Authenticate Client Certificates** is optional and if selected means the SSL-client must send the ZyWALL a certificate. You must apply for a certificate for the browser from a CA that is a trusted CA on the ZyWALL.

Please refer to the following figure.

1 HTTPS connection requests from an SSL-aware web browser go to port 443 (by default) on the ZyWALL's WS (web server).

2 HTTP connection requests from a web browser go to port 80 (by default) on the ZyWALL's WS (web server).

Figure 271 HTTPS Implementation

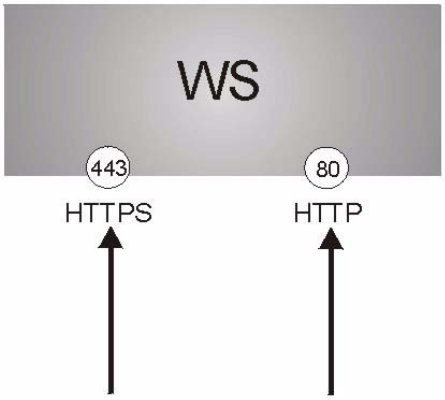


If you disable the **HTTP** service in the **REMOTE MGMT > WWW** screen, then the ZyWALL blocks all HTTP connection attempts.

22.3 WWW

Click **ADVANCED** > **REMOTE MGMT** to open the **WWW** screen. Use this screen to configure the ZyWALL's HTTP and HTTPS management settings.

Figure 272 ADVANCED > REMOTE MGMT > WWW

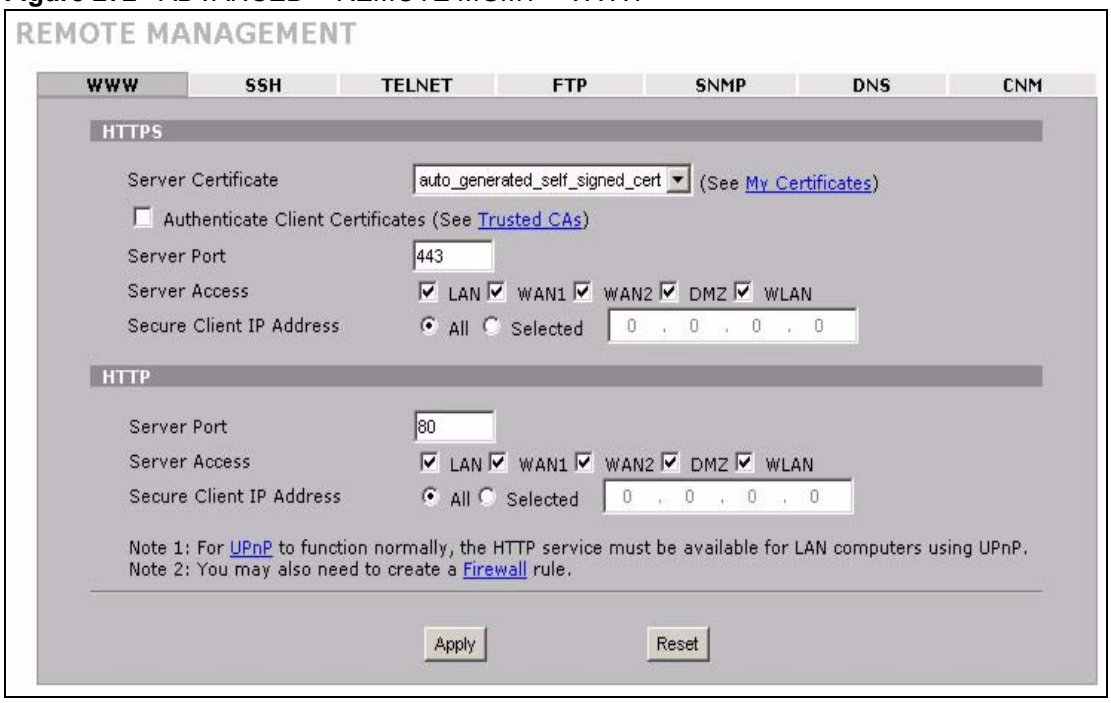

The following table describes the labels in this screen.

Table 143 ADVANCED > REMOTE MGMT > WWW

LABEL	DESCRIPTION
HTTPS	
Server Certificate	Select the **Server Certificate** that the ZyWALL will use to identify itself. The ZyWALL is the SSL server and must always authenticate itself to the SSL client (the computer which requests the HTTPS connection with the ZyWALL).
Authenticate Client Certificates	Select **Authenticate Client Certificates** (optional) to require the SSL client to authenticate itself to the ZyWALL by sending the ZyWALL a certificate. To do that the SSL client must have a CA-signed certificate from a CA that has been imported as a trusted CA on the ZyWALL (see Appendix F on page 755 on importing certificates for details).
Server Port	The HTTPS proxy server listens on port 443 by default. If you change the HTTPS proxy server port to a different number on the ZyWALL, for example 8443, then you must notify people who need to access the ZyWALL web configurator to use “https://ZyWALL IP Address:**8443**” as the URL.
Server Access	Select the interface(s) through which a computer may access the ZyWALL using this service. You can allow only secure web configurator access by clearing all of the interface check boxes in the **HTTP Server Access** field and setting the **HTTPS Server Access** field to an interface(s).
Secure Client IP Address	A secure client is a “trusted” computer that is allowed to communicate with the ZyWALL using this service. Select **All** to allow any computer to access the ZyWALL using this service. Choose **Selected** to just allow the computer with the IP address that you specify to access the ZyWALL using this service.
HTTP	
Server Port	You may change the server port number for a service if needed, however you must use the same port number in order to use that service for remote management.

Table 143 ADVANCED > REMOTE MGMT > WWW (continued)

LABEL	DESCRIPTION
Server Access	Select the interface(s) through which a computer may access the ZyWALL using this service.
Secure Client IP Address	A secure client is a “trusted” computer that is allowed to communicate with the ZyWALL using this service. Select **All** to allow any computer to access the ZyWALL using this service. Choose **Selected** to just allow the computer with the IP address that you specify to access the ZyWALL using this service.
Apply	Click **Apply** to save your customized settings and exit this screen.
Reset	Click **Reset** to begin configuring this screen afresh.

22.4 HTTPS Example

If you haven’t changed the default HTTPS port on the ZyWALL, then in your browser enter “https://ZyWALL IP Address/” as the web site address where “ZyWALL IP Address” is the IP address or domain name of the ZyWALL you wish to access.

22.4.1 Internet Explorer Warning Messages

When you attempt to access the ZyWALL HTTPS server, a Windows dialog box pops up asking if you trust the server certificate. Click **View Certificate** if you want to verify that the certificate is from the ZyWALL.

You see the following **Security Alert** screen in Internet Explorer. Select **Yes** to proceed to the web configurator login screen; if you select **No**, then web configurator access is blocked.

Figure 273 Security Alert Dialog Box (Internet Explorer)



22.4.2 Netscape Navigator Warning Messages

When you attempt to access the ZyWALL HTTPS server, a **Website Certified by an Unknown Authority** screen pops up asking if you trust the server certificate. Click **Examine Certificate** if you want to verify that the certificate is from the ZyWALL.

If **Accept this certificate temporarily for this session** is selected, then click **OK** to continue in Netscape.

Select **Accept this certificate permanently** to import the ZyWALL's certificate into the SSL client.

Figure 274 Security Certificate 1 (Netscape)

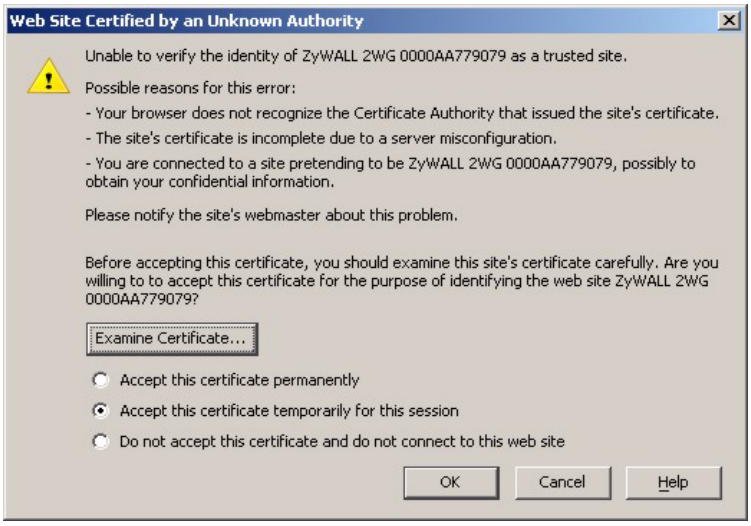


Figure 275 Security Certificate 2 (Netscape)



22.4.3 Avoiding the Browser Warning Messages

The following describes the main reasons that your browser displays warnings about the ZyWALL's HTTPS server certificate and what you can do to avoid seeing the warnings.

- The issuing certificate authority of the ZyWALL's HTTPS server certificate is not one of the browser's trusted certificate authorities. The issuing certificate authority of the ZyWALL's factory default certificate is the ZyWALL itself since the certificate is a self-signed certificate.
  - For the browser to trust a self-signed certificate, import the self-signed certificate into your operating system as a trusted certificate.
  - To have the browser trust the certificates issued by a certificate authority, import the certificate authority's certificate into your operating system as a trusted certificate. Refer to Appendix F on page 755 for details.

- The actual IP address of the HTTPS server (the IP address of the ZyWALL's port that you are trying to access) does not match the common name specified in the ZyWALL's HTTPS server certificate that your browser received. Do the following to check the common name specified in the certificate that your ZyWALL sends to HTTPS clients.
  - **2a** Click **REMOTE MGMT**. Write down the name of the certificate displayed in the **Server Certificate** field.
  - **2b** Click **CERTIFICATES**. Find the certificate and check its **Subject** column. **CN** stands for certificate's common name (see Figure 278 on page 446 for an example).


Use this procedure to have the ZyWALL use a certificate with a common name that matches the ZyWALL's actual IP address. You cannot use this procedure if you need to access the WAN port and it uses a dynamically assigned IP address.

- **2a** Create a new certificate for the ZyWALL that uses the IP address (of the ZyWALL's port that you are trying to access) as the certificate's common name. For example, to use HTTPS to access a LAN port with IP address 192.168.1.1, create a certificate that uses 192.168.1.1 as the common name.
- **2b** Go to the remote management **WWW** screen and select the newly created certificate in the **Server Certificate** field. Click **Apply**.

22.4.4 Login Screen

After you accept the certificate, the ZyWALL login screen appears. The lock displayed in the bottom right of the browser status bar denotes a secure connection.


Figure 276 Example: Lock Denoting a Secure Connection

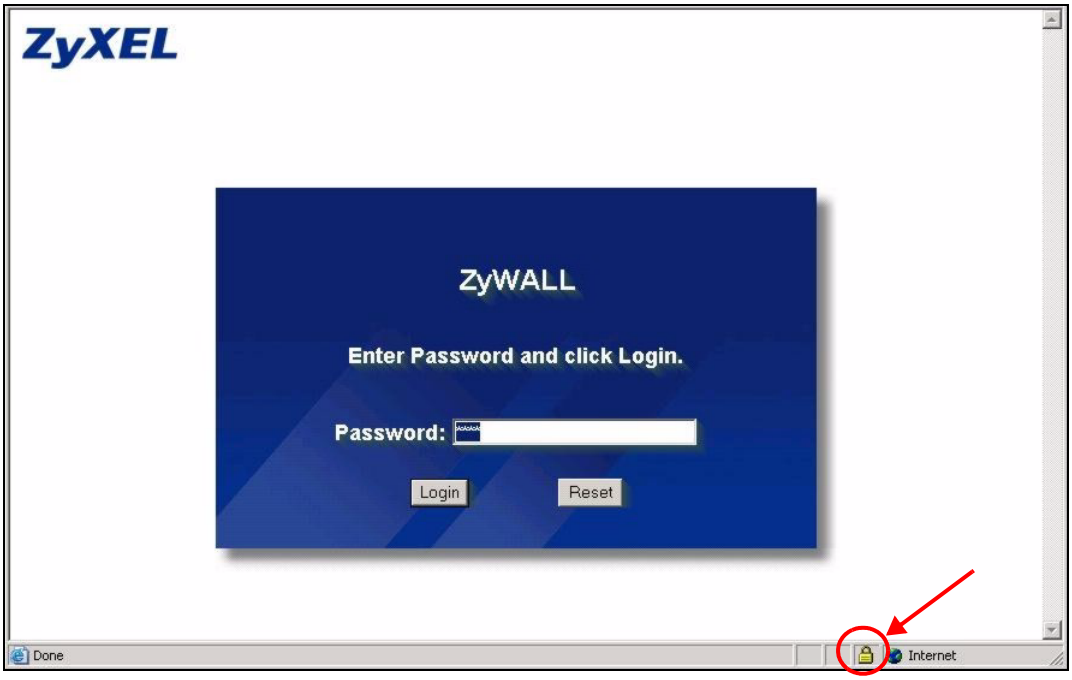

Click **Login** and you then see the next screen.


The factory default certificate is a common default certificate for all ZyWALL models.

Figure 277 Replace Certificate

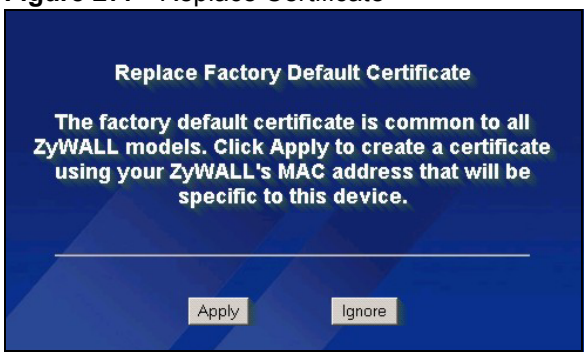


Click **Apply** in the **Replace Certificate** screen to create a certificate using your ZyWALL's MAC address that will be specific to this device. Click **CERTIFICATES** to open the **My Certificates** screen. You will see information similar to that shown in the following figure.

Figure 278 Device-specific Certificate

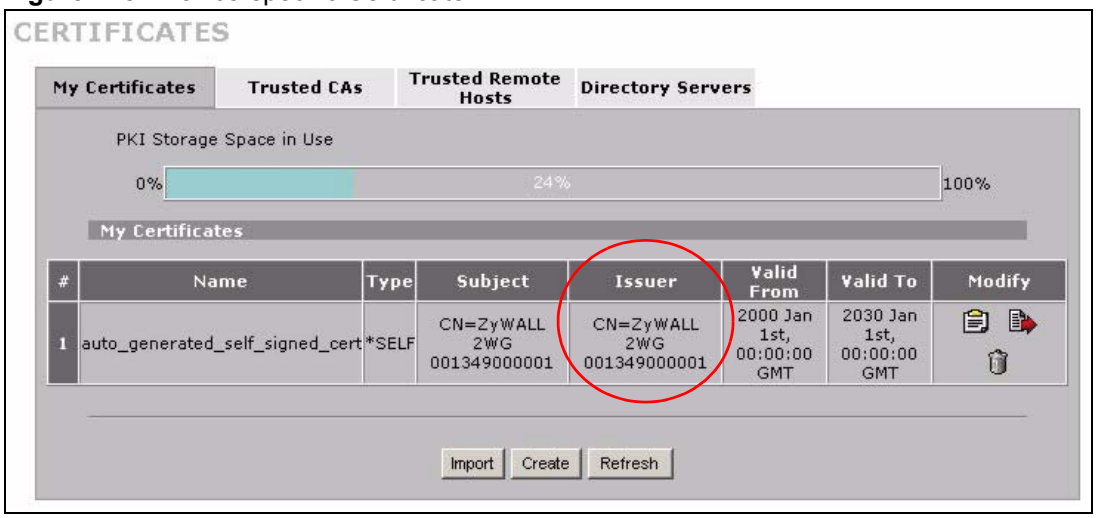

Click **Ignore** in the **Replace Certificate** screen to use the common ZyWALL certificate. You will then see this information in the **My Certificates** screen.

Figure 279 Common ZyWALL Certificate

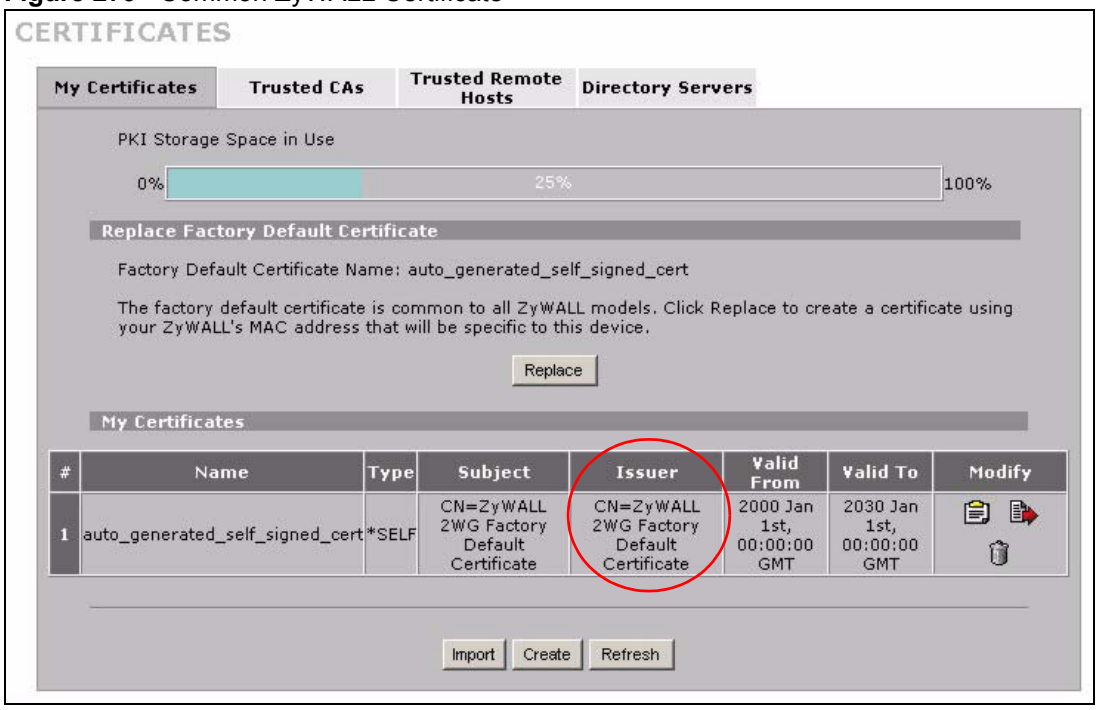


22.5 SSH

You can use SSH (Secure SHell) to securely access the ZyWALL's SMT or command line interface. Specify which interfaces allow SSH access and from which IP address the access can come.

Unlike Telnet or FTP, which transmit data in plaintext (clear or unencrypted text), SSH is a secure communication protocol that combines authentication and data encryption to provide secure encrypted communication between two hosts over an unsecured network. In the following figure, computer **A** on the Internet uses SSH to securely connect to the WAN port of the ZyWALL for a management session.


Figure 280 SSH Communication Over the WAN Example

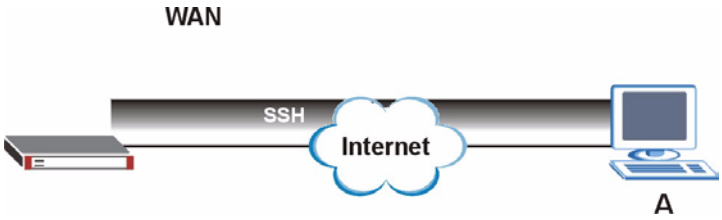

22.6 How SSH Works

The following table summarizes how a secure connection is established between two remote hosts.

Figure 281 How SSH Works

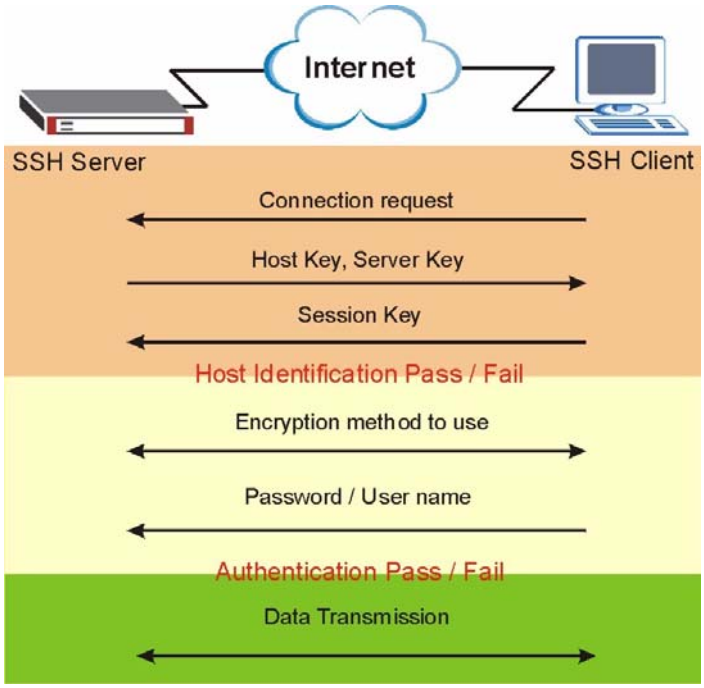

1 Host Identification

The SSH client sends a connection request to the SSH server. The server identifies itself with a host key. The client encrypts a randomly generated session key with the host key and server key and sends the result back to the server.

The client automatically saves any new server public keys. In subsequent connections, the server public key is checked against the saved version on the client computer.

2 Encryption Method

Once the identification is verified, both the client and server must agree on the type of encryption method to use.

3 Authentication and Data Transmission

After the identification is verified and data encryption activated, a secure tunnel is established between the client and the server. The client then sends its authentication information (user name and password) to the server to log in to the server.

22.7 SSH Implementation on the ZyWALL

Your ZyWALL supports SSH version 1.5 using RSA authentication and three encryption methods (DES, 3DES and Blowfish). The SSH server is implemented on the ZyWALL for remote SMT management and file transfer on port 22. Only one SSH connection is allowed at a time.

22.7.1 Requirements for Using SSH


You must install an SSH client program on a client computer (Windows or Linux operating system) that is used to connect to the ZyWALL over SSH.

22.8 Configuring SSH

Click **ADVANCED** > **REMOTE MGMT** > **SSH** to change your ZyWALL's Secure Shell settings.

It is recommended that you disable Telnet and FTP when you configure SSH for secure connections.

Figure 282 ADVANCED > REMOTE MGMT > SSH

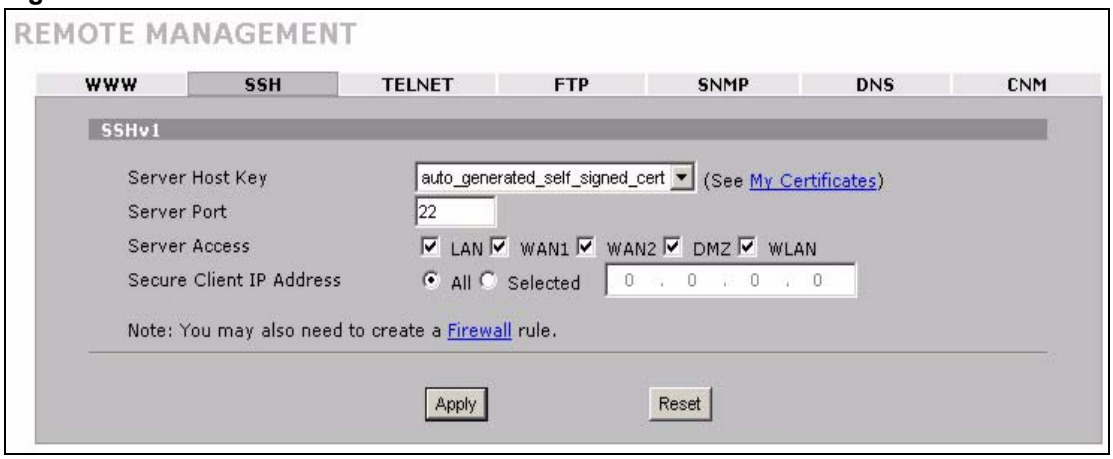

The following table describes the labels in this screen.

Table 144 ADVANCED > REMOTE MGMT > SSH

LABEL	DESCRIPTION
Server Host Key	Select the certificate whose corresponding private key is to be used to identify the ZyWALL for SSH connections. You must have certificates already configured in the **My Certificates** screen (Click **My Certificates** and see Chapter 15 on page 349 for details).
Server Port	You may change the server port number for a service if needed, however you must use the same port number in order to use that service for remote management.
Server Access	Select the interface(s) through which a computer may access the ZyWALL using this service.
Secure Client IP Address	A secure client is a "trusted" computer that is allowed to communicate with the ZyWALL using this service. Select **All** to allow any computer to access the ZyWALL using this service. Choose **Selected** to just allow the computer with the IP address that you specify to access the ZyWALL using this service.
Apply	Click **Apply** to save your customized settings and exit this screen.
Reset	Click **Reset** to begin configuring this screen afresh.

22.9 Secure Telnet Using SSH Examples


This section shows two examples using a command interface and a graphical interface SSH client program to remotely access the ZyWALL. The configuration and connection steps are similar for most SSH client programs. Refer to your SSH client program user's guide.

22.9.1 Example 1: Microsoft Windows

This section describes how to access the ZyWALL using the Secure Shell Client program.

1. Launch the SSH client and specify the connection information (IP address, port number or device name) for the ZyWALL.
2. Configure the SSH client to accept connection using SSH version 1.
3. A window displays prompting you to store the host key in you computer. Click **Yes** to continue.

Figure 283 SSH Example 1: Store Host Key

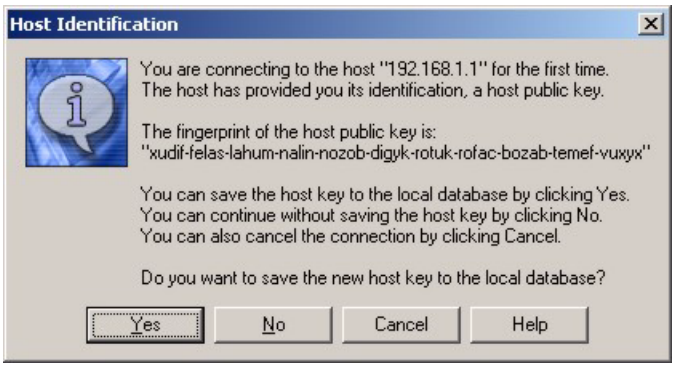

Enter the password to log in to the ZyWALL. The SMT main menu displays next.

22.9.2 Example 2: Linux

This section describes how to access the ZyWALL using the OpenSSH client program that comes with most Linux distributions.

1. Test whether the SSH service is available on the ZyWALL.

   Enter "`telnet 192.168.1.1 22`" at a terminal prompt and press [ENTER]. The computer attempts to connect to port 22 on the ZyWALL (using the default IP address of 192.168.1.1).

   A message displays indicating the SSH protocol version supported by the ZyWALL.

Figure 284 SSH Example 2: Test

```
$ telnet 192.168.1.1 22
Trying 192.168.1.1...
Connected to 192.168.1.1.
Escape character is '^]'.
SSH-1.5-1.0.0
```

2 Enter "ssh -1 192.168.1.1". This command forces your computer to connect to the ZyWALL using SSH version 1. If this is the first time you are connecting to the ZyWALL using SSH, a message displays prompting you to save the host information of the ZyWALL. Type "yes" and press [ENTER].

Then enter the password to log in to the ZyWALL.

Figure 285 SSH Example 2: Log in

```
$ ssh -1 192.168.1.1
The authenticity of host '192.168.1.1 (192.168.1.1)' can't be
established.
RSA1 key fingerprint is
21:6c:07:25:7e:f4:75:80:ec:af:bd:d4:3d:80:53:d1.
Are you sure you want to continue connecting (yes/no)? yes
Warning: Permanently added '192.168.1.1' (RSA1) to the list of
known hosts.
Administrator@192.168.1.1's password:
```

3 The SMT main menu displays next.

22.10 Secure FTP Using SSH Example

This section shows an example on file transfer using the OpenSSH client program. The configuration and connection steps are similar for other SSH client programs. Refer to your SSH client program user's guide.

1 Enter "sftp -1 192.168.1.1". This command forces your computer to connect to the ZyWALL for secure file transfer using SSH version 1. If this is the first time you are connecting to the ZyWALL using SSH, a message displays prompting you to save the host information of the ZyWALL. Type "yes" and press [ENTER].

2 Enter the password to login to the ZyWALL.

3 Use the "put" command to upload a new firmware to the ZyWALL.

Figure 286 Secure FTP: Firmware Upload Example

```
$ sftp -1 192.168.1.1
Connecting to 192.168.1.1...
The authenticity of host '192.168.1.1 (192.168.1.1)' can't be
established.
RSA1 key fingerprint is
21:6c:07:25:7e:f4:75:80:ec:af:bd:d4:3d:80:53:d1.
Are you sure you want to continue connecting (yes/no)? yes
Warning: Permanently added '192.168.1.1' (RSA1) to the list of
known hosts.
Administrator@192.168.1.1's password:
sftp> put firmware.bin ras
Uploading firmware.bin to /ras
Read from remote host 192.168.1.1: Connection reset by peer
Connection closed
$
```

22.11 Telnet

You can use Telnet to access the ZyWALL's SMT or command line interface. Specify which interfaces allow Telnet access and from which IP address the access can come.


22.12 Configuring TELNET

Click **ADVANCED** > **REMOTE MGMT** > **TELNET** to open the following screen. Use this screen to specify which interfaces allow Telnet access and from which IP address the access can come.



It is recommended that you disable Telnet and FTP when you configure SSH for secure connections.

Figure 287 ADVANCED > REMOTE MGMT > Telnet

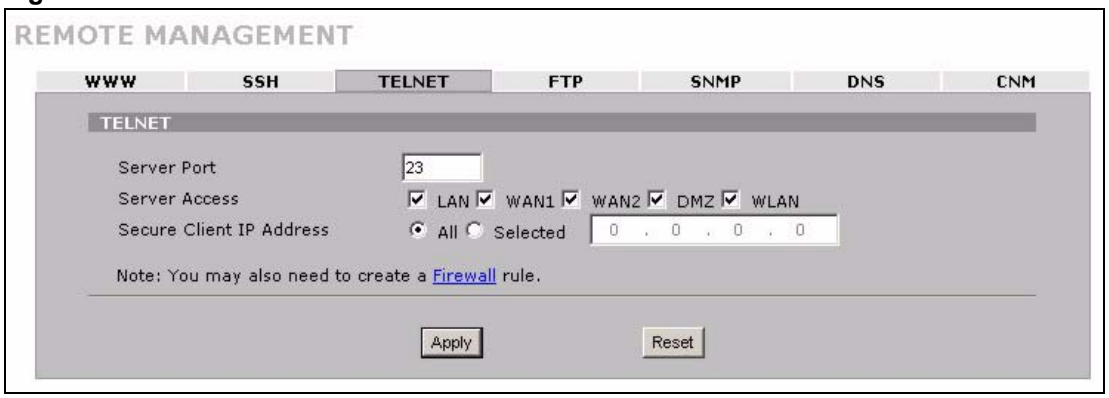

The following table describes the labels in this screen.

Table 145 ADVANCED > REMOTE MGMT > Telnet

LABEL	DESCRIPTION
Server Port	You may change the server port number for a service if needed, however you must use the same port number in order to use that service for remote management.
Server Access	Select the interface(s) through which a computer may access the ZyWALL using this service.
Secure Client IP Address	A secure client is a “trusted” computer that is allowed to communicate with the ZyWALL using this service. Select **All** to allow any computer to access the ZyWALL using this service. Choose **Selected** to just allow the computer with the IP address that you specify to access the ZyWALL using this service.
Apply	Click **Apply** to save your customized settings and exit this screen.
Reset	Click **Reset** to begin configuring this screen afresh.

22.13 FTP


You can use FTP (File Transfer Protocol) to upload and download the ZyWALL’s firmware and configuration files, please see the User’s Guide chapter on firmware and configuration file maintenance for details. To use this feature, your computer must have an FTP client.

To change your ZyWALL’s FTP settings, click **ADVANCED** > **REMOTE MGMT** > **FTP**. The screen appears as shown. Use this screen to specify which interfaces allow FTP access and from which IP address the access can come.



It is recommended that you disable Telnet and FTP when you configure SSH for secure connections.

Figure 288 ADVANCED > REMOTE MGMT > FTP

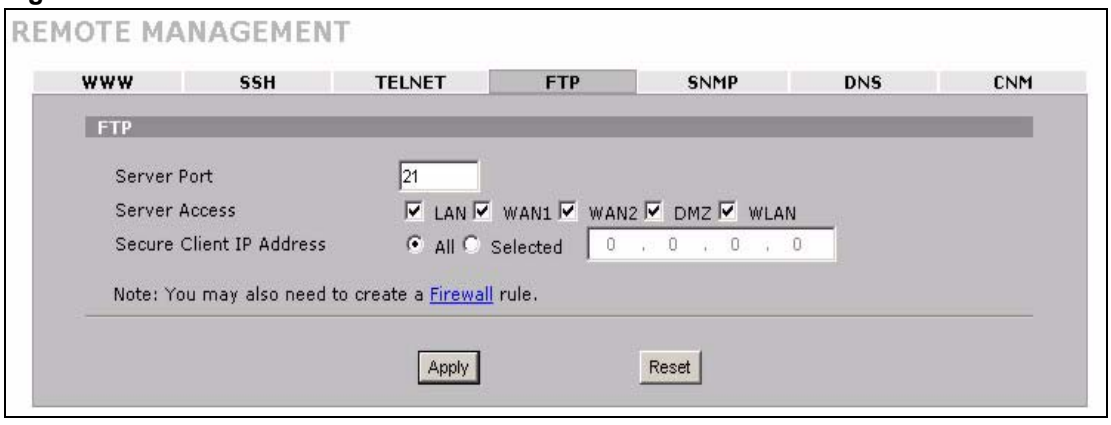

The following table describes the labels in this screen.

Table 146 ADVANCED > REMOTE MGMT > FTP

LABEL	DESCRIPTION
Server Port	You may change the server port number for a service if needed, however you must use the same port number in order to use that service for remote management.
Server Access	Select the interface(s) through which a computer may access the ZyWALL using this service.
Secure Client IP Address	A secure client is a “trusted” computer that is allowed to communicate with the ZyWALL using this service. Select **All** to allow any computer to access the ZyWALL using this service. Choose **Selected** to just allow the computer with the IP address that you specify to access the ZyWALL using this service.
Apply	Click **Apply** to save your customized settings.
Reset	Click **Reset** to begin configuring this screen afresh.


22.14 SNMP

Simple Network Management Protocol is a protocol used for exchanging management information between network devices. SNMP is a member of the TCP/IP protocol suite. Your ZyWALL supports SNMP agent functionality, which allows a manager station to manage and monitor the ZyWALL through the network. The ZyWALL supports SNMP version one (SNMPv1). The next figure illustrates an SNMP management operation.



SNMP is only available if TCP/IP is configured.

Figure 289 SNMP Management Model

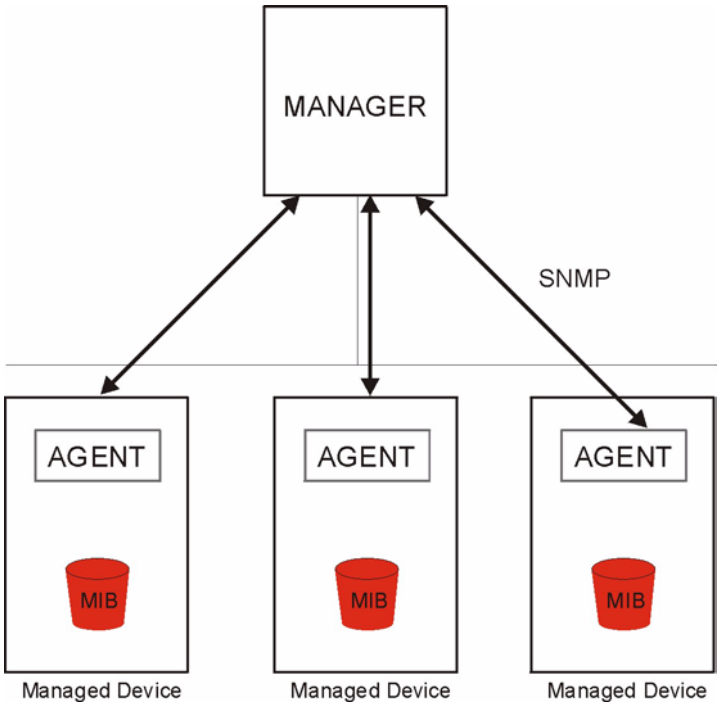

An SNMP managed network consists of two main types of component: agents and a manager.

An agent is a management software module that resides in a managed device (the ZyWALL). An agent translates the local management information from the managed device into a form compatible with SNMP. The manager is the console through which network administrators perform network management functions. It executes applications that control and monitor managed devices.

The managed devices contain object variables/managed objects that define each piece of information to be collected about a device. Examples of variables include such as number of packets received, node port status etc. A Management Information Base (MIB) is a collection of managed objects. SNMP allows a manager and agents to communicate for the purpose of accessing these objects.

SNMP itself is a simple request/response protocol based on the manager/agent model. The manager issues a request and the agent returns responses using the following protocol operations:

- Get - Allows the manager to retrieve an object variable from the agent.
- GetNext - Allows the manager to retrieve the next object variable from a table or list within an agent. In SNMPv1, when a manager wants to retrieve all elements of a table from an agent, it initiates a Get operation, followed by a series of GetNext operations.
- Set - Allows the manager to set values for object variables within an agent.
- Trap - Used by the agent to inform the manager of some events.

22.14.1 Supported MIBs

The ZyWALL supports MIB II that is defined in RFC-1213 and RFC-1215. The focus of the MIBs is to let administrators collect statistical data and monitor status and performance.

22.14.2 SNMP Traps

The ZyWALL will send traps to the SNMP manager when any one of the following events occurs:


Table 147 SNMP Traps

TRAP #	TRAP NAME	DESCRIPTION
0	coldStart (defined in *RFC-1215*)	A trap is sent after booting (power on).
1	warmStart (defined in *RFC-1215*)	A trap is sent after booting (software reboot).
4	authenticationFailure (defined in *RFC-1215*)	A trap is sent to the manager when receiving any SNMP get or set requirements with the wrong community (password).
6	whyReboot (defined in ZYXEL-MIB)	A trap is sent with the reason of restart before rebooting when the system is going to restart (warm start).
6a	For intentional reboot :	A trap is sent with the message "System reboot by user!" if reboot is done intentionally, (for example, download new files, CI command "sys reboot", etc.).
6b	For fatal error :	A trap is sent with the message of the fatal code if the system reboots because of fatal errors.

22.14.3 REMOTE MANAGEMENT: SNMP

To change your ZyWALL's SNMP settings, click **ADVANCED** > **REMOTE MGMT** > **SNMP**. The screen appears as shown.

Figure 290 ADVANCED > REMOTE MGMT > SNMP

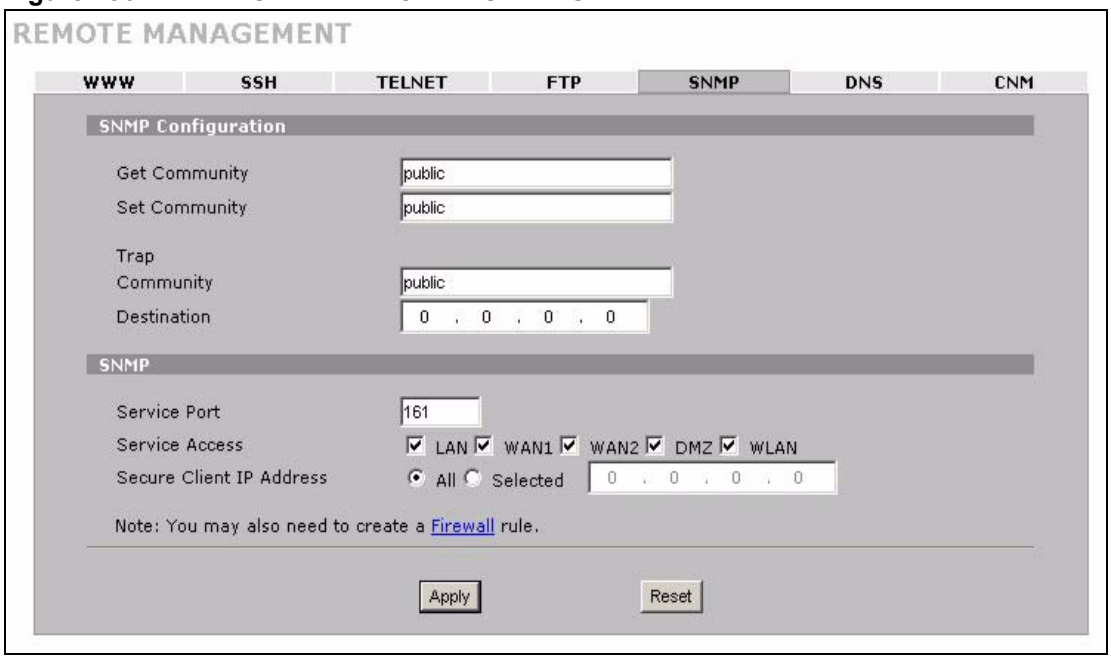

The following table describes the labels in this screen.

Table 148 ADVANCED > REMOTE MGMT > SNMP


LABEL	DESCRIPTION
SNMP Configuration	
Get Community	Enter the **Get Community**, which is the password for the incoming Get and GetNext requests from the management station. The default is public and allows all requests.
Set Community	Enter the **Set community**, which is the password for incoming Set requests from the management station. The default is public and allows all requests.
Trap	
Community	Type the trap community, which is the password sent with each trap to the SNMP manager. The default is public and allows all requests.
Destination	Type the IP address of the station to send your SNMP traps to.
SNMP	
Service Port	You may change the server port number for a service if needed, however you must use the same port number in order to use that service for remote management.
Service Access	Select the interface(s) through which a computer may access the ZyWALL using this service.
Secure Client IP Address	A secure client is a “trusted” computer that is allowed to communicate with the ZyWALL using this service. Select **All** to allow any computer to access the ZyWALL using this service. Choose **Selected** to just allow the computer with the IP address that you specify to access the ZyWALL using this service.
Apply	Click **Apply** to save your customized settings.
Reset	Click **Reset** to begin configuring this screen afresh.

22.15 DNS

Use DNS (Domain Name System) to map a domain name to its corresponding IP address and vice versa. Refer to Chapter 8 on page 165 for more information.

Click **ADVANCED** > **REMOTE MGMT** > **DNS** to change your ZyWALL’s DNS settings. Use this screen to set from which IP address the ZyWALL will accept DNS queries and on which interface it can send them your ZyWALL’s DNS settings. This feature is not available when the ZyWALL is set to bridge mode.

Figure 291 ADVANCED > REMOTE MGMT > DNS

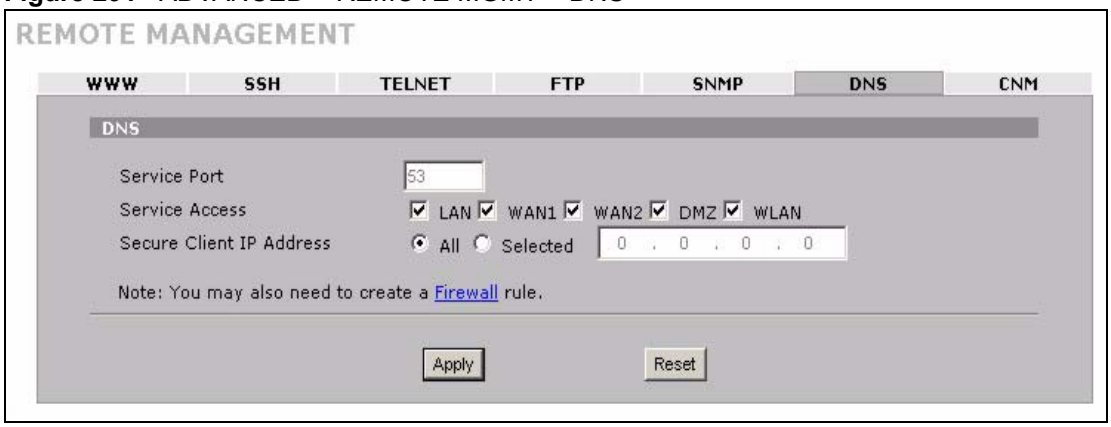

The following table describes the labels in this screen.

Table 149 ADVANCED > REMOTE MGMT > DNS

LABEL	DESCRIPTION
Service Port	The DNS service port number is 53 and cannot be changed here.
Service Access	Select the interface(s) through which a computer may send DNS queries to the ZyWALL.
Secure Client IP Address	A secure client is a “trusted” computer that is allowed to send DNS queries to the ZyWALL. Select **All** to allow any computer to send DNS queries to the ZyWALL. Choose **Selected** to just allow the computer with the IP address that you specify to send DNS queries to the ZyWALL.
Apply	Click **Apply** to save your customized settings.
Reset	Click **Reset** to begin configuring this screen afresh.

22.16 Introducing Vantage CNM


Vantage CNM (Centralized Network Management) is a browser-based global management solution that allows an administrator from any location to easily configure, manage, monitor and troubleshoot ZyXEL devices located worldwide. See the Vantage CNM User's Guide for details.

If you allow your ZyWALL to be managed by the Vantage CNM server, then you should not do any configurations directly to the ZyWALL (using either the web configurator, SMT menus or commands) without notifying the Vantage CNM administrator.

22.17 Configuring CNM

Vantage CNM is disabled on the device by default. Click **ADVANCED** > **REMOTE MGMT** > **CNM** to configure your device’s Vantage CNM settings.

Figure 292 ADVANCED > REMOTE MGMT > CNM

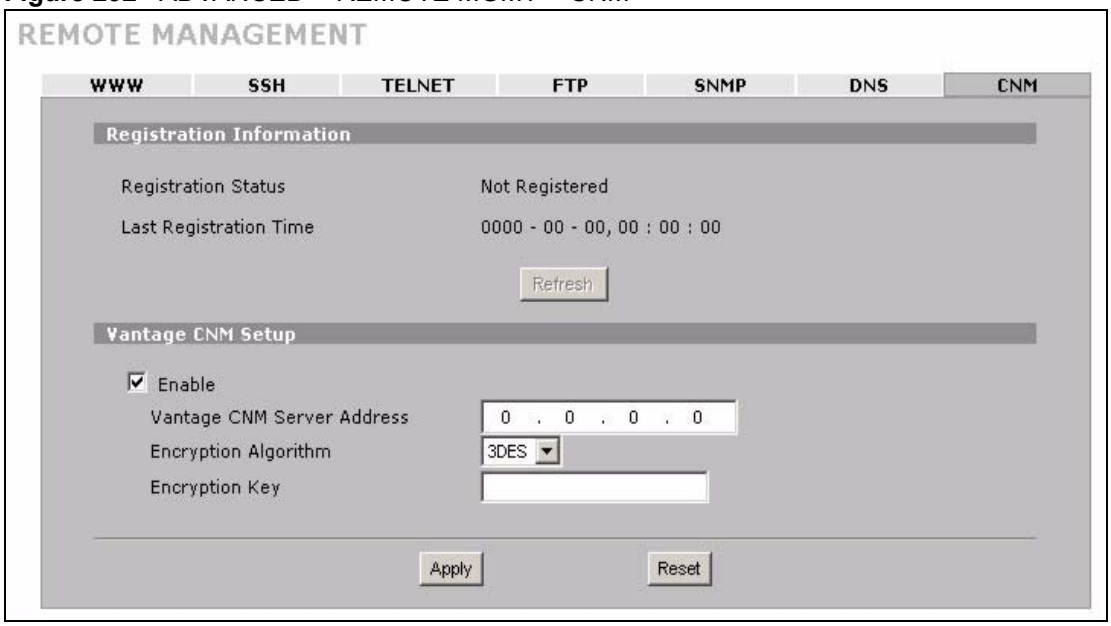

The following table describes the labels in this screen.

Table 150 ADVANCED > REMOTE MGMT > CNM

LABEL	DESCRIPTION
Registration Information	
Registration Status	This read only field displays **Not Registered** when **Enable** is not selected. It displays **Registering** when the ZyWALL first connects with the Vantage CNM server and then **Registered** after it has been successfully registered with the Vantage CNM server. It will continue to display **Registering** until it successfully registers with the Vantage CNM server. It will not be able to register with the Vantage CNM server if: The Vantage CNM server is down. The Vantage CNM server IP address is incorrect. The Vantage CNM server is behind a NAT router or firewall that does not forward packets through to the Vantage CNM server. The encryption algorithms and/or encryption keys do not match between the ZyWALL and the Vantage CNM server.
Last Registration Time	This field displays the last date (year-month-date) and time (hours-minutes-seconds) that the ZyWALL registered with the Vantage CNM server. It displays all zeroes if it has not yet registered with the Vantage CNM server.
Refresh	Click **Refresh** to update the registration status and last registration time.
Vantage CNM Setup	
Enable	Select this check box to allow Vantage CNM to manage your ZyWALL.
Vantage CNM Server Address	If the Vantage server is on the same subnet as the ZyWALL, enter the private or public IP address of the Vantage server. If the Vantage CNM server is on a different subnet to the ZyWALL, enter the public IP address of the Vantage server. If the Vantage CNM server is on a different subnet to the ZyWALL and is behind a NAT router, enter the WAN IP address of the NAT router here.

Table 150 ADVANCED > REMOTE MGMT > CNM (continued)

LABEL	DESCRIPTION
Encryption Algorithm	The **Encryption Algorithm** field is used to encrypt communications between the ZyWALL and the Vantage CNM server. Choose from **None** (no encryption), **DES** or **3DES**. The **Encryption Key** field appears when you select **DES** or **3DES**. The ZyWALL must use the same encryption algorithm as the Vantage CNM server.
Encryption Key	Type eight alphanumeric characters ("0" to "9", "a" to "z" or "A" to "Z") when you choose the **DES** encryption algorithm and 24 alphanumeric characters ("0" to "9", "a" to "z" or "A" to "Z") when you choose the **3DES** encryption algorithm. The ZyWALL must use the same encryption key as the Vantage CNM server.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

22.17.1 Additional Configuration for Vantage CNM

If you have NAT routers or firewalls between the ZyWALL and the Vantage CNM server, you must configure them to forward TCP ports 8080 (HTTP), 443 (HTTPS) and 20 and 21 (FTP). They must also forward UDP ports 1864 and 1865.

23

UPnP

This chapter introduces the Universal Plug and Play feature. This chapter is only applicable when the ZyWALL is in router mode.

23.1 Universal Plug and Play Overview

Universal Plug and Play (UPnP) is a distributed, open networking standard that uses TCP/IP for simple peer-to-peer network connectivity between devices. A UPnP device can dynamically join a network, obtain an IP address, convey its capabilities and learn about other devices on the network. In turn, a device can leave a network smoothly and automatically when it is no longer in use.

23.1.1 How Do I Know If I'm Using UPnP?

UPnP hardware is identified as an icon in the Network Connections folder (Windows XP). Each UPnP compatible device installed on your network will appear as a separate icon. Selecting the icon of a UPnP device will allow you to access the information and properties of that device.

23.1.2 NAT Traversal

UPnP NAT traversal automates the process of allowing an application to operate through NAT. UPnP network devices can automatically configure network addressing, announce their presence in the network to other UPnP devices and enable exchange of simple product and service descriptions. NAT traversal allows the following:

- Dynamic port mapping
- Learning public IP addresses
- Assigning lease times to mappings

Windows Messenger is an example of an application that supports NAT traversal and UPnP.

See Chapter 17 on page 385 for further information about NAT.

23.1.3 Cautions with UPnP

The automated nature of NAT traversal applications in establishing their own services and opening firewall ports may present network security issues. Network information and configuration may also be obtained and modified by users in some network environments.

When a UPnP device joins a network, it announces its presence with a multicast message. For security reasons, the ZyWALL allows multicast messages on the LAN only.

All UPnP-enabled devices may communicate freely with each other without additional configuration. Disable UPnP if this is not your intention.

23.1.4 UPnP and ZyXEL

ZyXEL has achieved UPnP certification from the Universal Plug and Play Forum UPnP™ Implementers Corp. (UIC). ZyXEL's UPnP implementation supports IGD 1.0 (Internet Gateway Device).

See the following sections for examples of installing and using UPnP.

23.2 Configuring UPnP

Click **ADVANCED > UPnP** to display the **UPnP** screen.

Figure 293 ADVANCED > UPnP



The following table describes the fields in this screen.

Table 151 ADVANCED > UPnP

LABEL	DESCRIPTION
UPnP Setup	
Device Name	This identifies the ZyXEL device in UPnP applications.
Enable the Universal Plug and Play (UPnP) feature	Select this check box to activate UPnP. Be aware that anyone could use a UPnP application to open the web configurator's login screen without entering the ZyWALL's IP address (although you must still enter the password to access the web configurator).
Allow users to make configuration changes through UPnP	Select this check box to allow UPnP-enabled applications to automatically configure the ZyWALL so that they can communicate through the ZyWALL, for example by using NAT traversal, UPnP applications automatically reserve a NAT forwarding port in order to communicate with another UPnP enabled device; this eliminates the need to manually configure port forwarding for the UPnP enabled application.


Table 151 ADVANCED > UPnP

LABEL	DESCRIPTION
Allow UPnP to pass through Firewall	Select this check box to allow traffic from UPnP-enabled applications to bypass the firewall. Clear this check box to have the firewall block all UPnP application packets (for example, MSN packets).
Outgoing WAN Interface	Select through which WAN port you want to send out traffic from UPnP-enabled applications. If the WAN port you select loses its connection, the ZyWALL attempts to use the other WAN port. If the other WAN port also does not work, the ZyWALL drops outgoing packets from UPnP-enabled applications.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

23.3 Displaying UPnP Port Mapping

Click **ADVANCED > UPnP > Ports** to display the UPnP **Ports** screen. Use this screen to view the NAT port mapping rules that UPnP creates on the ZyWALL.

Figure 294 ADVANCED > UPnP > Ports

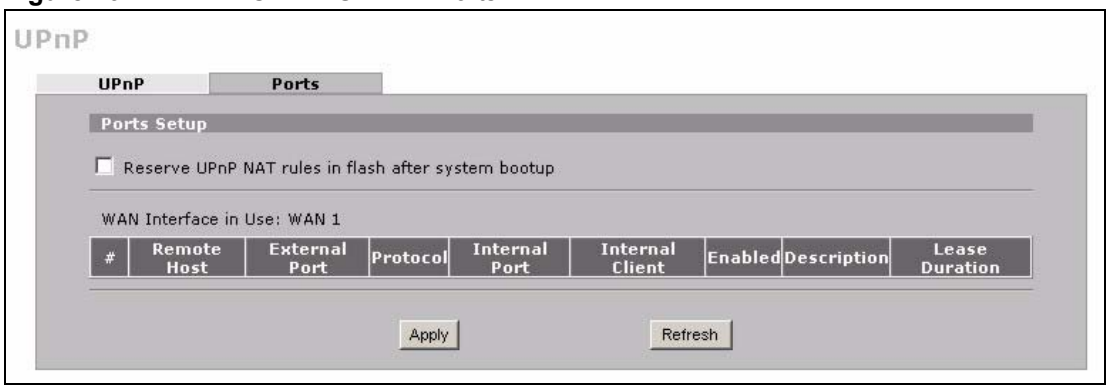

The following table describes the labels in this screen.

Table 152 ADVANCED > UPnP > Ports

LABEL	DESCRIPTION
Reserve UPnP NAT rules in flash after system bootup	Select this check box to have the ZyWALL retain UPnP created NAT rules even after restarting. If you use UPnP and you set a port on your computer to be fixed for a specific service (for example FTP for file transfers), this option allows the ZyWALL to keep a record when your computer uses UPnP to create a NAT forwarding rule for that service.
WAN Interface in Use	This field displays through which WAN interface the ZyWALL is currently sending out traffic from UPnP-enabled applications. This field displays **None** when UPnP is disabled or neither of the WAN ports has a connection.
The following read-only table displays information about the UPnP-created NAT mapping rule entries in the ZyWALL's NAT routing table.	
#	This is the index number of the UPnP-created NAT mapping rule entry.

Table 152 ADVANCED > UPnP > Ports (continued)

LABEL	DESCRIPTION
Remote Host	This field displays the source IP address (on the WAN) of inbound IP packets. Since this is often a wildcard, the field may be blank. When the field is blank, the ZyWALL forwards all traffic sent to the **External Port** on the WAN interface to the **Internal Client** on the **Internal Port**. When this field displays an external IP address, the NAT rule has the ZyWALL forward inbound packets to the **Internal Client** from that IP address only.
External Port	This field displays the port number that the ZyWALL "listens" on (on the WAN port) for connection requests destined for the NAT rule's **Internal Port** and **Internal Client**. The ZyWALL forwards incoming packets (from the WAN) with this port number to the **Internal Client** on the **Internal Port** (on the LAN). If the field displays "0", the ZyWALL ignores the **Internal Port** value and forwards requests on all external port numbers (that are otherwise unmapped) to the **Internal Client**.
Protocol	This field displays the protocol of the NAT mapping rule (TCP or UDP).
Internal Port	This field displays the port number on the **Internal Client** to which the ZyWALL should forward incoming connection requests.
Internal Client	This field displays the DNS host name or IP address of a client on the LAN. Multiple NAT clients can use a single port simultaneously if the internal client field is set to 255.255.255.255 for UDP mappings.
Enabled	This field displays whether or not this UPnP-created NAT mapping rule is turned on. The UPnP-enabled device that connected to the ZyWALL and configured the UPnP-created NAT mapping rule on the ZyWALL determines whether or not the rule is enabled.
Description	This field displays a text explanation of the NAT mapping rule.
Lease Duration	This field displays a dynamic port-mapping rule's time to live (in seconds). It displays "0" if the port mapping is static.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Refresh	Click **Refresh** update the screen's table.


23.4 Installing UPnP in Windows Example

This section shows how to install UPnP in Windows Me and Windows XP.


23.4.1 Installing UPnP in Windows Me

Follow the steps below to install UPnP in Windows Me.

1. Click **Start**, **Settings** and **Control Panel**. Double-click **Add/Remove Programs**.
2. Click on the **Windows Setup** tab and select **Communication** in the **Components** selection box. Click **Details**.

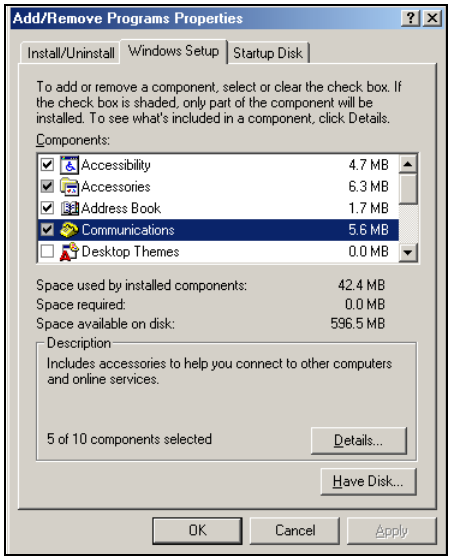


3. In the **Communications** window, select the **Universal Plug and Play** check box in the **Components** selection box.
4. Click **OK** to go back to the **Add/Remove Programs Properties** window and click **Next**.
5. Restart the computer when prompted.

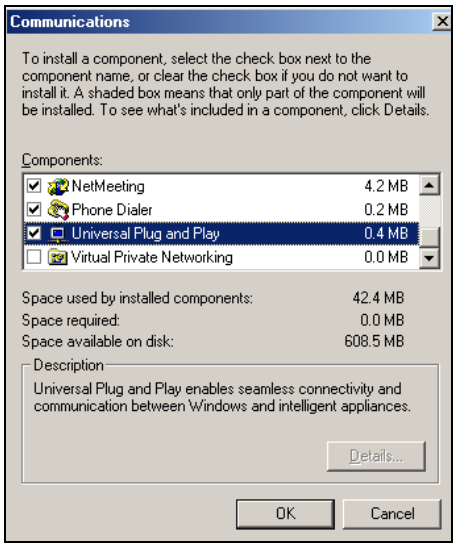


23.4.2 Installing UPnP in Windows XP

Follow the steps below to install UPnP in Windows XP.


1. Click **Start**, **Settings** and **Control Panel**.
2. Double-click **Network Connections**.
3. In the **Network Connections** window, click **Advanced** in the main menu and select **Optional Networking Components …**.
   The **Windows Optional Networking Components Wizard** window displays.

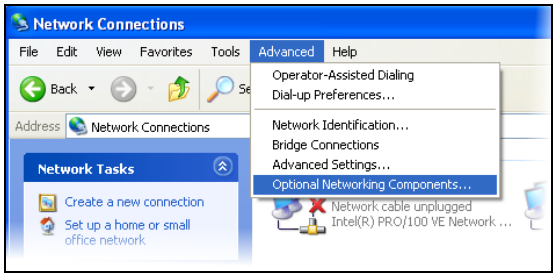

4. Select **Networking Service** in the **Components** selection box and click **Details**.

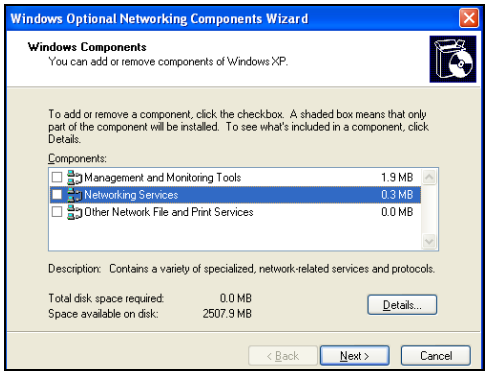

5. In the **Networking Services** window, select the **Universal Plug and Play** check box.
6. Click **OK** to go back to the **Windows Optional Networking Component Wizard** window and click **Next**.

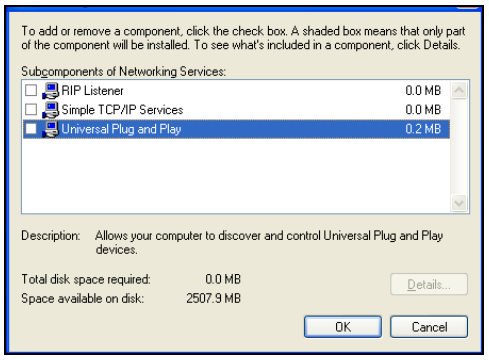


23.5 Using UPnP in Windows XP Example

This section shows you how to use the UPnP feature in Windows XP. You must already have UPnP installed in Windows XP and UPnP activated on the ZyXEL device.

Make sure the computer is connected to a LAN port of the ZyXEL device. Turn on your computer and the ZyXEL device.


23.5.1 Auto-discover Your UPnP-enabled Network Device


1. Click **Start** and **Control Panel**. Double-click **Network Connections**. An icon displays under **Internet Gateway**.
2. Right-click the icon and select **Properties**.

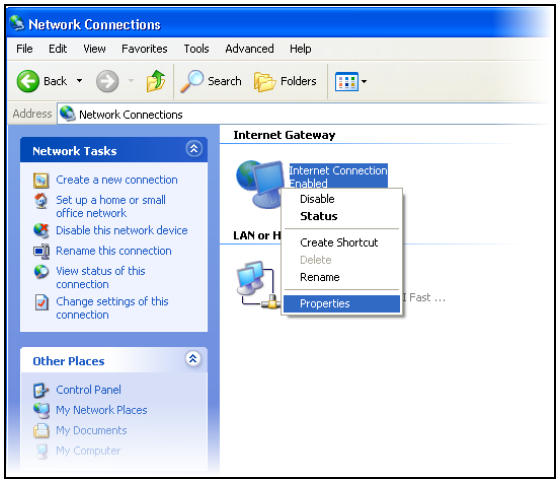


3. In the **Internet Connection Properties** window, click **Settings** to see the port mappings that were automatically created.

You may edit or delete the port mappings or click **Add** to manually add port mappings.

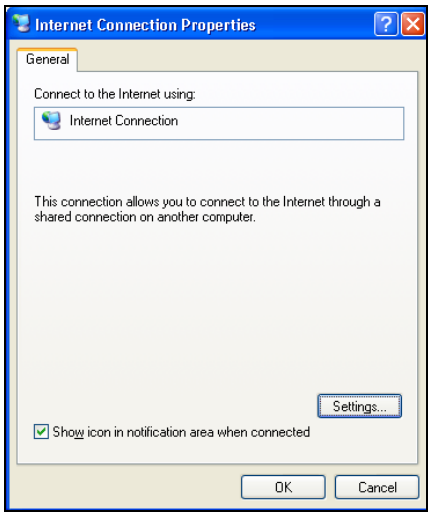


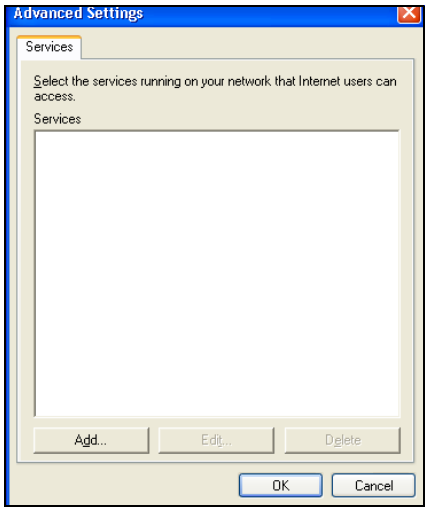

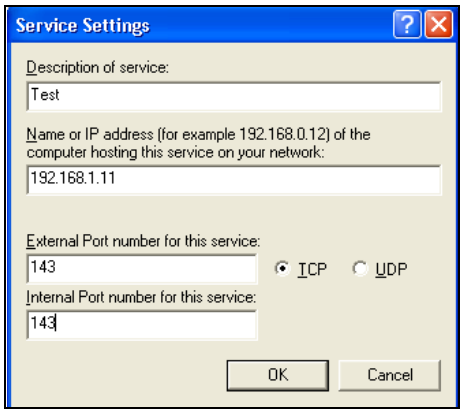

When the UPnP-enabled device is disconnected from your computer, all port mappings will be deleted automatically.

4 Select the **Show icon in notification area when connected** check box and click **OK**. An icon displays in the system tray.

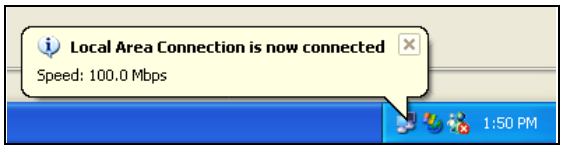

5 Double-click the icon to display your current Internet connection status.




23.5.2 Web Configurator Easy Access


With UPnP, you can access the web-based configurator on the ZyXEL device without finding out the IP address of the ZyXEL device first. This is helpful if you do not know the IP address of the ZyXEL device.

Follow the steps below to access the web configurator.


1. Click **Start** and then **Control Panel**.
2. Double-click **Network Connections**.
3. Select **My Network Places** under **Other Places**.

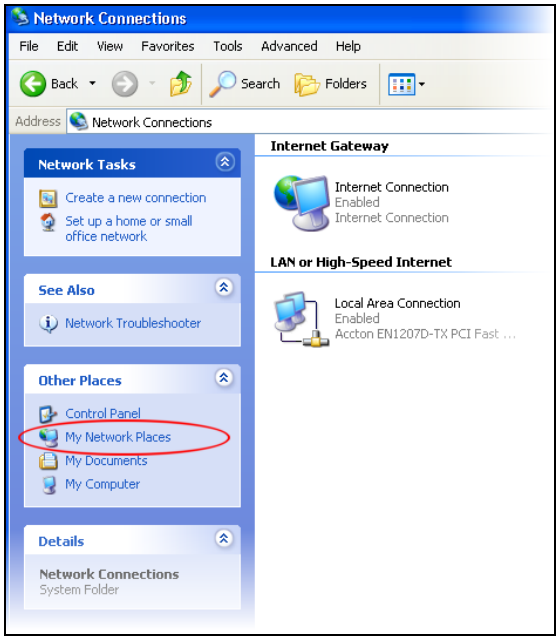

4. An icon with the description for each UPnP-enabled device displays under **Local Network**.
5. Right-click the icon for your ZyXEL device and select **Invoke**. The web configurator login screen displays.

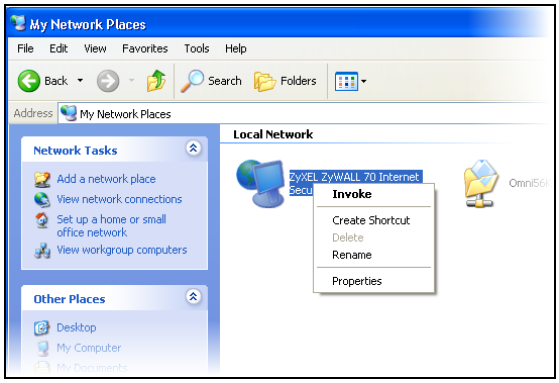

6 Right-click the icon for your ZyXEL device and select **Properties**. A properties window displays with basic information about the ZyXEL device.

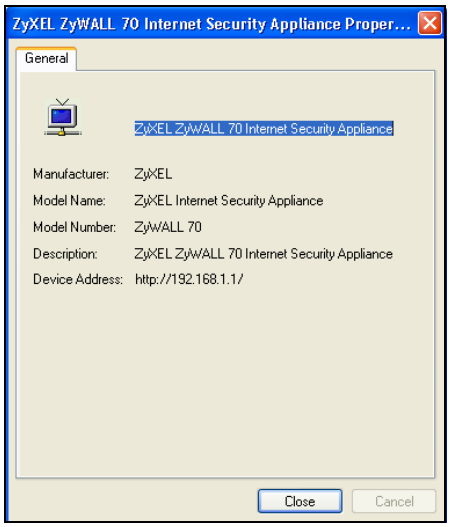

24

Custom Application

This chapter covers how to set the ZyWALL's to monitor custom port numbers for specific applications.

24.1 Custom Applicaton

Use custom application to have the ZyWALL's ALG and content filtering features monitor traffic on custom ports, in addition to the default ports.

By default, these ZyWALL features monitor traffic for the following protocols on these port numbers.

- FTP: 21
- SIP: 5060
- H.323: 1720
- SMTP: 25
- POP3: 110
- HTTP: 80



Changes in the **Custom APP** screen do not apply to the firewall.


24.2 Custom Applicaton Configuration

Click **ADVANCED > Custom APP** to open the **Custom Application** screen.



This screen only specifies what port numbers the ZyWALL checks for specific protocol traffic. Use other screens to enable or disable the monitoring of the protocol traffic.

Figure 295 ADVANCED > Custom APP

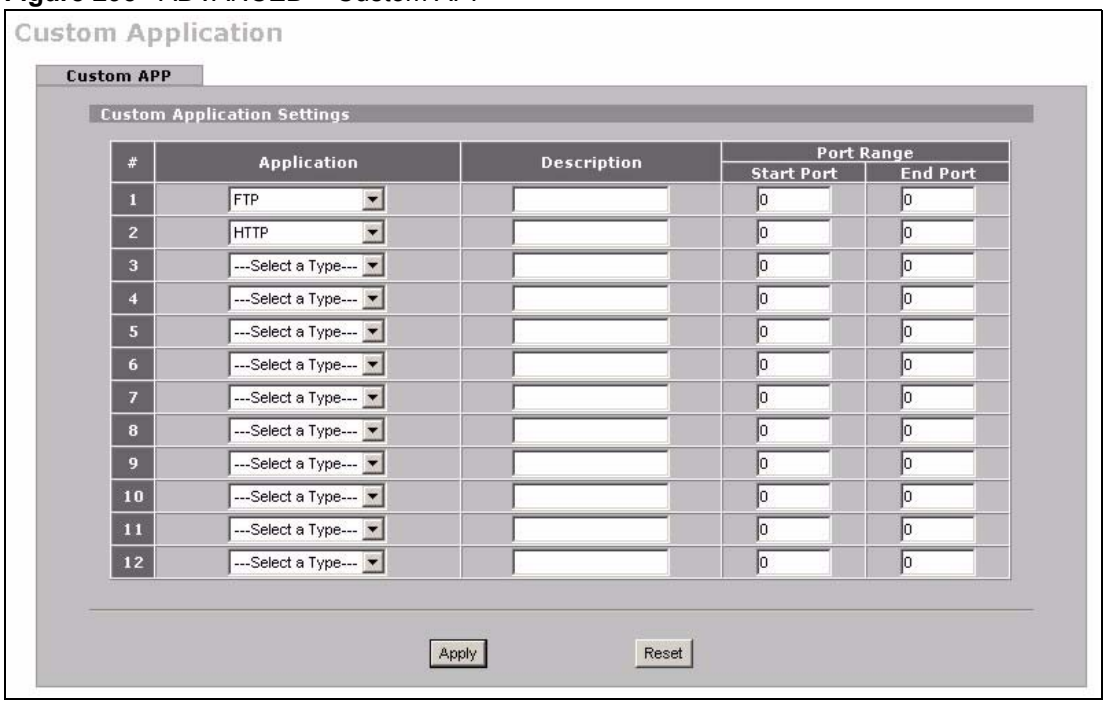

The following table describes the labels in this screen.

Table 153 ADVANCED > Custom APP

LABEL	DESCRIPTION
Application	Select the application for which you want the ZyWALL to monitor specific ports. You can use the same application in more than one entry. To remove an entry, select **Select a Type**.
Description	Enter information about the reason for monitoring custom port numbers for this protocol.
Start Port	Enter the starting port for the range that the ZyWALL is to monitor for this application. If you are only entering a single port number, enter it here.
End Port	Enter the ending port for the range that the ZyWALL is to monitor for this application.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

25

ALG Screen

This chapter covers how to use the ZyWALL's ALG feature to allow certain applications to pass through the ZyWALL.

25.1 ALG Introduction

An Application Layer Gateway (ALG) manages a specific protocol (such as SIP, H.323 or FTP) at the application layer. The ZyWALL can function as an ALG to allow certain NAT un-friendly applications (such as SIP) to operate properly through the ZyWALL.

Some applications cannot operate through NAT (are NAT un-friendly) because they embed IP addresses and port numbers in their packets' data payload. The ZyWALL examines and uses IP address and port number information embedded in the data stream. When a device behind the ZyWALL uses an application for which the ZyWALL has ALG service enabled, the ZyWALL translates the device's private IP address inside the data stream to a public IP address. It also records session port numbers and dynamically creates implicit NAT port forwarding and firewall rules for the application's traffic to come in from the WAN to the LAN.

25.1.1 ALG and NAT

The ZyWALL dynamically creates an implicit NAT session for the application's traffic from the WAN to the LAN.

The ALG on the ZyWALL supports all NAT mapping types, including **One to One**, **Many to One**, **Many to Many Overload** and **Many One to One**.

25.1.2 ALG and the Firewall

The ZyWALL uses the dynamic port that the session uses for data transfer in creating an implicit temporary firewall rule for the session's traffic. The firewall rule only allows the session's traffic to go through in the direction that the ZyWALL determines from its inspection of the data payload of the application's packets. The firewall rule is automatically deleted after the application's traffic has gone through.

25.1.3 ALG and Multiple WAN

When the ZyWALL has two WAN interfaces and uses the second highest priority WAN interfaces as a back up, traffic cannot pass through when the primary WAN connection fails. The ZyWALL does not automatically change the connection to the secondary WAN interfaces.

If the primary WAN connection fails, the client needs to re-initialize the connection through the secondary WAN interfaces to have the connection go through the secondary WAN interfaces.

When the ZyWALL uses both of the WAN interfaces at the same time, you can configure routing policies to specify the WAN interfaces that the connection's traffic is to use.

25.2 FTP

File Transfer Protocol (FTP) is an Internet file transfer service that operates on the Internet and over TCP/IP networks. A system running the FTP server accepts commands from a system running an FTP client. The service allows users to send commands to the server for uploading and downloading files. The FTP ALG allows TCP packets with a port 21 destination to pass through. If the FTP server is located on the LAN, you must also configure NAT port forwarding and firewall rules if you want to allow access to the server from the WAN.

25.3 H.323

H.323 is a standard teleconferencing protocol suite that provides audio, data and video conferencing. It allows for real-time point-to-point and multipoint communication between client computers over a packet-based network that does not provide a guaranteed quality of service. NetMeeting uses H.323.

25.4 RTP


When you make a VoIP call using H.323 or SIP, the RTP (Real time Transport Protocol) is used to handle voice data transfer. See RFC 1889 for details on RTP.

25.4.1 H.323 ALG Details

- The H.323 ALG supports peer-to-peer H.323 calls.
- The H.323 ALG handles H.323 calls that go through NAT or that the ZyWALL routes. You can also make other H.323 calls that do not go through NAT or routing. Examples would be calls between LAN IP addresses that are on the same subnet.
- The H.323 ALG allows calls to go out through NAT. For example, you could make a call from a private IP address on the LAN to a peer device on the WAN.

- You must configure the firewall and port forwarding to allow incoming (peer-to-peer) calls from the WAN to a private IP address on the LAN, DMZ or WLAN. The following example shows H.323 signaling (1) and audio (2) sessions between H.323 devices A and B.


Figure 296 H.323 ALG Example

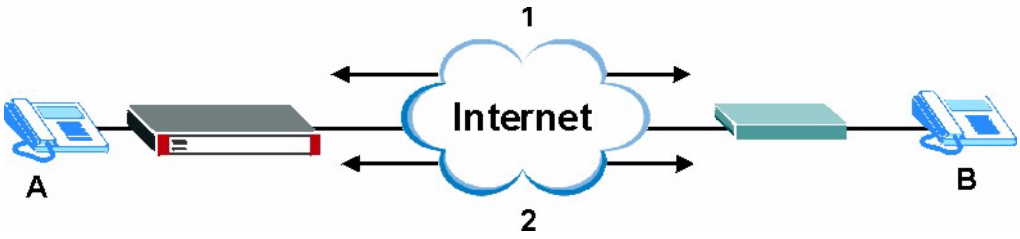

- With multiple WAN IP addresses on the ZyWALL, you can configure different firewall and port forwarding rules to allow incoming calls from each WAN IP address to go to a specific IP address on the LAN, DMZ or WLAN. Use policy routing to have the H.323 calls from each of those LAN, DMZ or WLAN IP addresses go out through the same WAN IP address that calls come in on. The policy routing lets the ZyWALL correctly forward the return traffic for the calls initiated from the LAN IP addresses.

  For example, you configure firewall and port forwarding rules to allow LAN IP address **A** to receive calls through public WAN IP address **1**. You configure different firewall and port forwarding rules to allow LAN IP address **B** to receive calls through public WAN IP address **2**. You configure corresponding policy routes to have calls from LAN IP address **A** go out through WAN IP address **1** and calls from LAN IP address **B** go out through WAN IP address **2**.


Figure 297 H.323 with Multiple WAN IP Addresses

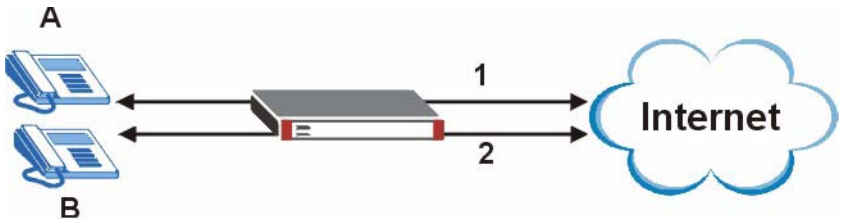

- When you configure the firewall and port forwarding to allow calls from the WAN to a specific IP address on the LAN, you can also use policy routing to have H.323 calls from other LAN, DMZ or WLAN IP addresses go out through a different WAN IP address. The policy routing lets the ZyWALL correctly forward the return traffic for the calls initiated from the LAN, DMZ or WLAN IP addresses.

  For example, you configure the firewall and port forwarding to allow LAN IP address **A** to receive calls from the Internet through WAN IP address **1**. You also use a policy route to have LAN IP address **A** make calls out through WAN IP address **1**. Configure another policy route to have H.323 calls from LAN IP addresses **B** and **C** go out through WAN IP address **2**. Even though only LAN IP address **A** can receive incoming calls from the Internet, LAN IP addresses **B** and **C** can still make calls out to the Internet.

Figure 298 H.323 Calls from the WAN with Multiple Outgoing Calls

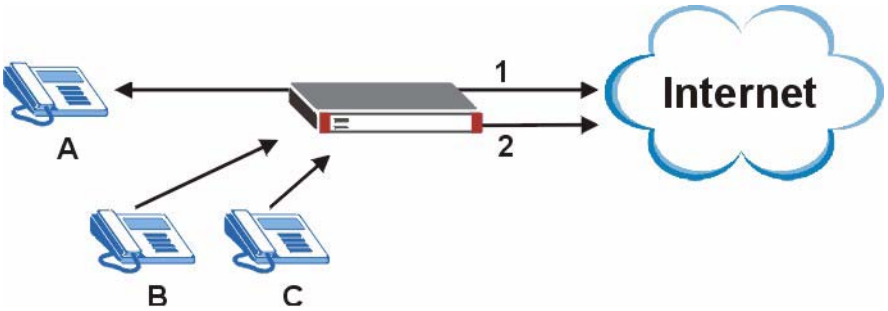

- The H.323 ALG operates on TCP packets with a port 1720 destination.
- The ZyWALL allows H.323 audio connections.
- The ZyWALL can also apply bandwidth management to traffic that goes through the H.323 ALG.

25.5 SIP

The Session Initiation Protocol (SIP) is an application-layer control (signaling) protocol that handles the setting up, altering and tearing down of voice and multimedia sessions over the Internet. SIP is used in VoIP (Voice over IP), the sending of voice signals over the Internet Protocol.

SIP signaling is separate from the media for which it handles sessions. The media that is exchanged during the session can use a different path from that of the signaling. SIP handles telephone calls and can interface with traditional circuit-switched telephone networks.

25.5.1 STUN


STUN (Simple Traversal of User Datagram Protocol (UDP) through Network Address Translators) allows the VoIP device to find the presence and types of NAT routers and/or firewalls between it and the public Internet. STUN also allows the VoIP device to find the public IP address that NAT assigned, so the VoIP device can embed it in the SIP data stream. See RFC 3489 for details on STUN. You do not need to use STUN for devices behind the ZyWALL if you enable the SIP ALG.

25.5.2 SIP ALG Details

- SIP clients can be connected to the LAN, WLAN or DMZ. A SIP server must be on the WAN.
- You can make and receive calls between the LAN and the WAN, between the WLAN and the WAN and/or between the DMZ and the WAN. You cannot make a call between the LAN and the LAN, between the LAN and the DMZ, between the LAN and the WLAN, between the DMZ and the DMZ, and so on.
- The SIP ALG allows UDP packets with a port 5060 destination to pass through.
- The ZyWALL allows SIP audio connections.

The following example shows SIP signaling (**1**) and audio (**2**) sessions between SIP clients **A** and **B** and the SIP server.

Figure 299 SIP ALG Example

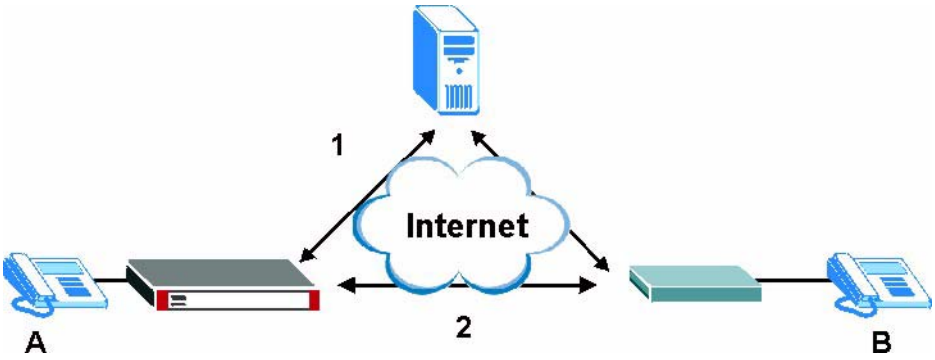

25.5.3 SIP Signaling Session Timeout

Most SIP clients have an "expire" mechanism indicating the lifetime of signaling sessions. The SIP user agent sends registration packets to the SIP server periodically and keeps the session alive in the ZyWALL.

If the SIP client does not have this mechanism and makes no calls during the ZyWALL SIP timeout default (60 minutes), the ZyWALL SIP ALG drops any incoming calls after the timeout period.

25.5.4 SIP Audio Session Timeout


If no voice packets go through the SIP ALG before the timeout period (default 5 minutes) expires, the SIP ALG does not drop the call but blocks all voice traffic and deletes the audio session. You cannot hear anything and you will need to make a new call to continue your conversation.

25.6 ALG Screen

Click **ADVANCED > ALG** to open the **ALG** screen. Use the **ALG** screen to turn individual ALGs off or on and set the SIP timeout.

If the ZyWALL provides an ALG for a service, you must enable the ALG in order to perform bandwidth management on that service's traffic.

Figure 300 ADVANCED > ALG

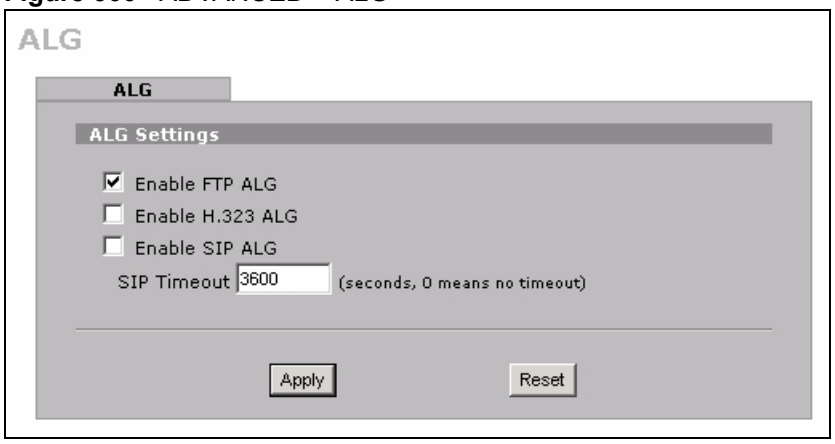

The following table describes the labels in this screen.

Table 154 ADVANCED > ALG

LABEL	DESCRIPTION
Enable FTP ALG	Select this check box to allow FTP sessions to pass through the ZyWALL. FTP (File Transfer Program) is a program that enables fast transfer of files, including large files that may not be possible by e-mail.
Enable H.323 ALG	Select this check box to allow H.323 sessions to pass through the ZyWALL. H.323 is a protocol used for audio communications over networks.
Enable SIP ALG	Select this check box to allow SIP sessions to pass through the ZyWALL. SIP is a signaling protocol used in VoIP (Voice over IP), the sending of voice signals over Internet Protocol.
SIP Timeout	Most SIP clients have an “expire” mechanism indicating the lifetime of signaling sessions. The SIP user agent sends registration packets to the SIP server periodically and keeps the session alive in the ZyWALL. If the SIP client does not have this mechanism and makes no calls during the ZyWALL SIP timeout (default 60 minutes), the ZyWALL SIP ALG drops any incoming calls after the timeout period. Enter the SIP signaling session timeout value.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

PART V
Logs and Maintenance

Logs Screens (481)
Maintenance (511)

26

Logs Screens

This chapter contains information about configuring general log settings and viewing the ZyWALL's logs. Refer to Section 26.5 on page 492 for example log message explanations.


26.1 Configuring View Log

The web configurator allows you to look at all of the ZyWALL's logs in one location.

Click **LOGS** to open the **View Log** screen. Use the **View Log** screen to see the logs for the categories that you selected in the **Log Settings** screen (see Section 26.3 on page 484). Options include logs about system maintenance, system errors, access control, allowed or blocked web sites, blocked web features (such as ActiveX controls, java and cookies), attacks (such as DoS) and IPSec.

Log entries in red indicate system error logs. The log wraps around and deletes the old entries after it fills. Click a column heading to sort the entries. A triangle indicates ascending or descending sort order.

Figure 301 LOGS > View Log

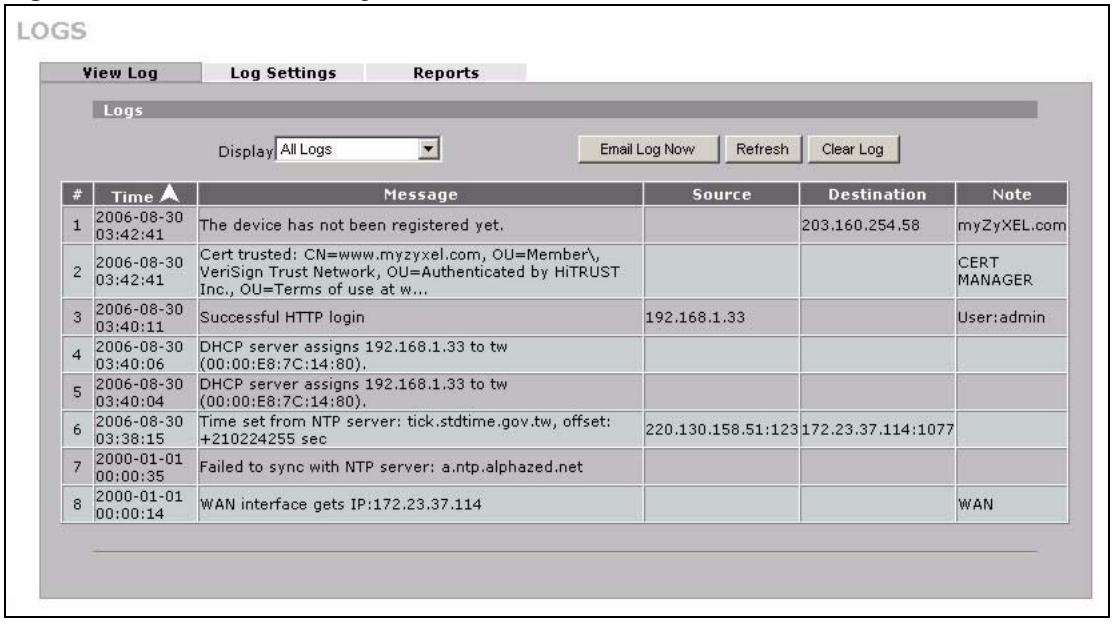

The following table describes the labels in this screen.

Table 155 LOGS > View Log

LABEL	DESCRIPTION
Display	The categories that you select in the **Log Settings** page (see Section 26.3 on page 484) display in the drop-down list box. Select a category of logs to view; select **All Logs** to view logs from all of the log categories that you selected in the **Log Settings** page.
#	This field displays the log number.
Time	This field displays the time the log was recorded. See Section 27.4 on page 513 to configure the ZyWALL's time and date.
Message	This field states the reason for the log.
Source	This field lists the source IP address and the port number of the incoming packet.
Destination	This field lists the destination IP address and the port number of the incoming packet.
Note	This field displays additional information about the log entry.
Email Log Now	Click **Email Log Now** to send the log screen to the e-mail address specified in the **Log Settings** page (make sure that you have first filled in the **E-mail Log Settings** fields in **Log Settings**, see Section 26.3 on page 484).
Refresh	Click **Refresh** to renew the log screen.
Clear Log	Click **Clear Log** to delete all the logs.

26.2 Log Description Example

The following is an example of how a log displays in the command line interpreter and a description of the sample log. Refer to the Section 26.5 on page 492 for more log message descriptions and the appendx for details on using the command line interpreter to display logs.

```
#  .time                source                destination
notes
    message
  5|06/08/2004 05:58:20 |172.16.4.187:137      |172.16.255.255:137
|ACCESS BLOCK
    Firewall default policy: UDP (W to W/ZW)
```

Table 156 Log Description Example

LABEL	DESCRIPTION
#	This is log number five.
time	The log was generated on June 8, 2004 at 5:58 and 20 seconds AM.
source	The log was generated due to a NetBIOS packet sent from IP address 172.16.4.187 port 137.
destination	The NetBIOS packet was sent to the 172.16.255.255 subnet port 137. This was a NetBIOS UDP broadcast packet meant to discover devices on the network.

Table 156 Log Description Example

LABEL	DESCRIPTION
notes	The ZyWALL blocked the packet.
message	The ZyWALL blocked the packet in accordance with the firewall's default policy of blocking sessions that are initiated from the WAN. "UDP" means that this was a User Datagram Protocol packet. "W to W/ZW" indicates that the packet was traveling from the WAN to the WAN or the ZyWALL.

26.2.1 About the Certificate Not Trusted Log


myZyXEL.com and the update server use certificates signed by VeriSign to identify themselves. If the ZyWALL does not have a CA certificate signed by VeriSign as a trusted CA, the ZyWALL will not trust the certificate from myZyXEL.com and the update server. The ZyWALL will generate a log like "Due to error code(11), cert not trusted: SSL/TLS peer certif..." for every time it attempt to establish a (HTTPS) connection with myZyXEL.com and the update server. The V4.00 default configuration file includes a trusted CA certificate signed by VeriSign. If you upgraded to ZyNOS V4.00 firmware without uploading the V4.00 default configuration file, you can download a CA certificate signed by VeriSign from myZyXEL.com and import it into the ZyWALL as a trusted CA. This will stop the ZyWALL from generating this log every time it attempts to connect with myzyxel.com and the update server.

Follow the steps below to download the certificate from myZyXEL.com.

1 Go to http://www.myZyXEL.com and log in with your account.


2 Click **Download Center** and then **Certificate Download**.

Figure 302 myZyXEL.com: Download Center

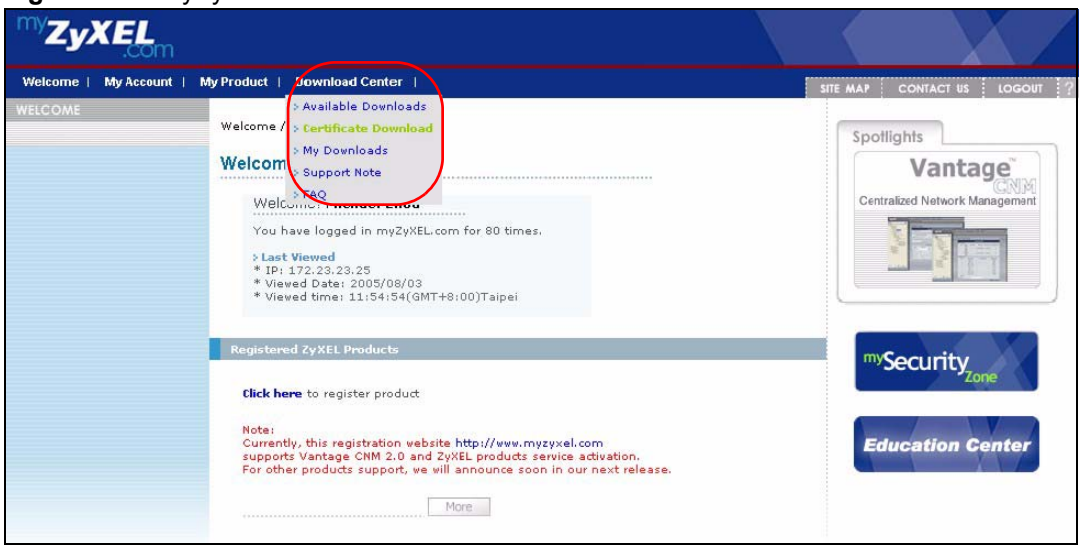

3 Click the link in the **Certificate Download** screen.

Figure 303 myZyXEL.com: Certificate Download

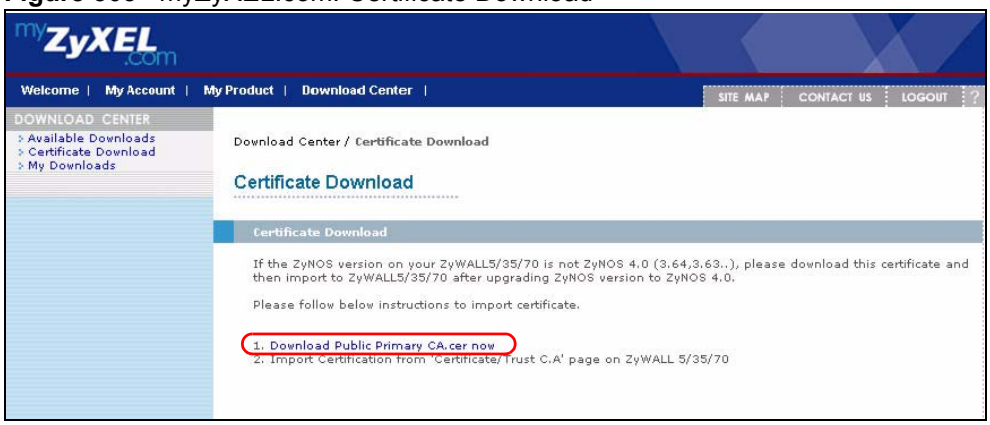

26.3 Configuring Log Settings


To change your ZyWALL's log settings, click **LOGS** > **Log Settings**. The screen appears as shown.

Use the **Log Settings** screen to configure to where the ZyWALL is to send logs; the schedule for when the ZyWALL is to send the logs and which logs and/or immediate alerts the ZyWALL is to send.

An alert is a type of log that warrants more serious attention. They include system errors, attacks (access control) and attempted access to blocked web sites or web sites with restricted web features such as cookies, active X and so on. Some categories such as **System Errors** consist of both logs and alerts. You may differentiate them by their color in the **View Log** screen. Alerts display in red and logs display in black.

Alerts are e-mailed as soon as they happen. Logs may be e-mailed as soon as the log is full (see **Log Schedule**). Selecting many alert and/or log categories (especially **Access Control**) may result in many e-mails being sent.

Figure 304 LOGS > Log Settings

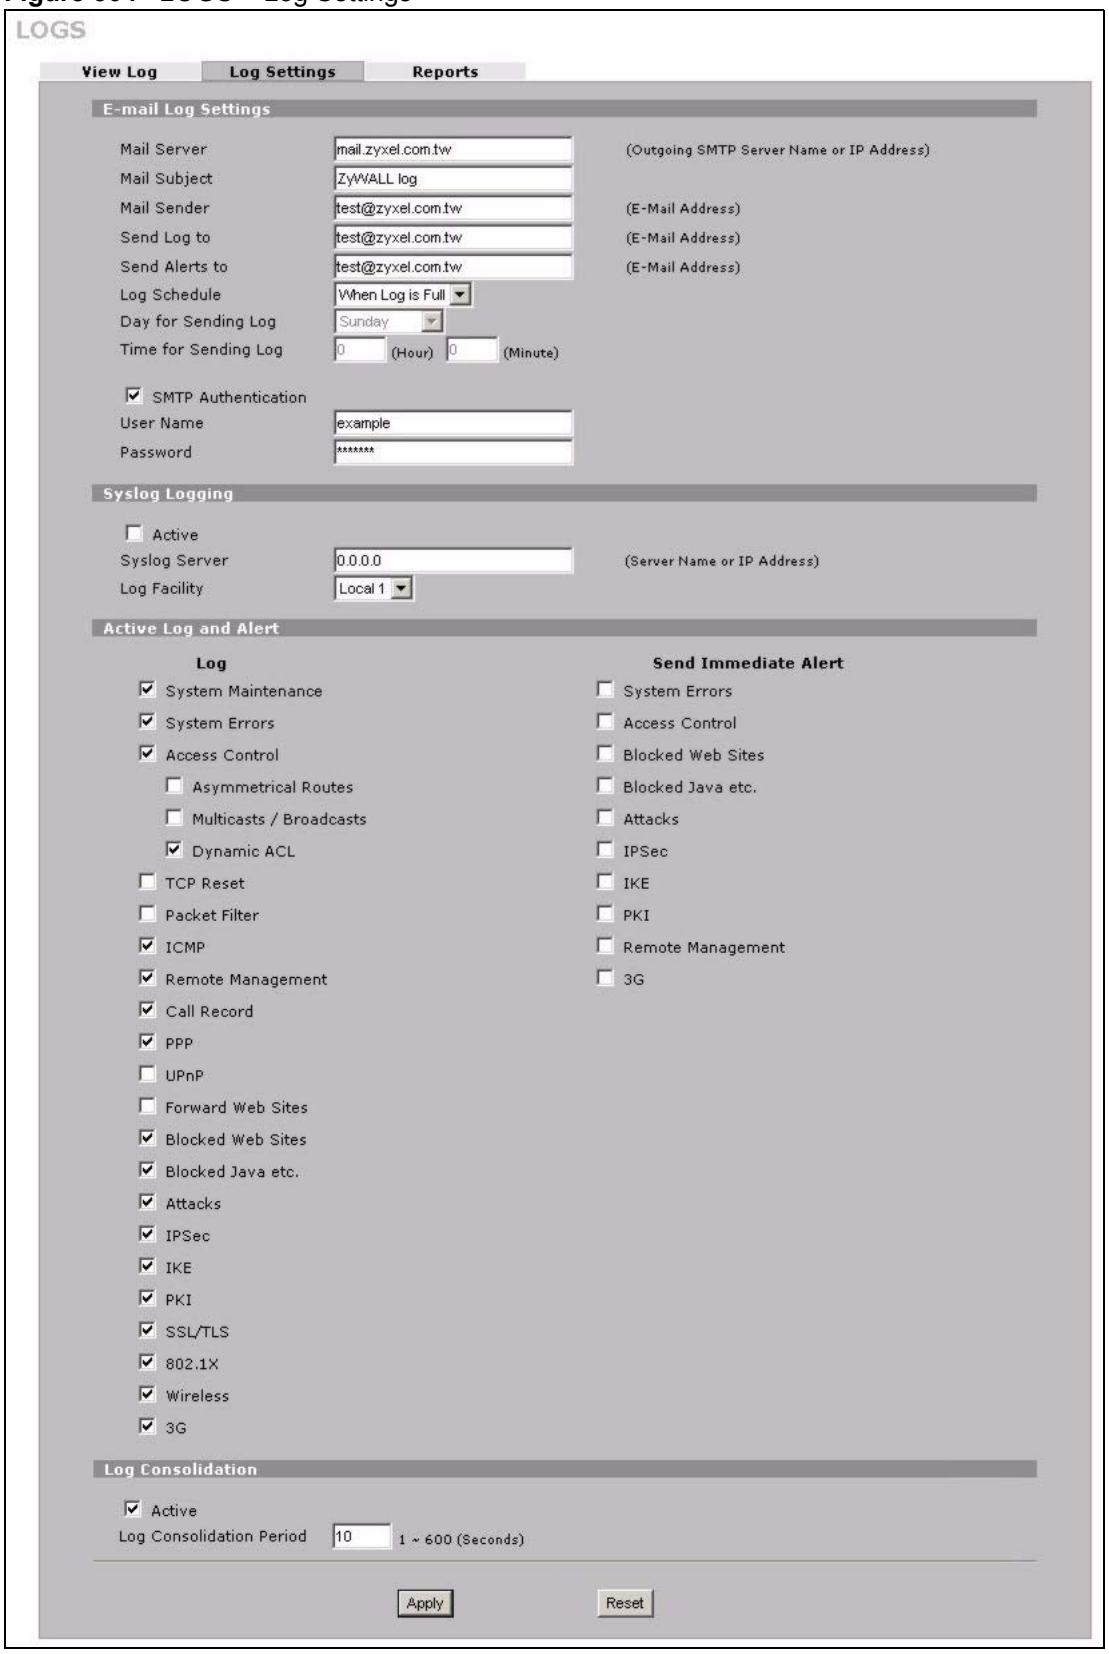

The following table describes the labels in this screen.

Table 157 LOGS > Log Settings

LABEL	DESCRIPTION
E-mail Log Settings	
Mail Server	Enter the server name or the IP address of the mail server for the e-mail addresses specified below. If this field is left blank, logs and alert messages will not be sent via e-mail.
Mail Subject	Type a title that you want to be in the subject line of the log e-mail message that the ZyWALL sends.
Mail Sender	Enter the e-mail address that you want to be in the from/sender line of the log e-mail message that the ZyWALL sends. If you activate SMTP authentication, the e-mail address must be able to be authenticated by the mail server as well.
Send Log To	Logs are sent to the e-mail address specified in this field. If this field is left blank, logs will not be sent via e-mail.
Send Alerts To	Alerts are sent to the e-mail address specified in this field. If this field is left blank, alerts will not be sent via e-mail.
Log Schedule	This drop-down menu is used to configure the frequency of log messages being sent as E-mail: **Daily** **Weekly** **Hourly** **When Log is Full** **None**. If you select **Weekly** or **Daily**, specify a time of day when the E-mail should be sent. If you select **Weekly**, then also specify which day of the week the E-mail should be sent. If you select **When Log is Full**, an alert is sent when the log fills up. If you select **None**, no log messages are sent.
Day for Sending Log	Use the drop down list box to select which day of the week to send the logs.
Time for Sending Log	Enter the time of the day in 24-hour format (for example 23:00 equals 11:00 pm) to send the logs.
SMTP Authentication	SMTP (Simple Mail Transfer Protocol) is the message-exchange standard for the Internet. SMTP enables you to move messages from one e-mail server to another. Select the check box to activate SMTP authentication. If mail server authentication is needed but this feature is disabled, you will not receive the e-mail logs.
User Name	Enter the user name (up to 31 characters) (usually the user name of a mail account).
Password	Enter the password associated with the user name above.
Syslog Logging	Syslog allows you to send system logs to a server. Syslog logging sends a log to an external syslog server.
Active	Click **Active** to enable syslog logging.
Syslog Server	Enter the server name or IP address of the syslog server that will log the selected categories of logs.
Log Facility	Select a location from the drop down list box. The log facility allows you to log the messages to different files in the syslog server. Refer to the documentation of your syslog program for more details.
Active Log and Alert	
Log	Select the categories of logs that you want to record. Logs include alerts.

Table 157 LOGS > Log Settings (continued)

LABEL	DESCRIPTION
Send Immediate Alert	Select the categories of alerts for which you want the ZyWALL to instantly e-mail alerts to the e-mail address specified in the **Send Alerts To** field.
Log Consolidation	
Active	Some logs (such as the Attacks logs) may be so numerous that it becomes easy to ignore other important log messages. Select this check box to merge logs with identical messages into one log. You can use the `sys log consolidate msglist` command to see what log messages will be consolidated.
Log Consolidation Period	Specify the time interval during which the ZyWALL merges logs with identical messages into one log.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

26.4 Configuring Reports

The **Reports** screen displays which computers on the LAN, DMZ or WLAN send and receive the most traffic, what kinds of traffic are used the most and which web sites are visited the most often. The ZyWALL can record and display the following network usage details:

- Web sites visited the most often
- Number of times the most visited web sites were visited
- The most-used protocols or service ports
- The amount of traffic for the most used protocols or service ports
- The LAN, DMZ or WLAN IP addresses to and/or from which the most traffic has been sent
- How much traffic has been sent to and from the LAN, DMZ or WLAN IP addresses to and/or from which the most traffic has been sent




The web site hit count may not be 100% accurate because sometimes when an individual web page loads, it may contain references to other web sites that also get counted as hits.

The ZyWALL records web site hits by counting the HTTP GET packets. Many web sites include HTTP GET references to other web sites and the ZyWALL may count these as hits, thus the web hit count is not (yet) 100% accurate.

Click **LOGS > Reports** to display the following screen.

Figure 305 LOGS > Reports

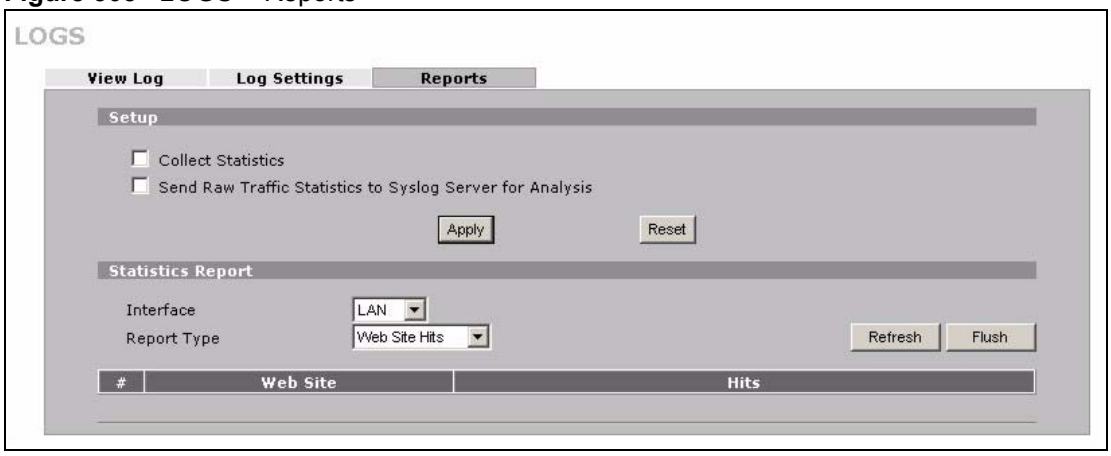

Enabling the ZyWALL's reporting function decreases the overall throughput by about 1 Mbps.

The following table describes the labels in this screen.

Table 158 LOGS > Reports


LABEL	DESCRIPTION
Collect Statistics	Select the check box and click **Apply** to have the ZyWALL record report data.
Send Raw Traffic Statistics to Syslog Server for Analysis	Select the check box and click **Apply** to have the ZyWALL send unprocessed traffic statistics to a syslog server for analysis. You must have the syslog server already configured in the **Log Settings** screen.
Apply	Click **Apply** to save your changes to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.
Interface	Select on which interface (**LAN**, **DMZ** or **WLAN**) the logs will be collected. The logs on the DMZ, LAN or WLAN IP alias 1 and 2 are also recorded.
Report Type	Use the drop-down list box to select the type of reports to display. **Web Site Hits** displays the web sites that have been visited the most often from the LAN and how many times they have been visited. **Protocol/Port** displays the protocols or service ports that have been used the most and the amount of traffic for the most used protocols or service ports. **Host IP Address** displays the LAN, DMZ or WLAN IP addresses to and /or from which the most traffic has been sent and how much traffic has been sent to and from those IP addresses.
Refresh	Click **Refresh** to update the report display. The report also refreshes automatically when you close and reopen the screen.
Flush	Click **Flush** to discard the old report data and update the report display.

All of the recorded reports data is erased when you turn off the ZyWALL.

26.4.1 Viewing Web Site Hits

In the **Reports** screen, select **Web Site Hits** from the **Report Type** drop-down list box to have the ZyWALL record and display which web sites have been visited the most often and how many times they have been visited.

Figure 306 LOGS > Reports: Web Site Hits Example

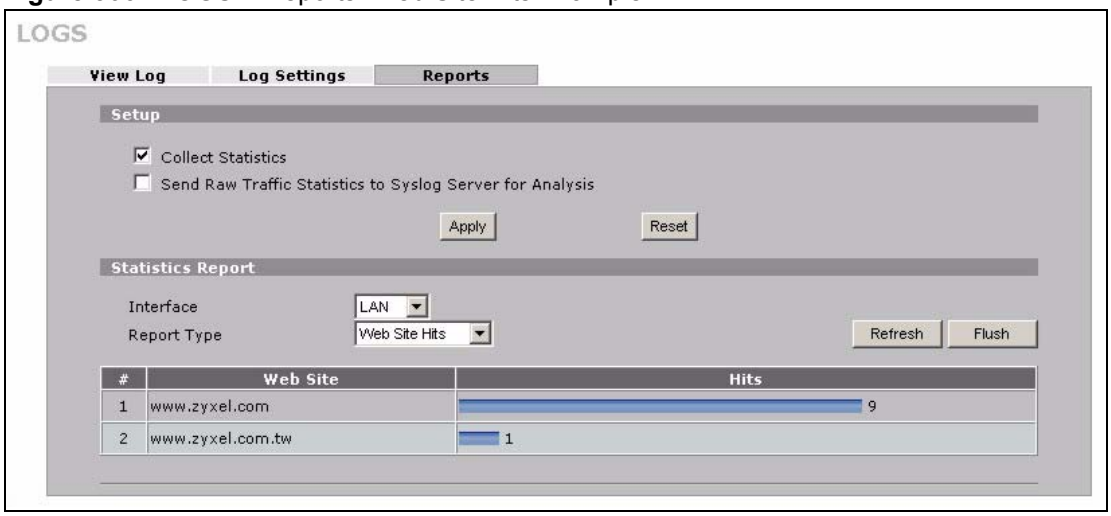

The following table describes the label in this screen.

Table 159 LOGS > Reports: Web Site Hits Report


LABEL	DESCRIPTION
Web Site	This column lists the domain names of the web sites visited most often from computers on the LAN, DMZ or WLAN. The names are ranked by the number of visits to each web site and listed in descending order with the most visited web site listed first. The ZyWALL counts each page viewed in a web site as another hit on the web site.
Hits	This column lists how many times each web site has been visited. The count starts over at 0 if a web site passes the hit count limit (see Table 162 on page 492).

26.4.2 Viewing Host IP Address

In the **Reports** screen, select **Host IP Address** from the **Report Type** drop-down list box to have the ZyWALL record and display the LAN, DMZ or WLAN IP addresses that the most traffic has been sent to and/or from and how much traffic has been sent to and/or from those IP addresses.

Computers take turns using dynamically assigned LAN, DMZ or WLAN IP addresses. The ZyWALL continues recording the bytes sent to or from a LAN, DMZ or WLAN IP address when it is assigned to a different computer.

Figure 307 LOGS > Reports: Host IP Address Example

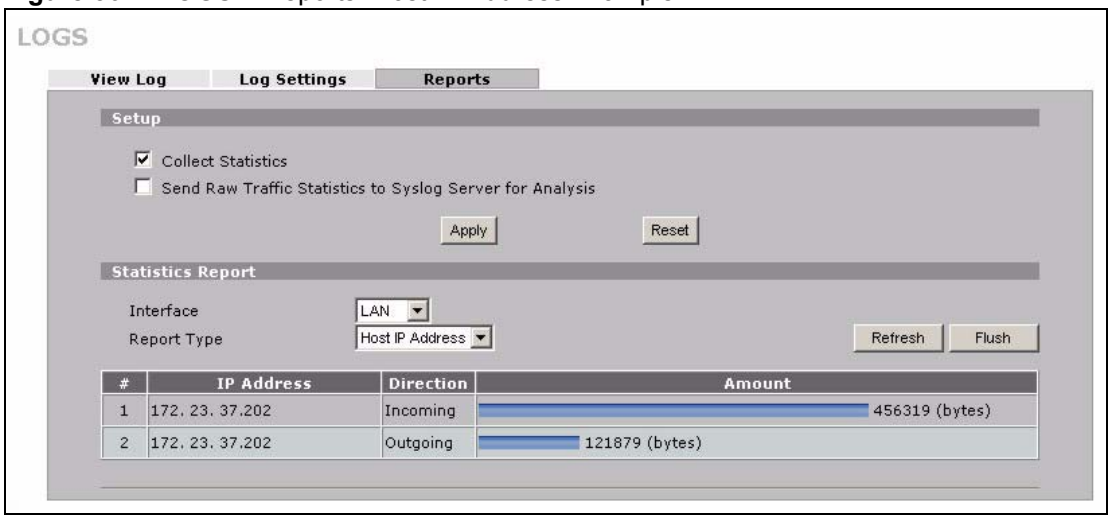

The following table describes the labels in this screen.


Table 160 LOGS > Reports: Host IP Address

LABEL	DESCRIPTION
IP Address	This column lists the LAN, DMZ or WLAN IP addresses to and/or from which the most traffic has been sent. The LAN, DMZ or WLAN IP addresses are listed in descending order with the LAN, DMZ or WLAN IP address to and/or from which the most traffic was sent listed first.
Direction	This field displays **Incoming** to denote traffic that is coming in from the WAN to the LAN, DMZ or WLAN. This field displays **Outgoing** to denote traffic that is going out from the LAN, DMZ or WLAN to the WAN.
Amount	This column displays how much traffic has gone to and from the listed LAN, DMZ or WLAN IP addresses. The measurement unit shown (bytes, Kbytes, Mbytes or Gbytes) varies with the amount of traffic sent to and from the LAN, DMZ or WLAN IP address. The count starts over at 0 if the total traffic sent to and from a LAN, DMZ or WLAN IP passes the bytes count limit (see Table 162 on page 492).

26.4.3 Viewing Protocol/Port

In the **Reports** screen, select **Protocol/Port** from the **Report Type** drop-down list box to have the ZyWALL record and display which protocols or service ports have been used the most and the amount of traffic for the most used protocols or service ports.

Figure 308 LOGS > Reports: Protocol/Port Example

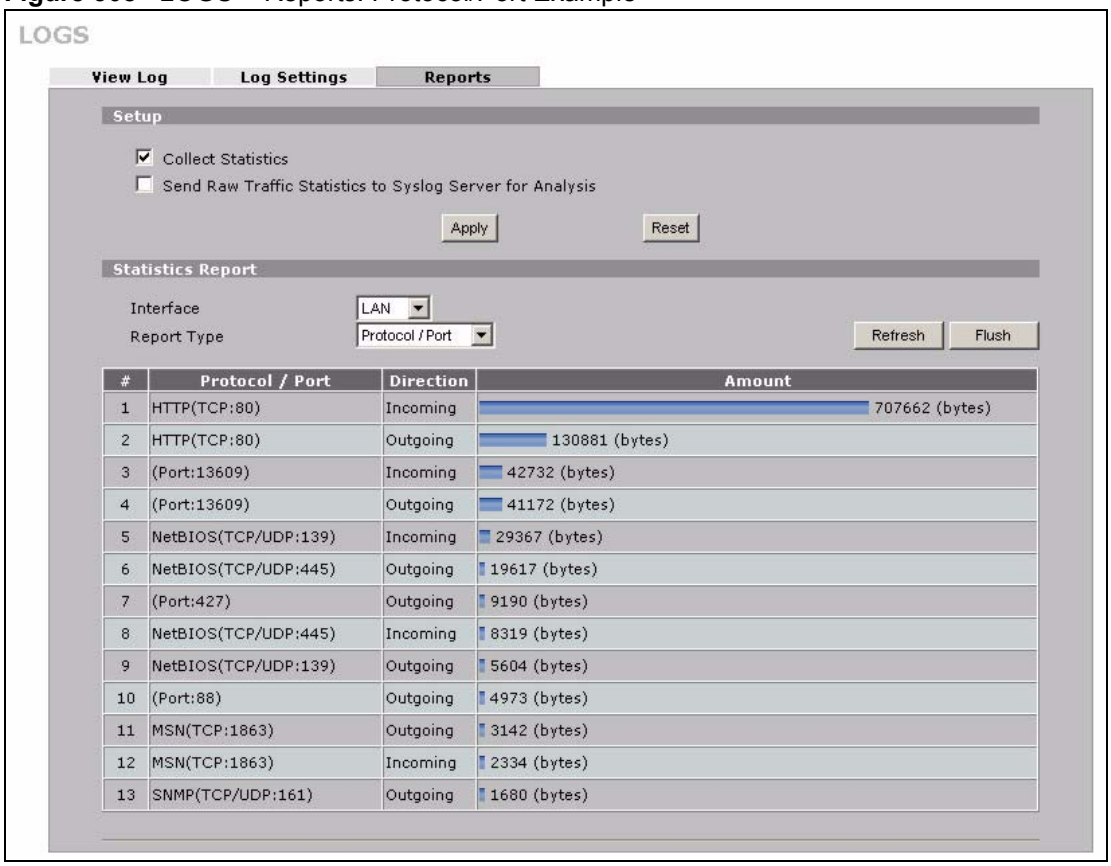

The following table describes the labels in this screen.

Table 161 LOGS > Reports: Protocol/ Port

LABEL	DESCRIPTION
Protocol/Port	This column lists the protocols or service ports for which the most traffic has gone through the ZyWALL. The protocols or service ports are listed in descending order with the most used protocol or service port listed first.
Direction	This field displays **Incoming** to denote traffic that is coming in from the WAN to the LAN, DMZ or WLAN. This field displays **Outgoing** to denote traffic that is going out from the LAN, DMZ or WLAN to the WAN.
Amount	This column lists how much traffic has been sent and/or received for each protocol or service port. The measurement unit shown (bytes, Kbytes, Mbytes or Gbytes) varies with the amount of traffic for the particular protocol or service port. The count starts over at 0 if a protocol or port passes the bytes count limit (see Table 162 on page 492).

26.4.4 System Reports Specifications

The following table lists detailed specifications on the reports feature.

Table 162 Report Specifications

LABEL	DESCRIPTION
Number of web sites/protocols or ports/IP addresses listed:	20
Hit count limit:	Up to 2^{32} hits can be counted per web site. The count starts over at 0 if it passes four billion.
Bytes count limit:	Up to 2^{64} bytes can be counted per protocol/port or LAN IP address. The count starts over at 0 if it passes 2^{64} bytes.

26.5 Log Descriptions

This section provides descriptions of example log messages.

Table 163 System Maintenance Logs

LOG MESSAGE	DESCRIPTION
`Time calibration is successful`	The router has adjusted its time based on information from the time server.
`Time calibration failed`	The router failed to get information from the time server.
`WAN interface gets IP: %s`	A WAN interface got a new IP address from the DHCP, PPPoE, PPTP or dial-up server.
`DHCP client IP expired`	A DHCP client's IP address has expired.
`DHCP server assigns %s`	The DHCP server assigned an IP address to a client.
`Successful SMT login`	Someone has logged on to the router's SMT interface.
`SMT login failed`	Someone has failed to log on to the router's SMT interface.
`Successful WEB login`	Someone has logged on to the router's web configurator interface.
`WEB login failed`	Someone has failed to log on to the router's web configurator interface.
`Successful TELNET login`	Someone has logged on to the router via telnet.
`TELNET login failed`	Someone has failed to log on to the router via telnet.
`Successful FTP login`	Someone has logged on to the router via FTP.
`FTP login failed`	Someone has failed to log on to the router via FTP.
`NAT Session Table is Full!`	The maximum number of NAT session table entries has been exceeded and the table is full.
`Starting Connectivity Monitor`	Starting Connectivity Monitor.
`Time initialized by Daytime Server`	The router got the time and date from the Daytime server.
`Time initialized by Time server`	The router got the time and date from the time server.

Table 163 System Maintenance Logs (continued)

LOG MESSAGE	DESCRIPTION
Time initialized by NTP server	The router got the time and date from the NTP server.
Connect to Daytime server fail	The router was not able to connect to the Daytime server.
Connect to Time server fail	The router was not able to connect to the Time server.
Connect to NTP server fail	The router was not able to connect to the NTP server.
Too large ICMP packet has been dropped	The router dropped an ICMP packet that was too large.
SMT Session Begin	An SMT management session has started.
SMT Session End	An SMT management session has ended.
Configuration Change: PC = 0x%x, Task ID = 0x%x	The router is saving configuration changes.
Successful SSH login	Someone has logged on to the router's SSH server.
SSH login failed	Someone has failed to log on to the router's SSH server.
Successful HTTPS login	Someone has logged on to the router's web configurator interface using HTTPS protocol.
HTTPS login failed	Someone has failed to log on to the router's web configurator interface using HTTPS protocol.
DNS server %s was not responding to last 32 consecutive queries…	The specified DNS server did not respond to the last 32 consecutive queries.
DDNS update IP:%s (host %d) successfully	The device updated the IP address of the specified DDNS host name.
SMTP successfully	The device sent an e-mail.
myZyXEL.com registration successful	Registration of the device with myZyXEL.com was successful.
Trial service registration successful	Registration for a trial service was successful.
Service upgrade successful	Registration for a service upgrade was successful.
Service refresh successful.	The device successfully refreshed service information from myZyXEL.com.
Content Filter trial service activation successfully	The content filtering trial service was successfully activated for this device.
%s	The myZyXEL.com service registration failed due to the error listed. If you are unable to register for services at myZYXEL.com, the error message displayed in this log may be useful when contacting customer support.

Table 164 System Error Logs

LOG MESSAGE	DESCRIPTION
%s exceeds the max. number of session per host!	This attempt to create a NAT session exceeds the maximum number of NAT session table entries allowed to be created per host.
setNetBIOSFilter: calloc error	The router failed to allocate memory for the NetBIOS filter settings.
readNetBIOSFilter: calloc error	The router failed to allocate memory for the NetBIOS filter settings.
WAN connection is down.	A WAN connection is down. You cannot access the network through this interface.
Dial Backup starts	Dial backup started working.
Dial Backup ends	Dial backup stopped working.
DHCP Server cannot assign the static IP %S (out of range).	The LAN subnet, LAN alias 1, or LAN alias 2 was changed and the specified static DHCP IP addresses are no longer valid.
The DHCP static IP %s is conflict.	The static DHCP IP address conflicts with another host.
SMTP fail (%s)	The device failed to send an e-mail (error message included).
SMTP authentication fail (%s)	The device failed to authenticate with the SMTP server (error message included).

Table 165 Access Control Logs

LOG MESSAGE	DESCRIPTION
Firewall default policy: [TCP | UDP | IGMP | ESP | GRE | OSPF] <Packet Direction>	Attempted TCP/UDP/IGMP/ESP/GRE/OSPF access matched the default policy and was blocked or forwarded according to the default policy's setting.
Firewall rule [NOT] match:[TCP | UDP | IGMP | ESP | GRE | OSPF] <Packet Direction>, <rule:%d>	Attempted TCP/UDP/IGMP/ESP/GRE/OSPF access matched (or did not match) a configured firewall rule (denoted by its number) and was blocked or forwarded according to the rule.
Triangle route packet forwarded: [TCP | UDP | IGMP | ESP | GRE | OSPF]	The firewall allowed a triangle route session to pass through.
Packet without a NAT table entry blocked: [TCP | UDP | IGMP | ESP | GRE | OSPF]	The router blocked a packet that didn't have a corresponding NAT table entry.
Router sent blocked web site message: TCP	The router sent a message to notify a user that the router blocked access to a web site that the user requested.
Exceed maximum sessions per host (%d).	The device blocked a session because the host's connections exceeded the maximum sessions per host.
Firewall allowed a packet that matched a NAT session: [TCP | UDP]	A packet from the WAN (TCP or UDP) matched a cone NAT session and the device forwarded it to the LAN.

Table 166 TCP Reset Logs

LOG MESSAGE	DESCRIPTION
`Under SYN flood attack, sent TCP RST`	The router sent a TCP reset packet when a host was under a SYN flood attack (the TCP incomplete count is per destination host.)
`Exceed TCP MAX incomplete, sent TCP RST`	The router sent a TCP reset packet when the number of TCP incomplete connections exceeded the user configured threshold. (the TCP incomplete count is per destination host.) Note: Refer to **TCP Maximum Incomplete** in the **Firewall Attack Alerts** screen.
`Peer TCP state out of order, sent TCP RST`	The router sent a TCP reset packet when a TCP connection state was out of order.Note: The firewall refers to RFC793 Figure 6 to check the TCP state.
`Firewall session time out, sent TCP RST`	The router sent a TCP reset packet when a dynamic firewall session timed out. The default timeout values are as follows: ICMP idle timeout: 3 minutes UDP idle timeout: 3 minutes TCP connection (three way handshaking) timeout: 270 seconds TCP FIN-wait timeout: 2 MSL (Maximum Segment Lifetime set in the TCP header). TCP idle (established) timeout (s): 150 minutes TCP reset timeout: 10 seconds
`Exceed MAX incomplete, sent TCP RST`	The router sent a TCP reset packet when the number of incomplete connections (TCP and UDP) exceeded the user-configured threshold. (Incomplete count is for all TCP and UDP connections through the firewall.)Note: When the number of incomplete connections (TCP + UDP) > “Maximum Incomplete High”, the router sends TCP RST packets for TCP connections and destroys TOS (firewall dynamic sessions) until incomplete connections < “Maximum Incomplete Low”.
`Access block, sent TCP RST`	The router sends a TCP RST packet and generates this log if you turn on the firewall TCP reset mechanism (via CI command: "sys firewall tcprst").

Table 167 Packet Filter Logs

LOG MESSAGE	DESCRIPTION
`[ TCP | UDP | ICMP | IGMP | Generic ] packet filter matched (set: %d, rule: %d)`	Attempted access matched a configured filter rule (denoted by its set and rule number) and was blocked or forwarded according to the rule.

For type and code details, see Table 181 on page 506.

Table 168 ICMP Logs

LOG MESSAGE	DESCRIPTION
`Firewall default policy: ICMP <Packet Direction>, <type:%d>, <code:%d>`	ICMP access matched the default policy and was blocked or forwarded according to the user's setting.
`Firewall rule [NOT] match: ICMP <Packet Direction>, <rule:%d>, <type:%d>, <code:%d>`	ICMP access matched (or didn’t match) a firewall rule (denoted by its number) and was blocked or forwarded according to the rule.
`Triangle route packet forwarded: ICMP`	The firewall allowed a triangle route session to pass through.

Table 168 ICMP Logs (continued)

LOG MESSAGE	DESCRIPTION
`Packet without a NAT table entry blocked: ICMP`	The router blocked a packet that didn't have a corresponding NAT table entry.
`Unsupported/out-of-order ICMP: ICMP`	The firewall does not support this kind of ICMP packets or the ICMP packets are out of order.
`Router reply ICMP packet: ICMP`	The router sent an ICMP reply packet to the sender.

Table 169 CDR Logs

LOG MESSAGE	DESCRIPTION
`board %d line %d channel %d, call %d, %s C01 Outgoing Call dev=%x ch=%x %s`	The router received the setup requirements for a call. "call" is the reference (count) number of the call. "dev" is the device type (3 is for dial-up, 6 is for PPPoE, 10 is for PPTP). "channel" or "ch" is the call channel ID. For example,"board 0 line 0 channel 0, call 3, C01 Outgoing Call dev=6 ch=0 "Means the router has dialed to the PPPoE server 3 times.
`board %d line %d channel %d, call %d, %s C02 OutCall Connected %d %s`	The PPPoE, PPTP or dial-up call is connected.
`board %d line %d channel %d, call %d, %s C02 Call Terminated`	The PPPoE, PPTP or dial-up call was disconnected.

Table 170 PPP Logs

LOG MESSAGE	DESCRIPTION
`ppp:LCP Starting`	The PPP connection's Link Control Protocol stage has started.
`ppp:LCP Opening`	The PPP connection's Link Control Protocol stage is opening.
`ppp:CHAP Opening`	The PPP connection's Challenge Handshake Authentication Protocol stage is opening.
`ppp:IPCP Starting`	The PPP connection's Internet Protocol Control Protocol stage is starting.
`ppp:IPCP Opening`	The PPP connection's Internet Protocol Control Protocol stage is opening.
`ppp:LCP Closing`	The PPP connection's Link Control Protocol stage is closing.
`ppp:IPCP Closing`	The PPP connection's Internet Protocol Control Protocol stage is closing.

Table 171 3G Logs

LOG MESSAGE	DESCRIPTION
`SIM/3G card mismatch: %s.`	The IMSI or ESN of the currently inserted card is different from the previous one configured for budget control.
`Preconfigured SIM card/3G card mismatches with inserted card. Might need to reconfigure budget control settings.`	The inserted 3G card is different from the previous one configured for budget control. You may need to reconfigure budget control settings specific to the current user account.

Table 171 3G Logs (continued)

LOG MESSAGE	DESCRIPTION
Budget counters are reset, budget control is resumed.	The ZyWALL restarted budget calculation from 0 after resetting the existing statistics.
Budget control is resumed.	The ZyWALL kept the existing budget control statistics and continue a counting.
Budget control is disabled.	Budget control is deactivated for the user account of the installed 3G card on the ZyWALL.
Skip 3G SIM authentication because 3G configuration is not set.	The ZyWALL skiped SIM card authentication because the PIN code is not specified or SIM card authentication is disabled.
3G SIM authentication failed because of no response from SIM card.	SIM card authentication failed because the ZyWALL received a SIM busy message three times when querying for the card status.
3G card has no response, card is restarted.	The card was reset due to no response from the card for a period of time.
3G SIM card PIN code is incorrect.	The specified PIN code does not match the inserted GSM 3G card.
The 3G card is not activated.	The user account of the 3G card is not activated.
3G Modem is locked.	The internal modem on the inserted 3G card is blocked.
SIM card not inserted or damaged.	There is no SIM card in the inserted GSM 3G card or the SIM card is damaged.
3G connection has been dropped - %s.	The 3G connection has been dropped due to the specific reason, such as idle timeout, manual disconnection, failure to get an IP address, switching to WAN 1, ping check failure, connection reset, and so on.
3G signal strength is refreshed (%d dBm).	The ZyWALL updated the 3G network signal strength indication.
Warning: (%IMSI% or %ESN%) Over time budget! (budget = %CONFIGURED_BUDGET% hours, used = %USED_VOLUME%(2 decimals) hours).	This shows that the preconfigured time budget was exceeded. This also displays the IMSI of the SIM card in an inserted GSM 3G card or the ESN of the inserted CDMA 3G card and the 3G connection's usage time in hours.
Warning: (%IMSI% or %ESN%) Over %THRESHOLD%% of time budget (%REMAIN_BUDGET%(2 decimals) hours remain in %CONFIGURED_BUDGET% hours budget).	This shows that the specified percentage of the time budget was exceeded. This also displays the IMSI of the SIM card in an inserted GSM 3G card or the ESN of the inserted CDMA 3G card and the amount of time (in hours) the 3G connection can still be used.

Table 171 3G Logs (continued)

LOG MESSAGE	DESCRIPTION
Warning: (%ESN% or %IMSI%) Over data budget! (budget =%CONFIGURED_BUDGET%(2 decimals Mbytes, used = %USED_VOLUME%(2 decimals) Mbytes).	This shows that the preconfigured data limit was exceeded. The IMSI of the SIM card in an inserted GSM 3G card or the ESN of the inserted CDMA 3G card is displayed. The amount of data (in Mbytes) sent and/or received (depending on your configuration) through the 3G connection is also displayed.
Warning: (%ESN% or %IMSI%) Over %THRESHOLD%% of data budget (%REMAIN_BUDGET%(2 decimals) Mbytes remain in %CONFIGURED_BUDGET% Mbytes budget).	This shows that the specified percentage of data limit was exceeded. This also displays the IMSI of the SIM card in an inserted GSM 3G card or the ESN of the inserted CDMA 3G card and how much data (in Mbytes) can still be transmitted through the 3G connection.

Table 172 UPnP Logs

LOG MESSAGE	DESCRIPTION
UPnP pass through Firewall	UPnP packets can pass through the firewall.

Table 173 Content Filtering Logs

LOG MESSAGE	DESCRIPTION
%s: Keyword blocking	The content of a requested web page matched a user defined keyword.
%s: Not in trusted web list	The web site is not in a trusted domain, and the router blocks all traffic except trusted domain sites.
%s: Forbidden Web site	The web site is in the forbidden web site list.
%s: Contains ActiveX	The web site contains ActiveX.
%s: Contains Java applet	The web site contains a Java applet.
%s: Contains cookie	The web site contains a cookie.
%s: Proxy mode detected	The router detected proxy mode in the packet.
%s	The content filter server responded that the web site is in the blocked category list, but it did not return the category type.
%s: %s	The content filter server responded that the web site is in the blocked category list, and returned the category type.
%s(cache hit)	The system detected that the web site is in the blocked list from the local cache, but does not know the category type.
%s :%s(cache hit)	The system detected that the web site is in blocked list from the local cache, and knows the category type.
%s: Trusted Web site	The web site is in a trusted domain.
%s	When the content filter is not on according to the time schedule or you didn't select the "Block Matched Web Site" check box, the system forwards the web content.
Waiting content filter server timeout	The external content filtering server did not respond within the timeout period.

Table 173 Content Filtering Logs (continued)

LOG MESSAGE	DESCRIPTION
DNS resolving failed	The ZyWALL cannot get the IP address of the external content filtering via DNS query.
Creating socket failed	The ZyWALL cannot issue a query because TCP/IP socket creation failed, port:port number.
Connecting to content filter server fail	The connection to the external content filtering server failed.
License key is invalid	The external content filtering license key is invalid.

For type and code details, see Table 181 on page 506.

Table 174 Attack Logs

LOG MESSAGE	DESCRIPTION
attack [TCP | UDP | IGMP | ESP | GRE | OSPF]	The firewall detected a TCP/UDP/IGMP/ESP/GRE/OSPF attack.
attack ICMP (type:%d, code:%d)	The firewall detected an ICMP attack.
land [TCP | UDP | IGMP | ESP | GRE | OSPF]	The firewall detected a TCP/UDP/IGMP/ESP/GRE/OSPF land attack.
land ICMP (type:%d, code:%d)	The firewall detected an ICMP land attack.
ip spoofing - WAN [TCP | UDP | IGMP | ESP | GRE | OSPF]	The firewall detected an IP spoofing attack on the WAN port.
ip spoofing - WAN ICMP (type:%d, code:%d)	The firewall detected an ICMP IP spoofing attack on the WAN port.
icmp echo : ICMP (type:%d, code:%d)	The firewall detected an ICMP echo attack.
syn flood TCP	The firewall detected a TCP syn flood attack.
ports scan TCP	The firewall detected a TCP port scan attack.
teardrop TCP	The firewall detected a TCP teardrop attack.
teardrop UDP	The firewall detected an UDP teardrop attack.
teardrop ICMP (type:%d, code:%d)	The firewall detected an ICMP teardrop attack.
illegal command TCP	The firewall detected a TCP illegal command attack.
NetBIOS TCP	The firewall detected a TCP NetBIOS attack.
ip spoofing - no routing entry [TCP | UDP | IGMP | ESP | GRE | OSPF]	The firewall classified a packet with no source routing entry as an IP spoofing attack.
ip spoofing - no routing entry ICMP (type:%d, code:%d)	The firewall classified an ICMP packet with no source routing entry as an IP spoofing attack.
vulnerability ICMP (type:%d, code:%d)	The firewall detected an ICMP vulnerability attack.
traceroute ICMP (type:%d, code:%d)	The firewall detected an ICMP traceroute attack.
ports scan UDP	The firewall detected a UDP port scan attack.

Table 174 Attack Logs (continued)

LOG MESSAGE	DESCRIPTION
Firewall sent TCP packet in response to DoS attack TCP	The firewall sent TCP packet in response to a DoS attack
ICMP Source Quench ICMP	The firewall detected an ICMP Source Quench attack.
ICMP Time Exceed ICMP	The firewall detected an ICMP Time Exceed attack.
ICMP Destination Unreachable ICMP	The firewall detected an ICMP Destination Unreachable attack.
ping of death. ICMP	The firewall detected an ICMP ping of death attack.
smurf ICMP	The firewall detected an ICMP smurf attack.
IP address in FTP port command is different from the client IP address. It maybe a bounce attack.	The IP address in an FTP port command is different from the client IP address. It may be a bounce attack.
Fragment packet size is smaller than the MTU size of output interface.	The fragment packet size is smaller than the MTU size of output interface.

Table 175 Remote Management Logs

LOG MESSAGE	DESCRIPTION
Remote Management: FTP denied	Attempted use of FTP service was blocked according to remote management settings.
Remote Management: TELNET denied	Attempted use of TELNET service was blocked according to remote management settings.
Remote Management: HTTP or UPnP denied	Attempted use of HTTP or UPnP service was blocked according to remote management settings.
Remote Management: WWW denied	Attempted use of WWW service was blocked according to remote management settings.
Remote Management: HTTPS denied	Attempted use of HTTPS service was blocked according to remote management settings.
Remote Management: SSH denied	Attempted use of SSH service was blocked according to remote management settings.
Remote Management: ICMP Ping response denied	Attempted use of ICMP service was blocked according to remote management settings.
Remote Management: SNMP denied	Attempted use of SNMP service was blocked according to remote management settings.
Remote Management: DNS denied	Attempted use of DNS service was blocked according to remote management settings.

Table 176 IPSec Logs

LOG MESSAGE	DESCRIPTION
Discard REPLAY packet	The router received and discarded a packet with an incorrect sequence number.
Inbound packet authentication failed	The router received a packet that has been altered. A third party may have altered or tampered with the packet.

Table 176 IPSec Logs (continued)

LOG MESSAGE	DESCRIPTION
Receive IPSec packet, but no corresponding tunnel exists	The router dropped an inbound packet for which SPI could not find a corresponding phase 2 SA.
Rule <%d> idle time out, disconnect	The router dropped a connection that had outbound traffic and no inbound traffic for a certain time period. You can use the "ipsec timer chk_conn" CI command to set the time period. The default value is 2 minutes.
WAN IP changed to <IP>	The router dropped all connections with the “MyIP” configured as “0.0.0.0” when the WAN IP address changed.
Inbound packet decryption failed	Please check the algorithm configuration.
Cannot find outbound SA for rule <%d>	A packet matches a rule, but there is no phase 2 SA for outbound traffic.
Rule [%s] sends an echo request to peer	The device sent a ping packet to check the specified VPN tunnel's connectivity.
Rule [%s] receives an echo reply from peer	The device received a ping response when checking the specified VPN tunnel's connectivity.

Table 177 IKE Logs

LOG MESSAGE	DESCRIPTION
Active connection allowed exceeded	The IKE process for a new connection failed because the limit of simultaneous phase 2 SAs has been reached.
Start Phase 2: Quick Mode	Phase 2 Quick Mode has started.
Verifying Remote ID failed:	The connection failed during IKE phase 2 because the router and the peer’s Local/Remote Addresses don’t match.
Verifying Local ID failed:	The connection failed during IKE phase 2 because the router and the peer’s Local/Remote Addresses don’t match.
IKE Packet Retransmit	The router retransmitted the last packet sent because there was no response from the peer.
Failed to send IKE Packet	An Ethernet error stopped the router from sending IKE packets.
Too many errors! Deleting SA	An SA was deleted because there were too many errors.
Phase 1 IKE SA process done	The phase 1 IKE SA process has been completed.
Duplicate requests with the same cookie	The router received multiple requests from the same peer while still processing the first IKE packet from the peer.
IKE Negotiation is in process	The router has already started negotiating with the peer for the connection, but the IKE process has not finished yet.
No proposal chosen	Phase 1 or phase 2 parameters don’t match. Please check all protocols / settings. Ex. One device being configured for 3DES and the other being configured for DES causes the connection to fail.
Local / remote IPs of incoming request conflict with rule <%d>	The security gateway is set to “0.0.0.0” and the router used the peer’s “Local Address” as the router’s “Remote Address”. This information conflicted with static rule #d; thus the connection is not allowed.

Table 177 IKE Logs (continued)

LOG MESSAGE	DESCRIPTION
Cannot resolve Secure Gateway Addr for rule <%d>	The router couldn't resolve the IP address from the domain name that was used for the secure gateway address.
Peer ID: <peer id> <My remote type> -<My local type>	The displayed ID information did not match between the two ends of the connection.
vs. My Remote <My remote> -<My remote>	The displayed ID information did not match between the two ends of the connection.
vs. My Local <My local>-<My local>	The displayed ID information did not match between the two ends of the connection.
Send <packet>	A packet was sent.
Recv <packet>	IKE uses ISAKMP to transmit data. Each ISAKMP packet contains many different types of payloads. All of them show in the LOG. Refer to RFC2408 – ISAKMP for a list of all ISAKMP payload types.
Recv <Main or Aggressive> Mode request from <IP>	The router received an IKE negotiation request from the peer address specified.
Send <Main or Aggressive> Mode request to <IP>	The router started negotiation with the peer.
Invalid IP <Peer local> / <Peer local>	The peer's "Local IP Address" is invalid.
Remote IP <Remote IP> / <Remote IP> conflicts	The security gateway is set to "0.0.0.0" and the router used the peer's "Local Address" as the router's "Remote Address". This information conflicted with static rule #d; thus the connection is not allowed.
Phase 1 ID type mismatch	This router's "Peer ID Type" is different from the peer IPSec router's "Local ID Type".
Phase 1 ID content mismatch	This router's "Peer ID Content" is different from the peer IPSec router's "Local ID Content".
No known phase 1 ID type found	The router could not find a known phase 1 ID in the connection attempt.
ID type mismatch. Local / Peer: <Local ID type/Peer ID type>	The phase 1 ID types do not match.
ID content mismatch	The phase 1 ID contents do not match.
Configured Peer ID Content: <Configured Peer ID Content>	The phase 1 ID contents do not match and the configured "Peer ID Content" is displayed.
Incoming ID Content: <Incoming Peer ID Content>	The phase 1 ID contents do not match and the incoming packet's ID content is displayed.
Unsupported local ID Type: <%d>	The phase 1 ID type is not supported by the router.
Build Phase 1 ID	The router has started to build the phase 1 ID.
Adjust TCP MSS to %d	The router automatically changed the TCP Maximum Segment Size value after establishing a tunnel.
Rule <%d> input idle time out, disconnect	The tunnel for the listed rule was dropped because there was no inbound traffic within the idle timeout period.
XAUTH succeed! Username: <Username>	The router used extended authentication to authenticate the listed username.

Table 177 IKE Logs (continued)

LOG MESSAGE	DESCRIPTION
XAUTH fail! Username: <Username>	The router was not able to use extended authentication to authenticate the listed username.
Rule[%d] Phase 1 negotiation mode mismatch	The listed rule's IKE phase 1 negotiation mode did not match between the router and the peer.
Rule [%d] Phase 1 encryption algorithm mismatch	The listed rule's IKE phase 1 encryption algorithm did not match between the router and the peer.
Rule [%d] Phase 1 authentication algorithm mismatch	The listed rule's IKE phase 1 authentication algorithm did not match between the router and the peer.
Rule [%d] Phase 1 authentication method mismatch	The listed rule's IKE phase 1 authentication method did not match between the router and the peer.
Rule [%d] Phase 1 key group mismatch	The listed rule's IKE phase 1 key group did not match between the router and the peer.
Rule [%d] Phase 2 protocol mismatch	The listed rule's IKE phase 2 protocol did not match between the router and the peer.
Rule [%d] Phase 2 encryption algorithm mismatch	The listed rule's IKE phase 2 encryption algorithm did not match between the router and the peer.
Rule [%d] Phase 2 authentication algorithm mismatch	The listed rule's IKE phase 2 authentication algorithm did not match between the router and the peer.
Rule [%d] Phase 2 encapsulation mismatch	The listed rule's IKE phase 2 encapsulation did not match between the router and the peer.
Rule [%d]> Phase 2 pfs mismatch	The listed rule's IKE phase 2 perfect forward secret (PFS) setting did not match between the router and the peer.
Rule [%d] Phase 1 ID mismatch	The listed rule's IKE phase 1 ID did not match between the router and the peer.
Rule [%d] Phase 1 hash mismatch	The listed rule's IKE phase 1 hash did not match between the router and the peer.
Rule [%d] Phase 1 preshared key mismatch	The listed rule's IKE phase 1 pre-shared key did not match between the router and the peer.
Rule [%d] Tunnel built successfully	The listed rule's IPSec tunnel has been built successfully.
Rule [%d] Peer's public key not found	The listed rule's IKE phase 1 peer's public key was not found.
Rule [%d] Verify peer's signature failed	The listed rule's IKE phase 1verification of the peer's signature failed.
Rule [%d] Sending IKE request	IKE sent an IKE request for the listed rule.
Rule [%d] Receiving IKE request	IKE received an IKE request for the listed rule.
Swap rule to rule [%d]	The router changed to using the listed rule.
Rule [%d] Phase 1 key length mismatch	The listed rule's IKE phase 1 key length (with the AES encryption algorithm) did not match between the router and the peer.

Table 177 IKE Logs (continued)

LOG MESSAGE	DESCRIPTION
Rule [%d] phase 1 mismatch	The listed rule's IKE phase 1 did not match between the router and the peer.
Rule [%d] phase 2 mismatch	The listed rule's IKE phase 2 did not match between the router and the peer.
Rule [%d] Phase 2 key length mismatch	The listed rule's IKE phase 2 key lengths (with the AES encryption algorithm) did not match between the router and the peer.
Remote Gateway Addr in rule [%s] is changed to %s"	The IP address for the domain name of the peer gateway in the listed rule changed to the listed IP address.
New My ZyWALL Addr in rule [%s] is changed to %s	The IP address for the domain name of the ZyWALL in the listed rule changed to the listed IP address.
Remote Gateway Addr has changed, tunnel [%s] will be deleted	The listed tunnel will be deleted because the remote gateway's IP address changed.
My ZyWALL Addr has changed, tunnel [%s] will be deleted	The listed tunnel will be deleted because the ZyWALL's IP address changed.

Table 178 PKI Logs

LOG MESSAGE	DESCRIPTION
Enrollment successful	The SCEP online certificate enrollment was successful. The Destination field records the certification authority server IP address and port.
Enrollment failed	The SCEP online certificate enrollment failed. The Destination field records the certification authority server's IP address and port.
Failed to resolve <SCEP CA server url>	The SCEP online certificate enrollment failed because the certification authority server's address cannot be resolved.
Enrollment successful	The CMP online certificate enrollment was successful. The Destination field records the certification authority server's IP address and port.
Enrollment failed	The CMP online certificate enrollment failed. The Destination field records the certification authority server's IP address and port.
Failed to resolve <CMP CA server url>	The CMP online certificate enrollment failed because the certification authority server's IP address cannot be resolved.
Rcvd ca cert: <subject name>	The router received a certification authority certificate, with subject name as recorded, from the LDAP server whose IP address and port are recorded in the Source field.
Rcvd user cert: <subject name>	The router received a user certificate, with subject name as recorded, from the LDAP server whose IP address and port are recorded in the Source field.
Rcvd CRL <size>: <issuer name>	The router received a CRL (Certificate Revocation List), with size and issuer name as recorded, from the LDAP server whose IP address and port are recorded in the Source field.
Rcvd ARL <size>: <issuer name>	The router received an ARL (Authority Revocation List), with size and issuer name as recorded, from the LDAP server whose address and port are recorded in the Source field.
Failed to decode the received ca cert	The router received a corrupted certification authority certificate from the LDAP server whose address and port are recorded in the Source field.

Table 178 PKI Logs (continued)

LOG MESSAGE	DESCRIPTION
Failed to decode the received user cert	The router received a corrupted user certificate from the LDAP server whose address and port are recorded in the Source field.
Failed to decode the received CRL	The router received a corrupted CRL (Certificate Revocation List) from the LDAP server whose address and port are recorded in the Source field.
Failed to decode the received ARL	The router received a corrupted ARL (Authority Revocation List) from the LDAP server whose address and port are recorded in the Source field.
Rcvd data <size> too large! Max size allowed: <max size>	The router received directory data that was too large (the size is listed) from the LDAP server whose address and port are recorded in the Source field. The maximum size of directory data that the router allows is also recorded.
Cert trusted: <subject name>	The router has verified the path of the certificate with the listed subject name.
Due to <reason codes>, cert not trusted: <subject name>	Due to the reasons listed, the certificate with the listed subject name has not passed the path verification. The recorded reason codes are only approximate reasons for not trusting the certificate. Please see Table 179 on page 505 for the corresponding descriptions of the codes.

Table 179 Certificate Path Verification Failure Reason Codes

CODE	DESCRIPTION
1	Algorithm mismatch between the certificate and the search constraints.
2	Key usage mismatch between the certificate and the search constraints.
3	Certificate was not valid in the time interval.
4	(Not used)
5	Certificate is not valid.
6	Certificate signature was not verified correctly.
7	Certificate was revoked by a CRL.
8	Certificate was not added to the cache.
9	Certificate decoding failed.
10	Certificate was not found (anywhere).
11	Certificate chain looped (did not find trusted root).
12	Certificate contains critical extension that was not handled.
13	Certificate issuer was not valid (CA specific information missing).
14	(Not used)
15	CRL is too old.
16	CRL is not valid.
17	CRL signature was not verified correctly.
18	CRL was not found (anywhere).
19	CRL was not added to the cache.
20	CRL decoding failed.
21	CRL is not currently valid, but in the future.

Table 179 Certificate Path Verification Failure Reason Codes

CODE	DESCRIPTION
22	CRL contains duplicate serial numbers.
23	Time interval is not continuous.
24	Time information not available.
25	Database method failed due to timeout.
26	Database method failed.
27	Path was not verified.
28	Maximum path length reached.

Table 180 ACL Setting Notes

PACKET DIRECTION	DIRECTION	DESCRIPTION
(L to W)	LAN to WAN	ACL set for packets traveling from the LAN to the WAN.
(W to L)	WAN to LAN	ACL set for packets traveling from the WAN to the LAN.
(D to L)	DMZ to LAN	ACL set for packets traveling from the DMZ to the LAN.
(D to W)	DMZ to WAN	ACL set for packets traveling from the DMZ to the WAN.
(W to D)	WAN to DMZ	ACL set for packets traveling from the WAN to the DMZ.
(L to D)	LAN to DMZ	ACL set for packets traveling from the LAN to the DMZ.
(L to L/ZW)	LAN to LAN/ ZyWALL	ACL set for packets traveling from the LAN to the LAN or the ZyWALL.
(W to W/ZW)	WAN to WAN/ ZyWALL	ACL set for packets traveling from the WAN to the WAN or the ZyWALL.
(D to D/ZW)	DMZ to DMZ/ ZyWALL	ACL set for packets traveling from the DMZ to the DM or the ZyWALL.
(L to WL)	LAN to WLAN	ACL set for packets traveling from the LAN to the WLAN.
(WL to L)	WLAN to LAN	ACL set for packets traveling from the WLAN to the LAN.
(W to WL)	WAN to WLAN	ACL set for packets traveling from the WAN to the WLAN.
(WL to W)	WLAN to WAN	ACL set for packets traveling from the WLAN to the WAN.
(D to WL)	DMZ to WLAN	ACL set for packets traveling from the DMZ to the WLAN.
(WL to D)	WLAN to DMZ	ACL set for packets traveling from the WLAN to the DMZ.
(WL to WL)	WLAN to WLAN/ ZyWALL	ACL set for packets traveling from the WLAN to the WLAN or the ZyWALL.

Table 181 ICMP Notes

TYPE	CODE	DESCRIPTION
0		Echo Reply
	0	Echo reply message
3		Destination Unreachable
	0	Net unreachable
	1	Host unreachable

Table 181 ICMP Notes (continued)

TYPE	CODE	DESCRIPTION
	2	Protocol unreachable
	3	Port unreachable
	4	A packet that needed fragmentation was dropped because it was set to Don't Fragment (DF)
	5	Source route failed
4		Source Quench
	0	A gateway may discard internet datagrams if it does not have the buffer space needed to queue the datagrams for output to the next network on the route to the destination network.
5		Redirect
	0	Redirect datagrams for the Network
	1	Redirect datagrams for the Host
	2	Redirect datagrams for the Type of Service and Network
	3	Redirect datagrams for the Type of Service and Host
8		Echo
	0	Echo message
11		Time Exceeded
	0	Time to live exceeded in transit
	1	Fragment reassembly time exceeded
12		Parameter Problem
	0	Pointer indicates the error
13		Timestamp
	0	Timestamp request message
14		Timestamp Reply
	0	Timestamp reply message
15		Information Request
	0	Information request message
16		Information Reply
	0	Information reply message

26.6 Syslog Logs

There are two types of syslog: event logs and traffic logs. The device generates an event log when a system event occurs, for example, when a user logs in or the device is under attack. The device generates a traffic log when a "session" is terminated. A traffic log summarizes the session's type, when it started and stopped the amount of traffic that was sent and received and so on. An external log analyzer can reconstruct and analyze the traffic flowing through the device after collecting the traffic logs.

Table 182 Syslog Logs

LOG MESSAGE	DESCRIPTION
`Event Log: <Facility*8 + Severity>Mon dd hr:mm:ss hostname src="<srcIP:srcPort>" dst="<dstIP:dstPort>" msg="<msg>" note="<note>" devID="<mac address>" cat="<category>"`	This message is sent by the system ("RAS" displays as the system name if you haven't configured one) when the router generates a syslog. The facility is defined in the web **MAIN MENU** > **LOGS** > **Log Settings** page. The severity is the log's syslog class. The definition of messages and notes are defined in the other log tables. The "devID" is the MAC address of the router's LAN port. The "cat" is the same as the category in the router's logs.
`Traffic Log: <Facility*8 + Severity>Mon dd hr:mm:ss hostname src="<srcIP:srcPort>" dst="<dstIP:dstPort>" msg="Traffic Log" note="Traffic Log" devID="<mac address>" cat="Traffic Log" duration=seconds sent=sentBytes rcvd=receiveBytes dir="<from:to>" protoID=IPProtocolID proto="serviceName" trans="IPSec/Normal"`	This message is sent by the device when the connection (session) is closed. The facility is defined in the Log Settings screen. The severity is the traffic log type. The message and note always display "Traffic Log". The "proto" field lists the service name. The "dir" field lists the incoming and outgoing interfaces ("LAN:LAN", "LAN:WAN", "LAN:DMZ", "LAN:DEV" for example).
`Event Log: <Facility*8 + Severity>Mon dd hr:mm:ss hostname src="<srcIP:srcPort>" dst="<dstIP:dstPort>" ob="<0|1>" ob_mac="<mac address>" msg="<msg>" note="<note>" devID="<mac address>" cat="<category>"`	This message is sent by the device ("RAS" displays as the system name if you haven't configured one) at the time when this syslog is generated. The facility is defined in the web **MAIN MENU** > **LOGS** > **Log Settings** page. The severity is the log's syslog class. The definition of messages and notes are defined in the other log tables. OB is the Out Break flag and the mac address of the Out Break PC.
`Event Log: <Facility*8 + Severity>Mon dd hr:mm:ss hostname src="<srcIP:srcPort>" dst="<dstIP:dstPort>" ob="0|1" ob_mac="<mac address>" msg="<msg>" note="<note>" devID="<mac address>" cat="Anti Virus" encode="< uu | b64 >"`	This message is sent by the device ("RAS" displays as the system name if you haven't configured one) at the time when this syslog is generated. The facility is defined in the web **MAIN MENU** > **LOGS** > **Log Settings** page. The severity is the log's syslog class. The "encode" message indicates the mail attachments encoding method. The definition of messages and notes are defined in the Anti-Virus log descriptions.

Table 182 Syslog Logs (continued)

LOG MESSAGE	DESCRIPTION
`Event Log: <Facility*8 + Severity>Mon dd hr:mm:ss hostname src="<srcIP:srcPort>" dst="<dstIP:dstPort>" ob="<0|1>" ob_mac="<mac address>" msg="<msg>" note="<note>" devID="<mac address>" cat="IDP" class="<idp class>" sid="<idp sid> act="<idp action>" count="1"`	This message is sent by the device ("RAS" displays as the system name if you haven't configured one) at the time when this syslog is generated. The facility is defined in the web **MAIN MENU** > **LOGS** > **Log Settings** page. The severity is the log's syslog class. The definition of messages and notes are defined in the IDP log descriptions.
`Event Log: <Facility*8 + Severity>Mon dd hr:mm:ss hostname src="<srcIP:srcPort>" dst="<dstIP:dstPort>" ob="<0|1>" ob_mac="<mac address>" msg="<msg>" note="<note>" devID="<mac address>" cat="Anti Spam" 1stReIP="<IP>"`	This message is sent by the device ("RAS" displays as the system name if you haven't configured one) at the time when this syslog is generated. The facility is defined in the web **MAIN MENU** > **LOGS** > **Log Settings** page. The severity is the log's syslog class. 1stReIP is the IP address of the first mail relay server. The definition of messages and notes are defined in the Anti-Spam log descriptions.

The following table shows RFC-2408 ISAKMP payload types that the log displays. Please refer to the RFC for detailed information on each type.

Table 183 RFC-2408 ISAKMP Payload Types

LOG DISPLAY	PAYLOAD TYPE
SA	Security Association
PROP	Proposal
TRANS	Transform
KE	Key Exchange
ID	Identification
CER	Certificate
CER_REQ	Certificate Request
HASH	Hash
SIG	Signature
NONCE	Nonce
NOTFY	Notification
DEL	Delete
VID	Vendor ID

27

Maintenance

This chapter displays information on the maintenance screens.

27.1 Maintenance Overview

The maintenance screens can help you view system information, upload new firmware, manage configuration and restart your ZyWALL.

27.2 General Setup and System Name


General Setup contains administrative and system-related information. **System Name** is for identification purposes. However, because some ISPs check this name you should enter your computer's "Computer Name".

- In Windows 95/98 click **Start**, **Settings**, **Control Panel**, **Network**. Click the Identification tab, note the entry for the **Computer Name** field and enter it as the **System Name**.
- In Windows 2000, click **Start**, **Settings**, **Control Panel** and then double-click **System**. Click the **Network Identification** tab and then the **Properties** button. Note the entry for the **Computer name** field and enter it as the **System Name**.
- In Windows XP, click **Start**, **My Computer**, **View system information** and then click the **Computer Name** tab. Note the entry in the **Full computer name** field and enter it as the ZyWALL **System Name**.

27.2.1 General Setup

Click **MAINTENANCE** to open the **General** screen. Use this screen to configure administrative and system-related information.

Figure 309 MAINTENANCE > General Setup

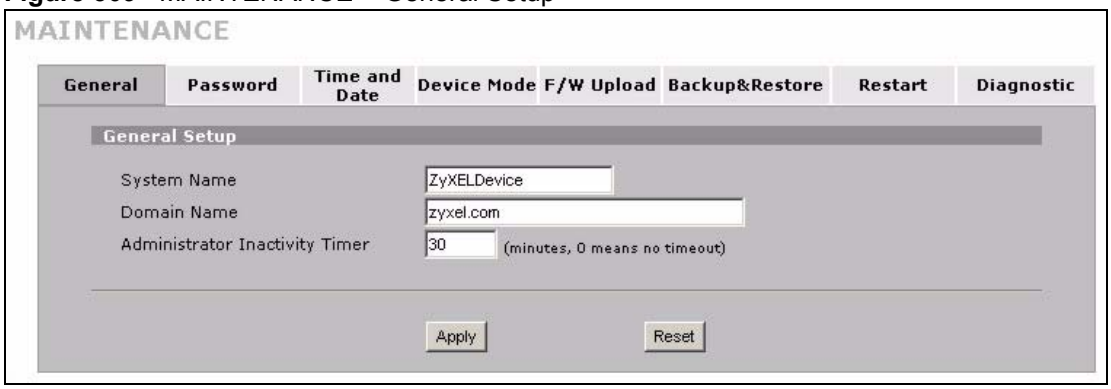

The following table describes the labels in this screen.


Table 184 MAINTENANCE > General Setup

LABEL	DESCRIPTION
General Setup	
System Name	Choose a descriptive name for identification purposes. It is recommended you enter your computer's "Computer name" in this field. This name can be up to 30 alphanumeric characters long. Spaces are not allowed, but dashes "-" and underscores "_" are accepted.
Domain Name	The **Domain Name** entry is what is propagated to the DHCP clients on the LAN. If you leave this blank, the domain name obtained by DHCP from the ISP is used. While you must enter the host name (System Name), the domain name can be assigned from the ZyWALL via DHCP. Enter the domain name (if you know it) here. If you leave this field blank, the ISP may assign a domain name via DHCP. The domain name entered by you is given priority over the ISP assigned domain name.
Administrator Inactivity Timer	Type how many minutes a management session (either via the web configurator or SMT) can be left idle before the session times out. The default is 5 minutes. After it times out you have to log in with your password again. Very long idle timeouts may have security risks. A value of "0" means a management session never times out, no matter how long it has been left idle (not recommended).
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

27.3 Configuring Password

Click **MAINTENANCE** > **Password** to open the following screen. Use this screen to change the ZyWALL's management password.

Figure 310 MAINTENANCE > Password

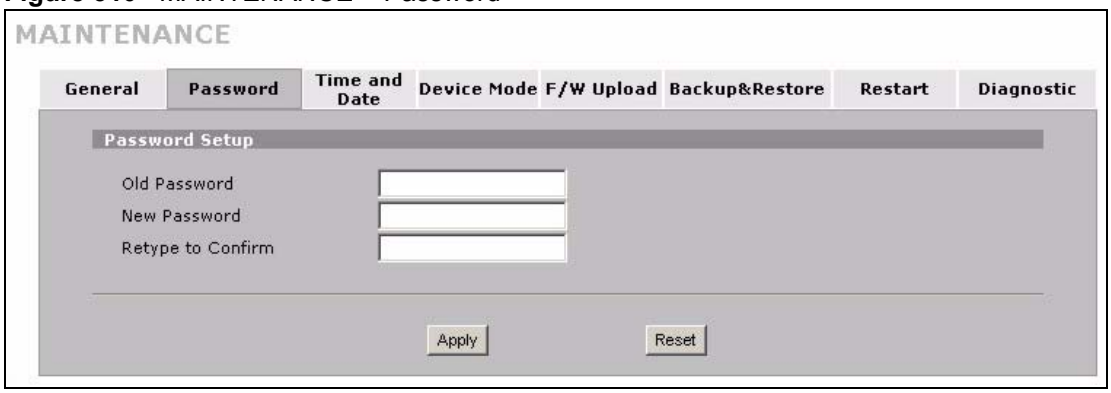

The following table describes the labels in this screen.

Table 185 MAINTENANCE > Password


LABEL	DESCRIPTION
Old Password	Type the default password or the existing password you use to access the system in this field. If you forget the password, you may have to use the hardware **RESET** button. This restores the default password of 1234.
New Password	Type your new system password (up to 30 characters). Note that as you type a password, the screen displays a (*) for each character you type.
Retype to Confirm	Type the new password again for confirmation.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

27.4 Time and Date

The ZyWALL's Real Time Chip (RTC) keeps track of the time and date. There is also a software mechanism to set the time manually or get the current time and date from an external server when you turn on your ZyWALL.

To change your ZyWALL's time and date, click **MAINTENANCE** > **Time and Date**. The screen appears as shown. Use this screen to configure the ZyWALL's time based on your local time zone.

Figure 311 MAINTENANCE > Time and Date

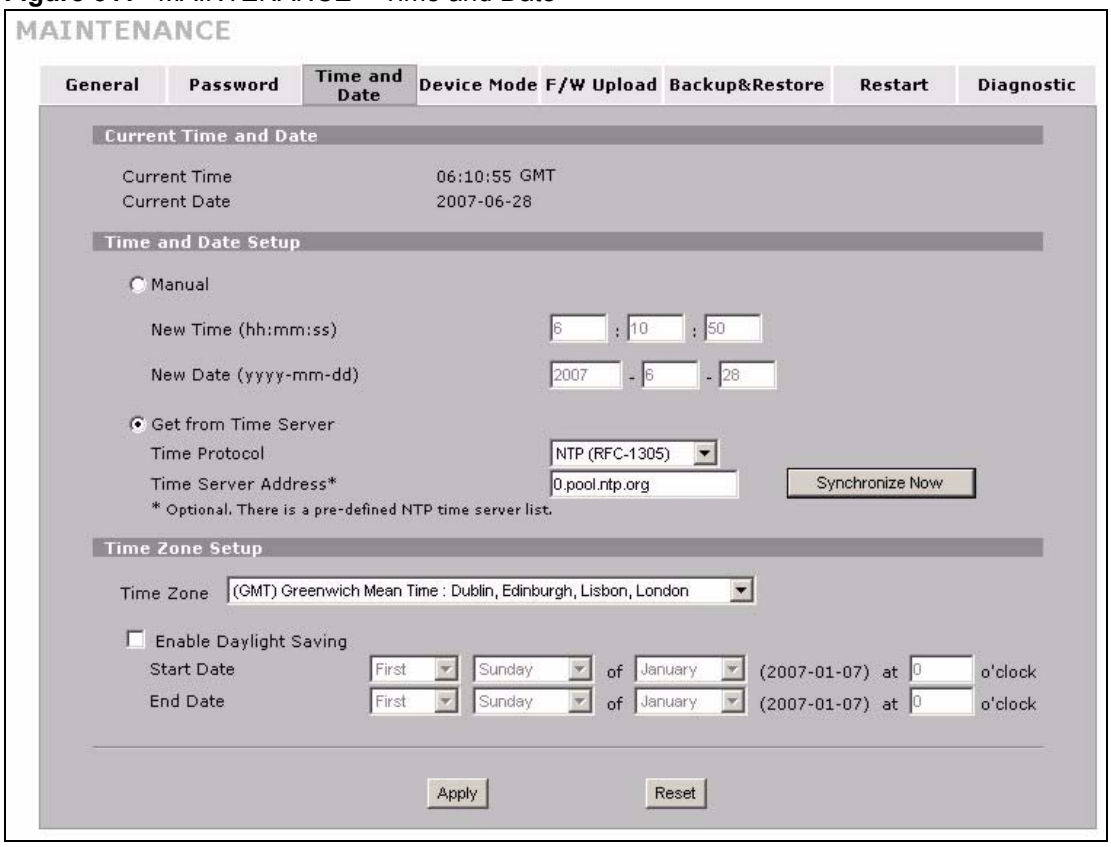

The following table describes the labels in this screen.

Table 186 MAINTENANCE > Time and Date

LABEL	DESCRIPTION
Current Time and Date	
Current Time	This field displays the ZyWALL's present time.
Current Date	This field displays the ZyWALL's present date.
Time and Date Setup	
Manual	Select this radio button to enter the time and date manually. If you configure a new time and date, Time Zone and Daylight Saving at the same time, the new time and date you entered has priority and the Time Zone and Daylight Saving settings do not affect it.
New Time (hh:mm:ss)	This field displays the last updated time from the time server or the last time configured manually. When you set **Time and Date Setup** to **Manual**, enter the new time in this field and then click **Apply**.
New Date (yyyy-mm-dd)	This field displays the last updated date from the time server or the last date configured manually. When you set **Time and Date Setup** to **Manual**, enter the new date in this field and then click **Apply**.
Get from Time Server	Select this radio button to have the ZyWALL get the time and date from the time server you specified below.

Table 186 MAINTENANCE > Time and Date (continued)

LABEL	DESCRIPTION
Time Protocol	Select the time service protocol that your time server uses. Not all time servers support all protocols, so you may have to check with your ISP/network administrator or use trial and error to find a protocol that works. The main difference between them is the format. **Daytime (RFC 867)** format is day/month/year/time zone of the server. **Time (RFC 868)** format displays a 4-byte integer giving the total number of seconds since 1970/1/1 at 0:0:0. The default, **NTP (RFC 1305)**, is similar to **Time (RFC 868)**.
Time Server Address	Enter the IP address or URL of your time server. Check with your ISP/network administrator if you are unsure of this information.
Synchronize Now	Click this button to have the ZyWALL get the time and date from a time server (see the **Time Server Address** field). This also saves your changes (including the time server address).
Time Zone Setup	
Time Zone	Choose the time zone of your location. This will set the time difference between your time zone and Greenwich Mean Time (GMT).
Enable Daylight Saving	Daylight saving is a period from late spring to early fall when many countries set their clocks ahead of normal local time by one hour to give more daytime light in the evening. Select this option if you use Daylight Saving Time.
Start Date	Configure the day and time when Daylight Saving Time starts if you selected **Enable Daylight Saving**. The **o'clock** field uses the 24 hour format. Here are a couple of examples: Daylight Saving Time starts in most parts of the United States on the second Sunday of March. Each time zone in the United States starts using Daylight Saving Time at 2 A.M. local time. So in the United States you would select **Second**, **Sunday**, **March** and type 2 in the **o'clock** field. Daylight Saving Time starts in the European Union on the last Sunday of March. All of the time zones in the European Union start using Daylight Saving Time at the same moment (1 A.M. GMT or UTC). So in the European Union you would select **Last**, **Sunday**, **March**. The time you type in the **o'clock** field depends on your time zone. In Germany for instance, you would type 2 because Germany's time zone is one hour ahead of GMT or UTC (GMT+1).
End Date	Configure the day and time when Daylight Saving Time ends if you selected **Enable Daylight Saving**. The **o'clock** field uses the 24 hour format. Here are a couple of examples: Daylight Saving Time ends in the United States on the first Sunday of November. Each time zone in the United States stops using Daylight Saving Time at 2 A.M. local time. So in the United States you would select **First**, **Sunday**, **November** and type 2 in the **o'clock** field. Daylight Saving Time ends in the European Union on the last Sunday of October. All of the time zones in the European Union stop using Daylight Saving Time at the same moment (1 A.M. GMT or UTC). So in the European Union you would select **Last**, **Sunday**, **October**. The time you type in the **o'clock** field depends on your time zone. In Germany for instance, you would type 2 because Germany's time zone is one hour ahead of GMT or UTC (GMT+1).
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

27.5 Pre-defined NTP Time Server Pools

When you turn on the ZyWALL for the first time, the date and time start at 2000-01-01 00:00:00. The ZyWALL then attempts to synchronize with an NTP time server from one of the 0.pool.ntp.org, 1.pool.ntp.org or 2.pool.ntp.org NTP time server pools. These are virtual clusters of time servers that use a round robin method to provide different NTP servers to clients.

The ZyWALL continues to use the NTP time server pools if you do not specify a time server or it cannot synchronize with the time server you specified.



The ZyWALL can use the NTP time server pools regardless of the time protocol you select.

When the ZyWALL uses the NTP time server pools, it randomly selects one pool and tries to synchronize with a server in it. If the synchronization fails, then the ZyWALL goes through the rest of the list in order from the first one tried until either it is successful or all the pre-defined NTP time server pools have been tried.

27.5.1 Resetting the Time

The ZyWALL resets the time in the following instances:


- When you click **Synchronize Now**.
- On saving your changes.
- When the ZyWALL starts up.
- 24-hour intervals after starting.

27.5.2 Time Server Synchronization

Click the **Synchronize Now** button to get the time and date from the predefined time server or the time server you specified in the **Time Server Address** field.


When the **System Time and Date Synchronization in Process** screen appears, wait up to one minute.

Figure 312 Synchronization in Process

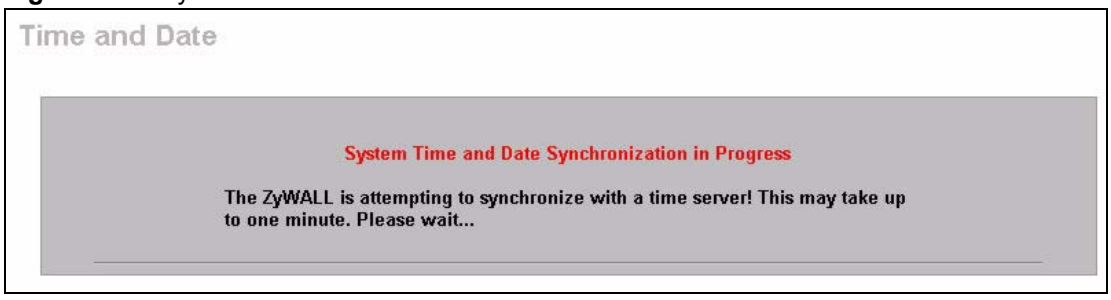


Click the **Return** button to go back to the **Time and Date** screen after the time and date is updated successfully.

Figure 313 Synchronization is Successful

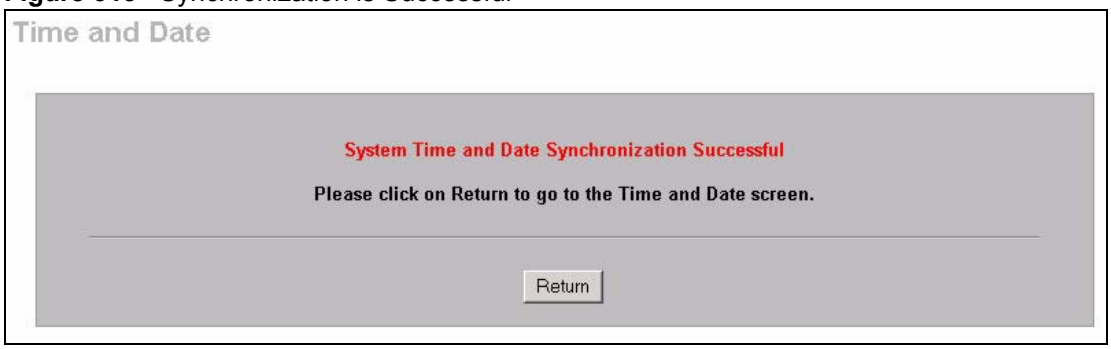

If the update was not successful, the following screen appears. Click **Return** to go back to the **Time and Date** screen.

Figure 314 Synchronization Fail

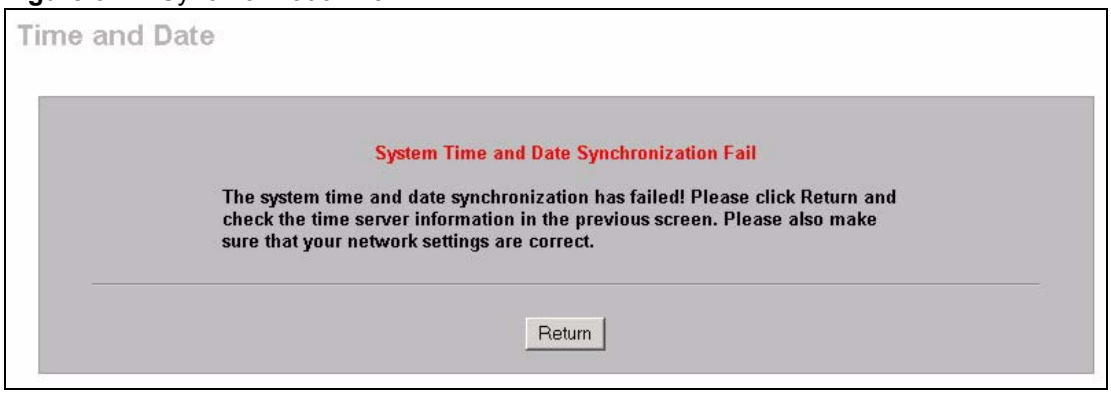

27.6 Introduction To Transparent Bridging

A transparent bridge is invisible to the operation of a network in that it does not modify the frames it forwards. The bridge checks the source address of incoming frames on the port and learns MAC addresses to associate with that port. All future communications to that MAC address will only be sent on that port.

The bridge gradually builds a host MAC-address-to-port mapping table such as in the following example, during the learning process.

Table 187 MAC-address-to-port Mapping Table

HOST MAC ADDRESS	PORT
00a0c5123456	3
00a0c5123478 (host A)	1
00a0c512349a	3
00a0c51234bc	2
00a0c51234de	4

For example, if a bridge receives a frame via port 1 from host A (MAC address 00a0c5123478), the bridge associates host A with port 1. When the bridge receives another frame on one of its ports with destination address 00a0c5123478, it forwards the frame directly through port 1 after checking the internal table.

The bridge takes one of these actions after it checks the destination address of an incoming frame with its internal table:

- If the table contains an association between the destination address and any of the bridge's ports aside from the one on which the frame was received, the frame is forwarded out the associated port.
- If no association is found, the frame is flooded to all ports except the inbound port. Broadcasts and multicasts also are flooded in this way.
- If the associated port is the same as the incoming port, then the frame is dropped (filtered).

27.7 Transparent Firewalls

A transparent firewall (also known as a transparent, in-line, shadow, stealth or bridging firewall) has the following advantages over “router firewalls”:

1. The use of a bridging firewall reduces configuration and deployment time because no networking configuration changes to your existing network (hosts, neighboring routers and the firewall itself) are needed. Just put it in-line with the network it is protecting. As it only moves frames between ports (after inspecting them), it is completely transparent.
2. Performance is improved as there's less processing overhead.
3. As a transparent bridge does not modify the frames it forwards, it is effectively “stealth” as it is invisible to attackers.

Bridging devices are most useful in complex environments that require a rapid or new firewall deployment. A transparent, bridging firewall can also be good for companies with several branch offices since the setups at these offices are often the same and it's likely that one design can be used for many of the networks. A bridging firewall could be configured at HQ, sent to the branches and then installed directly without additional configuration.

27.8 Configuring Device Mode (Router)


Click **MAINTENANCE** > **Device Mode** to open the following screen. Use this screen to configure your ZyWALL as a router or a bridge.

In router mode, the ZyWALL functions as a router. The ZyWALL routes traffic traveling between the ZyWALL's interfaces and filters and inspects packets.

In router mode, the ZyWALL can get an IP address from a DHCP server. It can also serve as a DHCP server to assign IP addresses to your local computers. The LAN, WAN, DMZ and WLAN interfaces all have different IP addresses. The ZyWALL also provides NAT, port forwarding, policy routing, and DNS in router mode. These features allow you to set up private network. See Table 5 on page 70 in the user’s guide for a detailed list of other features available in router mode.

The following applies when the ZyWALL is in router mode.

Figure 315 MAINTENANCE > Device Mode (Router Mode)

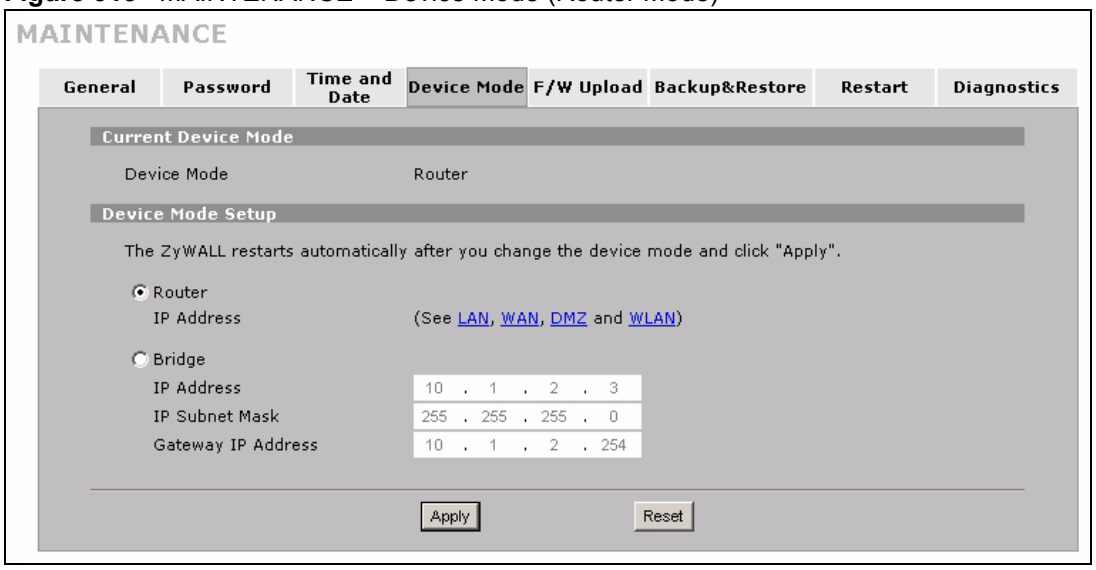

The following table describes the labels in this screen.

Table 188 MAINTENANCE > Device Mode (Router Mode)

LABEL	DESCRIPTION
Current Device Mode	
Device Mode	This displays whether the ZyWALL is functioning as a router or a bridge.
Device Mode Setup	
Router	When the ZyWALL is in router mode, there is no need to select or clear this radio button.
IP Address	Click **LAN**, **WAN**, **DMZ** or **WLAN** to go to the **LAN**, **WAN**, **DMZ** or **WLAN** screen where you can view and/or change the corresponding settings.
Bridge	Select this radio button and configure the following fields, then click **Apply** to set the ZyWALL to bridge mode.
IP Address	Enter the IP address of your ZyWALL in dotted decimal notation.
IP Subnet Mask	Enter the IP subnet mask of the ZyWALL.
Gateway IP Address	Enter the gateway IP address.
Apply	Click **Apply** to save your changes back to the ZyWALL. After you click **Apply**, please wait for one minute and use the IP address you configured in the **IP Address** field to access the ZyWALL again.
Reset	Click **Reset** to begin configuring this screen afresh.

27.9 Configuring Device Mode (Bridge)


Click **MAINTENANCE** > **Device Mode** to open the following screen. Use this screen to configure your ZyWALL as a router or a bridge.

In bridge mode, the ZyWALL functions as a transparent firewall (also known as a bridge firewall). The ZyWALL bridges traffic traveling between the ZyWALL's interfaces and still filters and inspects packets. You do not need to change the configuration of your existing network.

In bridge mode, the ZyWALL cannot get an IP address from a DHCP server. The LAN, WAN, DMZ and WLAN interfaces all have the same (static) IP address and subnet mask. You can configure the ZyWALL's IP address in order to access the ZyWALL for management. If you connect your computer directly to the ZyWALL, you also need to assign your computer a static IP address in the same subnet as the ZyWALL's IP address in order to access the ZyWALL.

You can use the firewall and VPN in bridge mode. See the user's guide for a list of other features that are available in bridge mode.

Figure 316 MAINTENANCE > Device Mode (Bridge Mode)

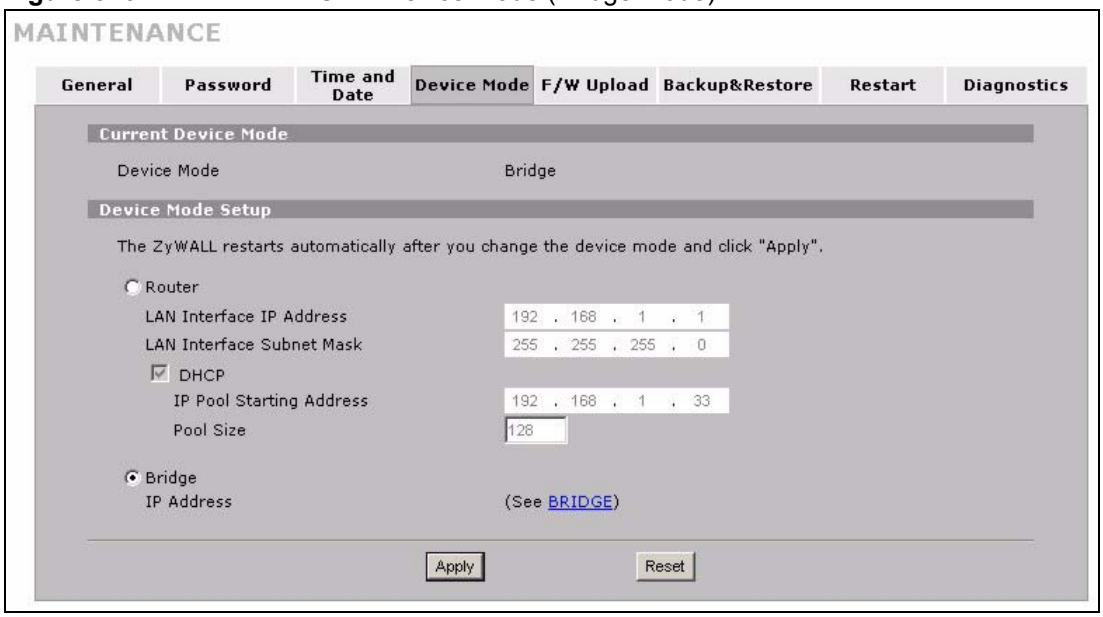

The following table describes the labels in this screen.

Table 189 MAINTENANCE > Device Mode (Bridge Mode)

LABEL	DESCRIPTION
Current Device Mode	
Device Mode	This displays whether the ZyWALL is functioning as a router or a bridge.
Device Mode Setup	
Router	Select this radio button and click **Apply** to set the ZyWALL to router mode.
LAN Interface IP Address	Enter the IP address of your ZyWALL' s LAN port in dotted decimal notation. 192.168.1.1 is the factory default.
LAN Interface Subnet Mask	Enter the IP subnet mask of the ZyWALL's LAN port.

Table 189 MAINTENANCE > Device Mode (Bridge Mode) (continued)

LABEL	DESCRIPTION
DHCP	DHCP (Dynamic Host Configuration Protocol, RFC 2131 and RFC 2132) allows individual clients (computers) to obtain TCP/IP configuration at startup from a server. Unless you are instructed by your ISP, leave the **DHCP** check box selected. Clear it to stop the ZyWALL from acting as a DHCP server. When configured as a server, the ZyWALL provides TCP/IP configuration for the clients. If not, DHCP service is disabled and you must have another DHCP server on your LAN, or else the computers must be manually configured. When set as a server, fill in the rest of the DHCP setup fields.
IP Pool Starting Address	This field specifies the first of the contiguous addresses in the IP address pool.
Pool Size	This field specifies the size, or count of the IP address pool.
Bridge	When the ZyWALL is in bridge mode, there is no need to select or clear this radio button.
IP Address	Click **Bridge** to go to the **Bridge** screen where you can view and/or change the bridge settings.
Apply	Click **Apply** to save your changes back to the ZyWALL. After you click **Apply**, please wait for one minute and use the IP address you configured in the **LAN Interface IP Address** field to access the ZyWALL again.
Reset	Click **Reset** to begin configuring this screen afresh.


27.10 F/W Upload Screen

Find firmware at www.zyxel.com in a file that (usually) uses the system model name with a .bin extension, for example, "zywall.bin". The upload process uses HTTP (Hypertext Transfer Protocol) and may take up to two minutes. After a successful upload, the system will reboot. See Section 43.5 on page 655 for upgrading firmware using FTP/TFTP commands.

Click **MAINTENANCE** > **F/W UPLOAD**. Follow the instructions in this screen to upload firmware to your ZyWALL.

Only upload firmware for your specific model!

Figure 317 MAINTENANCE > Firmware Upload

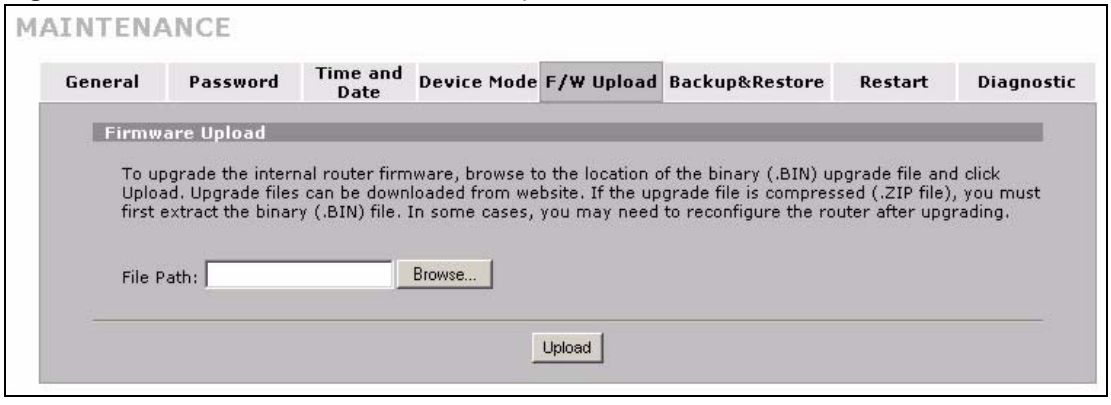

The following table describes the labels in this screen.


Table 190 MAINTENANCE > Firmware Upload

LABEL	DESCRIPTION
File Path	Type in the location of the file you want to upload in this field or click **Browse ...** to find it.
Browse...	Click **Browse...** to find the .bin file you want to upload. Remember that you must decompress compressed (.zip) files before you can upload them.
Upload	Click **Upload** to begin the upload process. This process may take up to two minutes.

Do not turn off the ZyWALL while firmware upload is in progress!

After you see the **Firmware Upload in Process** screen, wait two minutes before logging into the ZyWALL again.

Figure 318 Firmware Upload In Process

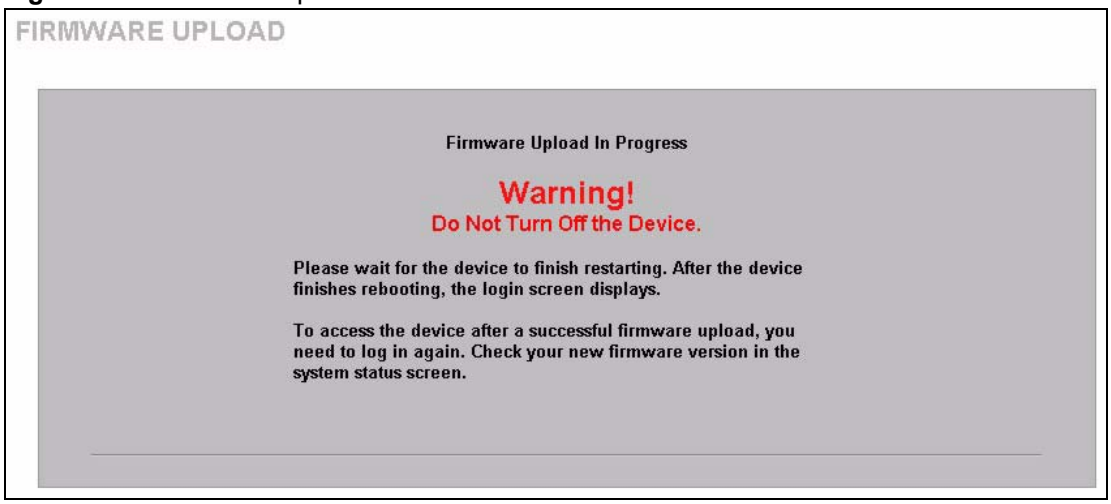

The ZyWALL automatically restarts in this time causing a temporary network disconnect. In some operating systems, you may see the following icon on your desktop.


Figure 319 Network Temporarily Disconnected



After two minutes, log in again and check your new firmware version in the **HOME** screen.

If the upload was not successful, the following screen will appear. Click **Return** to go back to the **F/W Upload** screen.

Figure 320 Firmware Upload Error

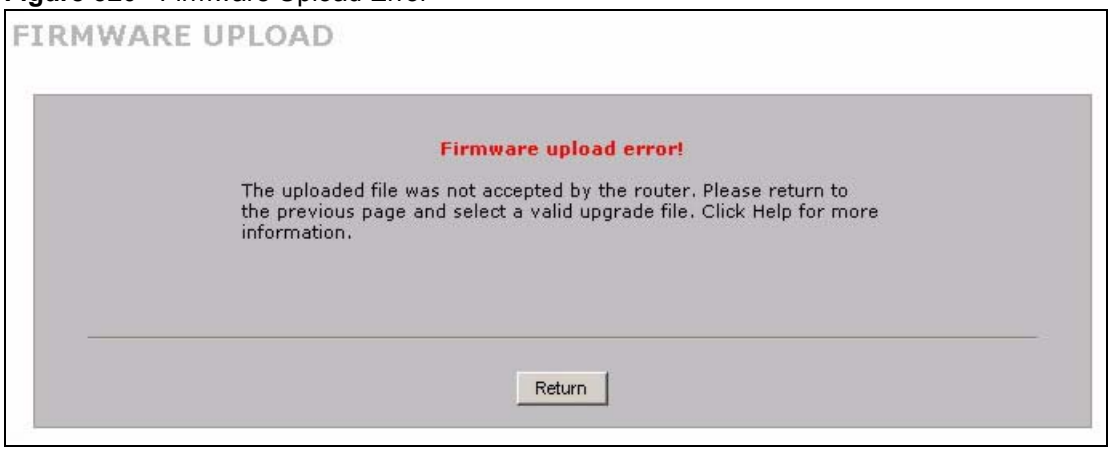


27.11 Backup and Restore

See Section 43.5 on page 655 for transferring configuration files using FTP/TFTP commands.

Click **MAINTENANCE** > **Backup & Restore**. Information related to factory defaults, backup configuration, and restoring configuration appears as shown next.

Figure 321 MAINTENANCE > Backup and Restore

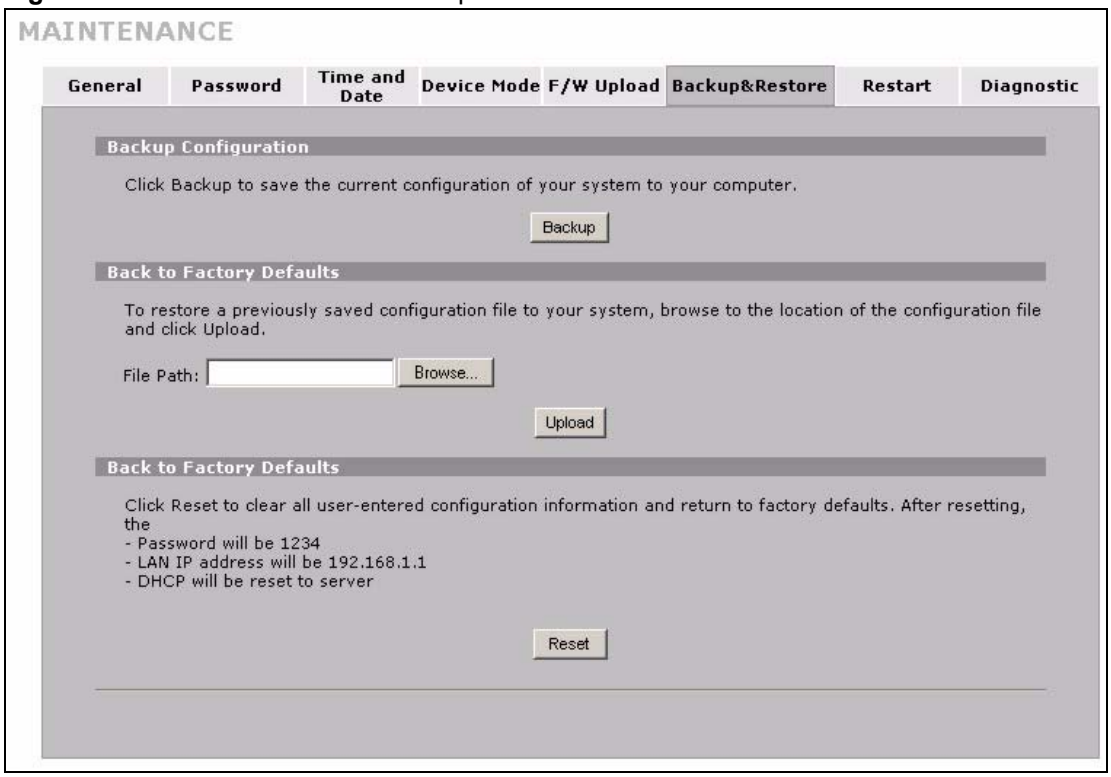

27.11.1 Backup Configuration

Backup configuration allows you to back up (save) the ZyWALL's current configuration to a file on your computer. Once your ZyWALL is configured and functioning properly, it is highly recommended that you back up your configuration file before making configuration changes. The backup configuration file will be useful in case you need to return to your previous settings.

Click **Backup** to save the ZyWALL's current configuration to your computer.

27.11.2 Restore Configuration

Load a configuration file from your computer to your ZyWALL.

Table 191 Restore Configuration

LABEL	DESCRIPTION
File Path	Type in the location of the file you want to upload in this field or click **Browse ...** to find it.
Browse...	Click **Browse...** to find the file you want to upload. Remember that you must decompress compressed (.ZIP) files before you can upload them.
Upload	Click **Upload** to begin the upload process.

Do not turn off the ZyWALL while configuration file upload is in progress.


After you see a "restore configuration successful" screen, you must then wait one minute before logging into the ZyWALL again.

Figure 322 Configuration Upload Successful



The ZyWALL automatically restarts in this time causing a temporary network disconnect. In some operating systems, you may see the following icon on your desktop.


Figure 323 Network Temporarily Disconnected

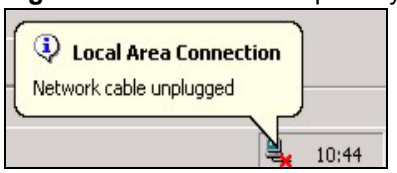

If you uploaded the default configuration file you may need to change the IP address of your computer to be in the same subnet as that of the default device IP address (192.168.1.1). See your Quick Start Guide for details on how to set up your computer's IP address.

If the upload was not successful, the following screen will appear. Click **Return** to go back to the **Configuration** screen.


Figure 324 Configuration Upload Error

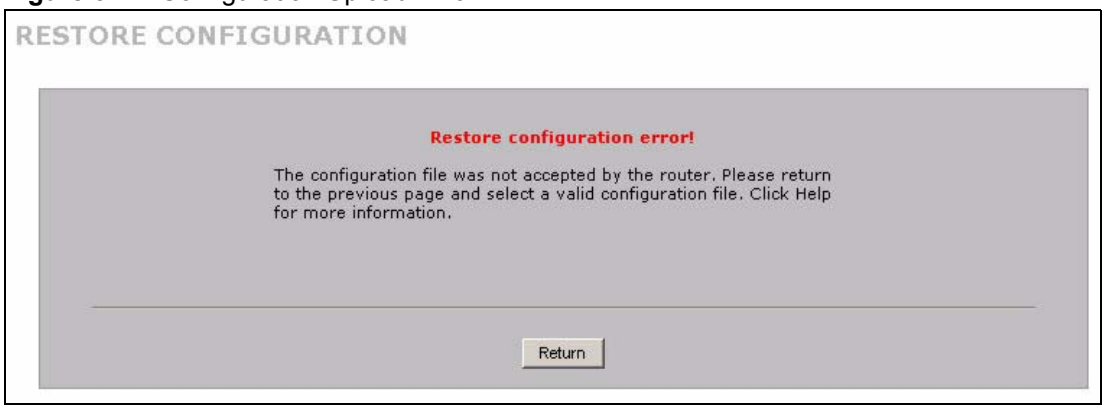

27.11.3 Back to Factory Defaults

Click the **Reset** button to clear all user-entered configuration information and return the ZyWALL to its factory defaults as shown on the screen. The following warning screen appears.

Figure 325 Reset Warning Message

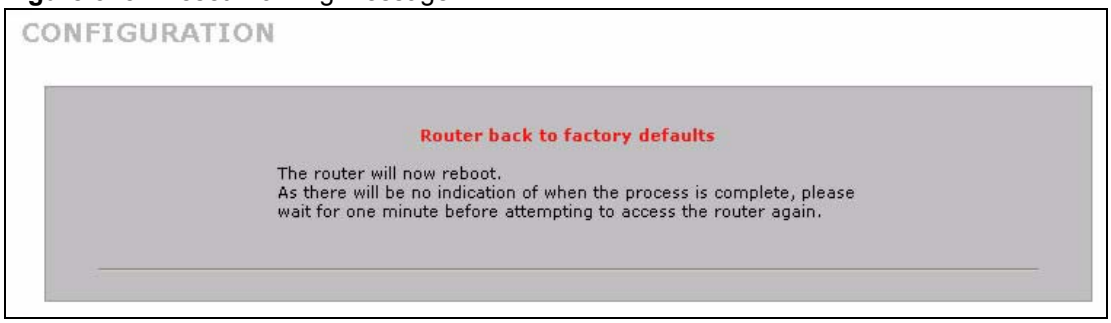


You can also press the hardware **RESET** button to reset the factory defaults of your ZyWALL. Refer to Section 2.3 on page 59 for more information on the **RESET** button.

27.12 Restart Screen

System restart allows you to reboot the ZyWALL without turning the power off.

Click **MAINTENANCE** > **Restart**. Click **Restart** to have the ZyWALL reboot. Restart is different to reset; (see Section 27.11.3 on page 525) reset returns the device to its default configuration.

Figure 326 MAINTENANCE > Restart

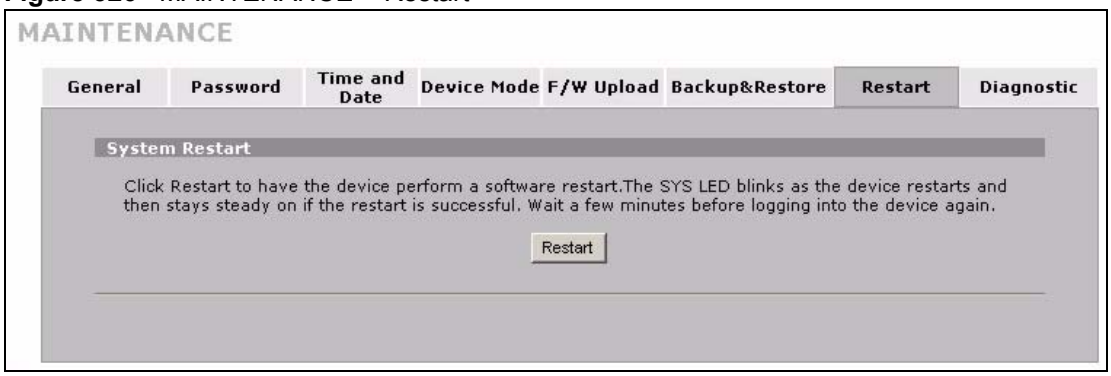


27.13 Diagnostics

Use the **Diagnostics** screen to have the ZyWALL generate and send diagnostic files by e-mail and/or the console port. The diagnostics files contain the ZyWALL's configuration and diagnostic information. You may need to generate this file and send it to customer support during troubleshooting.

Click **MAINTENANCE > Diagnostics** to open the following screen.

The ZyWALL sends only one diagnosis mail within five minutes (unless you click **Perform Diagnostics Now**).

Figure 327 MAINTENANCE > Diagnostics

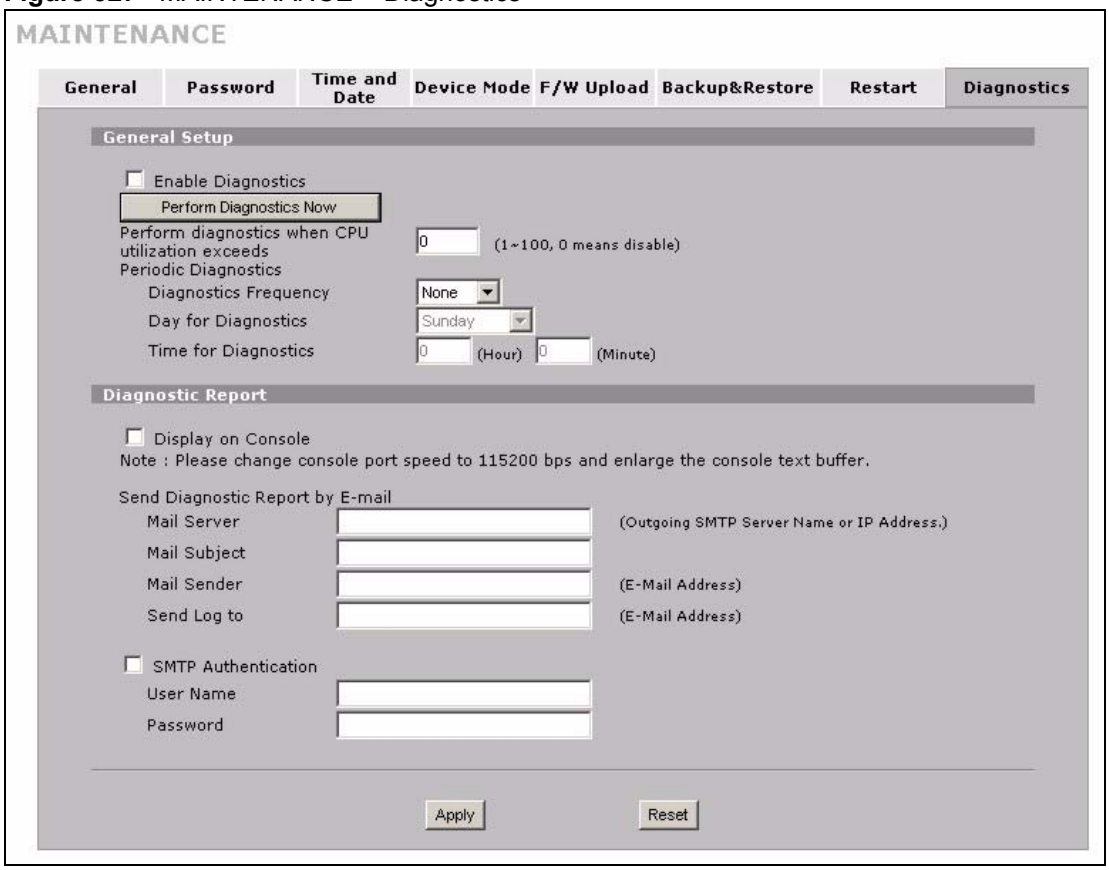

The following table describes the labels in this screen.

Table 192 MAINTENANCE > Diagnostics

LABEL	DESCRIPTION
Enable Diagnostics	Select this option to turn on the diagnostics feature.
Perform Diagnostics Now	Click this button to generate and send a diagnostic file immediately, instead of based on a time period or CPU usage level.
Perform diagnostics when CPU utilization exceeds	Set the ZyWALL to generate and send a diagnostic file every time the CPU usage exceeds the specified percent for more than 60 seconds. Enter 0 to have the ZyWALL not generate and send diagnostic files based on CPU usage going over a specific level.
Periodic Diagnostics	Use these fields to set the ZyWALL to generate and send diagnostic files at regular intervals. Even if you enable both CPU utilization-based and periodic diagnosis, the ZyWALL only sends one diagnostic file within five minutes (unless you click **Perform Diagnostics Now**).
Diagnostics Frequency	Set how often the ZyWALL generates and sends diagnostic files. **Hourly** **Daily** **Weekly** **None**. If you select **Daily** or **Weekly**, specify a time of day for the ZyWALL to generate and send diagnostic files. If you select **Weekly**, then also specify which day of the week. Select **None** to have the ZyWALL not generate and send diagnostic files based on a time period.

Table 192 MAINTENANCE > Diagnostics (continued)

LABEL	DESCRIPTION
Day for Diagnostics	Use the drop down list box to select which day of the week to generate and send diagnostic files.
Time for Diagnostics	Enter the time of day in 24-hour format (for example 23:00 equals 11:00 pm) to generate and send diagnostic files.
Display on Console	Select this option to have the ZyWALL send diagnostic information through the console port. To receive the information through the console port, you still need to configure the mail settings and open a terminal emulation program on the computer connected to the console port. To handle the size of the diagnostic file, change your console port speed to 115200 bps (on both the ZyWALL and your terminal emulation program) and enlarge the console text buffer.
Send Diagnostic Report by E-mail	
Mail Server	Enter the server name or the IP address of the mail server for the e-mail address specified in the **Mail Sender** field. If this field is left blank, diagnostic files will not be sent via e-mail.
Mail Subject	Type a title that you want to be in the subject line of the diagnostic e-mail message that the ZyWALL sends.
Mail Sender	Enter the e-mail address that you want to be in the from/sender line of the diagnostic e-mail message that the ZyWALL sends. If you activate SMTP authentication, the e-mail address must be able to be authenticated by the mail server as well.
Send Log to	Diagnostic files are sent to the e-mail address specified in this field. If this field is left blank, diagnostic files will not be sent via e-mail.
SMTP Authentication	SMTP (Simple Mail Transfer Protocol) is the message-exchange standard for the Internet. SMTP enables you to move messages from one e-mail server to another. Select the check box to activate SMTP authentication. If mail server authentication is needed but this feature is disabled, you will not receive the diagnostic files.
User Name	Enter the user name (up to 31 characters) (usually the user name of a mail account you specified in the **Mail Sender** field).
Password	Enter the password associated with the user name above.
Apply	Click **Apply** to save your changes back to the ZyWALL.
Reset	Click **Reset** to begin configuring this screen afresh.

PART VI
SMT

Introducing the SMT (531)
SMT Menu 1 - General Setup (539)
WAN and Dial Backup Setup (545)
LAN Setup (559)
Internet Access (565)
DMZ Setup (571)
Route Setup (575)
Wireless Setup (579)
Remote Node Setup (583)
IP Static Route Setup (591)
Network Address Translation (NAT) (595)
Introducing the ZyWALL Firewall (615)
Filter Configuration (617)
SNMP Configuration (633)
System Information & Diagnosis (635)
Firmware and Configuration File Maintenance (647)
System Maintenance Menus 8 to 10 (661)
Remote Management (669)
IP Policy Routing (673)
Call Scheduling (681)

28

Introducing the SMT

This chapter explains how to access the System Management Terminal and gives an overview of its menus.

28.1 Introduction to the SMT

The ZyWALL's SMT (System Management Terminal) is a menu-driven interface that you can access from a terminal emulator through the console port or over a telnet connection. This chapter shows you how to access the SMT (System Management Terminal) menus via console port, how to navigate the SMT and how to configure SMT menus.

28.2 Accessing the SMT via the Console Port

Make sure you have the physical connection properly set up as described in the Quick Start Guide.

When configuring using the console port, you need a computer equipped with communications software configured to the following parameters:

- VT100 terminal emulation.
- 9600 Baud.
- No parity, 8 data bits, 1 stop bit, flow control set to none.

28.2.1 Initial Screen

When you turn on your ZyWALL, it performs several internal tests as well as line initialization.

After the tests, the ZyWALL asks you to press [ENTER] to continue, as shown next.

Figure 328 Initial Screen

```
Copyright (c) 1994 - 2007 ZyXEL Communications Corp.
initialize ch =0, ethernet address: 00:00:AA:77:90:79
initialize ch =1, ethernet address: 00:00:AA:77:90:7A
initialize ch =2, ethernet address: 00:00:AA:77:90:7B
initialize ch =3, ethernet address: 00:00:AA:77:90:79
initialize ch =4, ethernet address: 00:00:AA:77:90:7C
initialize ch =5, ethernet address: 06:00:AA:77:90:79
initialize ch =6, ethernet address: 0A:00:AA:77:90:79
initialize ch =7, ethernet address: 0E:00:AA:77:90:79
initialize ch =8, ethernet address: 12:00:AA:77:90:79
initialize ch =9, ethernet address: 16:00:AA:77:90:79
initialize ch =10, ethernet address: 1A:00:AA:77:90:79
initialize ch =11, ethernet address: 1E:00:AA:77:90:79
AUX port init .. done
Modem 1 init . inactive
Modem 2 init . done

Press ENTER to continue...
```

28.2.2 Entering the Password

The login screen appears after you press [ENTER], prompting you to enter the password, as shown below.

For your first login, enter the default password "1234". As you type the password, the screen displays an "X" for each character you type.

Please note that if there is no activity for longer than five minutes after you log in, your ZyWALL will automatically log you out and display a blank screen. If you see a blank screen, press [ENTER] to bring up the login screen again.

Figure 329 Password Screen

```
Enter Password : XXXX
```

28.3 Navigating the SMT Interface

The SMT is an interface that you use to configure your ZyWALL.

Several operations that you should be familiar with before you attempt to modify the configuration are listed in the table below.

Table 193 Main Menu Commands

OPERATION	KEYSTROKES	DESCRIPTION
Move down to another menu	[ENTER]	To move forward to a submenu, type in the number of the desired submenu and press [ENTER].
Move up to a previous menu	[ESC]	Press the [ESC] key to move back to the previous menu.
Move to a "hidden" menu	Press [SPACE BAR] to change No to Yes then press [ENTER].	Fields beginning with "Edit" lead to hidden menus and have a default setting of No. Press [SPACE BAR] to change No to Yes, and then press [ENTER] to go to a "hidden" menu.
Move the cursor	[ENTER] or [UP]/[DOWN] arrow keys	Within a menu, press [ENTER] to move to the next field. You can also use the [UP]/[DOWN] arrow keys to move to the previous and the next field, respectively. When you are at the top of a menu, press the [UP] arrow key to move to the bottom of a menu.
Entering information	Fill in, or press [SPACE BAR], then press [ENTER] to select from choices.	You need to fill in two types of fields. The first requires you to type in the appropriate information. The second allows you to cycle through the available choices by pressing [SPACE BAR].
Required fields	<? >	All fields with the symbol <?> must be filled in order be able to save the new configuration.
N/A fields	<N/A>	Some of the fields in the SMT will show a <N/A>. This symbol refers to an option that is Not Applicable.
Save your configuration	[ENTER]	Save your configuration by pressing [ENTER] at the message "Press ENTER to confirm or ESC to cancel". Saving the data on the screen will take you, in most cases to the previous menu. Make sure you save your settings in each screen that you configure.
Exit the SMT	Type 99, then press [ENTER].	Type 99 at the main menu prompt and press [ENTER] to exit the SMT interface.

28.3.1 Main Menu

After you enter the password, the SMT displays the **ZyWALL Main Menu**, as shown next.

Figure 330 Main Menu (Router Mode)

```
            Copyright (c) 1994 - 2007 ZyXEL Communications Corp.

                          ZyWALL 2WG Main Menu

    Getting Started                     Advanced Management
      1. General Setup                    21. Filter and Firewall Setup
      2. WAN Setup                        22. SNMP Configuration
      3. LAN Setup                        23. System Password
      4. Internet Access Setup            24. System Maintenance
      5. DMZ Setup                        25. IP Routing Policy Setup
      6. Route Setup                      26. Schedule Setup
      7. Wireless Setup
    Advanced Applications
      11. Remote Node Setup
      12. Static Routing Setup
      15. NAT Setup
                                          99. Exit


           Enter Menu Selection Number:
```

Figure 331 Main Menu (Bridge Mode)

```
            Copyright (c) 1994 - 2007 ZyXEL Communications Corp.

                          ZyWALL 2WG Main Menu

    Getting Started                     Advanced Management
      1. General Setup                    21. Filter and Firewall Setup
                                          22. SNMP Configuration
                                          23. System Password
                                          24. System Maintenance




                                          99. Exit


                       Enter Menu Selection Number:
```

The following table describes the fields in this menu.

Table 194 Main Menu Summary

NO.	MENU TITLE	FUNCTION
1	General Setup	Use this menu to set up device mode, dynamic DNS and administrative information.
2	WAN Setup	Use this menu to clone a MAC address from a computer on your LAN and configure the backup WAN dial-up connection. You can also use this menu to configure 3G modem setting on the ZyWALL.
3	LAN Setup	Use this menu to apply LAN filters, configure LAN DHCP and TCP/IP settings.

Table 194 Main Menu Summary

NO.	MENU TITLE	FUNCTION
4	Internet Access Setup	Configure your Internet access setup (Internet address, gateway, login, etc.) with this menu.
5	DMZ Setup	Use this menu to apply DMZ filters, and configure DHCP and TCP/IP settings for the DMZ port.
6	Route Setup	Use this menu to configure your WAN route assessment, traffic redirect properties and failover parameters.
7	Wireless Setup	Use this menu to configure WLAN DHCP and TCP/IP settings for the wireless LAN interface.
11	Remote Node Setup	Use this menu to configure detailed remote node settings (your ISP is also a remote node) as well as apply WAN filters.
12	Static Routing Setup	Configure IP static routes in this menu.
15	NAT Setup	Use this menu to configure Network Address Translation.
21	Filter and Firewall Setup	Configure filters and activate/deactivate the firewall.
22	SNMP Configuration	Use this menu to configure SNMP-related parameters.
23	System Password	Change your password in this menu (recommended).
24	System Maintenance	From displaying system status to uploading firmware, this menu provides comprehensive system maintenance.
25	IP Routing Policy Setup	Configure and display policies for use in IP policy routing.
26	Schedule Setup	Use this menu to schedule outgoing calls.
99	Exit	Use this menu to exit (necessary for remote configuration).

28.3.2 SMT Menus Overview

The following table gives you an overview of your ZyWALL's various SMT menus.

Table 195 SMT Menus Overview

MENUS	SUB MENUS		
1 General Setup	1.1 Configure Dynamic DNS	1.1.1 DDNS Host Summary	1.1.1 DDNS Edit Host
2 WAN Setup	2.1 Advanced WAN Setup		
3 LAN Setup	3.1 LAN Port Filter Setup		
	3.2 TCP/IP and DHCP Ethernet Setup	3.2.1 IP Alias Setup	
4 Internet Access Setup			
5 DMZ Setup	5.1 DMZ Port Filter Setup		
	5.2 TCP/IP and DHCP Ethernet Setup	5.2.1 IP Alias Setup	
6 Route Setup	6.1 Route Assessment		
	6.2 Traffic Redirect		
	6.3 Route Failover		
7 Wireless Setup	7.2 TCP/IP and DHCP Ethernet Setup	7.2.1 IP Alias Setup	

Table 195 SMT Menus Overview (continued)

MENUS	SUB MENUS		
11 Remote Node Setup	11.1 Remote Node Profile	11.1.2 Remote Node Network Layer Options	
		11.1.4 Remote Node Filter	
	11.2 Remote Node Profile (3G WAN)	11.2.2 Remote Node Network Layer Options	
		11.2.3 Remote Node Script	
		11.2.4 Remote Node Filter	
	11.3 Remote Node Profile (Backup ISP)	11.3.2 Remote Node Network Layer Options	
		11.3.3 Remote Node Script	
		11.3.4 Remote Node Filter	
12 Static Routing Setup	12.1 Edit IP Static Route		
15 NAT Setup	15.1 Address Mapping Sets	15.1.x Address Mapping Rules	15.1.x.x Address Mapping Rule
	15.2 Port Forwarding Setup	15.2.x NAT Server Setup	15.2.x.x - NAT Server Configuration
	15.3 Trigger Port Setup	15.3.x Trigger Port Setup	
21 Filter and Firewall Setup	21.1 Filter Set Configuration	21.1.x Filter Rules Summary	21.1.x.x Generic Filter Rule
			21.1.x.x TCP/IP Filter Rule
	21.2 Firewall Setup		
22 SNMP Configuration			
23 System Password			

Table 195 SMT Menus Overview (continued)

MENUS	SUB MENUS		
24 System Maintenance	24.1 System Status		
	24.2 System Information and Console Port Speed	24.2.1 System Information	
		24.2.2 Console Port Speed	
	24.3 Log and Trace	24.3.1 View Error Log	
		24.3.2 Syslog Logging	
		24.3.4 Call-Triggering Packet	
	24.4 Diagnostic		
	24.5 Backup Configuration		
	24.6 Restore Configuration		
	24.7 Upload Firmware	24.7.1 Upload System Firmware	
		24.7.2 Upload System Configuration File	
	24.8 Command Interpreter Mode		
	24.9 Call Control	24.9.1 Budget Management	
		24.9.2 Call History	
	24.10 Time and Date Setting		
	24.11 Remote Management Setup		
25 IP Routing Policy Summary	25.1 IP Routing Policy Setup	25.1.1 IP Routing Policy Setup	
26 Schedule Setup	26.1 Schedule Set Setup		

28.4 Changing the System Password

Change the system password by following the steps shown next.

1 Enter 23 in the main menu to open **Menu 23 - System Password** as shown next.

Figure 332 Menu 23: System Password

```
                Menu 23 - System Password

        Old Password= ?
        New Password= ?
        Retype to confirm= ?



         Enter here to CONFIRM or ESC to CANCEL:
```

2 Type your existing password and press [ENTER].

3 Type your new system password and press [ENTER].
4 Re-type your new system password for confirmation and press [ENTER].

Note that as you type a password, the screen displays an “x” for each character you type.

28.5 Resetting the ZyWALL

See Section 2.3 on page 59 for directions on resetting the ZyWALL.

29

SMT Menu 1 - General Setup

Menu 1 - General Setup contains administrative and system-related information.

29.1 Introduction to General Setup

Menu 1 - General Setup contains administrative and system-related information.

29.2 Configuring General Setup

1. Enter 1 in the main menu to open **Menu 1 - General Setup**.
2. The **Menu 1 - General Setup** screen appears, as shown next. Fill in the required fields.

Figure 333 Menu 1: General Setup (Router Mode)

```
                Menu 1 - General Setup

          System Name=
          Domain Name=

          Device Mode= Router Mode


          Edit Dynamic DNS= No

          Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields in this menu.

Table 196 Menu 1: General Setup (Router Mode)

FIELD	DESCRIPTION
System Name	Choose a descriptive name for identification purposes. It is recommended you enter your computer's "Computer name" in this field. This name can be up to 30 alphanumeric characters long. Spaces are not allowed, but dashes "-" and underscores "_" are accepted.
Domain Name	Enter the domain name (if you know it) here. If you leave this field blank, the ISP may assign a domain name via DHCP. You can go to menu 24.8 and type "sys domain name" to see the current domain name used by your router. The domain name entered by you is given priority over the ISP assigned domain name. If you want to clear this field just press [SPACE BAR] and then [ENTER].

Table 196 Menu 1: General Setup (Router Mode) (continued)

FIELD	DESCRIPTION
Device Mode	Press [SPACE BAR] and then [ENTER] to select **Router Mode**.
Edit Dynamic DNS	Press [SPACE BAR] and then [ENTER] to select **Yes** or **No** (default). Select **Yes** to configure **Menu 1.1 - Configure Dynamic DNS** discussed next.
When you have completed this menu, press [ENTER] at the prompt “Press ENTER to Confirm…” to save your configuration, or press [ESC] at any time to cancel.	

Figure 334 Menu 1: General Setup (Bridge Mode)

```
                        Menu 1 - General Setup

            System Name=
            Domain Name=

            Device Mode= Bridge Mode

            IP Address= 0.0.0.0
            Network Mask= 0.0.0.0
            Gateway= 0.0.0.0
            First System DNS Server
              IP Address= 0.0.0.0
            Second System DNS Server
              IP Address= 0.0.0.0
            Third System DNS Server
              IP Address= 0.0.0.0

                       Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields not previously discussed (see Table 196 on page 539).

Table 197 Menu 1: General Setup (Bridge Mode)

FIELD	DESCRIPTION
Device Mode	Press [SPACE BAR] and then [ENTER] to select **Bridge Mode**.
IP Address	Enter the IP address of your ZyWALL in dotted decimal notation.
Network Mask	Enter the subnet mask of your ZyWALL.
Gateway	Enter the gateway IP address.
First System DNS Server Second System DNS Server Third System DNS Server	Enter the DNS server's IP address(es) in the **IP Address** field(s) if you have the IP address(es) of the DNS server(s).

29.2.1 Configuring Dynamic DNS

To configure Dynamic DNS, set the ZyWALL to router mode in menu 1 or in the **MAINTENANCE Device Mode** screen and go to **Menu 1 - General Setup** and press [SPACE BAR] to select **Yes** in the **Edit Dynamic DNS** field. Press [ENTER] to display **Menu 1.1 - Configure Dynamic DNS** (shown next).

Figure 335 Menu 1.1: Configure Dynamic DNS

```
            Menu 1.1 - Configure Dynamic DNS

                Service Provider= WWW.DynDNS.ORG
                Active= No
                Username=
                Password= ********
                Edit Host= No


               Press ENTER to Confirm or ESC to Cancel:
```

Follow the instructions in the next table to configure Dynamic DNS parameters.

Table 198 Menu 1.1: Configure Dynamic DNS

FIELD	DESCRIPTION
Service Provider	This is the name of your Dynamic DNS service provider.
Active	Press [SPACE BAR] to select **Yes** and then press [ENTER] to make dynamic DNS active.
Username	Enter your user name.
Password	Enter the password assigned to you.
Edit Host	Press [SPACE BAR] and then [ENTER] to select **Yes** if you want to configure a DDNS host.
When you have completed this menu, press [ENTER] at the prompt “Press ENTER to Confirm…” to save your configuration, or press [ESC] at any time to cancel.	

29.2.1.1 Editing DDNS Host

To configure a DDNS host, follow the procedure below.

1. Configure your ZyWALL as a router in menu 1 or the **MAINTENANCE Device Mode** screen.
2. Enter 1 in the main menu to open **Menu 1 - General Setup**.
3. Press [SPACE BAR] to select **Yes** in the **Edit Dynamic DNS** field. Press [ENTER] to display **Menu 1.1 - Configure Dynamic DNS**.
4. Press [SPACE BAR] and then [ENTER] to select **Yes** in the **Edit Host** field. Press [ENTER] to display **Menu 1.1.1 - DDNS Host Summary**.

Figure 336 Menu 1.1.1: DDNS Host Summary

```
                Menu 1.1.1 DDNS Host Summary

#                          Summary
--- - ------------------------------------------------------
01    Hostname=ZyWALL,
        Type=Dynamic,WC=Yes,Offline=No,Policy=DDNS Server
      Detect, WAN1, HA=Yes
02    ______________________________________________________
      ______________________________________________________
03    ______________________________________________________
      ______________________________________________________
04    ______________________________________________________
      ______________________________________________________
05    ______________________________________________________
      ______________________________________________________


              Select Command= None           Select Rule= N/A
                    Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields in this screen.

Table 199 Menu 1.1.1: DDNS Host Summary

FIELD	DESCRIPTION
#	This is the DDNS host index number.
Summary	This displays the details about the DDNS host.
Select Command	Press [SPACE BAR] to choose from **None**, **Edit**, **Delete**, **Next Page** or **Previous Page** and then press [ENTER]. You must select a DDNS host in the next field when you choose the **Edit** or **Delete** commands. Select **None** and then press [ENTER] to go to the "Press ENTER to Confirm…" prompt. Use **Edit** to create or edit a rule. Use **Delete** to remove a rule. To edit or delete a DDNS host, first make sure you are on the correct page. When a rule is deleted, subsequent rules do not move up in the page list. Select **Next Page** or **Previous Page** to view the next or previous page of DDNS hosts (respectively).
Select Rule	Type the DDNS host index number you wish to edit or delete and then press [ENTER].
When you have completed this menu, press [ENTER] at the prompt "Press ENTER to Confirm…" to save your configuration, or press [ESC] at any time to cancel.	

5 Select **Edit** in the **Select Command** field; type the index number of the DDNS host you want to configure in the **Select Rule** field and press [ENTER] to open **Menu 1.1.1 - DDNS Edit Host** (see the next figure).

Figure 337 Menu 1.1.1: DDNS Edit Host

```
                    Menu 1.1.1 - DDNS Edit Host

          Hostname= ZyWALL
          DDNS Type= DynamicDNS
          Enable Wildcard Option= Yes
          Enable Off Line Option= N/A
          Bind WAN= 1
          HA= Yes
          IP Address Update Policy:
            Let DDNS Server Auto Detect= Yes
            Use User-Defined= N/A
            Use WAN IP Address= N/A


                        Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields in this screen.

Table 200 Menu 1.1.1: DDNS Edit Host

FIELD	DESCRIPTION
Host Name	Enter your host name in this field.
DDNS Type	Press [SPACE BAR] and then [ENTER] to select **DynamicDNS** if you have the Dynamic DNS service. Select **StaticDNS** if you have the Static DNS service. Select **CustomDNS** if you have the Custom DNS service.
Enable Wildcard Option	Your ZyWALL supports DYNDNS Wildcard. Press [SPACE BAR] and then [ENTER] to select **Yes** or **No**. This field is **N/A** when you choose DDNS client as your service provider.
Enable Off Line Option	This field is only available when **CustomDNS** is selected in the **DDNS Type** field. Press [SPACE BAR] and then [ENTER] to select **Yes**. When **Yes** is selected, http://www.dyndns.org/ traffic is redirected to a URL that you have previously specified (see www.dyndns.org for details).
Bind WAN	Enter the WAN interface to use for updating the IP address of the domain name.
HA	Press [SPACE BAR] and then [ENTER] to select **Yes** to enable the high availability (HA) feature. If the WAN interface specified in the **Bind WAN** field does not have a connection, the ZyWALL will attempt to use the IP address of another WAN interface to update the domain name. When the WAN interfaces are in the active/passive operating mode, the ZyWALL will update the domain name with the IP address of whichever WAN interface has a connection, regardless of the setting in the **Bind WAN** field. Clear this check box and the ZyWALL will not update the domain name with an IP address if the WAN interface specified in the **Bind WAN** field does not have a connection. Note: If you enable high availability, DDNS can also function when the ZyWALL uses the dial backup port. DDNS does not function when the ZyWALL uses traffic redirect. Refer to Section 21.10.2 on page 437 for detailed information.

Table 200 Menu 1.1.1: DDNS Edit Host (continued)

FIELD	DESCRIPTION
IP Address Update Policy:	You can select **Yes** in either the **Let DDNS Server Auto Detect** field (recommended) or the **Use User-Defined** field, but not both. With the **Let DDNS Server Auto Detect** and **Use User-Defined** fields both set to **No**, the DDNS server automatically updates the IP address of the host name(s) with the ZyWALL's WAN IP address. DDNS does not work with a private IP address. When both fields are set to **No**, the ZyWALL must have a public WAN IP address in order for DDNS to work.
Let DDNS Server Auto Detect	Only select this option when there are one or more **NAT** routers between the ZyWALL and the DDNS server. Press [SPACE BAR] to select **Yes** and then press [ENTER] to have the DDNS server automatically detect and use the IP address of the NAT router that has a public IP address. Note: The DDNS server may not be able to detect the proper IP address if there is an HTTP proxy server between the ZyWALL and the DDNS server.
Use User-Defined	Press [SPACE BAR] to select **Yes** and then press [ENTER] to update the IP address of the host name(s) to the IP address specified below. Only select **Yes** if the ZyWALL uses or is behind a static public IP address.
Use WAN IP Address	Enter the static public IP address if you select **Yes** in the **Use User-Defined** field.
When you have completed this menu, press [ENTER] at the prompt "Press ENTER to Confirm…" to save your configuration, or press [ESC] at any time to cancel.	

The IP address updates when you reconfigure menu 1 or perform DHCP client renewal.

30

WAN and Dial Backup Setup

This chapter describes how to configure the WAN using menu 2 and dial-backup using menus 2.1 and 11.1.

30.1 Introduction to WAN, 3G WAN and Dial Backup Setup

This chapter explains how to configure settings for your WAN interface(s), a 3G WAN connection and a dial backup connection using the SMT menus.

30.2 WAN Setup

From the main menu, enter 2 to open menu 2.

Figure 338 MAC Address Cloning in WAN Setup

```
                Menu 2 - WAN Setup

        WAN 1 MAC Address:
          Assigned By= Factory default
          IP Address= N/A

        Dial-Backup:
          Active= No
          Port Speed= 115200
          AT Command String:
            Init= at&fs0=0
          Edit Advanced Setup= No

        3G Modem Setup:
          Init= Configure APN
          APN = internet
          PIN code= 0000

    Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields in this screen.

Table 201 MAC Address Cloning in WAN Setup

FIELD	DESCRIPTION
WAN 1 MAC Address	
Assigned By	Press [SPACE BAR] and then [ENTER] to choose one of two methods to assign a MAC Address. Choose **Factory Default** to select the factory assigned default MAC Address. Choose **IP address attached on LAN** to use the MAC Address of that computer whose IP you give in the following field.
IP Address	This field is applicable only if you choose the **IP address attached on LAN** method in the **Assigned By** field. Enter the IP address of the computer on the LAN whose MAC you are cloning.
When you have completed this menu, press [ENTER] at the prompt “Press ENTER to Confirm…” to save your configuration, or press [ESC] at any time to cancel.	

30.3 Dial Backup

The Dial Backup port can be used in reserve, as a traditional dial-up connection should the broadband connection to the WAN port fail. To set up the auxiliary port (Dial Backup) for use in the event that the regular WAN connection is dropped, first make sure you have set up the switch and port connection (see the Quick Start Guide), then configure

1. Menu 2 - WAN Setup,
2. Menu 2.1 - Advanced WAN Setup and
3. Menu 11.3 - Remote Node Profile (Backup ISP)

Refer also to the section about traffic redirect for information on an alternate backup WAN connection.

30.3.1 Configuring Dial Backup in Menu 2

From the main menu, enter 2 to open menu 2.

Figure 339 Menu 2: Dial Backup Setup

```
                    Menu 2 - WAN Setup

              WAN 1 MAC Address:
                Assigned By= Factory default
                IP Address= N/A

              Dial-Backup:
                Active= No
                Port Speed= 115200
                AT Command String:
                  Init= at&fs0=0
                Edit Advanced Setup= No

              3G Modem Setup:
                Init= Configure APN
                APN = internet
                PIN code= 0000


          Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields in this menu.

Table 202 Menu 2: Dial Backup Setup

FIELD	DESCRIPTION
Dial-Backup:	
Active	Use this field to turn the dial-backup feature on (**Yes**) or off (**No**).
Port Speed	Press [SPACE BAR] and then press [ENTER] to select the speed of the connection between the Dial Backup port and the external device. Available speeds are: **9600**, **19200**, **38400**, **57600**, **115200** or **230400** bps.
AT Command String:	
Init	Enter the AT command string to initialize the WAN device. Consult the manual of your WAN device connected to your Dial Backup port for specific AT commands.
Edit Advanced Setup	To edit the advanced setup for the Dial Backup port, move the cursor to this field; press the [SPACE BAR] to select **Yes** and then press [ENTER] to go to **Menu 2.1 - Advanced Setup**.
When you have completed this menu, press [ENTER] at the prompt “Press ENTER to Confirm…” to save your configuration, or press [ESC] at any time to cancel.	

30.3.2 Advanced WAN Setup



Consult the manual of your WAN device connected to your Dial Backup port for specific AT commands.

To edit the advanced setup for the Dial Backup port, move the cursor to the **Edit Advanced Setup** field in **Menu 2 - WAN Setup**, press the [SPACE BAR] to select **Yes** and then press [ENTER].

Figure 340 Menu 2.1: Advanced WAN Setup

```
                Menu 2.1 - Advanced WAN Setup

AT Command Strings:                  Call Control:
  Dial= atdt                           Dial Timeout(sec)= 60
  Drop= ~~+++~~ath                     Retry Count= 0
  Answer= ata                          Retry Interval(sec)= N/A
                                       Drop Timeout(sec)= 20
Drop DTR When Hang Up= Yes             Call Back Delay(sec)= 15

  AT Response Strings:
    CLID= NMBR =
    Called Id=
    Speed= CONNECT

        Press ENTER to Confirm or ESC to Cancel:
```

The following table describes fields in this menu.

Table 203 Advanced WAN Port Setup: AT Commands Fields

FIELD	DESCRIPTION
AT Command Strings:	
Dial	Enter the AT Command string to make a call.
Drop	Enter the AT Command string to drop a call. “~” represents a one second wait, e.g., “~~~+++~~ath” can be used if your modem has a slow response time.
Answer	Enter the AT Command string to answer a call.
Drop DTR When Hang Up	Press the [SPACE BAR] to choose either **Yes** or **No**. When **Yes** is selected (the default), the DTR (Data Terminal Ready) signal is dropped after the “AT Command String: Drop” is sent out.
AT Response Strings:	
CLID (Calling Line Identification)	Enter the keyword that precedes the CLID (Calling Line Identification) in the AT response string. This lets the ZyWALL capture the CLID in the AT response string that comes from the WAN device. CLID is required for CLID authentication.
Called Id	Enter the keyword preceding the dialed number.
Speed	Enter the keyword preceding the connection speed.

Table 204 Advanced WAN Port Setup: Call Control Parameters

FIELD	DESCRIPTION
Call Control	
Dial Timeout (sec)	Enter a number of seconds for the ZyWALL to keep trying to set up an outgoing call before timing out (stopping). The ZyWALL times out and stops if it cannot set up an outgoing call within the timeout value.
Retry Count	Enter a number of times for the ZyWALL to retry a busy or no-answer phone number before blacklisting the number.
Retry Interval (sec)	Enter a number of seconds for the ZyWALL to wait before trying another call after a call has failed. This applies before a phone number is blacklisted.
Drop Timeout (sec)	Enter a number of seconds for the ZyWALL to wait before dropping the DTR signal if it does not receive a positive disconnect confirmation.
Call Back Delay (sec)	Enter a number of seconds for the ZyWALL to wait between dropping a callback request call and dialing the co-responding callback call.
When you have completed this menu, press [ENTER] at the prompt “Press ENTER to Confirm…” to save your configuration, or press [ESC] at any time to cancel.	

30.3.3 Remote Node Profile (Backup ISP)

Enter **3** in **Menu 11 - Remote Node Setup** to open **Menu 11.3 - Remote Node Profile (Backup ISP)** (shown below) and configure the setup for your Dial Backup port connection. Not all fields are available on all models.

Figure 341 Menu 11.3: Remote Node Profile (Backup ISP)

```
              Menu 11.3 - Remote Node Profile (Backup ISP)

Rem Node Name=
Active= No
                                        Edit IP= No
Outgoing:                               Edit Script Options= No
  My Login= ChangeMe
  My Password= ********                 Telco Option:
  Retype to Confirm= ********             Allocated Budget(min)= 0
  Authen= CHAP/PAP                          Period(hr)= 0
  Pri Phone #= 0                        Schedules=
  Sec Phone #=                          Always On= No

                                        Session Options:
                                          Edit Filter Sets= No
                                          Idle Timeout(sec)= 100



                  Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields in this menu.

Table 205 Menu 11.3: Remote Node Profile (Backup ISP)

FIELD	DESCRIPTION
Rem Node Name	Enter a descriptive name for the remote node. This field can be up to eight characters.
Active	Press [SPACE BAR] and then [ENTER] to select **Yes** to enable the remote node or **No** to disable the remote node.
Outgoing	
My Login	Enter the login name assigned by your ISP for this remote node.
My Password	Enter the password assigned by your ISP for this remote node.
Retype to Confirm	Enter your password again to make sure that you have entered is correctly.
Authen	This field sets the authentication protocol used for outgoing calls. Options for this field are: **CHAP/PAP** - Your ZyWALL will accept either **CHAP** or **PAP** when requested by this remote node. **CHAP** - accept CHAP only. **PAP** - accept PAP only.
Pri Phone # Sec Phone #	Enter the first (primary) phone number from the ISP for this remote node. If the Primary Phone number is busy or does not answer, your ZyWALL dials the Secondary Phone number if available. Some areas require dialing the pound sign # before the phone number for local calls. Include a # symbol at the beginning of the phone numbers as required.
Edit IP	This field leads to a “hidden” menu. Press [SPACE BAR] to select **Yes** and press [ENTER] to go to **Menu 11.3.2 - Remote Node Network Layer Options**. See Section 30.3.4 on page 551 for more information.
Edit Script Options	Press [SPACE BAR] to select **Yes** and press [ENTER] to edit the AT script for the dial backup remote node (**Menu 11.3.3 - Remote Node Script**). See Section 30.3.5 on page 552 for more information.
Telco Option	
Allocated Budget	Enter the maximum number of minutes that this remote node may be called within the time period configured in the **Period** field. The default for this field is 0 meaning there is no budget control and no time limit for accessing this remote node.
Period(hr)	Enter the time period (in hours) for how often the budget should be reset. For example, to allow calls to this remote node for a maximum of 10 minutes every hour, set the **Allocated Budget** to 10 (minutes) and the **Period** to 1 (hour).
Schedules	You can apply up to four schedule sets here. For more details please refer to Chapter 47 on page 681.
Always On	Press [SPACE BAR] to select **Yes** to set this connection to be on all the time, regardless of whether or not there is any traffic. Select **No** to have this connection act as a dial-up connection.
Session Options	
Edit Filter sets	This field leads to another “hidden” menu. Use [SPACE BAR] to select **Yes** and press [ENTER] to open menu 11.3.4 to edit the filter sets. See Section 30.3.6 on page 554 for more details.
Idle Timeout	Enter the number of seconds of idle time (when there is no traffic from the ZyWALL to the remote node) that can elapse before the ZyWALL automatically disconnects the PPP connection. This option only applies when the ZyWALL initiates the call.
Once you have configured this menu, press [ENTER] at the message “Press ENTER to Confirm...” to save your configuration, or press [ESC] at any time to cancel.	

30.3.4 Editing TCP/IP Options

Move the cursor to the **Edit IP** field in menu 11.3, then press [SPACE BAR] to select **Yes**. Press [ENTER] to open **Menu 11.3.2 - Remote Node Network Layer Options**.

Figure 342 Menu 11.3.2: Remote Node Network Layer Options

```
            Menu 11.3.2 - Remote Node Network Layer Options

              IP Address Assignment= Static
              Rem IP Addr= 0.0.0.0
              Rem Subnet Mask= 0.0.0.0
              My WAN Addr= 0.0.0.0

              Network Address Translation= SUA Only
              NAT Lookup Set= 255
              Metric= 15
              Private= No
              RIP Direction= None
                Version= N/A
              Multicast= None

               Enter here to CONFIRM or ESC to CANCEL:
```

The following table describes the fields in this menu.

Table 206 Menu 11.3.2: Remote Node Network Layer Options

FIELD	DESCRIPTION
IP Address Assignment	If your ISP did not assign you a fixed IP address, press [SPACE BAR] and then [ENTER] to select **Dynamic**, otherwise select **Static** and enter the IP address and subnet mask in the following fields.
Rem IP Address	Enter the (fixed) IP address assigned to you by your ISP (static IP address assignment is selected in the previous field).
Rem Subnet Mask	Enter the subnet mask associated with your static IP.
My WAN Addr	Leave the field set to 0.0.0.0 to have the ISP or other remote router dynamically (automatically) assign your WAN IP address if you do not know it. Enter your WAN IP address here if you know it (static). This is the address assigned to your local ZyWALL, not the remote router.
Network Address Translation	Network Address Translation (NAT) allows the translation of an Internet protocol address used within one network (for example a private IP address used in a local network) to a different IP address known within another network (for example a public IP address used on the Internet). Press [SPACE BAR] and then [ENTER] to select either **Full Feature**, **None** or **SUA Only**. Choose **None** to disable NAT. Choose **SUA Only** if you have a single public IP address. SUA (Single User Account) is a subset of NAT that supports two types of mapping: **Many-to-One** and **Server**. Choose **Full Feature** if you have multiple public IP addresses. **Full Feature** mapping types include: **One-to-One**, **Many-to-One** (SUA/PAT), **Many-to-Many Overload**, **Many- One-to-One** and **Server**. When you select **Full Feature** you must configure at least one address mapping set. See Chapter 17 on page 385 for a full discussion on this feature.

Table 206 Menu 11.3.2: Remote Node Network Layer Options

FIELD	DESCRIPTION
NAT Lookup Set	If you select **SUA Only** in the **Network Address Translation** field, it displays **255** and indicates the SMT will use the pre-configured **Set 255** (read only) in menu 15.1. If you select **Full Feature** or **None** in the **Network Address Translation** field, it displays **1**, **2** or **3** and indicates the SMT will use the pre-configured **Set 1** in menu 15.1 for the first WAN port, **Set 2** in menu 15.1 for the second WAN port and **Set 3** for the Backup port. Refer to Section 38.2 on page 597 for more information.
Metric	Enter a number from 1 to 15 to set this route's priority among the ZyWALL's routes. The smaller the number, the higher priority the route has.
Private	This parameter determines if the ZyWALL will include the route to this remote node in its RIP broadcasts. If set to **Yes**, this route is kept private and not included in RIP broadcasts. If **No**, the route to this remote node will be propagated to other hosts through RIP broadcasts.
RIP Direction	Press [SPACE BAR] and then [ENTER] to select the **RIP Direction** from **Both**, **None**, **In Only**, **Out Only** and **None**.
Version	Press [SPACE BAR] and then [ENTER] to select the RIP version from **RIP-1**, **RIP-2B** and **RIP-2M**.
Multicast	IGMP (Internet Group Multicast Protocol) is a session-layer protocol used to establish membership in a Multicast group. The ZyWALL supports both IGMP version 1 (**IGMP-v1**) and version 2 (**IGMP-v2**). Press the [SPACE BAR] to enable IP Multicasting or select **None** to disable it. See Section 6.5 on page 149 for more information on this feature.
Once you have completed filling in **Menu 11.3.2 Remote Node Network Layer Options**, press [ENTER] at the message "Press ENTER to Confirm..." to save your configuration and return to menu 11.3, or press [ESC] at any time to cancel.	

30.3.5 Editing Login Script

For some remote gateways, text login is required before PPP negotiation is started. The ZyWALL provides a script facility for this purpose. The script has six programmable sets; each set is composed of an 'Expect' string and a 'Send' string. After matching a message from the server to the 'Expect' field, the ZyWALL returns the set's 'Send' string to the server.

For instance, a typical login sequence starts with the server printing a banner, a login prompt for you to enter the user name and a password prompt to enter the password:

```
Welcome to Acme, Inc.
Login: myLogin
Password:
```

To handle the first prompt, you specify "`ogin: `" as the 'Expect' string and "`myLogin`" as the 'Send' string in set 1. The reason for leaving out the leading "`L`" is to avoid having to know exactly whether it is upper or lower case. Similarly, you specify "`word: `" as the 'Expect' string and your password as the 'Send' string for the second prompt in set 2.

You can use two variables, `$USERNAME` and `$PASSWORD` (all UPPER case), to represent the actual user name and password in the script, so they will not show in the clear. They are replaced with the outgoing login name and password in the remote node when the ZyWALL sees them in a 'Send' string. Please note that both variables must been entered exactly as shown. No other characters may appear before or after, either, i.e., they must be used alone in response to login and password prompts.

Please note that the ordering of the sets is significant, i.e., starting from set 1, the ZyWALL will wait until the 'Expect' string is matched before it proceeds to set 2, and so on for the rest of the script. When both the 'Expect' and the 'Send' fields of the current set are empty, the ZyWALL will terminate the script processing and start PPP negotiation. This implies two things: first, the sets must be contiguous; the sets after an empty one are ignored. Second, the last set should match the final message sent by the server. For instance, if the server prints:

```
login successful.
Starting PPP...
```

after you enter the password, then you should create a third set to match the final "`PPP...`" but without a "Send" string. Otherwise, the ZyWALL will start PPP prematurely right after sending your password to the server.

If there are errors in the script and it gets stuck at a set for longer than the "Dial Timeout" in menu 2 (default 60 seconds), the ZyWALL will timeout and drop the line. To debug a script, go to Menu 24.4 to initiate a manual call and watch the trace display to see if the sequence of messages and prompts from the server differs from what you expect.

Figure 343 Menu 11.3.3: Remote Node Script

```
                Menu 11.3.3 - Remote Node Script

               Active= No

               Set 1:                                  Set 5:
                 Expect=                                 Expect=
                 Send=                                   Send=
               Set 2:                                  Set 6:
                 Expect=                                 Expect=
                 Send=                                   Send=
               Set 3:
                 Expect=
                 Send=
               Set 4:
                 Expect=
                 Send=

          Enter here to CONFIRM or ESC to CANCEL:
```

The following table describes the fields in this menu.

Table 207 Menu 11.3.3: Remote Node Script

FIELD	DESCRIPTION
Active	Press [SPACE BAR] and then [ENTER] to select either **Yes** to enable the AT strings or **No** to disable them.
Set 1-6: Expect	Enter an Expect string to match. After matching the Expect string, the ZyWALL returns the string in the **Send** field.
Set 1-6: Send	Enter a string to send out after the Expect string is matched.

30.3.6 Remote Node Filter

Move the cursor to the field **Edit Filter Sets** in menu 11.3, and then press [SPACE BAR] to set the value to **Yes**. Press [ENTER] to open **Menu 11.3.4 - Remote Node Filter**.

Use menu 11.3.4 to specify the filter set(s) to apply to the incoming and outgoing traffic between this remote node and the ZyWALL to prevent certain packets from triggering calls. You can specify up to four filter sets separated by commas, for example, 1, 5, 9, 12, in each filter field. Note that spaces are accepted in this field. Please refer to Chapter 40 on page 617 for more information on defining the filters.

Figure 344 Menu 11.3.4: Remote Node Filter

```
            Menu 11.3.4 - Remote Node Filter

            Input Filter Sets:
              protocol filters=
                device filters=
            Output Filter Sets:
              protocol filters=
                device filters=
            Call Filter Sets:
              protocol filters=
                device filters=


                 Enter here to CONFIRM or ESC to CANCEL:
```

30.4 3G WAN

3G (Third Generation) is a digital, packet-switched wireless technology. Bandwidth usage is optimized as multiple users share the same channel and bandwidth is only allocated to users when they send data. It allows fast transfer of voice and non-voice data and provides broadband Internet access to mobile devices. See Section 8.13 on page 187 for more information.

To set up a 3G connection, you need to configure

1. Menu 2 - WAN Setup,
2. Menu 11.2 - Remote Node Profile (3G WAN)

30.4.1 3G Modem Setup

From the main menu, enter 2 to open menu 2 on the ZyWALL that supports a 3G card.

Figure 345 3G Modem Setup in WAN Setup

```
                    Menu 2 - WAN Setup

                WAN 1 MAC Address:
                  Assigned By= Factory default
                  IP Address= N/A

                Dial-Backup:
                  Active= No
                  Port Speed= 115200
                  AT Command String:
                    Init= at&fs0=0
                  Edit Advanced Setup= No

                3G Modem Setup:
                  Init= Configure APN
                  APN = internet
                  PIN code= 0000


            Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields in this screen.

Table 208 3G Modem Setup in WAN Setup

FIELD	DESCRIPTION
3G Modem Setup	
Init	Select **Configure APN** to enter the APN (Access Point Name) if your ISP gives you the APN only. Select **Configure directly** to and enter the initial string and APN if you know how to configure or your ISP provides a string, which would include the APN, to initialize the 3G card.
Init	This field is available when you select **Configure directly** in the field above. You can enter up to 72 ASCII printable characters. Spaces are allowed.
APN	This field is available when you select **Configure APN** in the field above. Enter the APN (Access Point Name) provided by your service provider. Connections with different APNs may provide different services (such as Internet access or MMS (Multi-Media Messaging Service)) and charge method. You can enter up to 31 ASCII printable characters. Spaces are allowed.
PIN Code	A PIN (Personal Identification Number) code is a key to a 3G card. Without the PIN code, you cannot use the 3G card. Enter the PIN code (four to eight digits, 0000 for example) provided by your ISP. If you enter the PIN code incorrectly, the 3G card may be blocked by your ISP and you cannot use the account to access the Internet. If your ISP disabled PIN code authentication, enter an arbitrary number.
When you have completed this menu, press [ENTER] at the prompt “Press ENTER to Confirm…” to save your configuration, or press [ESC] at any time to cancel.	

30.4.2 Remote Node Profile (3G WAN)

Enter **2** in **Menu 11 - Remote Node Setup** to open **Menu 11.2 - Remote Node Profile (3G WAN)** (shown below) and configure the setup for your 3G connection.

Figure 346 Menu 11.2: Remote Node Profile (3G WAN)

```
                Menu 11.2 - Remote Node Profile (3G WAN)

Rem Node Name= WAN 2
Active= Yes
                                        Edit IP= No
Outgoing:                               Edit Script Options= No
  My Login= test
  My Password= ********
  Retype to Confirm= ********
  Authen= CHAP/PAP
  Pri Phone #= *99#
                                          Always On= No

                                        Session Options:
                                          Edit Filter Sets= No
                                          Idle Timeout(sec)= 100



                Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields in this menu.

Table 209 Menu 11.2: Remote Node Profile (3G WAN)

FIELD	DESCRIPTION
Rem Node Name	Enter a descriptive name for the remote node. This field can be up to eight characters. **WAN 2** denotes a 3G WAN connection but you can change that.
Active	Press [SPACE BAR] and then [ENTER] to select **Yes** to enable the remote node or **No** to disable the remote node.
Outgoing	
My Login	Enter the login name assigned by your ISP for this remote node.
My Password	Enter the password assigned by your ISP for this remote node.
Retype to Confirm	Enter your password again to make sure that you have entered is correctly.
Authen	This field sets the authentication protocol used for outgoing calls. Options for this field are: **CHAP**/**PAP** - Your ZyWALL will accept either **CHAP** or **PAP** when requested by this remote node. **CHAP** - accept CHAP only. **PAP** - accept PAP only.
Pri Phone #	Enter the phone number (dial string) used to dial up a connection to your service provider's base station. Your ISP should provide the phone number. For example, *99# is the dial string to establish a GPRS or 3G connection in Taiwan.

Table 209 Menu 11.2: Remote Node Profile (3G WAN) (continued)

FIELD	DESCRIPTION
Edit IP	This field leads to a “hidden” menu. Press [SPACE BAR] to select **Yes** and press [ENTER] to go to **Menu 11.3.2 - Remote Node Network Layer Options**. See Section 30.3.4 on page 551 for more information.
Edit Script Options	Press [SPACE BAR] to select **Yes** and press [ENTER] to edit the AT script for the dial backup remote node (**Menu 11.3.3 - Remote Node Script**). See Section 30.3.5 on page 552 for more information.
Always On	Press [SPACE BAR] to select **Yes** to set this connection to be on all the time, regardless of whether or not there is any traffic. Select **No** to have this connection act as a dial-up connection.
Session Options	
Edit Filter sets	This field leads to another “hidden” menu. Use [SPACE BAR] to select **Yes** and press [ENTER] to open menu 11.3.4 to edit the filter sets. See Section 30.3.6 on page 554 for more details.
Idle Timeout	Enter the number of seconds of idle time (when there is no traffic from the ZyWALL to the remote node) that can elapse before the ZyWALL automatically disconnects the 3G connection. .
Once you have configured this menu, press [ENTER] at the message “Press ENTER to Confirm...” to save your configuration, or press [ESC] at any time to cancel.	

31

LAN Setup

This chapter describes how to configure the LAN using **Menu 3 - LAN Setup**.

31.1 Introduction to LAN Setup

This chapter describes how to configure the ZyWALL for LAN and wireless LAN connections.

31.2 Accessing the LAN Menus

From the main menu, enter 3 to open **Menu 3 - LAN Setup**.

Figure 347 Menu 3: LAN Setup

```
                        Menu 3 - LAN Setup

                1. LAN Port Filter Setup
                2. TCP/IP and DHCP Setup




                     Enter Menu Selection Number:
```

31.3 LAN Port Filter Setup

This menu allows you to specify the filter sets that you wish to apply to the LAN traffic. You seldom need to filter the LAN traffic, however, the filter sets may be useful to block certain packets, reduce traffic and prevent security breaches.

Figure 348 Menu 3.1: LAN Port Filter Setup

```
            Menu 3.1 - LAN Port Filter Setup

            Input Filter Sets:
              protocol filters=
                device filters=
            Output Filter Sets:
              protocol filters=
                device filters=

            Press ENTER to Confirm or ESC to Cancel:
```

31.4 TCP/IP and DHCP Ethernet Setup Menu

From the main menu, enter 3 to open **Menu 3 - LAN Setup** to configure TCP/IP (RFC 1155) and DHCP Ethernet setup.

Figure 349 Menu 3: TCP/IP and DHCP Setup

```
                Menu 3 - LAN Setup

            1. LAN Port Filter Setup
            2. TCP/IP and DHCP Setup



                     Enter Menu Selection Number:
```

From menu 3, select the submenu option **TCP/IP and DHCP Setup** and press [ENTER]. The screen now displays **Menu 3.2 - TCP/IP and DHCP Ethernet Setup**, as shown next. Not all fields are available on all models.

Figure 350 Menu 3.2: TCP/IP and DHCP Ethernet Setup

```
          Menu 3.2 - TCP/IP and DHCP Ethernet Setup


     DHCP= Server                        TCP/IP Setup:
     Client IP Pool:
       Starting Address= 192.168.1.33    IP Address= 192.168.1.1
       Size of Client IP Pool= 128       IP Subnet Mask= 255.255.255.0
                                         RIP Direction= Both
                                           Version= RIP-1
                                         Multicast= None
                                         Edit IP Alias= No


     DHCP Server Address= N/A


                         Press ENTER to Confirm or ESC to Cancel:
```

Follow the instructions in the next table on how to configure the DHCP fields.

Table 210 Menu 3.2: DHCP Ethernet Setup Fields

FIELD	DESCRIPTION
DHCP	This field enables/disables the DHCP server. If set to **Server**, your ZyWALL will act as a DHCP server. If set to **None**, the DHCP server will be disabled. If set to **Relay**, the ZyWALL acts as a surrogate DHCP server and relays requests and responses between the remote server and the clients. When set to **Server**, the following items need to be set:
Client IP Pool:	
Starting Address	This field specifies the first of the contiguous addresses in the IP address pool.
Size of Client IP Pool	This field specifies the size, or count of the IP address pool.

Table 210 Menu 3.2: DHCP Ethernet Setup Fields

FIELD	DESCRIPTION
First DNS Server Second DNS Server Third DNS Server	The ZyWALL passes a DNS (Domain Name System) server IP address (in the order you specify here) to the DHCP clients. Select **From ISP** if your ISP dynamically assigns DNS server information (and the ZyWALL's WAN IP address). The **IP Address** field below displays the (read-only) DNS server IP address that the ISP assigns. Select **User-Defined** if you have the IP address of a DNS server. Enter the DNS server's IP address in the **IP Address** field below. If you chose **User-Defined**, but leave the IP address set to 0.0.0.0, **User-Defined** changes to **None** after you save your changes. If you set a second choice to **User-Defined**, and enter the same IP address, the second **User-Defined** changes to **None** after you save your changes. Select **DNS Relay** to have the ZyWALL act as a DNS proxy. The ZyWALL's LAN IP address displays in the I**P Address** field below (read-only). The ZyWALL tells the DHCP clients on the LAN that the ZyWALL itself is the DNS server. When a computer on the LAN sends a DNS query to the ZyWALL, the ZyWALL forwards the query to the ZyWALL's system DNS server (configured in menu 1) and relays the response back to the computer. You can only select **DNS Relay** for one of the three servers; if you select **DNS Relay** for a second or third DNS server, that choice changes to **None** after you save your changes. Select **None** if you do not want to configure DNS servers. If you do not configure a DNS server, you must know the IP address of a machine in order to access it.
DHCP Server Address	If **Relay** is selected in the **DHCP** field above, then type the IP address of the actual, remote DHCP server here.

Use the instructions in the following table to configure TCP/IP parameters for the LAN port.



LAN and DMZ IP addresses must be on separate subnets.

Table 211 Menu 3.2: LAN TCP/IP Setup Fields

FIELD	DESCRIPTION
TCP/IP Setup:	
IP Address	Enter the IP address of your ZyWALL in dotted decimal notation
IP Subnet Mask	Your ZyWALL will automatically calculate the subnet mask based on the IP address that you assign. Unless you are implementing subnetting, use the subnet mask computed by the ZyWALL.
RIP Direction	Press [SPACE BAR] and then [ENTER] to select the RIP direction. Options are: **Both**, **In Only**, **Out Only** or **None**.
Version	Press [SPACE BAR] and then [ENTER] to select the RIP version. Options are: **RIP-1**, **RIP-2B** or **RIP-2M**.
Multicast	IGMP (Internet Group Multicast Protocol) is a session-layer protocol used to establish membership in a Multicast group. The ZyWALL supports both IGMP version 1 (**IGMP-v1**) and version 2 (**IGMP-v2**). Press [SPACE BAR] and then [ENTER] to enable IP Multicasting or select **None** (default) to disable it.
Edit IP Alias	The ZyWALL supports three logical LAN interfaces via its single physical Ethernet interface with the ZyWALL itself as the gateway for each LAN network. Press [SPACE BAR] to select **Yes** and then press [ENTER] to display menu 3.2.1
When you have completed this menu, press [ENTER] at the prompt [Press ENTER to Confirm…] to save your configuration, or press [ESC] at any time to cancel.	

31.4.1 IP Alias Setup

IP alias allows you to partition a physical network into different logical networks over the same Ethernet interface. The ZyWALL supports three logical LAN interfaces via its single physical Ethernet interface with the ZyWALL itself as the gateway for each LAN network.

Use menu 3.2 to configure the first network. Move the cursor to the **Edit IP Alias** field, press [SPACE BAR] to choose **Yes** and press [ENTER] to open **Menu 3.2.1 - IP Alias Setup**, as shown next. Use this menu to configure the second and third networks.

Figure 351 Menu 3.2.1: IP Alias Setup

```
                Menu 3.2.1 - IP Alias Setup

            IP Alias 1= Yes
              IP Address= 192.168.2.1
              IP Subnet Mask= 255.255.255.0
              RIP Direction= None
                Version= RIP-1
              Incoming protocol filters=
              Outgoing protocol filters=
            IP Alias 2= No
              IP Address= N/A
              IP Subnet Mask= N/A
              RIP Direction= N/A
                Version= N/A
              Incoming protocol filters= N/A
              Outgoing protocol filters= N/A


                        Enter here to CONFIRM or ESC to CANCEL:
```

Use the instructions in the following table to configure IP alias parameters.

Table 212 Menu 3.2.1: IP Alias Setup

FIELD	DESCRIPTION
IP Alias 1, 2	Choose **Yes** to configure the LAN network for the ZyWALL.
IP Address	Enter the IP address of your ZyWALL in dotted decimal notation.
IP Subnet Mask	Your ZyWALL will automatically calculate the subnet mask based on the IP address that you assign. Unless you are implementing subnetting, use the subnet mask computed by the ZyWALL.
RIP Direction	Press [SPACE BAR] and then [ENTER] to select the RIP direction. Options are **Both**, **In Only**, **Out Only** or **None**.
Version	Press [SPACE BAR] and then [ENTER] to select the RIP version. Options are **RIP-1**, **RIP-2B** or **RIP-2M**.
Incoming Protocol Filters	Enter the filter set(s) you wish to apply to the incoming traffic between this node and the ZyWALL.
Outgoing Protocol Filters	Enter the filter set(s) you wish to apply to the outgoing traffic between this node and the ZyWALL.
When you have completed this menu, press [ENTER] at the prompt [Press ENTER to Confirm…] to save your configuration, or press [ESC] at any time to cancel.	

32

Internet Access

This chapter shows you how to configure your ZyWALL for Internet access.

32.1 Introduction to Internet Access Setup

Use information from your ISP along with the instructions in this chapter to set up your ZyWALL to access the Internet. There are three different menu 4 screens depending on whether you chose **Ethernet**, **PPTP** or **PPPoE** Encapsulation. Contact your ISP to determine what encapsulation type you should use.



This menu configures **WAN 1** on a ZyWALL with multiple WAN interfaces. Configure the WAN 2 interface in **Menu 11.2 - Remote Node Profile** or in the **WAN > WAN 2** screen via the web configurator.

32.2 Ethernet Encapsulation

If you choose **Ethernet** in menu 4 you will see the next menu.

Figure 352 Menu 4: Internet Access Setup (Ethernet)

```
                    Menu 4 - Internet Access Setup

                ISP's Name= WAN_1
                Encapsulation= Ethernet
                  Service Type= Standard
                  My Login= N/A
                  My Password= N/A
                  Retype to Confirm= N/A
                  Login Server= N/A
                  Relogin Every (min)=  N/A
                IP Address Assignment= Dynamic
                  IP Address= N/A
                  IP Subnet Mask= N/A
                  Gateway IP Address= N/A
                Network Address Translation= SUA Only

                Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields in this menu.

Table 213 Menu 4: Internet Access Setup (Ethernet)

FIELD	DESCRIPTION
ISP's Name	This is the descriptive name of your ISP for identification purposes.
Encapsulation	Press [SPACE BAR] and then press [ENTER] to choose **Ethernet**. The encapsulation method influences your choices for the **IP Address** field.
Service Type	Press [SPACE BAR] and then [ENTER] to select **Standard**, **RR-Toshiba** (RoadRunner Toshiba authentication method), **RR-Manager** (RoadRunner Manager authentication method), **RR-Telstra** or **Telia Login**. Choose a RoadRunner flavor if your ISP is Time Warner's RoadRunner; otherwise choose **Standard**.
Note: DSL users must choose the **Standard** option only. The **My Login**, **My Password** and **Login Server** fields are not applicable in this case.	
My Login	Enter the login name given to you by your ISP.
My Password	Type your password again for confirmation.
Retype to Confirm	Enter your password again to make sure that you have entered is correctly.
Login Server	The ZyWALL will find the RoadRunner Server IP if this field is left blank. If it does not, then you must enter the authentication server IP address.
Relogin Every (min)	This field is available when you select **Telia Login** in the **Service Type** field. The Telia server logs the ZyWALL out if the ZyWALL does not log in periodically. Type the number of minutes from 1 to 59 (30 recommended) for the ZyWALL to wait between logins.
IP Address Assignment	If your ISP did not assign you a fixed IP address, press [SPACE BAR] and then [ENTER] to select **Dynamic**, otherwise select **Static** and enter the IP address and subnet mask in the following fields.
IP Address	Enter the (fixed) IP address assigned to you by your ISP (static IP address assignment is selected in the previous field).
IP Subnet Mask	Enter the subnet mask associated with your static IP.

Table 213 Menu 4: Internet Access Setup (Ethernet) (continued)

FIELD	DESCRIPTION
Gateway IP Address	Enter the gateway IP address associated with your static IP.
Network Address Translation	Network Address Translation (NAT) allows the translation of an Internet protocol address used within one network (for example a private IP address used in a local network) to a different IP address known within another network (for example a public IP address used on the Internet). Choose **None** to disable NAT. Choose **SUA Only** if you have a single public IP address. SUA (Single User Account) is a subset of NAT that supports two types of mapping: **Many-to-One** and **Server**. Choose **Full Feature** if you have multiple public IP addresses. **Full Feature** mapping types include: **One-to-One**, **Many-to-One** (SUA/PAT), **Many-to-Many Overload**, **Many- One-to-One** and **Server**. When you select **Full Feature** you must configure at least one address mapping set! Please see Chapter 17 on page 385 for a more detailed discussion on the Network Address Translation feature.
When you have completed this menu, press [ENTER] at the prompt “Press ENTER to Confirm…” to save your configuration, or press [ESC] at any time to cancel.	

32.3 Configuring the PPTP Client



The ZyWALL supports only one PPTP server connection at any given time.

To configure a PPTP client, you must configure the **My Login** and **Password** fields for a PPP connection and the PPTP parameters for a PPTP connection.

After configuring **My Login** and **Password** for PPP connection, press [SPACE BAR] and then [ENTER] in the **Encapsulation** field in **Menu 4 -Internet Access Setup** to choose **PPTP** as your encapsulation option. This brings up the following screen.

Figure 353 Internet Access Setup (PPTP)

```
                    Menu 4 - Internet Access Setup

               ISP's Name= WAN_1
               Encapsulation= PPTP
                 Service Type= N/A
                 My Login=
                 My Password= ********
                 Retype to Confirm= ********
                 Idle Timeout= 100

               IP Address Assignment= Dynamic
                 IP Address= N/A
                 IP Subnet Mask= N/A
                 Gateway IP Address= N/A
               Network Address Translation= SUA Only

               Press ENTER to Confirm or ESC to Cancel:
```

The following table contains instructions about the new fields when you choose **PPTP** in the **Encapsulation** field in menu 4.

Table 214 New Fields in Menu 4 (PPTP) Screen

FIELD	DESCRIPTION
Encapsulation	Press [SPACE BAR] and then press [ENTER] to choose **PPTP**. The encapsulation method influences your choices for the **IP Address** field.
Idle Timeout	This value specifies the time, in seconds, that elapses before the ZyWALL automatically disconnects from the PPTP server.

32.4 Configuring the PPPoE Client

If you enable PPPoE in menu 4, you will see the next screen.

Figure 354 Internet Access Setup (PPPoE)

```
                    Menu 4 - Internet Access Setup

               ISP's Name= WAN_1
               Encapsulation= PPPoE
                 Service Type= N/A
                 My Login=
                 My Password= ********
                 Retype to Confirm= ********
                 Idle Timeout= 100

               IP Address Assignment= Dynamic
                 IP Address= N/A
                 IP Subnet Mask= N/A
                 Gateway IP Address= N/A
               Network Address Translation= SUA Only

               Press ENTER to Confirm or ESC to Cancel:
```

The following table contains instructions about the new fields when you choose **PPPoE** in the **Encapsulation** field in menu 4.

Table 215 New Fields in Menu 4 (PPPoE) screen

FIELD	DESCRIPTION
Encapsulation	Press [SPACE BAR] and then press [ENTER] to choose **PPPoE**. The encapsulation method influences your choices in the **IP Address** field.
Idle Timeout	This value specifies the time in seconds that elapses before the ZyWALL automatically disconnects from the PPPoE server.

If you need a PPPoE service name to identify and reach the PPPoE server, please go to menu 11 and enter the PPPoE service name provided to you in the **Service Name** field.

32.5 Basic Setup Complete

Well done! You have successfully connected, installed and set up your ZyWALL to operate on your network as well as access the Internet.



When the firewall is activated, the default policy allows all communications to the Internet that originate from the LAN, and blocks all traffic to the LAN that originates from the Internet.

You may deactivate the firewall in menu 21.2 or via the ZyWALL embedded web configurator. You may also define additional firewall rules or modify existing ones but please exercise extreme caution in doing so. See the chapters on firewall for more information on the firewall.

33

DMZ Setup

This chapter describes how to configure the ZyWALL's DMZ using **Menu 5 - DMZ Setup**.

33.1 Configuring DMZ Setup

From the main menu, enter 5 to open **Menu 5 – DMZ Setup**.

Figure 355 Menu 5: DMZ Setup

```
Menu 5 - DMZ Setup

1. DMZ Port Filter Setup
2. TCP/IP and DHCP Setup

Enter Menu Selection Number:
```

33.2 DMZ Port Filter Setup

This menu allows you to specify the filter sets that you wish to apply to your public server(s) traffic.

Figure 356 Menu 5.1: DMZ Port Filter Setup

```
Menu 5.1 - DMZ Port Filter Setup

Input Filter Sets:
  protocol filters=
    device filters=
Output Filter Sets:
  protocol filters=
    device filters=

Press ENTER to Confirm or ESC to Cancel:
```

33.3 TCP/IP Setup

For more detailed information about RIP setup, IP Multicast and IP alias, please refer to Chapter 6 on page 147.

33.3.1 IP Address

From the main menu, enter 5 to open **Menu 5 - DMZ Setup** to configure TCP/IP (RFC 1155).

Figure 357 Menu 5: DMZ Setup

```
            Menu 5 - DMZ Setup

            1. DMZ Port Filter Setup
            2. TCP/IP and DHCP Setup

                    Enter Menu Selection Number:
```

From menu 5, select the submenu option **2. TCP/IP and DHCP Setup** and press [ENTER]. The screen now displays **Menu 5.2 - TCP/IP and DHCP Ethernet Setup**, as shown next.

Figure 358 Menu 5.2: TCP/IP and DHCP Ethernet Setup

```
                    Menu 5.2 - TCP/IP and DHCP Ethernet Setup


      DHCP= None                                TCP/IP Setup:
      Client IP Pool:
        Starting Address= N/A                   IP Address= 10.10.2.1
        Size of Client IP Pool= N/A            IP Subnet Mask= 255.255.255.0
                                                RIP Direction= None
                                                  Version= N/A
                                                Multicast= IGMP-v2
                                                Edit IP Alias= No


      DHCP Server Address= N/A


                    Press ENTER to Confirm or ESC to Cancel:
```

The DHCP and TCP/IP setup fields are the same as the ones in **Menu 3.2 - TCP/IP and DHCP Ethernet Setup**. Each public server will need a unique IP address. Refer to Section 31.4 on page 560 for information on how to configure these fields.

DMZ, WLAN and LAN IP addresses must be on separate subnets. You must also configure NAT for the DMZ port (see Chapter 38 on page 595) in menus 15.1 and 15.2.

33.3.2 IP Alias Setup

Use menu 5.2 to configure the first network. Move the cursor to the **Edit IP Alias** field, press [SPACE BAR] to choose **Yes** and press [ENTER] to open **Menu 5.2.1 - IP Alias Setup**, as shown next. Use this menu to configure the second and third networks.

Figure 359 Menu 5.2.1: IP Alias Setup

```
            Menu 5.2.1 - IP Alias Setup

            IP Alias 1= No
              IP Address= N/A
              IP Subnet Mask= N/A
              RIP Direction= N/A
                Version= N/A
              Incoming protocol filters= N/A
              Outgoing protocol filters= N/A
            IP Alias 2= No
              IP Address= N/A
              IP Subnet Mask= N/A
              RIP Direction= N/A
                Version= N/A
              Incoming protocol filters= N/A
              Outgoing protocol filters= N/A

            Enter here to CONFIRM or ESC to CANCEL:
```

Refer to Table 212 on page 563 for instructions on configuring IP alias parameters.

34

Route Setup

This chapter describes how to configure the ZyWALL's traffic redirect.

34.1 Configuring Route Setup

From the main menu, enter 6 to open **Menu 6 - Route Setup**.

Figure 360 Menu 6: Route Setup

```
Menu 6 - Route Setup

1. Route Assessment
2. Traffic Redirect
3. Route Failover


Enter Menu Selection Number:
```

34.2 Route Assessment

This menu allows you to configure traffic redirect properties.

Figure 361 Menu 6.1: Route Assessment

```
Menu 6.1 - Route Assessment


Probing WAN 1 Check Point= Yes
  Use Default Gateway as Check Point= Yes
  Check Point= N/A
Probing WAN 2 Check Point= Yes
  Use Default Gateway as Check Point= Yes
  Check Point= N/A
Probing Traffic Redirection Check Point= No
  Use Default Gateway as Check Point= N/A
  Check Point= N/A


Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields in this menu.

Table 216 Menu 6.1: Route Assessment

FIELD	DESCRIPTION
Probing WAN 1/2 Check Point	Press [SPACE BAR] and then press [ENTER] to choose **Yes** to test your ZyWALL's WAN accessibility. If you do not select **No** in the **Use Default Gateway as Check Point** field and enter a domain name or IP address of a reliable nearby computer (for example, your ISP's DNS server address) in the **Check Point** field, the ZyWALL will use the default gateway IP address.
Probing Traffic Redirection Check Point	Press [SPACE BAR] and then press [ENTER] to choose **Yes** to test your ZyWALL's traffic redirect connection. If you do not select **No** in the **Use Default Gateway as Check Point** field and enter a domain name or IP address of a reliable nearby computer (for example, your ISP's DNS server address) in the **Check Point** field, the ZyWALL will use the default gateway IP address.
When you have completed this menu, press [ENTER] at the prompt "Press ENTER to Confirm…" to save your configuration, or press [ESC] at any time to cancel.	

34.3 Traffic Redirect

To configure the parameters for traffic redirect, enter **2** in **Menu 6 - Route Setup** to open **Menu 6.2 - Traffic Redirect** as shown next.

Figure 362 Menu 6.2: Traffic Redirect

```
              Menu 6.2 - Traffic Redirect

            Active= No
            Configuration:
              Backup Gateway IP Address= 0.0.0.0
              Metric= 14



            Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields in this menu.

Table 217 Menu 6.2: Traffic Redirect

FIELD	DESCRIPTION
Active	Press [SPACE BAR] and select Yes (to enable) or No (to disable) traffic redirect setup. The default is No.
Backup Gateway IP Address	Enter the IP address of your backup gateway in dotted decimal notation. The ZyWALL automatically forwards traffic to this IP address if the ZyWALL's Internet connection terminates.
Metric	This field sets this route's priority among the routes the ZyWALL uses. Enter a number from 1 to 15 to set this route's priority among the ZyWALL's routes (see Section 8.6 on page 170) The smaller the number, the higher priority the route has.
When you have completed this menu, press [ENTER] at the prompt "Press ENTER to Confirm…" to save your configuration, or press [ESC] at any time to cancel.	

34.4 Route Failover

This menu allows you to configure how the ZyWALL uses the route assessment ping check function.

Figure 363 Menu 6.3: Route Failover

```
            Menu 6.3 - Route Failover

            Period= 5
            Timeout=: 3
            Fail Tolerance= 3


            Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields in this menu.

Table 218 Menu 6.3: Route Failover

FIELD	DESCRIPTION
Period	Type the number of seconds for the ZyWALL to wait between checks to see if it can connect to the WAN IP address (in the **Check Point** field of menu 6.1) or the default gateway. Allow more time if your destination IP address handles lots of traffic.
Timeout	Type the number of seconds for your ZyWALL to wait for a ping response from the IP address in the **Check Point** field of menu 6.1 before it times out. The WAN connection is considered "down" after the ZyWALL times out the number of times specified in the **Fail Tolerance** field. Use a higher value in this field if your network is busy or congested.
Fail Tolerance	Type the number of times your ZyWALL may attempt and fail to connect to the Internet before traffic is forwarded to the backup gateway.
When you have completed this menu, press [ENTER] at the prompt "Press ENTER to Confirm…" to save your configuration, or press [ESC] at any time to cancel.	

35

Wireless Setup

Use menu 7 to configure the IP address for ZyWALL's WLAN interface, other TCP/IP and DHCP settings.

35.1 TCP/IP Setup

For more detailed information about RIP setup, IP Multicast and IP alias, please refer to Chapter 6 on page 147.

35.1.1 IP Address

From the main menu, enter 7 to open **Menu 7 - WLAN Setup** to configure TCP/IP (RFC 1155).

Figure 364 Menu 7: WLAN Setup

```
                Menu 7 - WLAN Setup


          2. TCP/IP and DHCP Setup

           Enter Menu Selection Number:
```

From menu 7, select the submenu option **2. TCP/IP and DHCP Setup** and press [ENTER]. The screen now displays **Menu 7.2 - TCP/IP and DHCP Ethernet Setup**, as shown next.

Figure 365 Menu 7.2: TCP/IP and DHCP Ethernet Setup

```
                Menu 7.2 - TCP/IP and DHCP Ethernet Setup


       DHCP= None                              TCP/IP Setup:
       Client IP Pool:
         Starting Address= N/A                 IP Address= 0.0.0.0
         Size of Client IP Pool= N/A           IP Subnet Mask= 0.0.0.0
                                               RIP Direction= None
                                                 Version= N/A
                                               Multicast= IGMP-v2
                                               Edit IP Alias= No


       DHCP Server Address= N/A



                      Press ENTER to Confirm or ESC to Cancel:
```

The DHCP and TCP/IP setup fields are the same as the ones in **Menu 3.2 - TCP/IP and DHCP Ethernet Setup**. Each public server will need a unique IP address. Refer to Section 31.4 on page 560 for information on how to configure these fields.

DMZ, WLAN and LAN IP addresses must be on separate subnets. You must also configure NAT for the WLAN port (see Chapter 38 on page 595) in menus 15.1 and 15.2.

35.1.2 IP Alias Setup

You must use menu 7.2 to configure the first network. Move the cursor to the **Edit IP Alias** field, press [SPACE BAR] to choose **Yes** and press [ENTER] to configure the second and third network.

Pressing [ENTER] opens **Menu 7.2.1 - IP Alias Setup**, as shown next.

Figure 366 Menu 7.2.1: IP Alias Setup

```
                Menu 7.2.1 - IP Alias Setup

                   IP Alias 1= No
                     IP Address= N/A
                     IP Subnet Mask= N/A
                     RIP Direction= N/A
                       Version= N/A


                   IP Alias 2= No
                     IP Address= N/A
                     IP Subnet Mask= N/A
                     RIP Direction= N/A
                       Version= N/A


            Enter here to CONFIRM or ESC to CANCEL:
```

Refer to Table 212 on page 563 for instructions on configuring IP alias parameters.

36

Remote Node Setup

This chapter shows you how to configure a remote node.

36.1 Introduction to Remote Node Setup

A remote node is required for placing calls to a remote gateway. A remote node represents both the remote gateway and the network behind it across a WAN connection. Note that when you use menu 4 to set up Internet access, you are actually configuring a remote node. The following describes how to configure **Menu 11.1 - Remote Node Profile**, **Menu 11.1.2 - Remote Node Network Layer Options** and **Menu 11.1.4 - Remote Node Filter**.

36.2 Remote Node Setup

From the main menu, select menu option 11 to open **Menu 11 - Remote Node Setup** (shown below).

Enter **1** to open **Menu 11.1 - Remote Node Profile** and configure the setup for your WAN port. Enter **2** to open **Menu 11.2 - Remote Node Profile (3G WAN)** and configure the setup for your 3G connection. Enter **3** to open **Menu 11.3 Remote Node Profile (Backup ISP)** and configure the setup for your Dial Backup port connection (see Chapter 30 on page 545).

Figure 367 Menu 11: Remote Node Setup

```
Menu 11 - Remote Node Setup

1. WAN_1 (ISP, SUA)
2. WAN_2 (ISP, SUA)
3. -Dial (BACKUP_ISP, SUA)



Enter Node # to Edit:
```

36.3 Remote Node Profile Setup

The following explains how to configure the remote node profile menu. Not all fields are available on all models.

36.3.1 Ethernet Encapsulation

There are three variations of menu 11.1 depending on whether you choose **Ethernet Encapsulation**, **PPPoE Encapsulation** or **PPTP Encapsulation**. You must choose the **Ethernet** option when the WAN port is used as a regular Ethernet. The first menu 11.1 screen you see is for Ethernet encapsulation shown next.

Figure 368 Menu 11.1: Remote Node Profile for Ethernet Encapsulation

```
                Menu 11.1 - Remote Node Profile

Rem Node Name= WAN 1                  Route= IP
Active= Yes

Encapsulation= Ethernet               Edit IP= No
Service Type= Standard                Session Options:
                                        Schedules=
Outgoing:                               Edit Filter Sets= No
  My Login= N/A
  My Password= N/A
  Retype to Confirm= N/A
  Server= N/A
  Relogin Every (min)=  N/A


Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields in this menu.

Table 219 Menu 11.1: Remote Node Profile for Ethernet Encapsulation

FIELD	DESCRIPTION
Rem Node Name	Enter a descriptive name for the remote node. This field can be up to eight characters.
Active	Press [SPACE BAR] and then [ENTER] to select **Yes** (activate remote node) or **No** (deactivate remote node).
Encapsulation	**Ethernet** is the default encapsulation. Press [SPACE BAR] and then [ENTER] to change to **PPPoE** or **PPTP** encapsulation.
Service Type	Press [SPACE BAR] and then [ENTER] to select from **Standard**, **RR-Toshiba** (RoadRunner Toshiba authentication method), **RR-Manager** (RoadRunner Manager authentication method), **RR-Telstra** or **Telia Login**. Choose one of the RoadRunner methods if your ISP is Time Warner's RoadRunner; otherwise choose **Standard**.
Outgoing	
My Login	This field is applicable for **PPPoE** encapsulation only. Enter the login name assigned by your ISP when the ZyWALL calls this remote node. Some ISPs append this field to the **Service Name** field above (e.g., jim@poellc) to access the PPPoE server.
My Password	Enter the password assigned by your ISP when the ZyWALL calls this remote node. Valid for **PPPoE** encapsulation only.
Retype to Confirm	Type your password again to make sure that you have entered it correctly.

Table 219 Menu 11.1: Remote Node Profile for Ethernet Encapsulation (continued)

FIELD	DESCRIPTION
Server	This field is valid only when **RoadRunner** is selected in the **Service Type** field. The ZyWALL will find the RoadRunner Server IP automatically if this field is left blank. If it does not, then you must enter the authentication server IP address here.
Relogin Every (min)	This field is available when you select **Telia Login** in the **Service Type** field. The Telia server logs the ZyWALL out if the ZyWALL does not log in periodically. Type the number of minutes from 1 to 59 (30 recommended) for the ZyWALL to wait between logins.
Route	This field refers to the protocol that will be routed by your ZyWALL – IP is the only option for the ZyWALL.
Edit IP	This field leads to a “hidden” menu. Press [SPACE BAR] to select **Yes** and press [ENTER] to go to **Menu 11.1.2 - Remote Node Network Layer Options**.
Session Options	
Schedules	You can apply up to four schedule sets here. For more details please refer to Chapter 47 on page 681.
Edit Filter Sets	This field leads to another “hidden” menu. Use [SPACE BAR] to select **Yes** and press [ENTER] to open menu 11.1.4 to edit the filter sets. See Section 36.5 on page 589 for more details.
Once you have configured this menu, press [ENTER] at the message “Press ENTER to Confirm...” to save your configuration, or press [ESC] at any time to cancel.	

36.3.2 PPPoE Encapsulation

The ZyWALL supports PPPoE (Point-to-Point Protocol over Ethernet). You can only use PPPoE encapsulation when you’re using the ZyWALL with a DSL modem as the WAN device. If you change the Encapsulation to **PPPoE,** then you will see the next screen.

Figure 369 Menu 11.1: Remote Node Profile for PPPoE Encapsulation

```
                Menu 11.1 - Remote Node Profile

     Rem Node Name= ChangeMe              Route= IP
     Active= Yes

     Encapsulation= PPPoE                 Edit IP= No
     Service Type= Standard               Telco Option:
     Service Name=                          Allocated Budget(min)= 0
     Outgoing:                              Period(hr)= 0
       My Login=                            Schedules=
       My Password= ********                Nailed-Up Connection= No
       Retype to Confirm= ********
       Authen= CHAP/PAP
                                            Session Options:
                                            Edit Filter Sets= No
                                            Idle Timeout(sec)= 100


                        Press ENTER to Confirm or ESC to Cancel:
```

36.3.2.1 Outgoing Authentication Protocol

Generally speaking, you should employ the strongest authentication protocol possible, for obvious reasons. However, some vendor's implementation includes a specific authentication protocol in the user profile. It will disconnect if the negotiated protocol is different from that in the user profile, even when the negotiated protocol is stronger than specified. If you encounter a case where the peer disconnects right after a successful authentication, please make sure that you specify the correct authentication protocol when connecting to such an implementation.

36.3.2.2 Nailed-Up Connection

A nailed-up connection is a dial-up line where the connection is always up regardless of traffic demand. The ZyWALL does two things when you specify a nailed-up connection. The first is that idle timeout is disabled. The second is that the ZyWALL will try to bring up the connection when turned on and whenever the connection is down. A nailed-up connection can be very expensive for obvious reasons.

Do not specify a nailed-up connection unless your telephone company offers flat-rate service or you need a constant connection and the cost is of no concern.

The following table describes the fields not already described in Table 219 on page 584.

36.3.2.3 Metric

See Section 8.6 on page 170 for details on the **Metric** field.

Table 220 Fields in Menu 11.1 (PPPoE Encapsulation Specific)

FIELD	DESCRIPTION
Service Name	If you are using **PPPoE** encapsulation, then type the name of your PPPoE service here. Only valid with **PPPoE** encapsulation.
Authen	This field sets the authentication protocol used for outgoing calls. Options for this field are: **CHAP/PAP** - Your ZyWALL will accept either **CHAP** or **PAP** when requested by this remote node. **CHAP** - accept CHAP only. **PAP** - accept PAP only.
Telco Option	
Allocated Budget	The field sets a ceiling for outgoing call time for this remote node. The default for this field is 0 meaning no budget control.
Period(hr)	This field is the time period that the budget should be reset. For example, if we are allowed to call this remote node for a maximum of 10 minutes every hour, then the **Allocated Budget** is (10 minutes) and the **Period(hr)** is 1 (hour).
Schedules	You can apply up to four schedule sets here. For more details please refer to Chapter 47 on page 681.
Nailed-Up Connection	This field specifies if you want to make the connection to this remote node a nailed-up connection. More details are given earlier in this section.
Session Options	
Idle Timeout	Type the length of idle time (when there is no traffic from the ZyWALL to the remote node) in seconds that can elapse before the ZyWALL automatically disconnects the PPPoE connection. This option only applies when the ZyWALL initiates the call.

36.3.3 PPTP Encapsulation

If you change the Encapsulation to **PPTP** in menu 11.1, then you will see the next screen.

Figure 370 Menu 11.1: Remote Node Profile for PPTP Encapsulation

```
                Menu 11.1 - Remote Node Profile

      Rem Node Name= ChangeMe              Route= IP
      Active= Yes

      Encapsulation= PPTP                  Edit IP= No
      Service Type= Standard               Telco Option:
                                             Allocated Budget(min)= 0
      Outgoing:                              Period(hr)= 0
        My Login=                            Schedules=
        My Password= ********                Nailed-Up Connection= No
        Retype to Confirm= ********
        Authen= CHAP/PAP
      PPTP:                                Session Options:
        My IP Addr= 10.0.0.140               Edit Filter Sets= No
        My IP Mask= 255.255.255.0            Idle Timeout(sec)= 100
        Server IP Addr= 10.0.0.138
        Connection ID/Name=

                         Press ENTER to Confirm or ESC to Cancel:
```

The next table shows how to configure fields in menu 11.1 not previously discussed.

Table 221 Menu 11.1: Remote Node Profile for PPTP Encapsulation

FIELD	DESCRIPTION
Encapsulation	Press [SPACE BAR] and then [ENTER] to select **PPTP**. You must also go to menu 11.3 to check the IP Address setting once you have selected the encapsulation method.
My IP Addr	Enter the IP address of the WAN Ethernet port.
My IP Mask	Enter the subnet mask of the WAN Ethernet port.
Server IP Addr	Enter the IP address of the ANT modem.
Connection ID/ Name	Enter the connection ID or connection name in the ANT. It must follow the “c:id” and “n:name” format. This field is optional and depends on the requirements of your DSL modem.
Schedules	You can apply up to four schedule sets here. For more details refer to Chapter 47 on page 681.
Nailed-Up Connections	Press [SPACE BAR] and then [ENTER] to select **Yes** if you want to make the connection to this remote node a nailed-up connection.

36.4 Edit IP

Move the cursor to the **Edit IP** field in menu 11.1, then press [SPACE BAR] to select **Yes**. Press [ENTER] to open **Menu 11.1.2 - Remote Node Network Layer Options**. Not all fields are available on all models.

Figure 371 Menu 11.1.2: Remote Node Network Layer Options for Ethernet Encapsulation

```
            Menu 11.1.2 - Remote Node Network Layer Options

              IP Address Assignment= Dynamic
              Rem IP Addr= N/A
              Rem Subnet Mask= N/A
              My WAN Addr= N/A

              Network Address Translation= SUA Only
              NAT Lookup Set= 255
              Metric= 1
              Private= No
              RIP Direction= None
                Version= N/A
              Multicast= None

               Enter here to CONFIRM or ESC to CANCEL:
```

This menu displays the **My WAN Addr** field for **PPPoE** and **PPTP** encapsulations and **Gateway IP Addr** field for **Ethernet** encapsulation. The following table describes the fields in this menu.

Table 222 Remote Node Network Layer Options Menu Fields

FIELD	DESCRIPTION
IP Address Assignment	If your ISP did not assign you an explicit IP address, press [SPACE BAR] and then [ENTER] to select **Dynamic**; otherwise select **Static** and enter the IP address & subnet mask in the following fields.
(Rem) IP Address	If you have a static IP Assignment, enter the IP address assigned to you by your ISP.
(Rem) IP Subnet Mask	If you have a static IP Assignment, enter the subnet mask assigned to you.
Gateway IP Addr	This field is applicable to **Ethernet** encapsulation only. Enter the gateway IP address assigned to you if you are using a static IP address.
My WAN Addr	This field is applicable to **PPPoE** and **PPTP** encapsulations only. Some implementations, especially the UNIX derivatives, require the WAN link to have a separate IP network number from the LAN and each end must have a unique address within the WAN network number. If this is the case, enter the IP address assigned to the WAN port of your ZyWALL. Note that this is the address assigned to your local ZyWALL, not the remote router.
Network Address Translation	Network Address Translation (NAT) allows the translation of an Internet protocol address used within one network (for example a private IP address used in a local network) to a different IP address known within another network (for example a public IP address used on the Internet). Choose **None** to disable NAT. Choose **SUA Only** if you have a single public IP address. SUA (Single User Account) is a subset of NAT that supports two types of mapping: **Many-to-One** and **Server**. Choose **Full Feature** if you have multiple public IP addresses. **Full Feature** mapping types include: **One-to-One**, **Many-to-One** (SUA/PAT), **Many-to-Many Overload**, **Many- One-to-One** and **Server**. When you select **Full Feature** you must configure at least one address mapping set. See Chapter 17 on page 385 for a full discussion on this feature.

Table 222 Remote Node Network Layer Options Menu Fields (continued)

FIELD	DESCRIPTION
NAT Lookup Set	If you select **SUA Only** in the **Network Address Translation** field, it displays **255** and indicates the SMT will use the pre-configured **Set 255** (read only) in menu 15.1. If you select **Full Feature** or **None** in the **Network Address Translation** field, it displays **1**, **2** or **3** and indicates the SMT will use the pre-configured **Set 1** in menu 15.1 for the first WAN port, **Set 2** in menu 15.1 for the second WAN port and **Set 3** for the Backup port. Refer to Section 38.2 on page 597 for more information.
Metric	Enter a number from 1 to 15 to set this route's priority among the ZyWALL's routes (see Section 8.6 on page 170). The smaller the number, the higher priority the route has.
Private	This field is valid only for PPTP/PPPoE encapsulation. This parameter determines if the ZyWALL will include the route to this remote node in its RIP broadcasts. If set to **Yes**, this route is kept private and not included in RIP broadcast. If **No**, the route to this remote node will be propagated to other hosts through RIP broadcasts.
RIP Direction	Press [SPACE BAR] and then [ENTER] to select the RIP direction from **Both**/ **None**/**In Only**/**Out Only**. See Chapter 6 on page 147 for more information on RIP. The default for RIP on the WAN side is **None**. It is recommended that you do not change this setting.
Version	Press [SPACE BAR] and then [ENTER] to select the RIP version from **RIP-1**/**RIP-2B**/ **RIP-2M** or **None**.
Multicast	IGMP (Internet Group Multicast Protocol) is a network-layer protocol used to establish membership in a Multicast group. The ZyWALL supports both IGMP version 1 (**IGMP-v1**) and version 2 (**IGMP-v2**). Press [SPACE BAR] to enable IP Multicasting or select **None** to disable it. See Chapter 6 on page 147 for more information on this feature.
Once you have completed filling in **Menu 11.3 Remote Node Network Layer Options**, press [ENTER] at the message "Press ENTER to Confirm..." to save your configuration and return to menu 11, or press [ESC] at any time to cancel.	

36.5 Remote Node Filter

Move the cursor to the field **Edit Filter Sets** in menu 11.1, and then press [SPACE BAR] to set the value to **Yes**. Press [ENTER] to open **Menu 11.1.4 - Remote Node Filter**.

Use menu 11.1.4 to specify the filter set(s) to apply to the incoming and outgoing traffic between this remote node and the ZyWALL to prevent certain packets from triggering calls. You can specify up to 4 filter sets separated by commas, for example, 1, 5, 9, 12, in each filter field. Note that spaces are accepted in this field. For more information on defining the filters, please refer to Chapter 40 on page 617. For PPPoE or PPTP encapsulation, you have the additional option of specifying remote node call filter sets.

Figure 372 Menu 11.1.4: Remote Node Filter (Ethernet Encapsulation)

```
            Menu 11.1.4 - Remote Node Filter

            Input Filter Sets:
              protocol filters=
                device filters=
            Output Filter Sets:
              protocol filters=
                device filters=

            Enter here to CONFIRM or ESC to CANCEL:
```

Figure 373 Menu 11.1.4: Remote Node Filter (PPPoE or PPTP Encapsulation)

```
            Menu 11.1.4 - Remote Node Filter

            Input Filter Sets:
              protocol filters=
                device filters=
            Output Filter Sets:
              protocol filters=
                device filters=
            Call Filter Sets:
              protocol filters=
                device filters=


            Enter here to CONFIRM or ESC to CANCEL:
```

37

IP Static Route Setup

This chapter shows you how to configure static routes with your ZyWALL.

37.1 IP Static Route Setup

Enter 12 from the main menu. Select one of the IP static routes as shown next to configure IP static routes in menu 12.1.



The first two static route entries are for default WAN1 and WAN2 routes on a ZyWALL with multiple WAN interfaces. You cannot modify or delete a static default route.
The default route is disabled after you change the static WAN IP address to a dynamic WAN IP address.



The “-” before a route name indicates the static route is inactive.

Figure 374 Menu 12: IP Static Route Setup

```
            Menu 12 - IP Static Route Setup

          1.Reserved          16._________
          2.Reserved          17._________
          3._________         18._________
          4._________         19._________
          5._________         20._________
          6._________         21._________
          7._________         22._________
          8._________         23._________
          9._________         24._________
          10._________        25._________
          11._________        26._________
          12._________        27._________
          13._________        28._________
          14._________        29._________
          15._________        30._________

              Enter selection number:
```

Now, enter the index number of the static route that you want to configure.

Figure 375 Menu 12. 1: Edit IP Static Route

```
          Menu 12.1 - Edit IP Static Route

          Route #: 3
          Route Name= ?
          Active= No
          Destination IP Address= ?
          IP Subnet Mask= ?
          Gateway IP Address= ?
          Metric= 2
          Private= No


          Press ENTER to CONFIRM or ESC to CANCEL:
```

`The following table describes the IP Static Route Menu fields.

Table 223 Menu 12. 1: Edit IP Static Route

FIELD	DESCRIPTION
Route #	This is the index number of the static route that you chose in menu 12.
Route Name	Enter a descriptive name for this route. This is for identification purposes only.
Active	This field allows you to activate/deactivate this static route.
Destination IP Address	This parameter specifies the IP network address of the final destination. Routing is always based on network number. If you need to specify a route to a single host, use a subnet mask of 255.255.255.255 in the subnet mask field to force the network number to be identical to the host ID.

Table 223 Menu 12. 1: Edit IP Static Route

FIELD	DESCRIPTION
IP Subnet Mask	Enter the IP subnet mask for this destination.
Gateway IP Address	Enter the IP address of the gateway. The gateway is an immediate neighbor of your ZyWALL that will forward the packet to the destination. On the LAN, the gateway must be a router on the same segment as your ZyWALL; over the WAN, the gateway must be the IP address of one of the remote nodes.
Metric	Enter a number from 1 to 15 to set this route's priority among the ZyWALL's routes (see Section 8.6 on page 170). The smaller the number, the higher priority the route has.
Private	This parameter determines if the ZyWALL will include the route to this remote node in its RIP broadcasts. If set to **Yes**, this route is kept private and not included in RIP broadcast. If **No**, the route to this remote node will be propagated to other hosts through RIP broadcasts.
Once you have completed filling in this menu, press [ENTER] at the message "Press ENTER to Confirm…" to save your configuration, or press [ESC] to cancel.	

38

Network Address Translation (NAT)

This chapter discusses how to configure NAT on the ZyWALL.

38.1 Using NAT



You must create a firewall rule in addition to setting up SUA/NAT, to allow traffic from the WAN to be forwarded through the ZyWALL.

38.1.1 SUA (Single User Account) Versus NAT

SUA (Single User Account) is a ZyNOS implementation of a subset of NAT that supports two types of mapping, **Many-to-One** and **Server**. See Section 38.2.1 on page 598 for a detailed description of the NAT set for SUA. The ZyWALL also supports **Full Feature** NAT to map multiple global IP addresses to multiple private LAN IP addresses of clients or servers using mapping types.



Choose **SUA Only** if you have just one public WAN IP address for your ZyWALL.
Choose **Full Feature** if you have multiple public WAN IP addresses for your ZyWALL.

38.1.2 Applying NAT

You apply NAT via menu 4 or 11.1.2 as displayed next. The next figure shows you how to apply NAT for Internet access in menu 4. Enter 4 from the main menu to go to **Menu 4 - Internet Access Setup**.

Figure 376 Menu 4: Applying NAT for Internet Access

```
Menu 4 - Internet Access Setup

ISP's Name= ChangeMe
Encapsulation= Ethernet
  Service Type= Standard
  My Login= N/A
  My Password= N/A
  Retype to Confirm= N/A
  Login Server= N/A
  Relogin Every (min)=  N/A
IP Address Assignment= Dynamic
  IP Address= N/A
  IP Subnet Mask= N/A
  Gateway IP Address= N/A
Network Address Translation= SUA Only


Press ENTER to Confirm or ESC to Cancel:
```

The following figure shows how you apply NAT to the remote node in menu 11.1.

1. Enter 11 from the main menu.
2. Enter 1 to open **Menu 11.1 - Remote Node Profile**.
3. Move the cursor to the **Edit IP** field, press [SPACE BAR] to select **Yes** and then press [ENTER] to bring up **Menu 11.1.2 - Remote Node Network Layer Options**.

Figure 377 Menu 11.1.2: Applying NAT to the Remote Node

```
Menu 11.1.2 - Remote Node Network Layer Options

IP Address Assignment= Dynamic
IP Address= N/A
IP Subnet Mask= N/A
Gateway IP Addr= N/A

Network Address Translation= Full Feature
NAT Lookup Set= 1
Metric= 1
Private= N/A
RIP Direction= None
  Version= N/A
Multicast= None


Enter here to CONFIRM or ESC to CANCEL:
```

The following table describes the fields in this menu.

Table 224 Applying NAT in Menus 4 & 11.1.2

FIELD	DESCRIPTION	OPTIONS
Network Address Translation	When you select this option the SMT will use Address Mapping Set 1 (menu 15.1 - see Section 38.2.1 on page 598 for further discussion). You can configure any of the mapping types described in Chapter 17 on page 385. Choose **Full Feature** if you have multiple public WAN IP addresses for your ZyWALL. When you select **Full Feature** you must configure at least one address mapping set.	Full Feature
	NAT is disabled when you select this option.	None
	When you select this option the SMT will use Address Mapping Set 255 (menu 15.1 - see Section 38.2.1 on page 598). Choose **SUA Only** if you have just one public WAN IP address for your ZyWALL.	SUA Only

38.2 NAT Setup

Use the address mapping sets menus and submenus to create the mapping table used to assign global addresses to computers on the LAN, DMZ and WLAN. **Set 255** is used for SUA. When you select **Full Feature** in menu 4, menu 11.1.2 or menu 11.2.2, the SMT will use **Set 1** for the first WAN port and **Set 2** for the second WAN port. When you select **SUA Only**, the SMT will use the pre-configured **Set 255** (read only).

The server set is a list of LAN, DMZ and WLAN servers mapped to external ports. To use this set, a server rule must be set up inside the NAT address mapping set. Please see the section on port forwarding in Chapter 17 on page 385 for further information on these menus. To configure NAT, enter 15 from the main menu to bring up the following screen.



On a ZyWALL with two WAN interfaces, you can configure port forwarding and trigger port rules for the first WAN interface and separate sets of rules for the second WAN interface.

Figure 378 Menu 15: NAT Setup

```
                Menu 15 - NAT Setup

                    1. Address Mapping Sets
                    2. Port Forwarding Setup
                    3. Trigger Port Setup



           Enter Menu Selection Number:
```

Configure DMZ, WLAN and LAN IP addresses in NAT menus 15.1 and 15.2. DMZ, WLAN and LAN IP addresses must be on separate subnets.

38.2.1 Address Mapping Sets

Enter 1 to bring up **Menu 15.1 - Address Mapping Sets**.

Figure 379 Menu 15.1: Address Mapping Sets

```
            Menu 15.1 - Address Mapping Sets

                    1. NAT_SET
                    2. example
                  255. SUA (read only)




            Enter Menu Selection Number:
```

38.2.1.1 SUA Address Mapping Set

Enter 255 to display the next screen (see also Section 38.1.1 on page 595). The fields in this menu cannot be changed.

Figure 380 Menu 15.1.255: SUA Address Mapping Rules

```
          Menu 15.1.255 - Address Mapping Rules

Set Name= SUA

Idx  Local Start IP   Local End IP     Global Start IP  Global End IP    Type
---  ---------------  ---------------  ---------------  ---------------  ---
1.   0.0.0.0          255.255.255.255  0.0.0.0                           M-1
2.                                    0.0.0.0                          Server
3.
4.
5.
6.
7.
8.
9.
10.

       Press ENTER to Confirm or ESC to Cancel:
```

The following table explains the fields in this menu.



Menu 15.1.255 is read-only.

Table 225 SUA Address Mapping Rules

FIELD	DESCRIPTION
Set Name	This is the name of the set you selected in menu 15.1 or enter the name of a new set you want to create.
Idx	This is the index or rule number.
Local Start IP	**Local Start IP** is the starting local IP address (ILA).
Local End IP	**Local End IP** is the ending local IP address (ILA). If the rule is for all local IPs, then the start IP is 0.0.0.0 and the end IP is 255.255.255.255.
Global Start IP	This is the starting global IP address (IGA). If you have a dynamic IP, enter 0.0.0.0 as the **Global Start IP**.
Global End IP	This is the ending global IP address (IGA).
Type	These are the mapping types discussed above. **Server** allows us to specify multiple servers of different types behind NAT to this machine. See later for some examples.
Once you have finished configuring a rule in this menu, press [ENTER] at the message “Press ENTER to Confirm…” to save your configuration, or press [ESC] to cancel.	

38.2.1.2 User-Defined Address Mapping Sets

Now look at option 1 in menu 15.1. Enter 1 to bring up this menu. Look at the differences from the previous menu. Note the extra **Action** and **Select Rule** fields mean you can configure rules in this screen. Note also that the [?] in the **Set Name** field means that this is a required field and you must enter a name for the set.



The entire set will be deleted if you leave the **Set Name** field blank and press [ENTER] at the bottom of the screen.

Figure 381 Menu 15.1.1: First Set

```
                    Menu 15.1.1 - Address Mapping Rules

 Set Name= NAT_SET

Idx  Local Start IP   Local End IP     Global Start IP  Global End IP    Type
---  ---------------  ---------------  ---------------  ---------------  --
 1.  0.0.0.0          255.255.255.255  0.0.0.0                           M-1
 2.                                    0.0.0.0                         Server
 3.
 4.
 5.
 6.
 7.
 8.
 9.
10.

                   Action= None          Select Rule= N/A

                   Press ENTER to Confirm or ESC to Cancel:
```



The Type, Local and Global Start/End IPs are configured in menu 15.1.1.1 (described later) and the values are displayed here.

38.2.1.3 Ordering Your Rules

Ordering your rules is important because the ZyWALL applies the rules in the order that you specify. When a rule matches the current packet, the ZyWALL takes the corresponding action and the remaining rules are ignored. If there are any empty rules before your new configured rule, your configured rule will be pushed up by that number of empty rules. For example, if you have already configured rules 1 to 6 in your current set and now you configure rule number 9. In the set summary screen, the new rule will be rule 7, not 9.

Now if you delete rule 4, rules 5 to 7 will be pushed up by 1 rule, so as old rule 5 becomes rule 4, old rule 6 becomes rule 5 and old rule 7 becomes rule 6.

Table 226 Fields in Menu 15.1.1

FIELD	DESCRIPTION
Set Name	Enter a name for this set of rules. This is a required field. If this field is left blank, the entire set will be deleted.

Table 226 Fields in Menu 15.1.1 (continued)

FIELD	DESCRIPTION
Action	The default is **Edit**. **Edit** means you want to edit a selected rule (see following field). **Insert Before** means to insert a rule before the rule selected. The rules after the selected rule will then be moved down by one rule. **Delete** means to delete the selected rule and then all the rules after the selected one will be advanced one rule. **None** disables the **Select Rule** item.
Select Rule	When you choose **Edit**, **Insert Before** or **Delete** in the previous field the cursor jumps to this field to allow you to select the rule to apply the action in question.

You must press [ENTER] at the bottom of the screen to save the whole set. You must do this again if you make any changes to the set – including deleting a rule. No changes to the set take place until this action is taken.

Selecting **Edit** in the **Action** field and then selecting a rule brings up the following menu, **Menu 15.1.1.1 - Address Mapping Rule** in which you can edit an individual rule and configure the **Type**, **Local** and **Global Start/End IPs**.

An IP End address must be numerically greater than its corresponding IP Start address.

Figure 382 Menu 15.1.1.1: Editing/Configuring an Individual Rule in a Set

```
            Menu 15.1.1.1 Address Mapping Rule

                 Type= One-to-One

                 Local IP:
                   Start=
                   End  = N/A

                 Global IP:
                   Start=
                   End  = N/A

                 Server Mapping Set= N/A


            Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields in this menu.

Table 227 Menu 15.1.1.1: Editing/Configuring an Individual Rule in a Set

FIELD	DESCRIPTION
Type	Press [SPACE BAR] and then [ENTER] to select from a total of five types. These are the mapping types discussed in Chapter 17 on page 385. **Server** allows you to specify multiple servers of different types behind NAT to this computer. See Section 38.4.3 on page 607 for an example.
Local IP	Only local IP fields are **N/A** for server; Global IP fields MUST be set for **Server**.
Start	Enter the starting local IP address (ILA).
End	Enter the ending local IP address (ILA). If the rule is for all local IPs, then put the Start IP as 0.0.0.0 and the End IP as 255.255.255.255. This field is **N/A** for One-to-One and Server types.
Global IP	
Start	Enter the starting global IP address (IGA). If you have a dynamic IP, enter 0.0.0.0 as the **Global IP Start**. Note that **Global IP Start** can be set to 0.0.0.0 only if the types are **Many-to-One** or **Server**.
End	Enter the ending global IP address (IGA). This field is **N/A** for **One-to-One**, **Many-to-One** and **Server types**.
Server Mapping Set	This field is available only when you select **Server** in the **Type** field.
Once you have finished configuring a rule in this menu, press [ENTER] at the message “Press ENTER to Confirm…” to save your configuration, or press [ESC] to cancel.	

38.3 Configuring a Server behind NAT



If you do not assign a **Default Server** IP address, the ZyWALL discards all packets received for ports that are not specified here or in the remote management setup.

Follow these steps to configure a server behind NAT:

1. Enter 15 in the main menu to go to **Menu 15 - NAT Setup.**
2. Enter 2 to open menu 15.2.

Figure 383 Menu 15.2: NAT Server Sets

```
                Menu 15.2 - NAT Server Sets

          1. Server Set 1
          2. Server Set 2


                Enter Set Number to Edit:
```

3 Enter 1 or 2 to go to **Menu 15.2.x - NAT Server Setup** and configure the address mapping rules for the WAN 1 or WAN 2 interface on a ZyWALL with multiple WAN interfaces.

Figure 384 Menu 15.2.x: NAT Server Sets

```
                Menu 15.2.1 - NAT Server Setup

              Default Server: 0.0.0.0
 Rule  Act.   Start Port   End Port    IP Address
-------------------------------------------------------
 001   No     0            0           0.0.0.0
 002   No     0            0           0.0.0.0
 003   No     0            0           0.0.0.0
 004   No     0            0           0.0.0.0
 005   No     0            0           0.0.0.0
 006   No     0            0           0.0.0.0
 007   No     0            0           0.0.0.0
 008   No     0            0           0.0.0.0
 009   No     0            0           0.0.0.0
 010   No     0            0           0.0.0.0


Select Command= None           Select Rule= N/A
      Press ENTER to Confirm or ESC to Cancel:
```

4 Select **Edit Rule** in the **Select Command** field; type the index number of the NAT server you want to configure in the **Select Rule** field and press [ENTER] to open **Menu 15.2.x.x - NAT Server Configuration** (see the next figure).

Figure 385 15.2.x.x: NAT Server Configuration

```
          15.2.1.2 - NAT Server Configuration

               Wan= 1                          Index= 2

           ------------------------------------------------

               Name= 1

               Active= Yes

               Start port= 21                  End port= 25

               IP Address= 192.168.1.33

          Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields in this screen.

Table 228 15.2.x.x: NAT Server Configuration

FIELD	DESCRIPTION
WAN	On a ZyWALL with two WAN ports, you can configure port forwarding and trigger port rules for the first WAN port and separate sets of rules for the second WAN port. This is the WAN port (server set) you select in menu 15.2.
Index	This is the index number of an individual port forwarding server entry.
Name	Enter a name to identify this port-forwarding rule.
Active	Press [SPACE BAR] and then [ENTER] to select **Yes** to enable the NAT server entry.
Start Port	Enter a port number in the **Start Port** field. To forward only one port, enter it again in the **End Port** field. To specify a range of ports, enter the last port to be forwarded in the **End Port** field.
End Port	
IP Address	Enter the inside IP address of the server.
When you have completed this menu, press [ENTER] at the prompt "Press ENTER to Confirm…" to save your configuration, or press [ESC] at any time to cancel.	

5 Enter a port number in the **Start Port** field. To forward only one port, enter it again in the **End Port** field. To specify a range of ports, enter the last port to be forwarded in the **End Port** field.

6 Enter the inside IP address of the server in the **IP Address** field. In the following figure, you have a computer acting as an FTP, Telnet and SMTP server (ports 21, 23 and 25) at 192.168.1.33.

7 Press [ENTER] at the "Press ENTER to confirm …" prompt to save your configuration after you define all the servers or press [ESC] at any time to cancel.

Figure 386 Menu 15.2.1: NAT Server Setup


```
                Menu 15.2.1 - NAT Server Setup

              Default Server: 0.0.0.0
 Rule  Act.   Start Port   End Port    IP Address
-------------------------------------------------------
 001   No     0            0           0.0.0.0
 002   Yes    21           25          192.168.1.33
 003   No     0            0           0.0.0.0
 004   No     0            0           0.0.0.0
 005   No     0            0           0.0.0.0
 006   No     0            0           0.0.0.0
 007   No     0            0           0.0.0.0
 008   No     0            0           0.0.0.0
 009   No     0            0           0.0.0.0
 010   No     0            0           0.0.0.0


Select Command= None           Select Rule= N/A
      Press ENTER to Confirm or ESC to Cancel:
```

You assign the private network IP addresses. The NAT network appears as a single host on the Internet. A is the FTP/Telnet/SMTP server.

Figure 387 Server Behind NAT Example

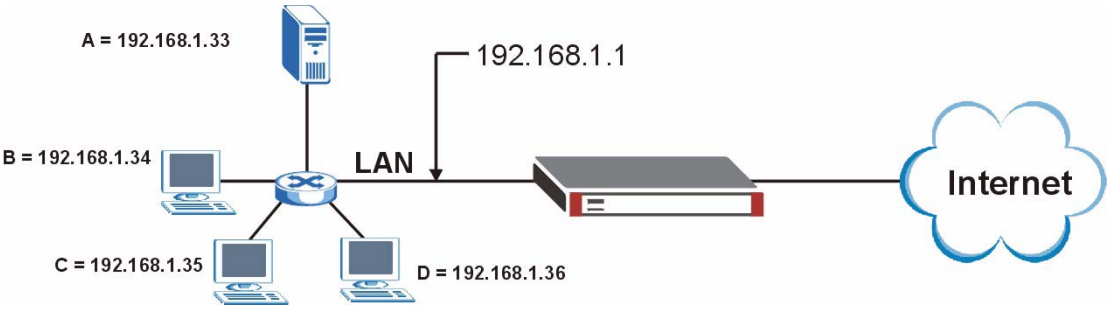

38.4 General NAT Examples

The following are some examples of NAT configuration.

38.4.1 Internet Access Only

In the following Internet access example, you only need one rule where all your ILAs (Inside Local addresses) map to one dynamic IGA (Inside Global Address) assigned by your ISP.

Figure 388 NAT Example 1

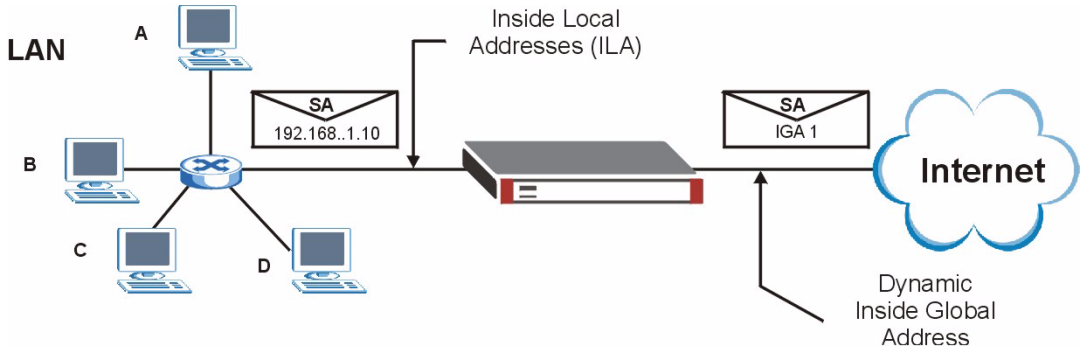


Figure 389 Menu 4: Internet Access & NAT Example

```
Menu 4 - Internet Access Setup


ISP's Name= ChangeMe
Encapsulation= Ethernet
  Service Type= Standard
  My Login= N/A
  My Password= N/A
  Retype to Confirm= N/A
  Login Server= N/A
  Relogin Every (min)=  N/A
IP Address Assignment= Dynamic
  IP Address= N/A
  IP Subnet Mask= N/A
  Gateway IP Address= N/A
Network Address Translation= SUA Only


Press ENTER to Confirm or ESC to Cancel:
```

From menu 4 shown above, simply choose the **SUA Only** option from the **Network Address Translation** field. This is the Many-to-One mapping discussed in Section 38.4 on page 605. The **SUA Only** read-only option from the **Network Address Translation** field in menus 4 and 11.3 is specifically pre-configured to handle this case.

38.4.2 Example 2: Internet Access with a Default Server

Figure 390 NAT Example 2

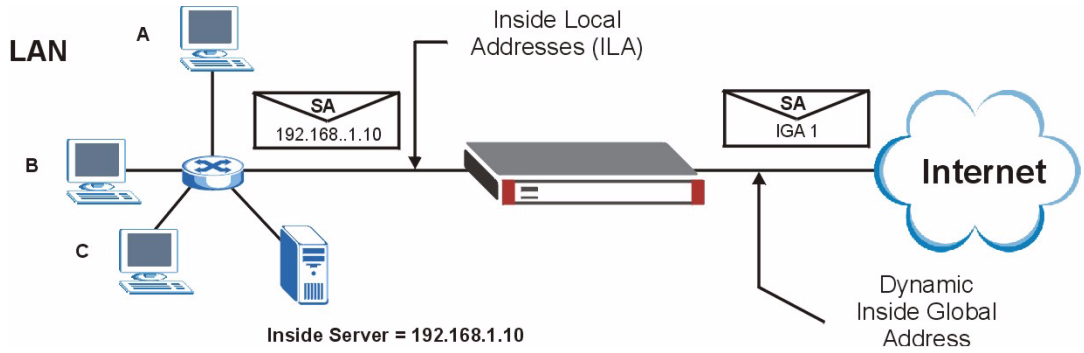

In this case, you do exactly as above (use the convenient pre-configured **SUA Only** set) and also go to menu 15.2.1 to specify the **Default Server** behind the NAT as shown in the next figure.

Figure 391 Menu 15.2.1: Specifying an Inside Server

```
                Menu 15.2.1 - NAT Server Setup

              Default Server: 192.168.1.10
 Rule  Act.   Start Port   End Port    IP Address
-------------------------------------------------------
 001   No     0            0           0.0.0.0
 002   Yes    21           25          192.168.1.33
 003   No     0            0           0.0.0.0
 004   No     0            0           0.0.0.0
 005   No     0            0           0.0.0.0
 006   No     0            0           0.0.0.0
 007   No     0            0           0.0.0.0
 008   No     0            0           0.0.0.0
 009   No     0            0           0.0.0.0
 010   No     0            0           0.0.0.0


Select Command= None           Select Rule= N/A
      Press ENTER to Confirm or ESC to Cancel:
```


38.4.3 Example 3: Multiple Public IP Addresses With Inside Servers

In this example, there are 3 IGAs from our ISP. There are many departments but two have their own FTP server. All departments share the same router. The example will reserve one IGA for each department with an FTP server and all departments use the other IGA. Map the FTP servers to the first two IGAs and the other LAN traffic to the remaining IGA. Map the third IGA to an inside web server and mail server. Four rules need to be configured, two bi-directional and two uni-directional as follows.

1. Map the first IGA to the first inside FTP server for FTP traffic in both directions (**1 : 1** mapping, giving both local and global IP addresses).
2. Map the second IGA to our second inside FTP server for FTP traffic in both directions (**1 : 1** mapping, giving both local and global IP addresses).
3. Map the other outgoing LAN traffic to IGA3 (**Many : 1** mapping).
4. You also map your third IGA to the web server and mail server on the LAN. Type **Server** allows you to specify multiple servers, of different types, to other computers behind NAT on the LAN.

The example situation looks somewhat like this:

Figure 392 NAT Example 3

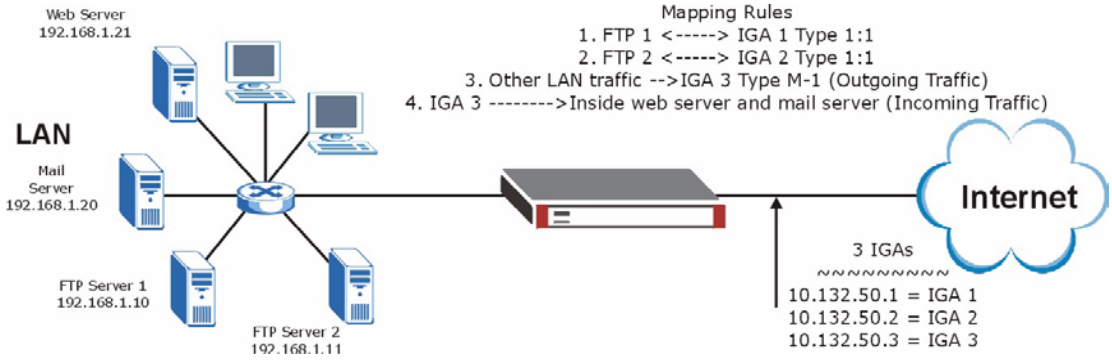

1. In this case you need to configure Address Mapping Set 1 from **Menu 15.1 - Address Mapping Sets**. Therefore you must choose the **Full Feature** option from the **Network Address Translation** field (in menu 4 or menu 11.3) in Figure 393 on page 608.
2. Then enter 15 from the main menu.
3. Enter 1 to configure the Address Mapping Sets.
4. Enter 1 to begin configuring this new set. Enter a Set Name, choose the **Edit Action** and then enter 1 for the **Select Rule** field. Press [ENTER] to confirm.
5. Select **Type** as **One-to-One** (direct mapping for packets going both ways), and enter the local **Start IP** as 192.168.1.10 (the IP address of FTP Server 1), the global **Start IP** as 10.132.50.1 (our first IGA). (See Figure 394 on page 609*)*.
6. Repeat the previous step for rules 2 to 4 as outlined above.
7. When finished, menu 15.1.1 should look like as shown in Figure 395 on page 609.

Figure 393 Example 3: Menu 11.1.2

```
            Menu 11.1.2 - Remote Node Network Layer Options

                    IP Address Assignment= Dynamic
                    IP Address= N/A
                    IP Subnet Mask= N/A
                    Gateway IP Addr= N/A

                    Network Address Translation= SUA Only
                    Metric= 2
                    Private=
                    RIP Direction= None
                      Version= N/A
                    Multicast= None


             Enter here to CONFIRM or ESC to CANCEL:
```

The following figure shows how to configure the first rule.

Figure 394 Example 3: Menu 15.1.1.1

```
            Menu 15.1.1.1 Address Mapping Rule

                Type= One-to-One

                Local IP:
                  Start= 192.168.1.10
                  End  = N/A

                Global IP:
                  Start= 10.132.50.1
                  End  = N/A

                Server Mapping Set= N/A

            Press ENTER to Confirm or ESC to Cancel:
```

Figure 395 Example 3: Final Menu 15.1.1

```
                  Menu 15.1.1 - Address Mapping Rules

Set Name= Example3

Idx  Local Start IP   Local End IP     Global Start IP  Global End IP    Type
---  ---------------  ---------------  ---------------  ---------------  ---
 1. 192.168.1.10                       10.132.50.1                        1-1
 2  192.168.1.11                       10.132.50.2                        1-1
 3. 0.0.0.0           255.255.255.255  10.132.50.3                        M-1
 4.                                   10.132.50.3                      Server
 5.
 6.
 7.
 8.
 9.
10.

                Action= Edit          Select Rule=

               Press ENTER to Confirm or ESC to Cancel:
```

Now configure the IGA3 to map to our web server and mail server on the LAN.

1. Enter 15 from the main menu.
2. Enter 2 to go to menu 15.2.
3. (Enter 1 or 2 from menu 15.2 on a ZyWALL with multiple WAN ports) configure the menu as shown in Figure 396 on page 610.

Figure 396 Example 3: Menu 15.2.1

```
                    Menu 15.2.1 - NAT Server Setup


              Default Server: 0.0.0.0
 Rule   Act.    Start Port    End Port     IP Address
-------------------------------------------------------------
 001    Yes     80            80           192.168.1.21
 002    Yes     25            25           192.168.1.20
 003    No      0             0            0.0.0.0
 004    No      0             0            0.0.0.0
 005    No      0             0            0.0.0.0
 006    No      0             0            0.0.0.0
 007    No      0             0            0.0.0.0
 008    No      0             0            0.0.0.0
 009    No      0             0            0.0.0.0
 010    No      0             0            0.0.0.0


Select Command= None            Select Rule= N/A
      Press ENTER to Confirm or ESC to Cancel:
```

38.4.4 Example 4: NAT Unfriendly Application Programs

Some applications do not support NAT Mapping using TCP or UDP port address translation. In this case it is better to use **Many-One-to-One** mapping as port numbers do *not* change for **Many-One-to-One** (and **One-to-One**) NAT mapping types. The following figure illustrates this.

Figure 397 NAT Example 4

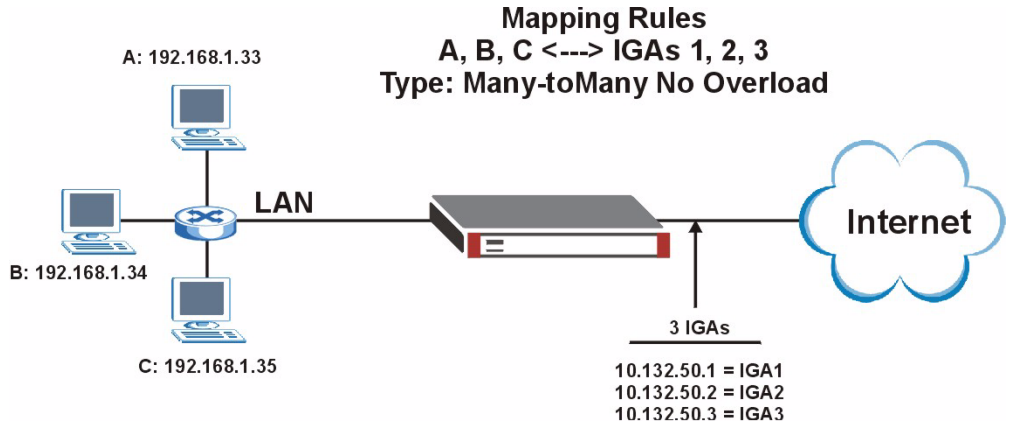

Other applications such as some gaming programs are NAT unfriendly because they embed addressing information in the data stream. These applications won't work through NAT even when using **One-to-One** and **Many-One-to-One** mapping types.

Follow the steps outlined in example 3 above to configure these two menus as follows.

Figure 398 Example 4: Menu 15.1.1.1: Address Mapping Rule

```
                Menu 15.1.1.1 Address Mapping Rule

                      Type= Many-One-to-One

                      Local IP:
                        Start= 192.168.1.10
                        End  = 192.168.1.12

                      Global IP:
                        Start= 10.132.50.1
                        End  = 10.132.50.3

            Press ENTER to Confirm or ESC to Cancel:
```

After you've configured your rule, you should be able to check the settings in menu 15.1.1 as shown next.

Figure 399 Example 4: Menu 15.1.1: Address Mapping Rules

```
                Menu 15.1.1 - Address Mapping Rules

  Set Name= Example4

Idx  Local Start IP   Local End IP     Global Start IP  Global End IP    Type
---  ---------------  ---------------  ---------------  ---------------  ---
 1.  192.168.1.10     192.168.1.12     10.132.50.1      10.132.50.3      M-1-1
 2.
 3.
 4.
 5.
 6.
 7.
 8.
 9.
10.

         Action= Edit          Select Rule=

         Press ENTER to Confirm or ESC to Cancel:
```

38.5 Trigger Port Forwarding

Some services use a dedicated range of ports on the client side and a dedicated range of ports on the server side. With regular port forwarding you set a forwarding port in NAT to forward a service (coming in from the server on the WAN) to the IP address of a computer on the client side (LAN). The problem is that port forwarding only forwards a service to a single LAN IP address. In order to use the same service on a different LAN computer, you have to manually replace the LAN computer's IP address in the forwarding port with another LAN computer's IP address.

Trigger port forwarding solves this problem by allowing computers on the LAN to dynamically take turns using the service. The ZyWALL records the IP address of a LAN computer that sends traffic to the WAN to request a service with a specific port number and protocol (a "trigger" port). When the ZyWALL's WAN port receives a response with a specific port number and protocol ("incoming" port), the ZyWALL forwards the traffic to the LAN IP address of the computer that sent the request. After that computer’s connection for that service closes, another computer on the LAN can use the service in the same manner. This way you do not need to configure a new IP address each time you want a different LAN computer to use the application.

38.5.1 Two Points To Remember About Trigger Ports

1. Trigger events only happen on data that is going coming from inside the ZyWALL and going to the outside.
2. If an application needs a continuous data stream, that port (range) will be tied up so that another computer on the LAN can’t trigger it.



Only one LAN computer can use a trigger port (range) at a time.

Enter 3 in menu 15 to display **Menu 15.3 - Trigger Ports**. For a ZyWALL with multiple WAN interfaces, enter 1 or 2 from menu 15.3 to go to **Menu 15.3.1** or **Menu 15.3.2 - Trigger Port Setup** and configure trigger port rules for the first or second WAN interface.

Figure 400 Menu 15.3.1: Trigger Port Setup

```
                Menu 15.3.1 - Trigger Port Setup

                             Incoming                Trigger
     Rule     Name       Start Port   End Port   Start Port   End Port
     ------------------------------------------------------------------
      1.  Real Audio          6970       7170         7070       7070
      2.                         0          0            0          0
      3.                         0          0            0          0
      4.                         0          0            0          0
      5.                         0          0            0          0
      6.                         0          0            0          0
      7.                         0          0            0          0
      8.                         0          0            0          0
      9.                         0          0            0          0
     10.                         0          0            0          0
     11.                         0          0            0          0
     12.                         0          0            0          0

                     Press ENTER to Confirm or ESC to Cancel:

     HTTP:80   FTP:21   Telnet:23   SMTP:25   POP3:110   PPTP:1723
```

The following table describes the fields in this menu.

Table 229 Menu 15.3.1: Trigger Port Setup

FIELD	DESCRIPTION
Rule	This is the rule index number.
Name	Enter a unique name for identification purposes. You may enter up to 15 characters in this field. All characters are permitted - including spaces.
Incoming	Incoming is a port (or a range of ports) that a server on the WAN uses when it sends out a particular service. The ZyWALL forwards the traffic with this port (or range of ports) to the client computer on the LAN that requested the service.
Start Port	Enter a port number or the starting port number in a range of port numbers.
End Port	Enter a port number or the ending port number in a range of port numbers.
Trigger	The trigger port is a port (or a range of ports) that causes (or triggers) the ZyWALL to record the IP address of the LAN computer that sent the traffic to a server on the WAN.
Start Port	Enter a port number or the starting port number in a range of port numbers.
End Port	Enter a port number or the ending port number in a range of port numbers.
Press [ENTER] at the message “Press ENTER to Confirm...” to save your configuration, or press [ESC] at any time to cancel.	

39

Introducing the ZyWALL Firewall

This chapter shows you how to get started with the ZyWALL firewall.

39.1 Using ZyWALL SMT Menus

From the main menu enter 21 to go to **Menu 21 - Filter Set and Firewall Configuration** to display the screen shown next.

Figure 401 Menu 21: Filter and Firewall Setup

```
Menu 21 - Filter and Firewall Setup

          1. Filter Setup
          2. Firewall Setup


Enter Menu Selection Number:
```

39.1.1 Activating the Firewall

Enter option 2 in this menu to bring up the following screen. Press [SPACE BAR] and then [ENTER] to select **Yes** in the **Active** field to activate the firewall. The firewall must be active to protect against Denial of Service (DoS) attacks. Use the web configurator to configure firewall rules.

Figure 402 Menu 21.2: Firewall Setup

```
                    Menu 21.2 - Firewall Setup

          The firewall protects against Denial of Service (DoS) attacks
          when it is active.

          Your network is vulnerable to attacks when the firewall is
          turned off.

          Refer to the User's Guide for details about the firewall
          default policies.

          You may define additional policy rules or modify existing ones
          but please exercise extreme caution in doing so.

          Active: Yes

          You can use the Web Configurator to configure the firewall.

                   Press ENTER to Confirm or ESC to Cancel:
```



Configure the firewall rules using the web configurator or CLI commands.

40

Filter Configuration


This chapter shows you how to create and apply filters.

40.1 Introduction to Filters

Your ZyWALL uses filters to decide whether to allow passage of a data packet and/or to make a call. There are two types of filter applications: data filtering and call filtering. Filters are subdivided into device and protocol filters, which are discussed later.

Data filtering screens the data to determine if the packet should be allowed to pass. Data filters are divided into incoming and outgoing filters, depending on the direction of the packet relative to a port. Data filtering can be applied on either the WAN side or the LAN side. Call filtering is used to determine if a packet should be allowed to trigger a call. Remote node call filtering is only applicable when using PPPoE encapsulation. Outgoing packets must undergo data filtering before they encounter call filtering as shown in the following figure.

Figure 403 Outgoing Packet Filtering Process

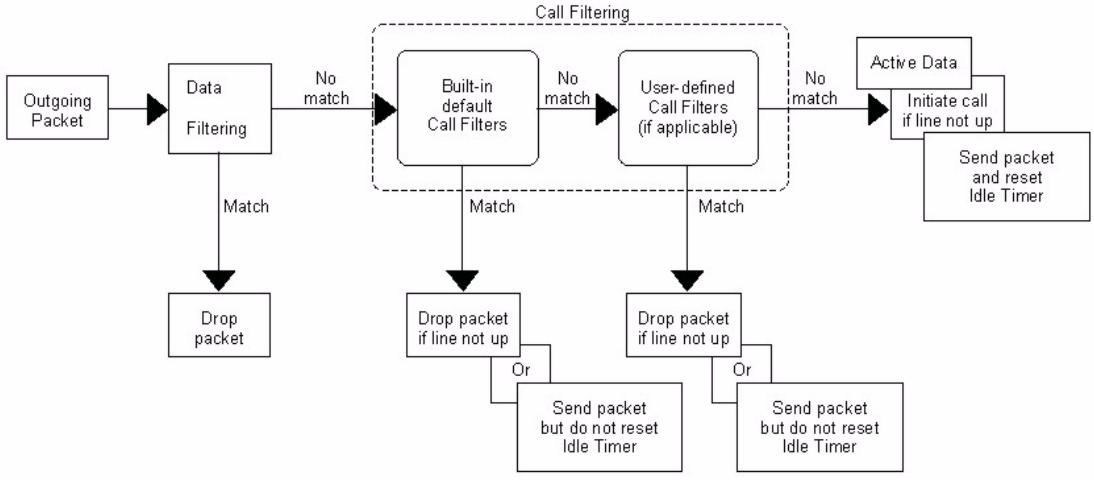

For incoming packets, your ZyWALL applies data filters only. Packets are processed depending upon whether a match is found. The following sections describe how to configure filter sets.


40.1.1 The Filter Structure of the ZyWALL

A filter set consists of one or more filter rules. Usually, you would group related rules, e.g., all the rules for NetBIOS, into a single set and give it a descriptive name. The ZyWALL allows you to configure up to twelve filter sets with six rules in each set, for a total of 72 filter rules in the system. You cannot mix device filter rules and protocol filter rules within the same set. You can apply up to four filter sets to a particular port to block multiple types of packets. With each filter set having up to six rules, you can have a maximum of 24 rules active for a single port.

Sets of factory default filter rules have been configured in menu 21 to prevent NetBIOS traffic from triggering calls and to prevent incoming telnet sessions. A summary of their filter rules is shown in the figures that follow.

The following figure illustrates the logic flow when executing a filter rule. See also Figure 408 on page 624 for the logic flow when executing an IP filter.

Figure 404 Filter Rule Process

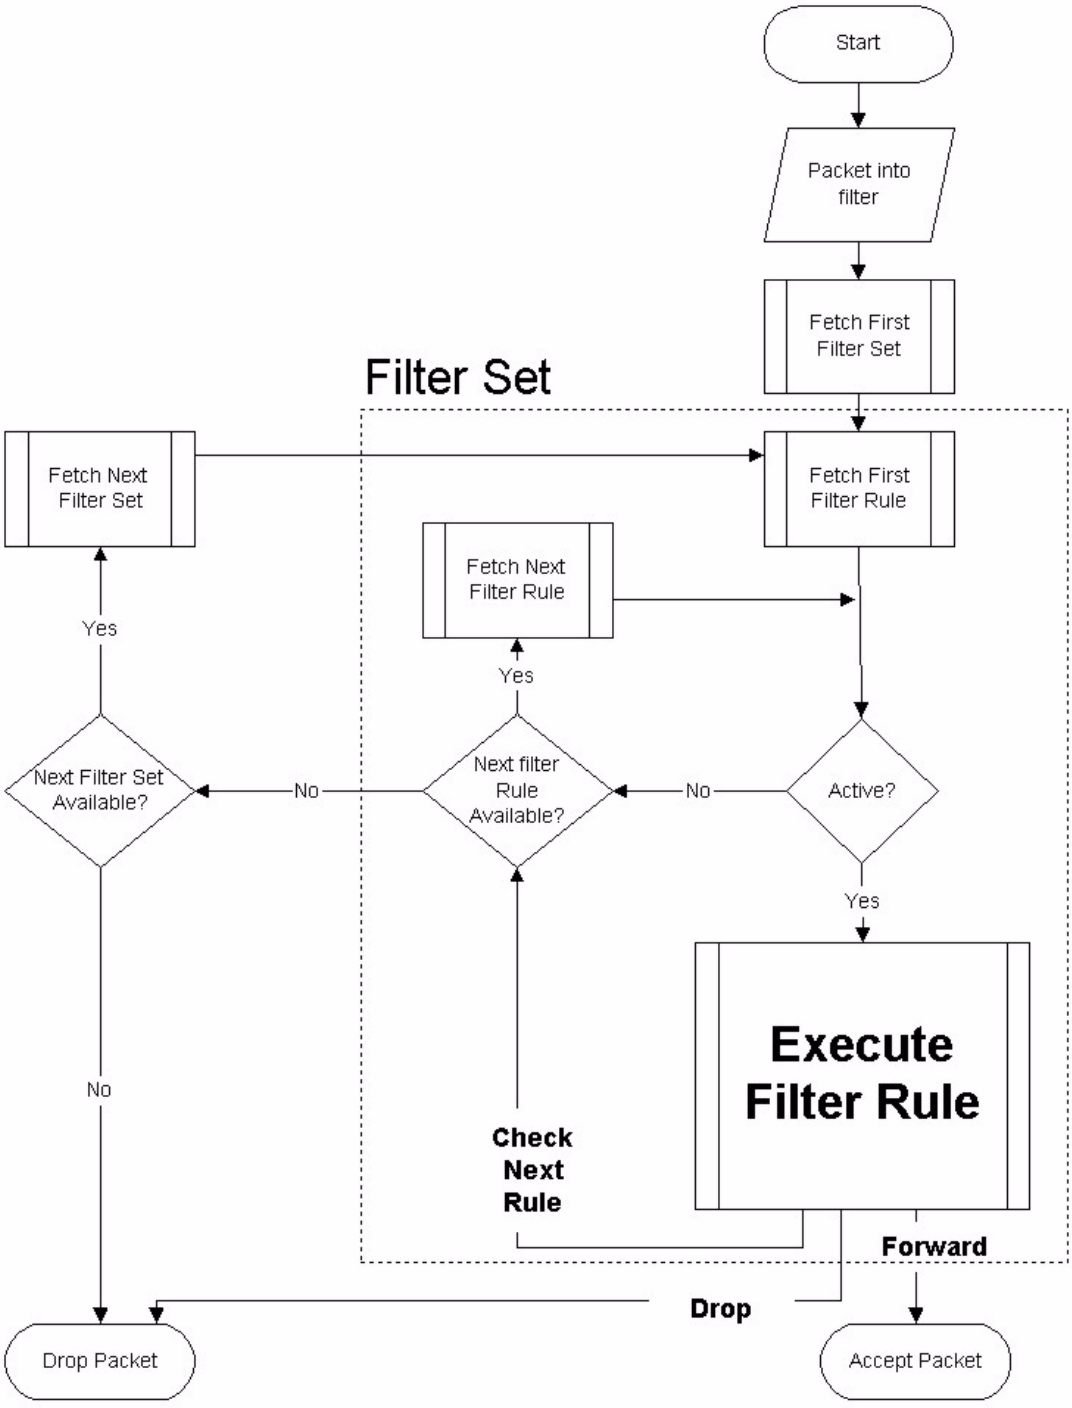

You can apply up to four filter sets to a particular port to block multiple types of packets. With each filter set having up to six rules, you can have a maximum of 24 rules active for a single port.

40.2 Configuring a Filter Set

The ZyWALL includes filtering for NetBIOS over TCP/IP packets by default. To configure another filter set, follow the procedure below.

1. Enter 21 in the main menu to open menu 21.

Figure 405 Menu 21: Filter and Firewall Setup

```
            Menu 21 - Filter and Firewall Setup

                      1. Filter Setup
                      2. Firewall Setup




            Enter Menu Selection Number:
```

2. Enter 1 to bring up the following menu.

Figure 406 Menu 21.1: Filter Set Configuration

```
                Menu 21.1 - Filter Set Configuration

    Filter                                Filter
    Set #        Comments                 Set #        Comments
    ------  -----------------             ------  -----------------
     1      _________________              7      _________________
     2      _________________              8      _________________
     3      _________________              9      _________________
     4      _________________             10      _________________
     5      _________________             11      _________________
     6      _________________             12      _________________


         Enter Filter Set Number to Configure= 0

         Edit Comments= N/A

         Press ENTER to Confirm or ESC to Cancel:
```

3. Select the filter set you wish to configure (1-12) and press [ENTER].
4. Enter a descriptive name or comment in the **Edit Comments** field and press [ENTER].
5. Press [ENTER] at the message [Press ENTER to confirm] to open **Menu 21.1.x - Filter Rules Summary**.

This screen shows the summary of the existing rules in the filter set. The following tables contain a brief description of the abbreviations used in the previous menus.

Table 230 Abbreviations Used in the Filter Rules Summary Menu

FIELD	DESCRIPTION
A	Active: “Y” means the rule is active. “N” means the rule is inactive.
Type	The type of filter rule: “GEN” for Generic, “IP” for TCP/IP.
Filter Rules	These parameters are displayed here.
M	More. “Y” means there are more rules to check which form a rule chain with the present rule. An action cannot be taken until the rule chain is complete. “N” means there are no more rules to check. You can specify an action to be taken i.e., forward the packet, drop the packet or check the next rule. For the latter, the next rule is independent of the rule just checked.
m	Action Matched. “F” means to forward the packet immediately and skip checking the remaining rules. “D” means to drop the packet. “N“ means to check the next rule.
n	Action Not Matched. “F” means to forward the packet immediately and skip checking the remaining rules. “D” means to drop the packet. “N” means to check the next rule.

The protocol dependent filter rules abbreviation are listed as follows:

Table 231 Rule Abbreviations Used

ABBREVIATION	DESCRIPTION
IP	
Pr	Protocol
SA	Source Address
SP	Source Port number
DA	Destination Address
DP	Destination Port number
GEN	
Off	Offset
Len	Length

Refer to the next section for information on configuring the filter rules.

40.2.1 Configuring a Filter Rule

To configure a filter rule, type its number in **Menu 21.1.x - Filter Rules Summary** and press [ENTER] to open menu 21.1.x.x for the rule.

To speed up filtering, all rules in a filter set must be of the same class, i.e., protocol filters or generic filters. The class of a filter set is determined by the first rule that you create. When applying the filter sets to a port, separate menu fields are provided for protocol and device filter sets. If you include a protocol filter set in a device filter field or vice versa, the ZyWALL will warn you and will not allow you to save.

40.2.2 Configuring a TCP/IP Filter Rule

This section shows you how to configure a TCP/IP filter rule. TCP/IP rules allow you to base the rule on the fields in the IP and the upper layer protocol, for example, UDP and TCP headers.

To configure TCP/IP rules, select **TCP/IP Filter Rule** from the **Filter Type** field and press [ENTER] to open **Menu 21.1.x.x - TCP/IP Filter Rule**, as shown next.

Figure 407 Menu 21.1.1.1: TCP/IP Filter Rule

```
            Menu 21.1.1.1 - TCP/IP Filter Rule

                        Filter #: 1,1
                        Filter Type= TCP/IP Filter Rule
                        Active= Yes
                        IP Protocol= 0     IP Source Route= No
                        Destination: IP Addr=
                                     IP Mask=
                                     Port #=
                                     Port # Comp= None
                             Source: IP Addr=
                                     IP Mask=
                                     Port #=
                                     Port # Comp= None
                        TCP Estab= N/A
                        More= No           Log= None
                        Action Matched= Check Next Rule
                        Action Not Matched= Check Next Rule


                        Press ENTER to Confirm or ESC to Cancel:
```

The following table describes how to configure your TCP/IP filter rule.

Table 232 Menu 21.1.1.1: TCP/IP Filter Rule


FIELD	DESCRIPTION
Active	Press [SPACE BAR] and then [ENTER] to select **Yes** to activate the filter rule or **No** to deactivate it.
IP Protocol	Protocol refers to the upper layer protocol, e.g., TCP is 6, UDP is 17 and ICMP is 1. Type a value between 0 and 255. A value of 0 matches ANY protocol.
IP Source Route	Press [SPACE BAR] and then [ENTER] to select **Yes** to apply the rule to packets with an IP source route option. Otherwise the packets must not have a source route option. The majority of IP packets do not have source route.
Destination	
IP Addr	Enter the destination IP Address of the packet you wish to filter. This field is ignored if it is 0.0.0.0.
IP Mask	Enter the IP mask to apply to the **Destination: IP Addr**.
Port #	Enter the destination port of the packets that you wish to filter. The range of this field is 0 to 65535. This field is ignored if it is 0.

Table 232 Menu 21.1.1.1: TCP/IP Filter Rule

FIELD	DESCRIPTION
Port # Comp	Press [SPACE BAR] and then [ENTER] to select the comparison to apply to the destination port in the packet against the value given in **Destination: Port #**. Options are **None**, **Equal**, **Not Equal**, **Less** and **Greater**.
Source	
IP Addr	Enter the source IP Address of the packet you wish to filter. This field is ignored if it is 0.0.0.0.
IP Mask	Enter the IP mask to apply to the **Source: IP Addr**.
Port #	Enter the source port of the packets that you wish to filter. The range of this field is 0 to 65535. This field is ignored if it is 0.
Port # Comp	Press [SPACE BAR] and then [ENTER] to select the comparison to apply to the source port in the packet against the value given in **Source: Port #**. Options are **None**, **Equal**, **Not Equal**, **Less** and **Greater**.
TCP Estab	This field is applicable only when the IP Protocol field is 6, TCP. Press [SPACE BAR] and then [ENTER] to select **Yes**, to have the rule match packets that want to establish a TCP connection (SYN=1 and ACK=0); if **No**, it is ignored.
More	Press [SPACE BAR] and then [ENTER] to select **Yes** or **No**. If **Yes**, a matching packet is passed to the next filter rule before an action is taken; if **No**, the packet is disposed of according to the action fields. If **More** is **Yes**, then **Action Matched** and **Action Not Matched** will be **N/A**.
Log	Press [SPACE BAR] and then [ENTER] to select a logging option from the following: **None** – No packets will be logged. **Action Matched** - Only packets that match the rule parameters will be logged. **Action Not Matched** - Only packets that do not match the rule parameters will be logged. **Both** – All packets will be logged.
Action Matched	Press [SPACE BAR] and then [ENTER] to select the action for a matching packet. Options are **Check Next Rule**, **Forward** and **Drop**.
Action Not Matched	Press [SPACE BAR] and then [ENTER] to select the action for a packet not matching the rule. Options are **Check Next Rule**, **Forward** and **Drop**.
When you have **Menu 21.1.1.1 - TCP/IP Filter Rule** configured, press [ENTER] at the message “Press ENTER to Confirm” to save your configuration, or press [ESC] to cancel. This data will now be displayed on **Menu 21.1.1 - Filter Rules Summary**.	

The following figure illustrates the logic flow of an IP filter.

Figure 408 Executing an IP Filter

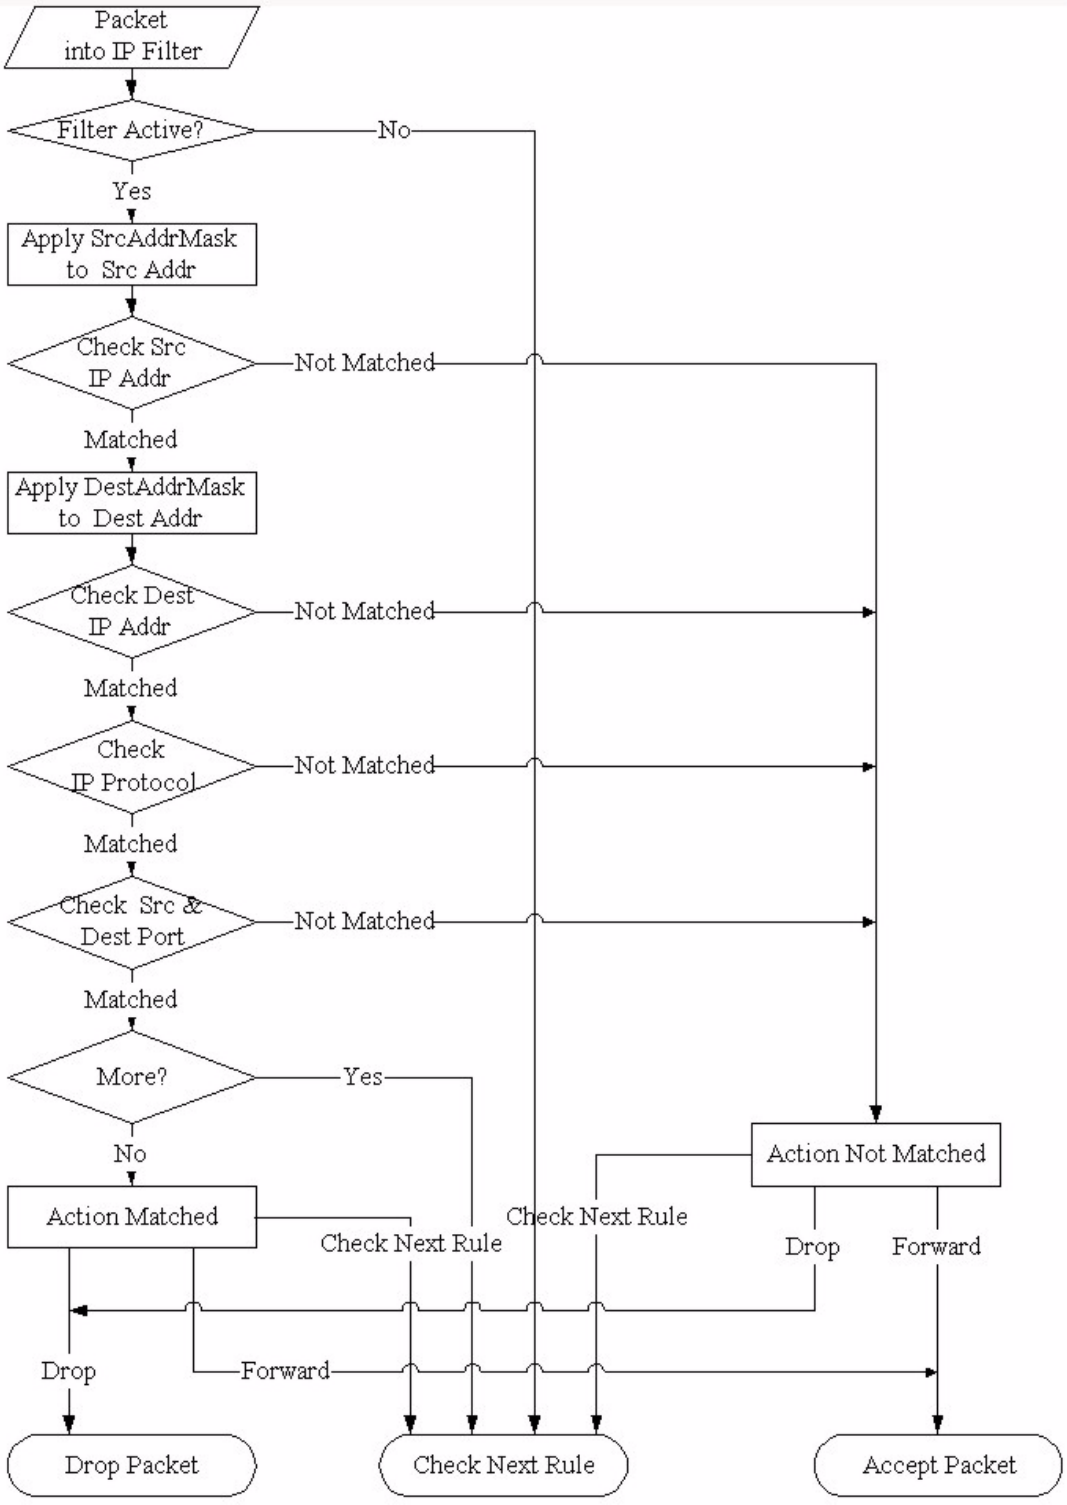

40.2.3 Configuring a Generic Filter Rule

This section shows you how to configure a generic filter rule. The purpose of generic rules is to allow you to filter non-IP packets. For IP, it is generally easier to use the IP rules directly.

For generic rules, the ZyWALL treats a packet as a byte stream as opposed to an IP or IPX packet. You specify the portion of the packet to check with the **Offset** (from 0) and the **Length** fields, both in bytes. The ZyWALL applies the Mask (bit-wise ANDing) to the data portion before comparing the result against the Value to determine a match. The **Mask** and **Value** are specified in hexadecimal numbers. Note that it takes two hexadecimal digits to represent a byte, so if the length is 4, the value in either field will take 8 digits, for example, FFFFFFFF.

To configure a generic rule, select **Generic Filter Rule** in the **Filter Type** field in menu 21.1.x.x and press [ENTER] to open Generic Filter Rule, as shown below.

Figure 409 Menu 21.1.1.1: Generic Filter Rule

```
            Menu 21.1.1.1 - Generic Filter Rule

            Filter #: 1,1
            Filter Type= Generic Filter Rule
            Active= No
            Offset= 0
            Length= 0
            Mask= N/A
            Value= N/A
            More= No            Log= None
            Action Matched= Check Next Rule
            Action Not Matched= Check Next Rule

            Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields in the **Generic Filter Rule** menu.

Table 233 Generic Filter Rule Menu Fields

FIELD	DESCRIPTION
Filter #	This is the filter set, filter rule co-ordinates, i.e., 2,3 refers to the second filter set and the third rule of that set.
Filter Type	Use [SPACE BAR] and then [ENTER] to select a rule type. Parameters displayed below each type will be different. TCP/IP filter rules are used to filter IP packets while generic filter rules allow filtering of non-IP packets. Options are **Generic Filter Rule** and **TCP/IP Filter Rule**.
Active	Select **Yes** to turn on the filter rule or **No** to turn it off.
Offset	Enter the starting byte of the data portion in the packet that you wish to compare. The range for this field is from 0 to 255.
Length	Enter the byte count of the data portion in the packet that you wish to compare. The range for this field is 0 to 8.
Mask	Enter the mask (in Hexadecimal notation) to apply to the data portion before comparison.
Value	Enter the value (in Hexadecimal notation) to compare with the data portion.
More	If **Yes**, a matching packet is passed to the next filter rule before an action is taken; else the packet is disposed of according to the action fields. If **More** is **Yes**, then Action Matched and Action Not Matched will be **No**.


Table 233 Generic Filter Rule Menu Fields

FIELD	DESCRIPTION
Log	Select the logging option from the following: **None** - No packets will be logged. **Action Matched** - Only packets that match the rule parameters will be logged. **Action Not Matched** - Only packets that do not match the rule parameters will be logged. **Both** – All packets will be logged.
Action Matched	Select the action for a packet matching the rule. Options are **Check Next Rule**, **Forward** and **Drop**.
Action Not Matched	Select the action for a packet not matching the rule. Options are **Check Next Rule**, **Forward** and **Drop**.
Once you have completed filling in **Menu 21.1.1.1 - Generic Filter Rule**, press [ENTER] at the message "Press ENTER to Confirm" to save your configuration, or press [ESC] to cancel. This data will now be displayed on **Menu 21.1.1 - Filter Rules Summary**.	

40.3 Example Filter

Let's look at an example to block outside users from accessing the ZyWALL via telnet. Please see our included disk for more example filters.

Figure 410 Telnet Filter Example

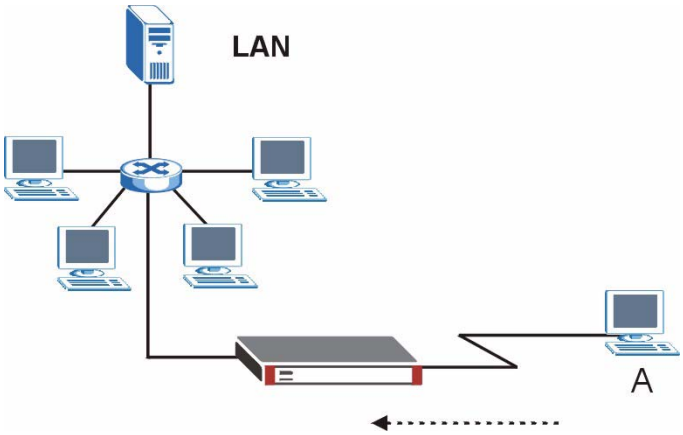

1. Enter 21 from the main menu to open **Menu 21 - Filter and Firewall Setup**.
2. Enter 1 to open Menu 21.1 - Filter Set Configuration.
3. Enter the index of the filter set you wish to configure (say 3) and press [ENTER].
4. Enter a descriptive name or comment in the **Edit Comments** field and press [ENTER].
5. Press [ENTER] at the message [Press ENTER to confirm] to open **Menu 21.1.3 - Filter Rules Summary**.
6. Enter 1 to configure the first filter rule (the only filter rule of this set). Make the entries in this menu as shown in the following figure.

Figure 411 Example Filter: Menu 21.1.3.1

```
                          Menu 21.1.3.1 - TCP/IP Filter Rule

            Filter #: 3,1
            Filter Type= TCP/IP Filter Rule
            Active= Yes
            IP Protocol= 6      IP Source Route= No
            Destination: IP Addr= 0.0.0.0
                         IP Mask= 0.0.0.0
                         Port #= 23
                         Port # Comp= Equal
                 Source: IP Addr= 0.0.0.0
                         IP Mask= 0.0.0.0
                         Port #= 0
                         Port # Comp= None
            TCP Estab= No
            More= No             Log= None
            Action Matched= Drop
            Action Not Matched= Forward

                     Press ENTER to Confirm or ESC to Cancel:
            Press Space Bar to Toggle.
```

The port number for the telnet service (TCP protocol) is **23**. See *RFC 1060* for port numbers of well-known services.

When you press [ENTER] to confirm, you will see the following screen. Note that there is only one filter rule in this set.

Figure 412 Example Filter Rules Summary: Menu 21.1.3

```
              Menu 21.1.3 - Filter Rules Summary

    # A Type                        Filter Rules              M m n
    - - ---- ---------------------------------------------- - - -
    1 Y IP   Pr=6, SA=0.0.0.0, DA=0.0.0.0, DP=23             N D F
    2 N
    3 N
    4 N
    5 N
    6 N


    Enter Filter Rule Number (1-6) to Configure: 1
```

This shows you that you have configured and activated (**A = Y**) a TCP/IP filter rule (**Type = IP**, **Pr = 6**) for destination telnet ports (**DP = 23**).

M = N means an action can be taken immediately. The action is to drop the packet (**m = D**) if the action is matched and to forward the packet immediately (**n = F**) if the action is not matched no matter whether there are more rules to be checked (there aren't in this example).


After you've created the filter set, you must apply it.

1. Enter 11 from the main menu to go to menu 11.
2. Enter 1 or 2 to open **Menu 11.x - Remote Node Profile**.
3. Go to the **Edit Filter Sets** field, press [SPACE BAR] to select **Yes** and press [ENTER].
4. This brings you to menu 11.1.4. Apply a filter set (our example filter set 3) as shown in Figure 416 on page 631.
5. Press [ENTER] to confirm after you enter the set numbers and to leave menu 11.1.4.

40.4 Filter Types and NAT

There are two classes of filter rules, **Generic Filter** (Device) rules and protocol filter (**TCP/IP**) rules. Generic filter rules act on the raw data from/to LAN and WAN. Protocol filter rules act on the IP packets. Generic and TCP/IP filter rules are discussed in more detail in the next section. When NAT (Network Address Translation) is enabled, the inside IP address and port number are replaced on a connection-by-connection basis, which makes it impossible to know the exact address and port on the wire. Therefore, the ZyWALL applies the protocol filters to the "native" IP address and port number before NAT for outgoing packets and after NAT for incoming packets. On the other hand, the generic, or device filters are applied to the raw packets that appear on the wire. They are applied at the point when the ZyWALL is receiving and sending the packets; i.e. the interface. The interface can be an Ethernet port or any other hardware port. The following diagram illustrates this.

Figure 413 Protocol and Device Filter Sets

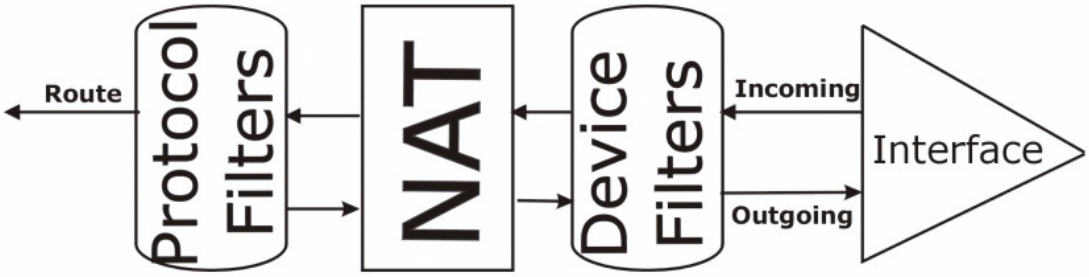

40.5 Firewall Versus Filters

Below are some comparisons between the ZyWALL's filtering and firewall functions.

40.5.1 Packet Filtering:

- The router filters packets as they pass through the router's interface according to the filter rules you designed.
- Packet filtering is a powerful tool, yet can be complex to configure and maintain, especially if you need a chain of rules to filter a service.
- Packet filtering only checks the header portion of an IP packet.

40.5.1.1 When To Use Filtering

1. To block/allow LAN packets by their MAC addresses.
2. To block/allow special IP packets which are neither TCP nor UDP, nor ICMP packets.
3. To block/allow both inbound (WAN to LAN) and outbound (LAN to WAN) traffic between the specific inside host/network "A" and outside host/network "B". If the filter blocks the traffic from A to B, it also blocks the traffic from B to A. Filters cannot distinguish traffic originating from an inside host or an outside host by IP address.
4. To block/allow IP trace route.

40.5.2 Firewall

- The firewall inspects packet contents as well as their source and destination addresses. Firewalls of this type employ an inspection module, applicable to all protocols, that understands data in the packet is intended for other layers, from the network layer (IP headers) up to the application layer.
- The firewall performs stateful inspection. It takes into account the state of connections it handles so that, for example, a legitimate incoming packet can be matched with the outbound request for that packet and allowed in. Conversely, an incoming packet masquerading as a response to a nonexistent outbound request can be blocked.
- The firewall uses session filtering, i.e., smart rules, that enhance the filtering process and control the network session rather than control individual packets in a session.
- The firewall provides e-mail service to notify you of routine reports and when alerts occur.

40.5.2.1 When To Use The Firewall

1. To prevent DoS attacks and prevent hackers cracking your network.
2. A range of source and destination IP addresses as well as port numbers can be specified within one firewall rule making the firewall a better choice when complex rules are required.
3. To selectively block/allow inbound or outbound traffic between inside host/networks and outside host/networks. Remember that filters cannot distinguish traffic originating from an inside host or an outside host by IP address.
4. The firewall performs better than filtering if you need to check many rules.
5. Use the firewall if you need routine e-mail reports about your system or need to be alerted when attacks occur.
6. The firewall can block specific URL traffic that might occur in the future. The URL can be saved in an Access Control List (ACL) database.

40.6 Applying a Filter

This section shows you where to apply the filter(s) after you design it (them). The ZyWALL already has filters to prevent NetBIOS traffic from triggering calls, and block incoming telnet, FTP and HTTP connections.



If you do not activate the firewall, it is advisable to apply filters.

40.6.1 Applying LAN Filters

LAN traffic filter sets may be useful to block certain packets, reduce traffic and prevent security breaches. Go to menu 3.1 (shown next) and enter the number(s) of the filter set(s) that you want to apply as appropriate. You can choose up to four filter sets (from twelve) by entering their numbers separated by commas, e.g., 3, 4, 6, 11. Input filter sets filter incoming traffic to the ZyWALL and output filter sets filter outgoing traffic from the ZyWALL. For PPPoE or PPTP encapsulation, you have the additional option of specifying remote node call filter sets.

Figure 414 Filtering LAN Traffic

```
                Menu 3.1 - LAN Port Filter Setup

          Input Filter Sets:
            protocol filters=
              device filters=
          Output Filter Sets:
            protocol filters=
              device filters=

          Press ENTER to Confirm or ESC to Cancel:
```

40.6.2 Applying DMZ Filters

DMZ traffic filter sets may be useful to block certain packets, reduce traffic and prevent security breaches. Go to menu 5.1 (shown next) and enter the number(s) of the filter set(s) that you want to apply as appropriate. You can choose up to four filter sets (from twelve) by entering their numbers separated by commas, e.g., 3, 4, 6, 11. Input filter sets filter incoming traffic to the ZyWALL and output filter sets filter outgoing traffic from the ZyWALL. The ZyWALL already has filters to prevent NetBIOS traffic from triggering calls, and block incoming telnet, FTP and HTTP connections.

Figure 415 Filtering DMZ Traffic

```
                Menu 5.1 - DMZ Port Filter Setup

          Input Filter Sets:
            protocol filters=
              device filters=
          Output Filter Sets:
            protocol filters=
              device filters=

          Press ENTER to Confirm or ESC to Cancel:
```

40.6.3 Applying Remote Node Filters

Go to menu 11.1.4 (shown below – note that call filter sets are only present for PPPoE encapsulation) and enter the number(s) of the filter set(s) as appropriate. You can cascade up to four filter sets by entering their numbers separated by commas. The ZyWALL already has filters to prevent NetBIOS traffic from triggering calls, and block incoming telnet, FTP and HTTP connections.

Figure 416 Filtering Remote Node Traffic

```
                Menu 11.1.4 - Remote Node Filter Setup

            Input Filter Sets:
              protocol filters=
                device filters=
            Output Filter Sets:
              protocol filters=
                device filters=

            Press ENTER to Confirm or ESC to Cancel:
```

41

SNMP Configuration

This chapter explains SNMP configuration menu 22.

41.1 SNMP Configuration

To configure SNMP, enter 22 from the main menu to display **Menu 22 - SNMP Configuration** as shown next. The "community" for **Get**, **Set** and **Trap** fields is SNMP terminology for password.

Figure 417 Menu 22: SNMP Configuration

```
            Menu 22 - SNMP Configuration

                    SNMP:
                      Get Community= public
                      Set Community= public
                      Trusted Host= 0.0.0.0
                      Trap:
                        Community= public
                        Destination= 0.0.0.0


            Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the SNMP configuration parameters.

Table 234 SNMP Configuration Menu Fields

FIELD	DESCRIPTION
Get Community	Type the Get community, which is the password for the incoming Get- and GetNext requests from the management station.
Set Community	Type the Set community, which is the password for incoming Set requests from the management station.
Trusted Host	If you enter a trusted host, your ZyWALL will only respond to SNMP messages from this address. A blank (default) field means your ZyWALL will respond to all SNMP messages it receives, regardless of source.
Trap	
Community	Type the Trap community, which is the password sent with each trap to the SNMP manager.

Table 234 SNMP Configuration Menu Fields (continued)

FIELD	DESCRIPTION
Destination	Type the IP address of the station to send your SNMP traps to.
When you have completed this menu, press [ENTER] at the prompt “Press [ENTER] to confirm or [ESC] to cancel” to save your configuration or press [ESC] to cancel and go back to the previous screen.	

41.2 SNMP Traps

The ZyWALL will send traps to the SNMP manager when any one of the following events occurs:

Table 235 SNMP Traps

TRAP #	TRAP NAME	DESCRIPTION
0	coldStart (defined in *RFC-1215*)	A trap is sent after booting (power on).
1	warmStart (defined in *RFC-1215*)	A trap is sent after booting (software reboot).
4	authenticationFailure (defined in *RFC-1215*)	A trap is sent to the manager when receiving any SNMP get or set requirements with the wrong community (password).
6	whyReboot (defined in ZYXEL-MIB)	A trap is sent with the reason of restart before rebooting when the system is going to restart (warm start).
6a	For intentional reboot:	A trap is sent with the message "System reboot by user!" if reboot is done intentionally, (for example, download new files, CI command "sys reboot", etc.).
6b	For fatal error:	A trap is sent with the message of the fatal code if the system reboots because of fatal errors.

42

System Information & Diagnosis

This chapter covers SMT menus 24.1 to 24.4.

42.1 Introduction to System Status

This chapter covers the diagnostic tools that help you to maintain your ZyWALL. These tools include updates on system status, port status and log and trace capabilities.

Select menu 24 in the main menu to open **Menu 24 - System Maintenance**, as shown below.

Figure 418 Menu 24: System Maintenance

```
            Menu 24 - System Maintenance

               1.  System Status
               2.  System Information and Console Port Speed
               3.  Log and Trace
               4.  Diagnostic
               5.  Backup Configuration
               6.  Restore Configuration
               7.  Upload Firmware
               8.  Command Interpreter Mode
               9.  Call Control
               10. Time and Date Setting
               11. Remote Management Setup


            Enter Menu Selection Number:
```

42.2 System Status

The first selection, System Status, gives you information on the version of your system firmware and the status and statistics of the ports, as shown in the next figure. System Status is a tool that can be used to monitor your ZyWALL. Specifically, it gives you information on your system firmware version, number of packets sent and number of packets received.

To get to the System Status:

1. Enter number 24 to go to **Menu 24 - System Maintenance**.
2. In this menu, enter 1 to open **Menu 24.1 - System Maintenance - Status**.

3 There are three commands in **Menu 24.1 - System Maintenance - Status**. Entering 1 or 2 drops the WAN1 or WAN2 connection, 9 resets the counters and [ESC] takes you back to the previous screen.

Figure 419 Menu 24.1: System Maintenance: Status

```
                  Menu 24.1 - System Maintenance - Status          08:44:20
                                                              Tue. Sep. 11, 2007
Port   Status       TxPkts      RxPkts    Cols    Tx B/s    Rx B/s     Up Time
WAN1   Down              0           0       0         0         0     0:00:00
WAN2   Down              0           0       0         0         0     0:00:00
 LAN   100M/Full        365           0       0         0         0     3:02:02
WCRD   Down              1           0       0         0         0     0:00:00
 DMZ   100M/Full        365           0       0         0         0     3:02:02
WLAN   100M/Full         18           0       0         0         0     3:02:02

Port   Ethernet Address        IP Address           IP Mask       DHCP
WAN1  00:00:AA:77:90:7A           0.0.0.0           0.0.0.0     Client
WAN2  00:00:00:00:00:00           0.0.0.0           0.0.0.0       None
 LAN  00:00:AA:77:90:79       192.168.1.1     255.255.255.0     Server
WLAN  00:00:AA:77:90:7C           0.0.0.0           0.0.0.0       None
 DMZ  00:00:AA:77:90:7B     192.168.100.2     255.255.255.0     Server

     System up Time:     3:02:07
     CARD bridged to: LAN
                                Press Command:

             COMMANDS: 1, 2-Drop WAN1,2 9-Reset Counters   ESC-Exit
```

The following table describes the fields present in **Menu 24.1 - System Maintenance - Status**. These fields are READ-ONLY and meant for diagnostic purposes. The upper right corner of the screen shows the time and date according to the format you set in menu 24.10.

Table 236 System Maintenance: Status Menu Fields

FIELD	DESCRIPTION
Port	This field identifies an interface (WAN1, WAN2, LAN, WCRD (wireless LAN card), DMZ or WLAN) on the ZyWALL.
Status	For the LAN, DMZ, and WLAN Interfaces, this displays the port speed and duplex setting. For the WAN interfaces, it displays the port speed and duplex setting if you're using Ethernet encapsulation or the remote node name (configured through the SMT) for a PPP connection and **Down** (line is down or not connected), **Idle** (line (ppp) idle), **Dial** (starting to trigger a call) or **Drop** (dropping a call) if you're using PPPoE encapsulation. For the wireless card, it displays the transmission rate when WLAN is enabled or **Down** when WLAN is disabled.
TxPkts	This is the number of transmitted packets on this port.
RxPkts	This is the number of received packets on this port.
Cols	This is the number of collisions on this port.
Tx B/s	This field shows the transmission speed in Bytes per second on this port.
Rx B/s	This field shows the reception speed in Bytes per second on this port.
Up Time	This is the total amount of time the line has been up.

Table 236 System Maintenance: Status Menu Fields (continued)

FIELD	DESCRIPTION
Ethernet Address	This is the MAC address of the port listed on the left.
IP Address	This is the IP address of the port listed on the left.
IP Mask	This is the IP mask of the port listed on the left.
DHCP	This is the DHCP setting of the port listed on the left.
System up Time	This is the total time the ZyWALL has been on.
CARD bridged to	This field shows whether the wireless card is set to be part of the LAN, DMZ or WLAN.
You may enter 1 to drop the WAN connection, 9 to reset the counters or [ESC] to return to menu 24.	

42.3 System Information and Console Port Speed

This section describes your system and allows you to choose different console port speeds. To get to the System Information and Console Port Speed:

1. Enter 24 to go to **Menu 24 - System Maintenance**.
2. Enter 2 to open **Menu 24.2 - System Information and Console Port Speed**.
3. From this menu you have two choices as shown in the next figure:

Figure 420 Menu 24.2: System Information and Console Port Speed

```
            Menu 24.2 - System Information and Console Port Speed

                   1. System Information
                   2. Console Port Speed

            Please enter selection:
```

42.3.1 System Information

System Information gives you information about your system as shown below. More specifically, it gives you information on your routing protocol, Ethernet address, IP address, etc.

Figure 421 Menu 24.2.1: System Maintenance: Information

```
                Menu 24.2.1 - System Maintenance - Information

                   Name:
                   Routing: IP
                   ZyNOS F/W Version: V4.03(AQI.0)b1 | 09/07/2007
                   Country Code: 255

                   LAN
                     Ethernet Address: 00:00:AA:77:90:79
                     IP Address: 192.168.1.1
                     IP Mask: 255.255.255.0
                     DHCP: Server


                         Press ESC or RETURN to Exit:
```

The following table describes the fields in this screen.

Table 237 Fields in System Maintenance: Information

FIELD	DESCRIPTION
Name	This is the ZyWALL's system name + domain name assigned in menu 1. For example, System Name= xxx; Domain Name= baboo.mickey.com Name= xxx.baboo.mickey.com
Routing	Refers to the routing protocol used.
ZyNOS F/W Version	Refers to the version of ZyXEL's Network Operating System software.
Country Code	Refers to the country code of the firmware.
LAN	
Ethernet Address	Refers to the Ethernet MAC (Media Access Control) address of your ZyWALL.
IP Address	This is the IP address of the ZyWALL in dotted decimal notation.
IP Mask	This shows the IP mask of the ZyWALL.
DHCP	This field shows the DHCP setting of the ZyWALL.
When finished viewing, press [ESC] or [ENTER] to exit.	

42.3.2 Console Port Speed

You can change the speed of the console port through **Menu 24.2.2 – Console Port Speed**. Your ZyWALL supports 9600 (default), 19200, 38400, 57600, and 115200 bps for the console port. Press [SPACE BAR] and then [ENTER] to select the desired speed in menu 24.2.2, as shown next.

Figure 422 Menu 24.2.2: System Maintenance: Change Console Port Speed

```
Menu 24.2.2 - System Maintenance - Change Console Port Speed

                  Console Port Speed: 9600


                Press ENTER to Confirm or ESC to Cancel:Press
Space Bar to Toggle.
```

42.4 Log and Trace

There are two logging facilities in the ZyWALL. The first is the error logs and trace records that are stored locally. The second is the UNIX syslog facility for message logging.

42.4.1 Viewing Error Log

The first place you should look for clues when something goes wrong is the error/trace log. Follow the procedure below to view the local error/trace log:

1. Select option 24 from the main menu to open **Menu 24 - System Maintenance**.
2. From menu 24, select option 3 to open **Menu 24.3 - System Maintenance - Log and Trace**.
3. Select the first option from **Menu 24.3 - System Maintenance - Log and Trace** to display the error log in the system.

After the ZyWALL finishes displaying, you will have the option to clear the error log.

Figure 423 Menu 24.3: System Maintenance: Log and Trace

```
Menu 24.3 - System Maintenance - Log and Trace

1. View Error Log
2. UNIX Syslog

4. Call-Triggering Packet


       Please enter selection
```

Examples of typical error and information messages are presented in the following figure.

Figure 424 Examples of Error and Information Messages

```
52 Thu Jul  1 05:54:53 2004 PP05  ERROR Wireless LAN init fail, code=15
53 Thu Jul  1 05:54:53 2004 PINI  INFO  Channel 0 ok
54 Thu Jul  1 05:54:56 2004 PP05 -WARN  SNMP TRAP 3: interface 3: link up
55 Thu Jul  1 05:54:56 2004 PP0d  INFO  LAN promiscuous mode <0>
57 Thu Jul  1 05:54:56 2004 PP0d  INFO  LAN promiscuous mode <1>
58 Thu Jul  1 05:54:56 2004 PINI  INFO  Last errorlog repeat 1 Times
59 Thu Jul  1 05:54:56 2004 PINI  INFO  main: init completed
60 Thu Jul  1 05:55:26 2004 PSSV -WARN  SNMP TRAP 0: cold start
61 Thu Jul  1 05:56:56 2004 PINI  INFO  SMT Session Begin
62 Thu Jul  1 07:50:58 2004 PINI  INFO  SMT Session End
63 Thu Jul  1 07:53:28 2004 PINI  INFO  SMT Session Begin
Clear Error Log (y/n):
```

42.4.2 Syslog Logging

The ZyWALL uses the syslog facility to log the CDR (Call Detail Record) and system messages to a syslog server. Syslog and accounting can be configured in **Menu 24.3.2 - System Maintenance - Syslog Logging**, as shown next.

Figure 425 Menu 24.3.2: System Maintenance: Syslog Logging

```
            Menu 24.3.2 - System Maintenance - Syslog Logging

                  Syslog:
                  Active= No
                  Syslog Server IP Address= 0.0.0.0
                  Log Facility= Local 1


                Press ENTER to Confirm or ESC to Cancel:
```

You need to configure the syslog parameters described in the following table to activate syslog then choose what you want to log.

Table 238 System Maintenance Menu Syslog Parameters

FIELD	DESCRIPTION
Syslog:	
Active	Press [SPACE BAR] and then [ENTER] to turn syslog on or off.
Syslog Server IP Address	Enter the server name or IP address of the syslog server that will log the selected categories of logs.
Log Facility	Press [SPACE BAR] and then [ENTER] to select a location. The log facility allows you to log the messages to different files in the syslog server. Refer to the documentation of your syslog program for more details.
When finished configuring this screen, press [ENTER] to confirm or [ESC] to cancel.	

Your ZyWALL sends five types of syslog messages. Some examples (not all ZyWALL specific) of these syslog messages with their message formats are shown next:

1 CDR

CDR Message Format
SdcmdSyslogSend(SYSLOG_CDR, SYSLOG_INFO, String); String = board xx line xx channel xx, call xx, str board = the hardware board ID line = the WAN ID in a board Channel = channel ID within the WAN call = the call reference number which starts from 1 and increments by 1 for each new call str = C01 Outgoing Call dev xx ch xx (dev:device No. ch:channel No.) L02 Tunnel Connected(L2TP) C02 OutCall Connected xxxx (means connected speed) xxxxx (means Remote Call Number) L02 Call Terminated C02 Call Terminated Jul 19 11:19:27 192.168.102.2 ZyXEL: board 0 line 0 channel 0, call 1, C01 Outgoing Call dev=2 ch=0 40002 Jul 19 11:19:32 192.168.102.2 ZyXEL: board 0 line 0 channel 0, call 1, C02 OutCall Connected 64000 40002 Jul 19 11:20:06 192.168.102.2 ZyXEL: board 0 line 0 channel 0, call 1, C02 Call Terminated

2 Packet triggered

Packet triggered Message Format
SdcmdSyslogSend(SYSLOG_PKTTRI, SYSLOG_NOTICE, String); String = Packet trigger: Protocol=xx Data=xxxxxxxxxx…..x Protocol: (1:IP 2:IPX 3:IPXHC 4:BPDU 5:ATALK 6:IPNG) Data: We will send forty-eight Hex characters to the server Jul 19 11:28:39 192.168.102.2 ZyXEL: Packet Trigger: Protocol=1, Data=4500003c100100001f010004c0a86614ca849a7b08004a5c020001006162636465666768696a6b6c6d6e6f7071727374 Jul 19 11:28:56 192.168.102.2 ZyXEL: Packet Trigger: Protocol=1, Data=4500002c1b0140001f06b50ec0a86614ca849a7b0427001700195b3e00000000600220008cd40000020405b4 Jul 19 11:29:06 192.168.102.2 ZyXEL: Packet Trigger: Protocol=1, Data=45000028240140001f06ac12c0a86614ca849a7b0427001700195b451d143013500400007 7600000

3 Filter log

Filter log Message Format
SdcmdSyslogSend(SYSLOG_FILLOG, SYSLOG_NOTICE, String); String = IP[Src=xx.xx.xx.xx Dst=xx.xx.xx.xx prot spo=xxxx dpo=xxxx] S04>R01mD IP[…] is the packet header and S04>R01mD means filter set 4 (S) and rule 1 (R), match (m) drop (D). Src: Source Address Dst: Destination Address prot: Protocol ("TCP","UDP","ICMP") spo: Source port dpo: Destination portMar 03 10:39:43 202.132.155.97 ZyXEL: GEN[ffffffffffnordff0080] }S05>R01mF Mar 03 10:41:29 202.132.155.97 ZyXEL: GEN[00a0c5f502fnord010080] }S05>R01mF Mar 03 10:41:34 202.132.155.97 ZyXEL: IP[Src=192.168.2.33 Dst=202.132.155.93 ICMP]}S04>R01mF Mar 03 11:59:20 202.132.155.97 ZyXEL: GEN[00a0c5f502fnord010080] }S05>R01mF Mar 03 12:00:52 202.132.155.97 ZyXEL: GEN[ffffffffffff0080] }S05>R01mF Mar 03 12:00:57 202.132.155.97 ZyXEL: GEN[00a0c5f502010080] }S05>R01mF Mar 03 12:01:06 202.132.155.97 ZyXEL: IP[Src=192.168.2.33 Dst=202.132.155.93 TCP spo=01170 dpo=00021]}S04>R01mF

4 PPP log

PPP Log Message Format
SdcmdSyslogSend(SYSLOG_PPPLOG, SYSLOG_NOTICE, String); String = ppp:Proto Starting / ppp:Proto Opening / ppp:Proto Closing / ppp:Proto Shutdown Proto = LCP / ATCP / BACP / BCP / CBCP / CCP / CHAP/ PAP / IPCP / IPXCP Jul 19 11:42:44 192.168.102.2 ZyXEL: ppp:LCP Closing Jul 19 11:42:49 192.168.102.2 ZyXEL: ppp:IPCP Closing Jul 19 11:42:54 192.168.102.2 ZyXEL: ppp:CCP Closing

5 Firewall log

Firewall Log Message Format
SdcmdSyslogSend(SYSLOG_FIREWALL, SYSLOG_NOTICE, buf); buf = IP[Src=xx.xx.xx.xx : spo=xxxx Dst=xx.xx.xx.xx : dpo=xxxx | prot | rule | action] Src: Source Address spo: Source port (empty means no source port information) Dst: Destination Address dpo: Destination port (empty means no destination port information) prot: Protocol ("TCP","UDP","ICMP", "IGMP", "GRE", "ESP") rule: <a,b> where a means "set" number; b means "rule" number. Action: nothing(N) block (B) forward (F) 08-01-200011:48:41Local1.Notice192.168.10.10RAS: FW 172.16.1.80 :137 ->172.16.1.80 :137 |UDP|default permit:<2,0>|B 08-01-200011:48:41Local1.Notice192.168.10.10RAS: FW 192.168.77.88 :520 ->192.168.77.88 :520 |UDP|default permit:<2,0>|B 08-01-200011:48:39Local1.Notice192.168.10.10RAS: FW 172.16.1.50 ->172.16.1.50 |IGMP<2>|default permit:<2,0>|B 08-01-200011:48:39Local1.Notice192.168.10.10RAS: FW 172.16.1.25 ->172.16.1.25 |IGMP<2>|default permit:<2,0>|B

42.4.3 Call-Triggering Packet

Call-Triggering Packet displays information about the packet that triggered a dial-out call in an easy readable format. Equivalent information is available in menu 24.1 in hex format. An example is shown next.

Figure 426 Call-Triggering Packet Example

```
IP Frame: ENET0-RECV Size:  44/  44   Time: 17:02:44.262
 Frame Type:

   IP Header:
     IP Version              = 4
     Header Length           = 20
     Type of Service         = 0x00 (0)
     Total Length            = 0x002C (44)
     Identification          = 0x0002 (2)
     Flags                   = 0x00
     Fragment Offset         = 0x00
     Time to Live            = 0xFE (254)
     Protocol                = 0x06 (TCP)
     Header Checksum         = 0xFB20 (64288)
     Source IP               = 0xC0A80101 (192.168.1.1)
     Destination IP          = 0x00000000 (0.0.0.0)

   TCP Header:
     Source Port             = 0x0401 (1025)
     Destination Port        = 0x000D (13)
     Sequence Number         = 0x05B8D000 (95997952)
     Ack Number              = 0x00000000 (0)
     Header Length           = 24
     Flags                   = 0x02 (....S.)
     Window Size             = 0x2000 (8192)
     Checksum                = 0xE06A (57450)
     Urgent Ptr              = 0x0000 (0)
     Options                 =
         0000: 02 04 02 00

   RAW DATA:
     0000: 45 00 00 2C 00 02 00 00-FE 06 FB 20 C0 A8 01 01  E......... ....
     0010: 00 00 00 00 04 01 00 0D-05 B8 D0 00 00 00 00 00
.................
     0020: 60 02 20 00 E0 6A 00 00-02 04 02 00
Press any key to continue...
```

42.5 Diagnostic

The diagnostic facility allows you to test the different aspects of your ZyWALL to determine if it is working properly. Menu 24.4 allows you to choose among various types of diagnostic tests to evaluate your system, as shown next. Not all fields are available on all models.

Follow the procedure below to get to **Menu 24.4 - System Maintenance - Diagnostic**.

1. From the main menu, select option 24 to open **Menu 24 - System Maintenance**.
2. From this menu, select option 4. Diagnostic. This will open **Menu 24.4 - System Maintenance - Diagnostic**.

Figure 427 Menu 24.4: System Maintenance: Diagnostic

```
            Menu 24.4 - System Maintenance - Diagnostic


           TCP/IP
             1. Ping Host
             2. WAN DHCP Release
             3. WAN DHCP Renewal
             4. PPPoE/PPTP/3G Setup Test

           System
             11. Reboot System



              Enter Menu Selection Number:

              WAN=
              Host IP Address= N/A
```

42.5.1 WAN DHCP

DHCP functionality can be enabled on the LAN or WAN as shown in Figure 428 on page 645. LAN DHCP has already been discussed. The ZyWALL can act either as a WAN DHCP client (**IP Address Assignment** field in menu 4 or menu 11.x.2 is **Dynamic** and the **Encapsulation** field in menu 4 or menu 11 is **Ethernet**) or **None**, (when you have a static IP). The **WAN Release** and **Renewal** fields in menu 24.4 conveniently allow you to release and/or renew the assigned WAN IP address, subnet mask and default gateway in a fashion similar to winipcfg.

Figure 428 WAN & LAN DHCP

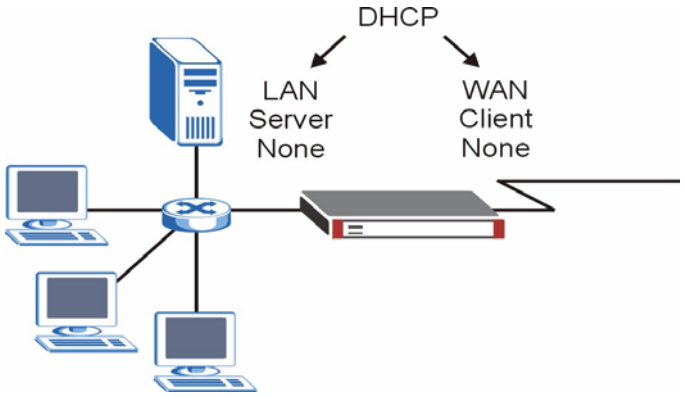

The following table describes the diagnostic tests available in menu 24.4 for your ZyWALL and associated connections.

Table 239 System Maintenance Menu Diagnostic

FIELD	DESCRIPTION
Ping Host	Enter 1 to ping any machine (with an IP address) on your LAN, DMZ, WLAN or WAN. Enter its IP address in the **Host IP Address** field below.
WAN DHCP Release	Enter 2 to release your WAN DHCP settings.
WAN DHCP Renewal	Enter 3 to renew your WAN DHCP settings.
PPPoE/PPTP/3G Setup Test	Enter 4 to test the Internet setup. You can also test the Internet setup in **Menu 4 - Internet Access**. Please refer to Chapter 32 on page 565 for more details. This feature is only available for a 3G connection or dial-up connections using PPPoE or PPTP encapsulation.
Reboot System	Enter 11 to reboot the ZyWALL.
WAN	If you entered 2, 3 or 4 in the **Enter Menu Selection Number** field, enter the number of the WAN interface in this field.
Host IP Address	If you entered 1in the **Enter Menu Selection Number** field, then enter the IP address of the computer you want to ping in this field.
Enter the number of the selection you would like to perform or press [ESC] to cancel.	

43

Firmware and Configuration File Maintenance

This chapter tells you how to back up and restore your configuration file as well as upload new firmware and a new configuration file.

43.1 Introduction

Use the instructions in this chapter to change the ZyWALL's configuration file or upgrade its firmware. After you configure your ZyWALL, you can backup the configuration file to a computer. That way if you later misconfigure the ZyWALL, you can upload the backed up configuration file to return to your previous settings. You can alternately upload the factory default configuration file if you want to return the ZyWALL to the original default settings. The firmware determines the ZyWALL's available features and functionality. You can download new firmware releases from your nearest ZyXEL FTP site to use to upgrade your ZyWALL's performance.

43.2 Filename Conventions

The configuration file (often called the romfile or rom-0) contains the factory default settings in the menus such as password, DHCP Setup, TCP/IP Setup, etc. It arrives from ZyXEL with a "rom" filename extension. Once you have customized the ZyWALL's settings, they can be saved back to your computer under a filename of your choosing.

ZyNOS (ZyXEL Network Operating System sometimes referred to as the "ras" file) is the system firmware and has a "bin" filename extension. With many FTP and TFTP clients, the filenames are similar to those seen next.

```
ftp> put firmware.bin ras
```

This is a sample FTP session showing the transfer of the computer file " firmware.bin" to the ZyWALL.

```
ftp> get rom-0 config.cfg
```

This is a sample FTP session saving the current configuration to the computer file "config.cfg".

If your (T)FTP client does not allow you to have a destination filename different than the source, you will need to rename them as the ZyWALL only recognizes "rom-0" and "ras". Be sure you keep unaltered copies of both files for later use.

The following table is a summary. Please note that the internal filename refers to the filename on the ZyWALL and the external filename refers to the filename not on the ZyWALL, that is, on your computer, local network or FTP site and so the name (but not the extension) may vary. After uploading new firmware, see the **ZyNOS F/W Version** field in **Menu 24.2.1 - System Maintenance - Information** to confirm that you have uploaded the correct firmware version. The AT command is the command you enter after you press "y" when prompted in the SMT menu to go into debug mode.

Table 240 Filename Conventions

FILE TYPE	INTERNAL NAME	EXTERNAL NAME	DESCRIPTION
Configuration File	Rom-0	This is the configuration filename on the ZyWALL. Uploading the rom-0 file replaces the entire ROM file system, including your ZyWALL configurations, system-related data (including the default password), the error log and the trace log.	*.rom
Firmware	Ras	This is the generic name for the ZyNOS firmware on the ZyWALL.	*.bin

43.3 Backup Configuration



The ZyWALL displays different messages explaining different ways to backup, restore and upload files in menus 24.5, 24.6, 24. 7.1 and 24.7.2 depending on whether you use the console port or Telnet.

Option 5 from **Menu 24 - System Maintenance** allows you to backup the current ZyWALL configuration to your computer. Backup is highly recommended once your ZyWALL is functioning properly. FTP is the preferred method for backing up your current configuration to your computer since it is faster. You can also perform backup and restore using menu 24 through the console port. Any serial communications program should work fine; however, you must use Xmodem protocol to perform the download/upload and you don't have to rename the files.

Please note that terms "download" and "upload" are relative to the computer. Download means to transfer from the ZyWALL to the computer, while upload means from your computer to the ZyWALL.

43.3.1 Backup Configuration

Follow the instructions as shown in the next screen.

Figure 429 Telnet into Menu 24.5

```
                    Menu 24.5 - Backup Configuration

To transfer the configuration file to your workstation, follow the
procedure below:

   1. Launch the FTP client on your workstation.
   2. Type "open" and the IP address of your router. Then type
      "root" and SMT password as requested.
   3. Locate the 'rom-0' file.
   4. Type 'get rom-0' to back up the current router
      configuration to your workstation.

For details on FTP commands, please consult the documentation of your FTP
client program.  For details on backup using TFTP (note that you must
remain in this menu to back up using TFTP), please see your router manual.


Press ENTER to Exit:
```

43.3.2 Using the FTP Command from the Command Line

1. Launch the FTP client on your computer.
2. Enter “open”, followed by a space and the IP address of your ZyWALL.
3. Press [ENTER] when prompted for a username.
4. Enter your password as requested (the default is “1234”).
5. Enter “bin” to set transfer mode to binary.
6. Use “get” to transfer files from the ZyWALL to the computer, for example, “get rom-0 config.rom” transfers the configuration file on the ZyWALL to your computer and renames it “config.rom”. See earlier in this chapter for more information on filename conventions.
7. Enter “quit” to exit the ftp prompt.

43.3.3 Example of FTP Commands from the Command Line

Figure 430 FTP Session Example

```
331 Enter PASS command
Password:
230 Logged in
ftp> bin
200 Type I OK
ftp> get rom-0 zyxel.rom
200 Port command okay
150 Opening data connection for STOR ras
226 File received OK
ftp: 16384 bytes sent in 1.10Seconds
297.89Kbytes/sec.
ftp> quit
```

43.3.4 GUI-based FTP Clients

The following table describes some of the commands that you may see in GUI-based FTP clients.

Table 241 General Commands for GUI-based FTP Clients

COMMAND	DESCRIPTION
Host Address	Enter the address of the host server.
Login Type	Anonymous. This is when a user I.D. and password is automatically supplied to the server for anonymous access. Anonymous logins will work only if your ISP or service administrator has enabled this option. Normal. The server requires a unique User ID and Password to login.
Transfer Type	Transfer files in either ASCII (plain text format) or in binary mode. Configuration and firmware files should be transferred in binary mode
Initial Remote Directory	Specify the default remote directory (path).
Initial Local Directory	Specify the default local directory (path).

43.3.5 File Maintenance Over WAN

TFTP, FTP and Telnet over the WAN will not work when:

1. The firewall is active (turn the firewall off in menu 21.2 or create a firewall rule to allow access from the WAN).
2. You have disabled Telnet service in menu 24.11.
3. You have applied a filter in menu 3.1 (LAN) or in menu 11.5 (WAN) to block Telnet service.
4. The IP you entered in the **Secure Client IP** field in menu 24.11 does not match the client IP. If it does not match, the ZyWALL will disconnect the Telnet session immediately.
5. You have an SMT console session running.

43.3.6 Backup Configuration Using TFTP

The ZyWALL supports the up/downloading of the firmware and the configuration file using TFTP (Trivial File Transfer Protocol) over LAN. Although TFTP should work over WAN as well, it is not recommended.

To use TFTP, your computer must have both telnet and TFTP clients. To backup the configuration file, follow the procedure shown next.

1. Use telnet from your computer to connect to the ZyWALL and log in. Because TFTP does not have any security checks, the ZyWALL records the IP address of the telnet client and accepts TFTP requests only from this address.
2. Put the SMT in command interpreter (CI) mode by entering 8 in **Menu 24 – System Maintenance**.
3. Enter command “sys stdio 0” to disable the SMT timeout, so the TFTP transfer will not be interrupted. Enter command “sys stdio 5” to restore the five-minute SMT timeout (default) when the file transfer is complete.

4 Launch the TFTP client on your computer and connect to the ZyWALL. Set the transfer mode to binary before starting data transfer.
5 Use the TFTP client (see the example below) to transfer files between the ZyWALL and the computer. The file name for the configuration file is "rom-0" (rom-zero, not capital o).

Note that the telnet connection must be active and the SMT in CI mode before and during the TFTP transfer. For details on TFTP commands (see following example), please consult the documentation of your TFTP client program. For UNIX, use "get" to transfer from the ZyWALL to the computer and "binary" to set binary transfer mode.

43.3.7 TFTP Command Example

The following is an example TFTP command:

```
tftp [-i] host get rom-0 config.rom
```

Where "i" specifies binary image transfer mode (use this mode when transferring binary files), "host" is the ZyWALL IP address, "get" transfers the file source on the ZyWALL (rom-0, name of the configuration file on the ZyWALL) to the file destination on the computer and renames it config.rom.

43.3.8 GUI-based TFTP Clients

The following table describes some of the fields that you may see in GUI-based TFTP clients.

Table 242 General Commands for GUI-based TFTP Clients

COMMAND	DESCRIPTION
Host	Enter the IP address of the ZyWALL. 192.168.1.1 is the ZyWALL's default IP address when shipped.
Send/Fetch	Use "Send" to upload the file to the ZyWALL and "Fetch" to back up the file on your computer.
Local File	Enter the path and name of the firmware file (*.bin extension) or configuration file (*.rom extension) on your computer.
Remote File	This is the filename on the ZyWALL. The filename for the firmware is "ras" and for the configuration file, is "rom-0".
Binary	Transfer the file in binary mode.
Abort	Stop transfer of the file.

Refer to Section 43.3.5 on page 650 to read about configurations that disallow TFTP and FTP over WAN.

43.3.9 Backup Via Console Port

Back up configuration via console port by following the HyperTerminal procedure shown next. Procedures using other serial communications programs should be similar.

1 Display menu 24.5 and enter "y" at the following screen.

Figure 431 System Maintenance: Backup Configuration

```
Ready to backup Configuration via Xmodem.
Do you want to continue (y/n):
```


2 The following screen indicates that the Xmodem download has started.

Figure 432 System Maintenance: Starting Xmodem Download Screen

```
You can enter ctrl-x to terminate operation any
time.
Starting XMODEM download...
```

3 Run the HyperTerminal program by clicking **Transfer**, then **Receive File** as shown in the following screen.

Figure 433 Backup Configuration Example

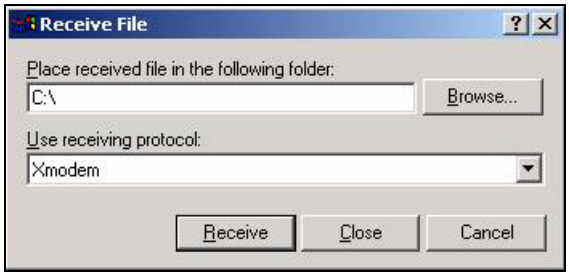

Type a location for storing the configuration file or click **Browse** to look for one.

Choose the **Xmodem** protocol.

Then click **Receive**.

4 After a successful backup you will see the following screen. Press any key to return to the SMT menu.

Figure 434 Successful Backup Confirmation Screen

```
** Backup Configuration completed. OK.
### Hit any key to continue.###
```

43.4 Restore Configuration

This section shows you how to restore a previously saved configuration. Note that this function erases the current configuration before restoring a previous back up configuration; please do not attempt to restore unless you have a backup configuration file stored on disk.

FTP is the preferred method for restoring your current computer configuration to your ZyWALL since FTP is faster. Please note that you must wait for the system to automatically restart after the file transfer is complete.



WARNING!
Do not interrupt the file transfer process as this may PERMANENTLY DAMAGE YOUR ZyWALL. When the Restore Configuration process is complete, the ZyWALL will automatically restart.

43.4.1 Restore Using FTP

For details about backup using (T)FTP please refer to earlier sections on FTP and TFTP file upload in this chapter.

Figure 435 Telnet into Menu 24.6

```
          Menu 24.6 -- System Maintenance - Restore Configuration

   To transfer the firmware and configuration file to your workstation,
   follow the procedure below:

   1. Launch the FTP client on your workstation.
   2. Type "open" and the IP address of your router. Then type "root" and
   SMT password as requested.
   3. Type "put backupfilename rom-0" where backupfilename is the name of
   your backup configuration file on your workstation and rom-0 is the
   remote file name on the router. This restores the configuration to
   your router.
   4. The system reboots automatically after a successful file transferFor
   details on FTP commands, please consult the documentation of your
   FTPclient program.

   For details on backup using TFTP (note that you must remain in this menu
   to back up using TFTP), please see your router manual.

   Press ENTER to Exit:
```

1. Launch the FTP client on your computer.
2. Enter “open”, followed by a space and the IP address of your ZyWALL.
3. Press [ENTER] when prompted for a username.
4. Enter your password as requested (the default is “1234”).
5. Enter “bin” to set transfer mode to binary.
6. Find the “rom” file (on your computer) that you want to restore to your ZyWALL.
7. Use “put” to transfer files from the ZyWALL to the computer, for example, “put config.rom rom-0” transfers the configuration file “config.rom” on your computer to the ZyWALL. See earlier in this chapter for more information on filename conventions.

8 Enter “quit” to exit the ftp prompt. The ZyWALL will automatically restart after a successful restore process.

43.4.2 Restore Using FTP Session Example

Figure 436 Restore Using FTP Session Example

```
ftp> put config.rom rom-0
200 Port command okay
150 Opening data connection for STOR rom-0
226 File received OK
221 Goodbye for writing flash
ftp: 16384 bytes sent in 0.06Seconds 273.07Kbytes/sec.
ftp>quit
```

Refer to Section 43.3.5 on page 650 to read about configurations that disallow TFTP and FTP over WAN.

43.4.3 Restore Via Console Port

Restore configuration via console port by following the HyperTerminal procedure shown next. Procedures using other serial communications programs should be similar.

1 Display menu 24.6 and enter “y” at the following screen.

Figure 437 System Maintenance: Restore Configuration

```
Ready to restore Configuration via Xmodem.
Do you want to continue (y/n):
```


2 The following screen indicates that the Xmodem download has started.

Figure 438 System Maintenance: Starting Xmodem Download Screen

```
Starting XMODEM download (CRC mode) ...CCCCCCCCC
```

3 Run the HyperTerminal program by clicking **Transfer**, then **Send File** as shown in the following screen.

Figure 439 Restore Configuration Example

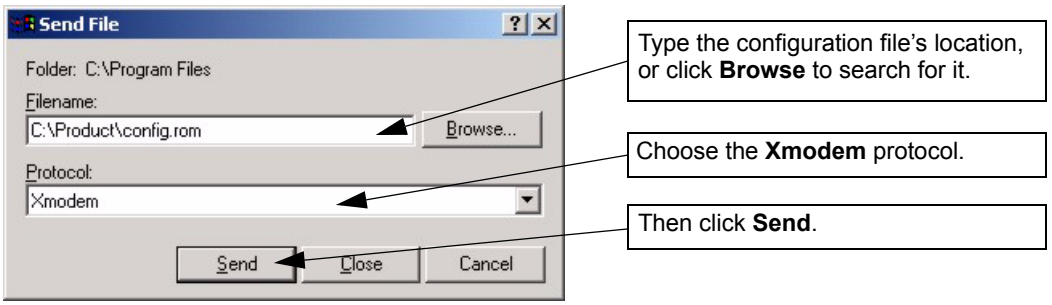

4 After a successful restoration you will see the following screen. Press any key to restart the ZyWALL and return to the SMT menu.

Figure 440 Successful Restoration Confirmation Screen

```
Save to ROM
Hit any key to start system reboot.
```

43.5 Uploading Firmware and Configuration Files

This section shows you how to upload firmware and configuration files. You can upload configuration files by following the procedure in Section 43.4 on page 652 or by following the instructions in **Menu 24.7.2 - System Maintenance - Upload System Configuration File** (for console port).



WARNING!
Do not interrupt the file transfer process as this may PERMANENTLY DAMAGE YOUR ZyWALL.

43.5.1 Firmware File Upload

FTP is the preferred method for uploading the firmware and configuration. To use this feature, your computer must have an FTP client.

When you telnet into the ZyWALL, you will see the following screens for uploading firmware and the configuration file using FTP.

Figure 441 Telnet Into Menu 24.7.1: Upload System Firmware

```
        Menu 24.7.1 - System Maintenance - Upload System Firmware

To upload the system firmware, follow the procedure below:

  1. Launch the FTP client on your workstation.
  2. Type "open" and the IP address of your system. Then type "root" and
SMT password as requested.
  3. Type "put firmwarefilename ras" where "firmwarefilename" is the
name of your firmware upgrade file on your workstation and "ras" is the
remote file name on the system.
  4. The system reboots automatically after a successful firmware
upload.

For details on FTP commands, please consult the documentation of your
FTP client program. For details on uploading system firmware using TFTP
(note that you must remain on this menu to upload system firmware using
TFTP), please see your manual.

Press ENTER to Exit:
```

43.5.2 Configuration File Upload

You see the following screen when you telnet into menu 24.7.2.

Figure 442 Telnet Into Menu 24.7.2: System Maintenance

```
Menu 24.7.2 - System Maintenance - Upload System Configuration File

To upload the system configuration file, follow the procedure below:

  1. Launch the FTP client on your workstation.
  2. Type "open" and the IP address of your system. Then type "root" and
SMT password as requested.
  3. Type "put configurationfilename rom-0" where
"configurationfilename" is the name of your system configuration file on
your workstation, which will be transferred to the "rom-0" file on the
system.
  4. The system reboots automatically after the upload system
configuration file process is complete.

For details on FTP commands, please consult the documentation of your
FTP client program. For details on uploading configuration file using
TFTP (note that you must remain on this menu to upload configuration
file using TFTP), please see your manual.

Press ENTER to Exit:
```

To upload the firmware and the configuration file, follow these examples

43.5.3 FTP File Upload Command from the DOS Prompt Example

1. Launch the FTP client on your computer.
2. Enter “open”, followed by a space and the IP address of your ZyWALL.
3. Press [ENTER] when prompted for a username.
4. Enter your password as requested (the default is “1234”).
5. Enter “bin” to set transfer mode to binary.
6. Use “put” to transfer files from the computer to the ZyWALL, for example, “put firmware.bin ras” transfers the firmware on your computer (firmware.bin) to the ZyWALL and renames it “ras”. Similarly, “put config.rom rom-0” transfers the configuration file on your computer (config.rom) to the ZyWALL and renames it “rom-0”. Likewise “get rom-0 config.rom” transfers the configuration file on the ZyWALL to your computer and renames it “config.rom.” See earlier in this chapter for more information on filename conventions.
7. Enter “quit” to exit the ftp prompt.

43.5.4 FTP Session Example of Firmware File Upload

Figure 443 FTP Session Example of Firmware File Upload

```
331 Enter PASS command
Password:
230 Logged in
ftp> bin
200 Type I OK
ftp> put firmware.bin ras
200 Port command okay
150 Opening data connection for STOR ras
226 File received OK
ftp: 1103936 bytes sent in 1.10Seconds
297.89Kbytes/sec.
ftp> quit
```

More commands (found in GUI-based FTP clients) are listed earlier in this chapter.

Refer to Section 43.3.5 on page 650 to read about configurations that disallow TFTP and FTP over WAN.

43.5.5 TFTP File Upload

The ZyWALL also supports the uploading of firmware files using TFTP (Trivial File Transfer Protocol) over LAN. Although TFTP should work over WAN as well, it is not recommended.

To use TFTP, your computer must have both telnet and TFTP clients. To transfer the firmware and the configuration file, follow the procedure shown next.

1. Use telnet from your computer to connect to the ZyWALL and log in. Because TFTP does not have any security checks, the ZyWALL records the IP address of the telnet client and accepts TFTP requests only from this address.

2. Put the SMT in command interpreter (CI) mode by entering 8 in **Menu 24 – System Maintenance**.
3. Enter the command "sys stdio 0" to disable the console timeout, so the TFTP transfer will not be interrupted. Enter "command sys stdio 5" to restore the five-minute console timeout (default) when the file transfer is complete.
4. Launch the TFTP client on your computer and connect to the ZyWALL. Set the transfer mode to binary before starting data transfer.
5. Use the TFTP client (see the example below) to transfer files between the ZyWALL and the computer. The file name for the firmware is "ras".

Note that the telnet connection must be active and the ZyWALL in CI mode before and during the TFTP transfer. For details on TFTP commands (see following example), please consult the documentation of your TFTP client program. For UNIX, use "get" to transfer from the ZyWALL to the computer, "put" the other way around, and "binary" to set binary transfer mode.

43.5.6 TFTP Upload Command Example

The following is an example TFTP command:

```
tftp [-i] host put firmware.bin ras
```

Where "i" specifies binary image transfer mode (use this mode when transferring binary files), "host" is the ZyWALL's IP address, "put" transfers the file source on the computer (firmware.bin – name of the firmware on the computer) to the file destination on the remote host (ras - name of the firmware on the ZyWALL).

Commands that you may see in GUI-based TFTP clients are listed earlier in this chapter.

43.5.7 Uploading Via Console Port

FTP or TFTP are the preferred methods for uploading firmware to your ZyWALL. However, in the event of your network being down, uploading files is only possible with a direct connection to your ZyWALL via the console port. Uploading files via the console port under normal conditions is not recommended since FTP or TFTP is faster. Any serial communications program should work fine; however, you must use the Xmodem protocol to perform the download/upload.

43.5.8 Uploading Firmware File Via Console Port

1. Select 1 from **Menu 24.7 – System Maintenance – Upload Firmware** to display **Menu 24.7.1 - System Maintenance - Upload System Firmware**, and then follow the instructions as shown in the following screen.

Figure 444 Menu 24.7.1 As Seen Using the Console Port

```
          Menu 24.7.1 - System Maintenance - Upload System Firmware

To upload system firmware:
1. Enter "y" at the prompt below to go into debug mode.
2. Enter "atur" after "Enter Debug Mode" message.
3. Wait for "Starting XMODEM upload" message before activating
Xmodem upload on your terminal.
4. After successful firmware upload, enter "atgo" to restart the router.

Warning: Proceeding with the upload will erase the current system
firmware.


          Do You Wish To Proceed:(Y/N)
```

2 After the "Starting Xmodem upload" message appears, activate the Xmodem protocol on your computer. Follow the procedure as shown previously for the HyperTerminal program. The procedure for other serial communications programs should be similar.

43.5.9 Example Xmodem Firmware Upload Using HyperTerminal

Click **Transfer**, then **Send File** to display the following screen.

Figure 445 Example Xmodem Upload

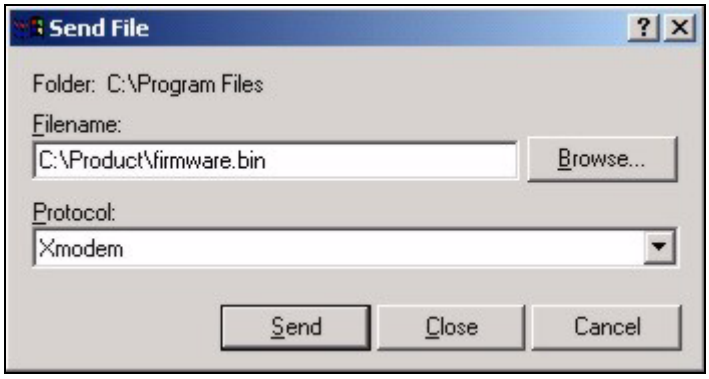

After the firmware upload process has completed, the ZyWALL will automatically restart.

43.5.10 Uploading Configuration File Via Console Port

1 Select 2 from **Menu 24.7 – System Maintenance – Upload Firmware** to display **Menu 24.7.2 - System Maintenance - Upload System Configuration File**. Follow the instructions as shown in the next screen.

Figure 446 Menu 24.7.2 As Seen Using the Console Port

```
Menu 24.7.2 - System Maintenance - Upload System Configuration File

To upload system configuration file:
1. Enter "y" at the prompt below to go into debug mode.
2. Enter "atlc" after "Enter Debug Mode" message.
3. Wait for "Starting XMODEM upload" message before activating
   Xmodem upload on your terminal.
4. After successful firmware upload, enter "atgo" to restart
   the system.

Warning:
1. Proceeding with the upload will erase the current
configuration file.
2. The system's console port speed (Menu 24.2.2) may change when it is
restarted; please adjust your terminal's speed accordingly. The password
may change (menu 23), also.
3. When uploading the DEFAULT configuration file, the console
port speed will be reset to 9600 bps and the password to "1234".


         Do You Wish To Proceed:(Y/N)
```

2. After the "Starting Xmodem upload" message appears, activate the Xmodem protocol on your computer. Follow the procedure as shown previously for the HyperTerminal program. The procedure for other serial communications programs should be similar.
3. Enter “atgo” to restart the ZyWALL.

43.5.11 Example Xmodem Configuration Upload Using HyperTerminal

Click **Transfer**, then **Send File** to display the following screen.

Figure 447 Example Xmodem Upload

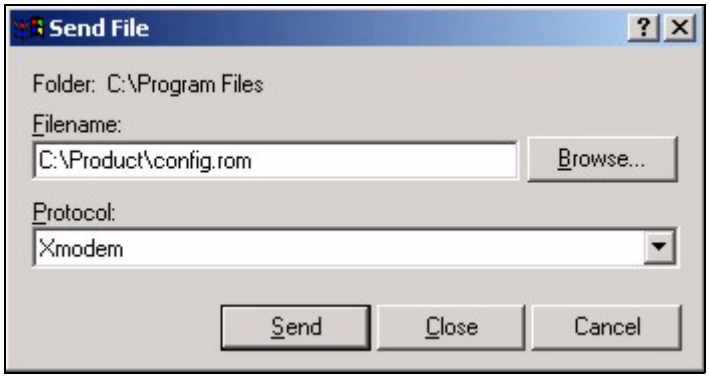

After the configuration upload process has completed, restart the ZyWALL by entering “atgo”.

44

System Maintenance Menus 8 to 10

This chapter leads you through SMT menus 24.8 to 24.10.

44.1 Command Interpreter Mode

The Command Interpreter (CI) is a part of the main router firmware. The CI provides much of the same functionality as the SMT, while adding some low-level setup and diagnostic functions. Enter the CI from the SMT by selecting menu 24.8. Access can be by Telnet or by a serial connection to the console port, although some commands are only available with a serial connection. See the included disk or zyxel.com for more detailed information on CI commands. Enter 8 from **Menu 24 - System Maintenance**.



Use of undocumented commands or misconfiguration can damage the unit and possibly render it unusable.

Figure 448 Command Mode in Menu 24

```
            Menu 24 - System Maintenance

               1.  System Status
               2.  System Information and Console Port Speed
               3.  Log and Trace
               4.  Diagnostic
               5.  Backup Configuration
               6.  Restore Configuration
               7.  Upload Firmware
               8.  Command Interpreter Mode
               9.  Call Control
               10. Time and Date Setting
               11. Remote Management Setup


            Enter Menu Selection Number:
```

44.1.1 Command Syntax

The command keywords are in `courier new` font.

Enter the command keywords exactly as shown, do not abbreviate.

The required fields in a command are enclosed in angle brackets <>.

The optional fields in a command are enclosed in square brackets `[]`.

The `|` symbol means “or”.

For example,

```
sys filter netbios config <type> <on|off>
```

means that you must specify the type of netbios filter and whether to turn it on or off.

44.1.2 Command Usage

A list of commands can be found by typing `help` or `?` at the command prompt. Always type the full command. Type `exit` to return to the SMT main menu when finished.

Figure 449 Valid Commands

```
Copyright (c) 1994 - 2007 ZyXEL Communications Corp.
ras> ?
Valid commands are:
sys             ls              exit            ether
aux             config          wwan            wlan
ip              ipsec           bridge          bm
certificates    cnm             8021x           radius
radserv         wcfg
ras>
```

The following table describes some commands in this screen.

Table 243 Valid Commands

COMMAND	DESCRIPTION
sys	The system commands display device information and configure device settings.
ls	The load sharing commands allow you to configure load balancing.
exit	This command returns you to the SMT main menu.
ether	These commands display Ethernet information and configure Ethernet settings.
poe	These commands deal with PPPoE connections.
pptp	These commands deal with PPTP connections.
aux	These commands display dial backup information and control dial backup connections.
config	These commands configure firewall and anti-spam settings.
ip	These commands display IP information and configure IP settings.
ipsec	These commands display IPSec information and configure IPSec settings.
bridge	These commands display bridge information.
bm	These commands configure bandwidth management settings and display bandwidth management information.

Table 243 Valid Commands

COMMAND	DESCRIPTION
certificates	These commands display certificate information and configure certificate settings.
8021x	These commands configure 802.1x settings and display 802.1x information.
radius	These commands display RADIUS information and configure RADIUS settings.

44.2 Call Control Support

The ZyWALL provides two call control functions: budget management and call history. Please note that this menu is only applicable when **Encapsulation** is set to **PPPoE** or **PPTP** in menu 4 or menu 11.1.

The budget management function allows you to set a limit on the total outgoing call time of the ZyWALL within certain times. When the total outgoing call time exceeds the limit, the current call will be dropped and any future outgoing calls will be blocked.

Call history chronicles preceding incoming and outgoing calls.

To access the call control menu, select option 9 in menu 24 to go to **Menu 24.9 - System Maintenance - Call Control**, as shown in the next table.

Figure 450 Call Control

```
            Menu 24.9 - System Maintenance - Call Control

                1.Budget Management
                2.Call History

            Enter Menu Selection Number:
```

44.2.1 Budget Management

Menu 24.9.1 shows the budget management statistics for outgoing calls. Enter 1 from **Menu 24.9 - System Maintenance - Call Control** to bring up the following menu. Not all fields are available on all models.

Figure 451 Budget Management

```
              Menu 24.9.1 - Budget Management

    Remote Node   Connection Time/Total Budget   Elapsed Time/Total Period

  1.WAN_1                  No Budget                  No Budget

  2.WAN_2                  No Budget                  No Budget

  3.Dial                   No Budget                  No Budget


                Reset Node (0 to update screen):
```

The total budget is the time limit on the accumulated time for outgoing calls to a remote node. When this limit is reached, the call will be dropped and further outgoing calls to that remote node will be blocked. After each period, the total budget is reset. The default for the total budget is 0 minutes and the period is 0 hours, meaning no budget control. You can reset the accumulated connection time in this menu by entering the index of a remote node. Enter 0 to update the screen. The budget and the reset period can be configured in menu 11.1 for the remote node.

Table 244 Budget Management

FIELD	DESCRIPTION	EXAMPLE
Remote Node	Enter the index number of the remote node you want to reset (just one in this case)	1
Connection Time/ Total Budget	This is the total connection time that has gone by (within the allocated budget that you set in menu 11.1).	5/10 means that 5 minutes out of a total allocation of 10 minutes have lapsed.
Elapsed Time/Total Period	The period is the time cycle in hours that the allocation budget is reset (see menu 11.1.) The elapsed time is the time used up within this period.	0.5/1 means that 30 minutes out of the 1-hour time period has lapsed.
Enter “0” to update the screen or press [ESC] to return to the previous screen.		

44.2.2 Call History

This is the second option in **Menu 24.9 - System Maintenance - Call Control**. It displays information about past incoming and outgoing calls. Enter 2 from **Menu 24.9 - System Maintenance - Call Control** to bring up the following menu.

Figure 452 Call History

```
Menu 24.9.2 - Call History

    Phone Number   Dir    Rate    #call   Max   Min  Total
 1.
 2.
 3.
 4.
 5.
 6.
 7.
 8.
 9.
10.

Enter Entry to Delete(0 to exit):
```

The following table describes the fields in this screen.

Table 245 Call History

FIELD	DESCRIPTION
Phone Number	The PPPoE service names are shown here.
Dir	This shows whether the call was incoming or outgoing.
Rate	This is the transfer rate of the call.
#call	This is the number of calls made to or received from that telephone number.
Max	This is the length of time of the longest telephone call.
Min	This is the length of time of the shortest telephone call.
Total	This is the total length of time of all the telephone calls to/from that telephone number.
You may enter an entry number to delete it or ‘”0” to exit.	

44.3 Time and Date Setting

The ZyWALL’s Real Time Chip (RTC) keeps track of the time and date. There is also a software mechanism to set the time manually or get the current time and date from an external server when you turn on your ZyWALL. Menu 24.10 allows you to update the time and date settings of your ZyWALL. The real time is then displayed in the ZyWALL error logs and firewall logs.

Select menu 24 in the main menu to open **Menu 24 - System Maintenance**, as shown next.

Figure 453 Menu 24: System Maintenance

```
                Menu 24 - System Maintenance

          1.  System Status
          2.  System Information and Console Port Speed
          3.  Log and Trace
          4.  Diagnostic
          5.  Backup Configuration
          6.  Restore Configuration
          7.  Upload Firmware
          8.  Command Interpreter Mode
          9.  Call Control
         10. Time and Date Setting
         11. Remote Management Setup


             Enter Menu Selection Number:
```

Enter 10 to go to **Menu 24.10 - System Maintenance - Time and Date Setting** to update the time and date settings of your ZyWALL as shown in the following screen.

Figure 454 Menu 24.10 System Maintenance: Time and Date Setting

```
        Menu 24.10 - System Maintenance - Time and Date Setting

        Time Protocol= NTP (RFC-1305)
        Time Server Address= 0.pool.ntp.org

        Current Time:                        08 : 24 : 26
        New Time (hh:mm:ss):                 N/A  N/A  N/A

        Current Date:                        2005 - 07 - 27
        New Date (yyyy-mm-dd):               N/A    N/A  N/A

        Time Zone= GMT

        Daylight Saving= No
        Start Date (mm-nth-week-hr):         Jan. - 1st  - Sun. -  00
        End Date (mm-nth-week-hr):           Jan. - 1st  - Sun. -  00


          Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields in this screen.

Table 246 Menu 24.10 System Maintenance: Time and Date Setting

FIELD	DESCRIPTION
Time Protocol	Enter the time service protocol that your timeserver uses. Not all time servers support all protocols, so you may have to check with your ISP/network administrator or use trial and error to find a protocol that works. The main differences between them are the format. **Daytime (RFC 867)** format is day/month/year/time zone of the server. **Time (RFC-868)** format displays a 4-byte integer giving the total number of seconds since 1970/1/1 at 0:0:0. The default, **NTP (RFC-1305)**, is similar to **Time (RFC-868)**. Select **Manual** to enter the new time and new date manually.
Time Server Address	Enter the IP address or domain name of your timeserver. Check with your ISP/ network administrator if you are unsure of this information.
Current Time	This field displays an updated time only when you reenter this menu.
New Time	Enter the new time in hour, minute and second format. This field is available when you select **Manual** in the **Time Protocol** field.
Current Date	This field displays an updated date only when you reenter this menu.
New Date	Enter the new date in year, month and day format. This field is available when you select **Manual** in the **Time Protocol** field.
Time Zone	Press [SPACE BAR] and then [ENTER] to set the time difference between your time zone and Greenwich Mean Time (GMT).
Daylight Saving	Daylight Saving Time is a period from late spring to early fall when many countries set their clocks ahead of normal local time by one hour to give more daylight time in the evenings. If you use daylight savings time, then choose **Yes**.
Start Date (mm-nth-week-hr)	Configure the day and time when Daylight Saving Time starts if you selected **Yes** in the **Daylight Saving** field. The **hr** field uses the 24 hour format. Here are a couple of examples: Daylight Saving Time starts in most parts of the United States on the first Sunday of April. Each time zone in the United States starts using Daylight Saving Time at 2 A.M. local time. So in the United States you would select **Apr.**, **1st**, **Sun.** and type 02 in the **hr** field. Daylight Saving Time starts in the European Union on the last Sunday of March. All of the time zones in the European Union start using Daylight Saving Time at the same moment (1 A.M. GMT or UTC). So in the European Union you would select **Mar.**, **Last**, **Sun.** The time you type in the **hr** field depends on your time zone. In Germany for instance, you would type 02 because Germany's time zone is one hour ahead of GMT or UTC (GMT+1).
End Date (mm-nth-week-hr)	Configure the day and time when Daylight Saving Time ends if you selected **Yes** in the **Daylight Saving** field. The **hr** field uses the 24 hour format. Here are a couple of examples: Daylight Saving Time ends in the United States on the last Sunday of October. Each time zone in the United States stops using Daylight Saving Time at 2 A.M. local time. So in the United States you would select **Oct.**, **Last**, **Sun.** and type 02 in the **hr** field. Daylight Saving Time ends in the European Union on the last Sunday of October. All of the time zones in the European Union stop using Daylight Saving Time at the same moment (1 A.M. GMT or UTC). So in the European Union you would select **Oct.**, **Last**, **Sun.** The time you type in the **hr** field depends on your time zone. In Germany for instance, you would type 02 because Germany's time zone is one hour ahead of GMT or UTC (GMT+1).
Once you have filled in this menu, press [ENTER] at the message “Press ENTER to Confirm or ESC to Cancel“ to save your configuration, or press [ESC] to cancel.	

45

Remote Management

This chapter covers remote management found in SMT menu 24.11.

45.1 Remote Management

Remote management allows you to determine which services/protocols can access which ZyWALL interface (if any) from which computers.



When you configure remote management to allow management from any network except the LAN, you still need to configure a firewall rule to allow access. See Chapter 11 on page 239 for details on configuring firewall rules.

You can also disable a service on the ZyWALL by not allowing access for the service/protocol through any of the ZyWALL interfaces.

To disable remote management of a service, select **Disable** in the corresponding **Access** field.

Enter 11 from menu 24 to bring up **Menu 24.11 - Remote Management Control**.

Figure 455 Menu 24.11 – Remote Management Control

```
                Menu 24.11 - Remote Management Control

     TELNET Server:     Port = 23         Access = Disable
                        Secure Client IP = 0.0.0.0
     FTP Server:        Port = 21         Access = LAN+WAN1+DMZ+WLAN+WAN2
                        Secure Client IP = 0.0.0.0
     SSH Server:        Certificate = auto_generated_self_signed_cert
                        Port = 22         Access = LAN+WAN1+DMZ+WLAN+WAN2
                        Secure Client IP = 0.0.0.0
     HTTPS Server:      Certificate = auto_generated_self_signed_cert
                        Authenticate Client Certificates = No
                        Port = 443        Access = LAN+WAN1+DMZ+WLAN+WAN2
                        Secure Client IP = 0.0.0.0
     HTTP Server:       Port = 80         Access = LAN+WAN1+DMZ+WLAN+WAN2
                        Secure Client IP = 0.0.0.0
     SNMP Service:      Port = 161        Access = LAN+WAN1+DMZ+WLAN+WAN2
                        Secure Client IP = 0.0.0.0
     DNS Service:       Port = 53         Access = LAN+WAN1+DMZ+WLAN+WAN2
                        Secure Client IP = 0.0.0.0

                Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields in this screen.

Table 247 Menu 24.11 – Remote Management Control

FIELD	DESCRIPTION
Telnet Server FTP Server SSH Server HTTPS Server HTTP Server SNMP Service DNS Service	Each of these read-only labels denotes a service that you may use to remotely manage the ZyWALL.
Port	This field shows the port number for the service or protocol. You may change the port number if needed, but you must use the same port number to access the ZyWALL.
Access	Select the access interface (if any) by pressing [SPACE BAR], then [ENTER] to choose from: **LAN**, **WAN**, **LAN+WAN**, **DMZ**, **LAN+DMZ**, **WAN+DMZ**, **LAN+WAN+DMZ**, **WLAN**, **LAN+WLAN**, **WAN+WLAN**, **LAN+WAN+WLAN**, **DMZ+WLAN**, **LAN+DMZ+WLAN**, **WAN+DMZ+WLAN**, **LAN+WAN+DMZ+WLAN** or **Disable**.
Secure Client IP	The default 0.0.0.0 allows any client to use this service to remotely manage the ZyWALL. Enter an IP address to restrict access to a client with a matching IP address.
Certificate	Press [SPACE BAR] and then [ENTER] to select the certificate that the ZyWALL will use to identify itself. The ZyWALL is the SSL server and must always authenticate itself to the SSL client (the computer which requests the HTTPS connection with the ZyWALL).

Table 247 Menu 24.11 – Remote Management Control (continued)

FIELD	DESCRIPTION
Authenticate Client Certificates	Select **Yes** by pressing [SPACE BAR], then [ENTER] to require the SSL client to authenticate itself to the ZyWALL by sending the ZyWALL a certificate. To do that the SSL client must have a CA-signed certificate from a CA that has been imported as a trusted CA on the ZyWALL (see Appendix F on page 755 for details).
Once you have filled in this menu, press [ENTER] at the message "Press ENTER to Confirm or ESC to Cancel" to save your configuration, or press [ESC] to cancel.	

45.1.1 Remote Management Limitations

Remote management over LAN or WAN will not work when:

1. A filter in menu 3.1 (LAN) or in menu 11.5 (WAN) is applied to block a Telnet, FTP or Web service.
2. You have disabled that service in menu 24.11.
3. The IP address in the **Secure Client IP** field (menu 24.11) does not match the client IP address. If it does not match, the ZyWALL will disconnect the session immediately.
4. There is an SMT console session running.
5. There is already another remote management session with an equal or higher priority running. You may only have one remote management session running at one time.
6. There is a firewall rule that blocks it.

46

IP Policy Routing

This chapter covers setting and applying policies used for IP routing.

46.1 IP Routing Policy Summary

Menu 25 shows the summary of a policy rule, including the criteria and the action of a single policy, and whether a policy is active or not. Each policy contains two lines. The former part is the criteria of the incoming packet and the latter is the action. Between these two parts, separator "|" means the action is taken on criteria matched and separator "=" means the action is taken on criteria not matched.

Figure 456 Menu 25: Sample IP Routing Policy Summary

```
                    Menu 25 - IP Routing Policy Summary

#   A                          Criteria/Action
--- - ------------------------------------------------------
001 N SA=1.1.1.1-1.1.1.1 DA=2.2.2.2-2.2.2.5
      SP=20-25 DP=20-25 P=6 T=NM PR=0      |GW=192.168.1.1 T=MT PR=0
002 N ____________________________________________________________
      ____________________________________________________________
003 N ____________________________________________________________
      ____________________________________________________________
004 N ____________________________________________________________
      ____________________________________________________________
005 N ____________________________________________________________
      ____________________________________________________________
006 N ____________________________________________________________
      ____________________________________________________________

              Select Command= None           Select Rule= N/A
                    Press ENTER to Confirm or ESC to Cancel:

Press Space Bar to Toggle.
```

The following table describes the fields in this screen.

Table 248 Menu 25: Sample IP Routing Policy Summary

FIELD	DESCRIPTION
#	This is the policy index number.
A	This displays whether a policy is active (**Y**) or not (**N**).

Table 248 Menu 25: Sample IP Routing Policy Summary (continued)

FIELD	DESCRIPTION
Criteria/Action	This displays the details about to which packets the policy applies and how the policy has the ZyWALL handle those packets. Refer to Table 249 on page 674 for detailed information.
Select Command	Press [SPACE BAR] to choose from **None**, **Edit**, **Delete**, **Go To Rule**, **Next Page** or **Previous Page** and then press [ENTER]. You must select a rule in the next field when you choose the **Edit**, **Delete** or **Go To** commands. Select **None** and then press [ENTER] to go to the "Press ENTER to Confirm…" prompt. Use **Edit** to create or edit a rule. Use **Delete** to remove a rule. To edit or delete a rule, first make sure you are on the correct page. When a rule is deleted, subsequent rules do not move up in the page list. Use **Go To Rule** to view the page where your desired rule is listed. Select **Next Page** or **Previous Page** to view the next or previous page of rules (respectively).
Select Rule	Type the policy index number you wish to edit or delete and then press [ENTER].
When you have completed this menu, press [ENTER] at the prompt "Press ENTER to Confirm…" to save your configuration, or press [ESC] at any time to cancel.	

Table 249 IP Routing Policy Setup

ABBREVIATION		MEANING
Criterion	SA	Source IP Address
SP		Source Port
DA		Destination IP Address
DP		Destination Port
P		IP layer 4 protocol number (TCP=6, UDP=17…)
T		Type of service of incoming packet
PR		Precedence of incoming packet
Action	GW	Gateway IP address
T		Outgoing Type of service
P		Outgoing Precedence
Service	NM	Normal
MD		Minimum Delay
MT		Maximum Throughput
MR		Maximum Reliability
MC		Minimum Cost

46.2 IP Routing Policy Setup

To setup a routing policy, perform the following procedures:

1 Type 25 in the main menu to open **Menu 25 - IP Routing Policy Summary**.

2 Select **Edit** in the **Select Command** field; type the index number of the rule you want to configure in the **Select Rule** field and press [ENTER] to open **Menu 25.1 - IP Routing Policy Setup** (see the next figure).

Figure 457 Menu 25.1: IP Routing Policy Setup

```
            Menu 25.1 - IP Routing Policy Setup

      Rule Index= 1                            Active= Yes
      Criteria:
        IP Protocol    = 6
        Type of Service= Normal                Packet length= 40
        Precedence     = 0                       Len Comp= Equal
        Source:
          addr start= 1.1.1.1                  end= 1.1.1.1
          port start= 20                       end= 25
        Destination:
          addr start= 2.2.2.2                  end= 2.2.2.5
          port start= 20                       end= 25
       Action= Matched
         Gateway Type= IP Address
         Gateway addr   = 192.168.1.1           Redirect packet= N/A
         Type of Service= Max Thruput           Log= No
         Precedence     = 0
      Edit policy to packets received from= No

                         Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields in this screen.

Table 250 Menu 25.1: IP Routing Policy Setup

FIELD	DESCRIPTION
Rule Index	This is the index number of the routing policy selected in **Menu 25 - IP Routing Policy Summary**.
Active	Press [SPACE BAR] and then [ENTER] to select **Yes** to activate the policy.
Criteria	
IP Protocol	Enter a number that represents an IP layer 4 protocol, for example, UDP=17, TCP=6, ICMP=1 and Don't care=0.
Type of Service	Prioritize incoming network traffic by choosing from **Don't Care**, **Normal**, **Min Delay**, **Max Thruput** or **Max Reliable**.
Precedence	Precedence value of the incoming packet. Press [SPACE BAR] and then [ENTER] to select a value from **0** to **7** or **Don't Care**.
Packet Length	Type the length of incoming packets (in bytes). The operators in the **Len Comp** (next field) apply to packets of this length.
Len Comp	Press [SPACE BAR] and then [ENTER] to choose from **Equal**, **Not Equal**, **Less**, **Greater**, **Less or Equal** or **Greater or Equal**.
Source	
addr start / end	Source IP address range from start to end.
port start / end	Source port number range from start to end; applicable only for TCP/UDP.
Destination	

Table 250 Menu 25.1: IP Routing Policy Setup

FIELD	DESCRIPTION
addr start / end	Destination IP address range from start to end.
port start / end	Destination port number range from start to end; applicable only for TCP/UDP.
Action	Specifies whether action should be taken on criteria Matched or Not Matched.
Gateway Type	Press [SPACE BAR] and then [ENTER] to select **IP Address** and enter the IP address of the gateway if you want to specify the IP address of the gateway. The gateway is an immediate neighbor of your ZyWALL that will forward the packet to the destination. The gateway must be a router on the same segment as your ZyWALL's LAN or WAN port. Press [SPACE BAR] and then [ENTER] to select **Remote Node** to have the ZyWALL send traffic that matches the policy route through a specific WAN port.
Gateway addr	This field displays if you selected **IP Address** in the **Gateway Type** field. Defines the outgoing gateway address. The gateway must be on the same subnet as the ZyWALL if it is on the LAN, otherwise, the gateway must be the IP address of a remote node. The default gateway is specified as 0.0.0.0.
Remote Node Idx	This field displays if you selected **Remote Node** in the **Gateway Type** field. Type **1** for WAN port 1 or 2 for WAN port 2.
Redirect Packet	This field applies if you selected **Remote Node** in the **Gateway Type** field. Press [SPACE BAR] and then [ENTER] to select **Yes** to have the ZyWALL send traffic that matches the policy route through the other WAN interface if it cannot send the traffic through the WAN interface you selected.
Type of Service	Set the new TOS value of the outgoing packet. Prioritize incoming network traffic by choosing **Don't Care**, **Normal**, **Min Delay**, **Max Thruput**, **Max Reliable** or **Min Cost**.
Precedence	Set the new outgoing packet precedence value. Values are **0** to **7** or **Don't Care**.
Log	Press [SPACE BAR] and then [ENTER] to select **Yes** to make an entry in the system log when a policy is executed.
Edit policy to packets received from	Press [SPACE BAR] and then [ENTER] to select **Yes** or **No** (default). Select **Yes** to configure Menu 25.1.1: IP Routing Policy Setup discussed next.
When you have completed this menu, press [ENTER] at the prompt "Press [ENTER] to confirm or [ESC] to cancel" to save your configuration or press [ESC] to cancel and go back to the previous screen.	

46.2.1 Applying Policy to Packets

To apply the policy to packets received on the selected interface(s), go to **Menu 25.1: IP Routing Policy Setup** and press [SPACE BAR] to select **Yes** in the **Edit policy to packets received from** field. Press [ENTER] to display **Menu 25.1.1 - IP Routing Policy Setup** (shown next).

Figure 458 Menu 25.1.1: IP Routing Policy Setup

```
            Menu 25.1.1 - IP Routing Policy Setup

                       Apply policy to packets received from:
                         LAN= No
                         DMZ= No
                         WLAN= No
                         ALL WAN= Yes
                           Selected Remote Node index= N/A

          Press ENTER to Confirm or ESC to Cancel:
```

The following table describes the fields in this screen.

Table 251 Menu 25.1.1: IP Routing Policy Setup


FIELD	DESCRIPTION
LAN/DMZ/WLAN/ ALL WAN	Press [SPACE BAR] to select **Yes** or **No**. Choose **Yes** and press [ENTER] to apply the policy to packets received on the specific interface(s).
Selected Remote Node index	If you select **No** in the **ALL WAN** field, enter the number of the WAN interface.
When you have completed this menu, press [ENTER] at the prompt "Press ENTER to Confirm…" to save your configuration, or press [ESC] at any time to cancel.	

46.3 IP Policy Routing Example

If a network has both Internet and remote node connections, you can route Web packets to the Internet using one policy and route FTP packets to a remote network using another policy. See the next figure.

Route 1 represents the default IP route and route 2 represents the configured IP route.

Figure 459 Example of IP Policy Routing

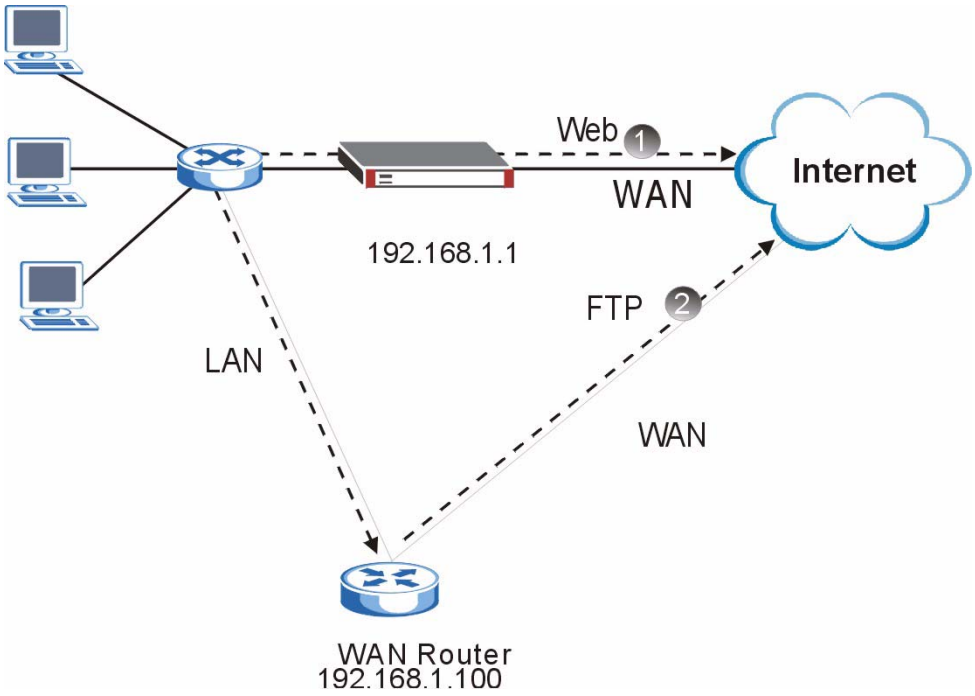

To force Web packets coming from clients with IP addresses of 192.168.1.33 to 192.168.1.64 to be routed to the Internet via the WAN port of the ZyWALL, follow the steps as shown next.

1 Create a rule in **Menu 25.1 - IP Routing Policy Setup** as shown next.

Figure 460 IP Routing Policy Example 1

```
            Menu 25.1 - IP Routing Policy Setup

            Rule Index= 1                              Active= Yes
            Criteria:
              IP Protocol    = 6
              Type of Service= Don't Care              Packet length= 10
              Precedence     = Don't Care                Len Comp= Equal
              Source:
                addr start= 192.168.1.33        end= 192.168.1.64
                port start= 0                   end= N/A
              Destination:
                addr start= 0.0.0.0                    end= N/A
                port start= 80                         end= 80
            Action= Matched
               Gateway Type= IP Address
               Gateway addr   = 192.168.1.1             Redirect packet= N/A
               Type of Service= Max Thruput            Log= No
               Precedence     = 0
            Edit policy to packets received from= No

                                Press ENTER to Confirm or ESC to Cancel:
```

2 Select **Yes** in the **LAN** field in menu 25.1.1 to apply the policy to packets received on the LAN port.
3 Check **Menu 25 - IP Routing Policy Summary** to see if the rule is added correctly.
4 Create another rule in menu 25.1 for this rule to route packets from any host (IP=0.0.0.0 means any host) with protocol TCP and port FTP access through another gateway (192.168.1.100).

Figure 461 IP Routing Policy Example 2

```
 Menu 25.1 - IP Routing Policy Setup

Rule Index= 2                              Active= No
Criteria:
  IP Protocol    = 6
  Type of Service= Don't Care              Packet length= 10
  Precedence     = Don't Care                Len Comp= Equal
  Source:
    addr start= 0.0.0.0                    end= N/A
    port start= 0                          end= N/A
  Destination:
    addr start= 0.0.0.0                    end= N/A
    port start= 20                         end= 21
Action= Matched
   Gateway Type= IP Address
   Gateway addr   = 192.168.1.100     Redirect packet= N/A
   Type of Service= Don't Care        Log= No
   Precedence     = Don't Care
Edit policy to packets received from= No

                    Press ENTER to Confirm or ESC to Cancel:
```

5 Select **Yes** in the **LAN** field in menu 25.1.1 to apply the policy to packets received on the LAN port.
6 Check **Menu 25 - IP Routing Policy Summary** to see if the rule is added correctly.

47

Call Scheduling

Call scheduling allows you to dictate when a remote node should be called and for how long.

47.1 Introduction to Call Scheduling

The call scheduling feature allows the ZyWALL to manage a remote node and dictate when a remote node should be called and for how long. This feature is similar to the scheduler in a videocassette recorder (you can specify a time period for the VCR to record). You can apply up to 4 schedule sets in **Menu 11.1 - Remote Node Profile**. From the main menu, enter 26 to access **Menu 26 - Schedule Setup** as shown next.

Figure 462 Schedule Setup

```
                    Menu 26 - Schedule Setup

Schedule                          Schedule
Set #     Name                    Set #     Name
------    --------------------    ------    --------------------
1         ____________________    7         ____________________
2         ____________________    8         ____________________
3         ____________________    9         ____________________
4         ____________________    10        ____________________
5         ____________________    11        ____________________
6         ____________________    12        ____________________

Enter Schedule Set Number to Configure= 0
Edit Name= N/A
Press ENTER to Confirm or ESC to Cancel:
```

Lower numbered sets take precedence over higher numbered sets thereby avoiding scheduling conflicts. For example, if sets 1, 2, 3 and 4 are applied in the remote node, then set 1 will take precedence over set 2, 3 and 4 as the ZyWALL, by default, applies the lowest numbered set first. Set 2 will take precedence over set 3 and 4, and so on.

You can design up to 12 schedule sets but you can only apply up to four schedule sets for a remote node.

To delete a schedule set, enter the set number and press [SPACE BAR] and then [ENTER] or [DEL] in the Edit Name field.

To set up a schedule set, select the schedule set you want to setup from menu 26 (1-12) and press [ENTER] to see **Menu 26.1 - Schedule Set Setup** as shown next.

Figure 463 Schedule Set Setup

```
            Menu 26.1 - Schedule Set Setup

            Active= Yes
            How Often= Once
            Start Date(yyyy-mm-dd) = N/A
            Once:
              Date(yyyy-mm-dd)= 2000 - 01 - 01
            Weekdays:
              Sunday= N/A
              Monday= N/A
              Tuesday= N/A
              Wednesday= N/A
              Thursday= N/A
              Friday= N/A
              Saturday= N/A
            Start Time (hh:mm)= 00 : 00
            Duration (hh:mm)= 00 : 00
            Action= Forced On

            Press ENTER to Confirm or ESC to Cancel:
            Press Space Bar to Toggle
```

If a connection has been already established, your ZyWALL will not drop it. Once the connection is dropped manually or it times out, then that remote node can't be triggered up until the end of the **Duration**.

Table 252 Schedule Set Setup

FIELD	DESCRIPTION
Active	Press [SPACE BAR] to select **Yes** or **No**. Choose **Yes** and press [ENTER] to activate the schedule set.
How Often	Should this schedule set recur weekly or be used just once only? Press [SPACE BAR] and then [ENTER] to select **Once** or **Weekly**. Both these options are mutually exclusive. If **Once** is selected, then all weekday settings are **N/A**. When **Once** is selected, the schedule rule deletes automatically after the scheduled time elapses.
Start Date	Enter the start date when you wish the set to take effect in year -month-date format. Valid dates are from the present to 2036-February-5.
Once:	
Date	If you selected **Once** in the **How Often** field above, then enter the date the set should activate here in year-month-date format.
Weekdays:	

Table 252 Schedule Set Setup (continued)

FIELD	DESCRIPTION
Day	If you selected **Weekly** in the **How Often** field above, then select the day(s) when the set should activate (and recur) by going to that day(s) and pressing [SPACE BAR] to select **Yes**, then press [ENTER].
Start Time	Enter the start time when you wish the schedule set to take effect in hour-minute format.
Duration	The duration determines how long the ZyWALL is to apply the action configured in the **Action** field. Enter the maximum length of time in hour-minute format.
Action	**Forced On** means that the connection is maintained whether or not there is a demand call on the line and will persist for the time period specified in the **Duration** field. **Forced Down** means that the connection is blocked whether or not there is a demand call on the line. **Enable Dial-On-Demand** means that this schedule permits a demand call on the line. **Disable Dial-On-Demand** means that this schedule prevents a demand call on the line.
When you have completed this menu, press [ENTER] at the prompt "Press ENTER to Confirm…" to save your configuration, or press [ESC] at any time to cancel.	

Once your schedule sets are configured, you must then apply them to the desired remote node(s). Enter 11 from the Main Menu and then enter the target remote node index. Press [SPACE BAR] and then [ENTER] to select **PPPoE** in the **Encapsulation** field to make the schedule sets field available as shown next.

Figure 464 Applying Schedule Set(s) to a Remote Node (PPPoE)

```
                    Menu 11.1 - Remote Node Profile

Rem Node Name= ChangeMe          Route= IP
Active= Yes

Encapsulation= PPPoE             Edit IP= No
Service Type= Standard           Telco Option:
Service Name=                      Allocated Budget(min)= 0
Outgoing=                          Period(hr)= 0
  My Login=                        Schedules= 1,2,3,4
  My Password= ********            Nailed-Up Connection= No
  Authen= CHAP/PAP
                                 Session Options:
                                   Edit Filter Sets= No
                                   Idle Timeout(sec)= 100


        Press ENTER to Confirm or ESC to Cancel:
```

You can apply up to four schedule sets, separated by commas, for one remote node. Change the schedule set numbers to your preference(s).

Figure 465 Applying Schedule Set(s) to a Remote Node (PPTP)

```
                    Menu 11.1 - Remote Node Profile

          Rem Node Name= ChangeMe              Route= IP
          Active= Yes

          Encapsulation= PPTP                Edit IP= No
          Service Type= Standard              Telco Option:
                                                Allocated Budget(min)= 0
          Outgoing=                             Period(hr)= 0
            My Login=                           Schedules= 1,2,3,4
            My Password= ********               Nailed-up Connections= No
            Retype to Confirm= ********
            Authen= CHAP/PAP
          PPTP:                                 Session Options:
            My IP Addr=                           Edit Filter Sets= No
            My IP Mask=                           Idle Timeout(sec)= 100
            Server IP Addr=
            Connection ID/Name=


           Press ENTER to Confirm or ESC to Cancel:
```

PART VII
Troubleshooting and Specifications

Troubleshooting (687)
Product Specifications (693)

48

Troubleshooting

This chapter offers some suggestions to solve problems you might encounter. The potential problems are divided into the following categories.

- Power, Hardware Connections, and LEDs
- ZyWALL Access and Login
- Internet Access

48.1 Power, Hardware Connections, and LEDs

The ZyWALL does not turn on. None of the LEDs turn on.

1. Make sure the ZyWALL is turned on.
2. Make sure you are using the power adaptor or cord included with the ZyWALL.
3. Make sure the power adaptor is connected to the ZyWALL and plugged in to an appropriate power source. Make sure the power source is turned on.
4. Turn the ZyWALL off and on or disconnect and re-connect the power adaptor to the ZyWALL.
5. If the problem continues, contact the vendor.

One of the LEDs does not behave as expected.

1. Make sure you understand the normal behavior of the LED. See Section 1.4.4 on page 56.
2. Check the hardware connections. See the Quick Start Guide.
3. Inspect your cables for damage. Contact the vendor to replace any damaged cables.
4. Turn the ZyWALL off and on or disconnect and re-connect the power adaptor to the ZyWALL.
5. If the problem continues, contact the vendor.

48.2 ZyWALL Access and Login

I forgot the LAN IP address for the ZyWALL.

1. The default LAN IP address is **192.168.1.1**.
2. Use the console port to log in to the ZyWALL.
3. If you changed the IP address and have forgotten it, you might get the IP address of the ZyWALL by looking up the IP address of the default gateway for your computer. To do this in most Windows computers, click **Start > Run**, enter **cmd**, and then enter **ipconfig**. The IP address of the **Default Gateway** might be the IP address of the ZyWALL (it depends on the network), so enter this IP address in your Internet browser.
4. If this does not work, you have to reset the device to its factory defaults. See Section 2.3 on page 59.

I forgot the password.

1. The default password is **1234**.
2. If this does not work, you have to reset the device to its factory defaults. See Section 2.3 on page 59.

I cannot see or access the **Login** screen in the web configurator.

1. Make sure you are using the correct IP address.
   - The default LAN IP address is 192.168.1.1.
   - Use the ZyWALL's LAN IP address when configuring from the LAN.
   - Use the ZyWALL's WAN IP address when configuring from the WAN.
   - If you changed the LAN IP address (Section 6.7 on page 150), use the new IP address.
   - If you changed the LAN IP address and have forgotten it, see the troubleshooting suggestions for I forgot the LAN IP address for the ZyWALL.
2. Check the hardware connections, and make sure the LEDs are behaving as expected. See the Quick Start Guide and Section 1.4.4 on page 56.
3. Make sure your Internet browser does not block pop-up windows and has JavaScripts and Java enabled. See Appendix A on page 705.
4. Make sure your computer's Ethernet adapter is installed and functioning properly.
5. Make sure your computer is in the same subnet as the ZyWALL. (If you know that there are routers between your computer and the ZyWALL, skip this step.)

- If there is a DHCP server on your network, make sure your computer is using a dynamic IP address. See Appendix B on page 713. Your ZyWALL is a DHCP server by default.

6 Reset the device to its factory defaults, and try to access the ZyWALL with the default IP address. See Section 2.3 on page 59.

7 If the problem continues, contact the network administrator or vendor, or try one of the advanced suggestions.

Advanced Suggestions

- Try to access the ZyWALL using another service, such as Telnet. If you can access the ZyWALL, check the remote management settings, firewall rules, and SMT filters to find out why the ZyWALL does not respond to HTTP.
- If your computer is connected to the **WAN** port or is connected wirelessly, use a computer that is connected to a **LAN** port.
- You may also need to clear your Internet browser's cache.

  In Internet Explorer, click **Tools** and then **Internet Options** to open the **Internet Options** screen.

  In the **General** tab, click **Delete** Files. In the pop-up window, select the **Delete all offline content** check box and click **OK**. Click **OK** in the **Internet Options** screen to close it.
- If you disconnect your computer from one device and connect it to another device that has the same IP address, your computer's ARP (Address Resolution Protocol) table may contain an entry that maps the management IP address to the previous device's MAC address).

  In Windows, use **arp -d** at the command prompt to delete all entries in your computer's ARP table.

I can see the **Login** screen, but I cannot log in to the ZyWALL.

1 Make sure you have entered the user name and password correctly. The default user name is **admin**, and the default password is **1234**. These fields are case-sensitive, so make sure [Caps Lock] is not on.

2 You cannot log in to the web configurator while someone is using the SMT, Telnet, or the console port to access the ZyWALL. Log out of the ZyWALL in the other session, or ask the person who is logged in to log out.

3 Turn the ZyWALL off and on or disconnect and re-connect the power adaptor or cord to the ZyWALL.

4 If this does not work, you have to reset the device to its factory defaults. See Section 2.3 on page 59.

I cannot access the SMT. / I cannot Telnet to the ZyWALL.

See the troubleshooting suggestions for I cannot see or access the Login screen in the web configurator. Ignore the suggestions about your browser.

I cannot use FTP to upload / download the configuration file. / I cannot use FTP to upload new firmware.

See the troubleshooting suggestions for I cannot see or access the Login screen in the web configurator. Ignore the suggestions about your browser.

48.3 Internet Access

I cannot get a WAN IP address from the ISP.

1. The ISP provides the WAN IP address after authenticating you. Authentication may be through the user name and password, the MAC address or the host name.

   The username and password apply to PPPoE and PPPoA encapsulation only. Make sure that you have entered the correct **Service Type**, **User Name** and **Password** (be sure to use the correct casing). Refer to the WAN setup chapter (web configurator or SMT).
2. Disconnect all the cables from your device, and follow the directions in the Quick Start Guide again.
3. If the problem continues, contact your ISP.

I cannot access the Internet.

1. Check the hardware connections, and make sure the LEDs are behaving as expected. See the Quick Start Guide and Section 1.4.4 on page 56.
2. Make sure you entered your ISP account information correctly in the wizard, WAN screen or SMT menu. These fields are case-sensitive, so make sure [Caps Lock] is not on.
3. If you are trying to access the Internet wirelessly, make sure the wireless settings in the wireless client are the same as the settings in the AP.
4. Disconnect all the cables from your device, and follow the directions in the Quick Start Guide again.
5. If the problem continues, contact your ISP.

I cannot access the Internet anymore. I had access to the Internet (with the ZyWALL), but my Internet connection is not available anymore.

1. Check the hardware connections, and make sure the LEDs are behaving as expected. See the Quick Start Guide and Section 1.4.4 on page 56.
2. Check the schedule rules. Refer to Chapter 47 on page 681 (SMT).
3. If you use PPPoA or PPPoE encapsulation, check the idle time-out setting. Refer to the Chapter 8 on page 165 (web configurator) or Chapter 32 on page 565 (SMT).
4. Reboot the ZyWALL.
5. If the problem continues, contact your ISP.

The Internet connection is slow or intermittent.

1. There might be a lot of traffic on the network. Look at the LEDs, and check Section 1.4.4 on page 56. If the ZyWALL is sending or receiving a lot of information, try closing some programs that use the Internet, especially peer-to-peer applications.
2. Check the signal strength. If the signal strength is low, try moving the ZyWALL closer to the AP if possible, and look around to see if there are any devices that might be interfering with the wireless network (for example, microwaves, other wireless networks, and so on).
3. Reboot the ZyWALL.
4. If the problem continues, contact the network administrator or vendor, or try one of the advanced suggestions.

Advanced Suggestions

- Check the settings for bandwidth management. If it is disabled, you might consider activating it. If it is enabled, you might consider changing the allocations.

49

Product Specifications

his chapter gives details about your ZyWALL's hardware and firmware features.

49.1 General ZyWALL Specifications

The following tables summarize the ZyWALL's hardware and firmware features.

Table 253 Hardware Specifications

Dimensions	220 (W) x 148 (D) x 30.5 (H) mm
Weight	517 g
Power Specification	12V DC
Ethernet Interface	
LAN/DMZ	Four LAN/DMZ/WLAN auto-negotiating, auto MDI/MDI-X 10/100 Mbps RJ-45 Ethernet ports.
WAN	One auto-negotiating, auto MDI/MDI-X 10/100 Mbps RJ-45 Ethernet port
Reset Button	Restores factory default settings
Console	RJ-45 port for RS-232 null modem connection
Dial Backup	RJ-45 port for RS-232 connection
Extension Card Slot	For installing a 3G card.
Antenna	Two 2dBi fixed antennas
Distance between the centers of the holes (for wall mounting) on the device's back.	165.75 mm
Screw size for wall-mounting	M4 Tap Screw, see Figure 467 on page 698.
Operation Temperature	0º C ~ 50º C
Storage Temperature	-30º C ~ 60º C
Operation Humidity	20% ~ 95% RH (non-condensing)
Storage Humidity	20% ~ 95% RH (non-condensing)
Certifications	EMC: FCC Part 15 Class B, CE-EMC Class B, C-Tick Class B, VCCI Class B Safety: CSA International, CE EN60950-1 (UL60950-1, CSA60950-1, EN60950-1, IEC60950-1)

Table 254 Firmware Specifications

FEATURE	DESCRIPTION
Default IP Address	192.168.1.1
Default Subnet Mask	255.255.255.0 (24 bits)
Default Password	1234
Default DHCP Pool	192.168.1.33 to 192.168.1.160
Device Management	Use the web configurator to easily configure the rich range of features on the ZyWALL.
Wireless Functionality	Allow the IEEE 802.11a, IEEE 802.11b and/or IEEE 802.11g wireless clients to connect to the ZyWALL wirelessly. Enable wireless security (WEP, WPA(2), WPA(2)-PSK) and/or MAC filtering to protect your wireless network.
Firmware Upgrade	Download new firmware (when available) from the ZyXEL web site and use the web configurator, an FTP or a TFTP tool to put it on the ZyWALL. Note: Only upload firmware for your specific model!
Configuration Backup & Restoration	Make a copy of the ZyWALL's configuration. You can put it back on the ZyWALL later if you decide to revert back to an earlier configuration.
Network Address Translation (NAT)	Each computer on your network must have its own unique IP address. Use NAT to convert your public IP address(es) to multiple private IP addresses for the computers on your network.
Port Forwarding	If you have a server (mail or web server for example) on your network, you can use this feature to let people access it from the Internet.
DHCP (Dynamic Host Configuration Protocol)	Use this feature to have the ZyWALL assign IP addresses, an IP default gateway and DNS servers to computers on your network.
Dynamic DNS Support	With Dynamic DNS (Domain Name System) support, you can use a fixed URL, www.zyxel.com for example, with a dynamic IP address. You must register for this service with a Dynamic DNS service provider.
IP Multicast	IP multicast is used to send traffic to a specific group of computers. The ZyWALL supports versions 1 and 2 of IGMP (Internet Group Management Protocol) used to join multicast groups (see RFC 2236).
IP Alias	IP alias allows you to subdivide a physical network into logical networks over the same Ethernet interface with the ZyWALL itself as the gateway for each subnet.
Time and Date	Get the current time and date from an external server when you turn on your ZyWALL. You can also set the time manually. These dates and times are then used in logs.
Logging and Tracing	Use packet tracing and logs for troubleshooting. You can send logs from the ZyWALL to an external syslog server.
PPPoE	PPPoE mimics a dial-up Internet access connection.
PPTP Encapsulation	Point-to-Point Tunneling Protocol (PPTP) enables secure transfer of data through a Virtual Private Network (VPN). The ZyWALL supports one PPTP connection at a time.
Universal Plug and Play (UPnP)	A UPnP-enabled device can dynamically join a network, obtain an IP address and convey its capabilities to other devices on the network.
RoadRunner Support	The ZyWALL supports Time Warner's RoadRunner Service in addition to standard cable modem services.

Table 254 Firmware Specifications

FEATURE	DESCRIPTION
Firewall	You can configure firewall on the ZyXEL Device for secure Internet access. When the firewall is on, by default, all incoming traffic from the Internet to your network is blocked unless it is initiated from your network. This means that probes from the outside to your network are not allowed, but you can safely browse the Internet and download files for example.
Content Filter	The ZyWALL blocks or allows access to web sites that you specify and blocks access to web sites with URLs that contain keywords that you specify. You can define time periods and days during which content filtering is enabled. You can also include or exclude particular computers on your network from content filtering. You can also subscribe to category-based content filtering that allows your ZyWALL to check web sites against an external database.
IPSec VPN	This allows you to establish a secure Virtual Private Network (VPN) tunnel to connect with business partners and branch offices using data encryption and the Internet without the expense of leased site-to-site lines. The ZyWALL VPN is based on the IPSec standard and is fully interoperable with other IPSec-based VPN products.
Bandwidth Management	You can efficiently manage traffic on your network by reserving bandwidth and giving priority to certain types of traffic and/or to particular computers.
Remote Managemet	This allows you to decide whether a service (HTTP or FTP traffic for example) from a computer on a network (LAN or WAN for example) can access the ZyWALL.

Table 255 Feature Specifications

FEATURE	SPECIFICATION
Local User Database Entries	32
Static DHCP Table Entries	32
Static Routes	30
Policy Routes	24
Concurrent Sessions (NAT sessions)	3,000
Address Mapping Rules	10
Port Forwarding Rules	20
Configurable IPSec VPN Network Policies (including network policies in the recycle bin)	10
Simultaneous IPSec VPN Connections	5
Bandwidth Management Classes	10
Bandwidth Management Class Levels	1
DNS Address Record Entries	30
DNS Name Server Record Entries	16
Firewall Throughput (with NAT)	24 Mbps
VPN (3DES) Throughput	24 Mbps

Table 255 Feature Specifications (continued)

FEATURE	SPECIFICATION
User Licenses	Unlimited
Output Power (Maximum)	IEEE 802.11a: 14 dBm at 54 Mbps OFDM IEEE 802.11b: 18 dBm at 11 Mbps CCK, QPSK, BPSK IEEE 802.11g: 17 dBm at 54 Mbps OFDM

49.2 Compatible 3G Cards

At the time of writing, you can use the following 3G wireless cards in the ZyWALL. The table also shows you the 3G features supported by the compatible 3G cards.

Table 256 3G Features Supported By Compatible 3G Cards

3G CARD / FEATURES	SIERRA WIRELESS AC595	SIERRA WIRELESS AC850/860	SIERRA WIRELESS AC875	HUAWEI E612	HUAWEI E620
Radio Technology	1xEV-DO Rev. A	HSDPA	HSDPA	UMTS	HSDPA
Maximum Speed (Downstream/Upstream)	3.1 Mbps/1.8 Mbps	1.8Mbps / 384Kbps	3.6Mbps / 384Kbps	384Kbps	1.8Mbps / 384Kbps
Interface	32-bit CardBus (Type II PC Card)	16-bit PC Card	32-bit CardBus (Type II PC Card)	32-bit CardBus (Type II PC Card)	32-bit CardBus (Type II PC Card)
SIM card authentication via the web configurator		V	V	V	V
Enabling of the internal modem on the 3G card	V				
Network type selection via the web configurator		V	V		
Manual or automatic service provider selection via the web configurator		V	V	V	V
Signal strength update even when data is transmitting	V		V	V	V
Network type update even when data is transmitting			V		
Roaming status update even when data is transmitting	V		V		
Dormant status update after the connection is established	V				
Budget Control	V	V	V	V	V
Bandwidth Management	V	V	V	V	V

49.3 3G Card Installation

Do not insert or remove a card with the ZyWALL turned on.

Make sure the ZyWALL is off before inserting or removing a 3G card (to avoid damage).
Slide the connector end of the card into the slot.

Only use a compatible 3G card.
Do not force, bend or twist the 3G card.

49.4 Wall-mounting Instructions

Complete the following steps to hang your ZyWALL on a wall.


See Table 253 on page 693 for the size of screws to use and how far apart to place them.

1. Select a position free of obstructions on a sturdy wall.
2. Drill two holes for the screws.

Be careful to avoid damaging pipes or cables located inside the wall when drilling holes for the screws.


3. Do not insert the screws all the way into the wall. Leave a small gap of about 0.5 cm between the heads of the screws and the wall.
4. Make sure the screws are snugly fastened to the wall. They need to hold the weight of the ZyWALL with the connection cables.
5. Align the holes on the back of the ZyWALL with the screws on the wall. Hang the ZyWALL on the screws.

Figure 466 Wall-mounting Example

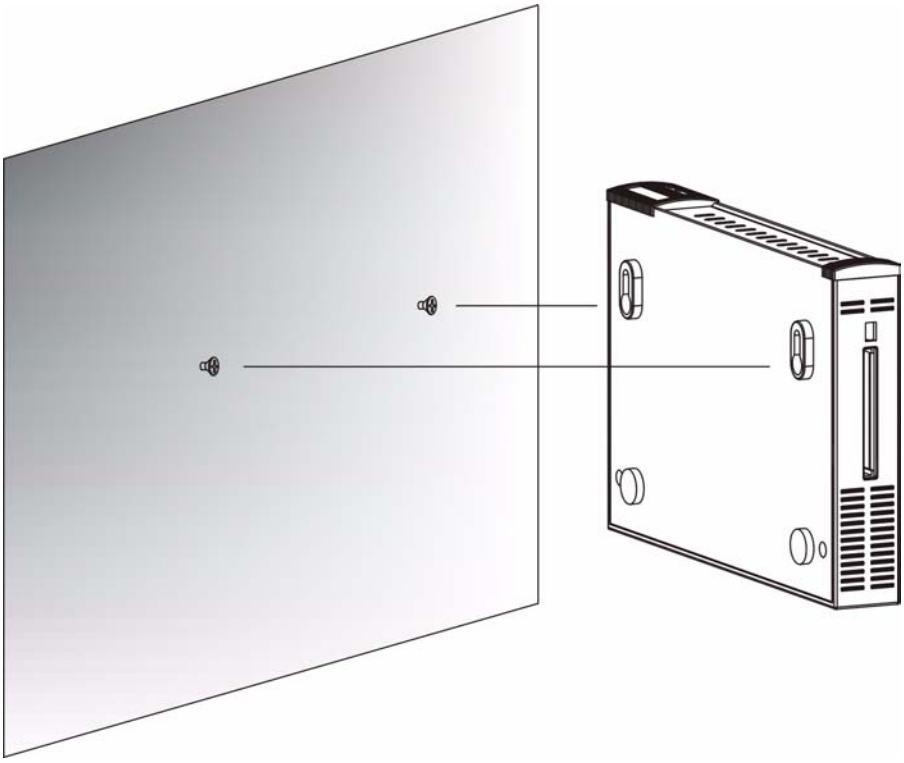

The following are dimensions of an M4 tap screw and masonry plug used for wall mounting. All measurements are in millimeters (mm).

Figure 467 Masonry Plug and M4 Tap Screw

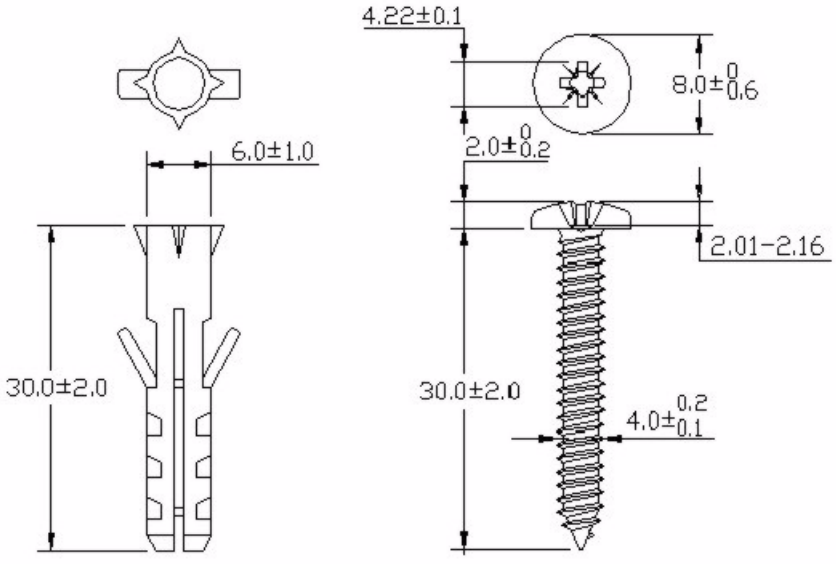

49.5 Power Adaptor Specifications

NORTH AMERICAN PLUG STANDARDS	
AC POWER ADAPTOR MODEL	PSA18R-120P (ZA)-R
INPUT POWER	100-240VAC, 50/60HZ, 0.5A
OUTPUT POWER	12VDC, 1.5A
POWER CONSUMPTION	18 W MAX.
SAFETY STANDARDS	UL, CUL (UL 60950-1 FIRST EDITIONCSA C22.2 NO. 60950-1-03 1ST.)

EUROPEAN PLUG STANDARDS	
AC POWER ADAPTOR MODEL	PSA18R-120P (ZE)-R
INPUT POWER	100-240VAC, 50/60HZ, 0.5A
OUTPUT POWER	12VDC, 1.5A
POWER CONSUMPTION	18 W MAX.
SAFETY STANDARDS	TUV, CE (EN 60950-1)

UNITED KINGDOM PLUG STANDARDS	
AC POWER ADAPTOR MODEL	PSA18R-120P (ZK)-R
INPUT POWER	100-240VAC, 50/60HZ, 0.5A
OUTPUT POWER	12VDC, 1.5A
POWER CONSUMPTION	18 W MAX.
SAFETY STANDARDS	TUV (BS EN 60950-1)

AUSTRALIA AND NEW ZEALAND PLUG STANDARDS	
AC POWER ADAPTOR MODEL	PSA18R-120P (ZS)-R
INPUT POWER	100-240VAC, 50/60HZ, 0.5A
OUTPUT POWER	12VDC, 1.5A
POWER CONSUMPTION	18 W MAX.
SAFETY STANDARDS	AS/NZ60950

JAPAN PLUG STANDARDS	
AC POWER ADAPTOR MODEL	PSA18R-120P (ZA)-R
INPUT POWER	100-240VAC, 50/60HZ, 0.5A
OUTPUT POWER	12VDC, 1.5A
POWER CONSUMPTION	18 W MAX.
SAFETY STANDARDS	JET

CHINA PLUG STANDARDS	
AC POWER ADAPTOR MODEL	PSA18R-120P (ZA)-R
INPUT POWER	100-240VAC, 50/60HZ, 0.5A

CHINA PLUG STANDARDS	
OUTPUT POWER	12VDC, 1.5A
POWER CONSUMPTION	18 W MAX.
SAFETY STANDARDS	CCC

49.6 Cable Pin Assignments

In a serial communications connection, generally a computer is DTE (Data Terminal Equipment) and a modem is DCE (Data Circuit-terminating Equipment). The ZyWALL is DCE when you connect a computer to the console port. The ZyWALL is DTE when you connect a modem to the dial backup port.[4]

The console cable and dial backup cable each have an RJ-45 connector and a DB-9 connector. The pin layout for the DB-9 connector end of the cables is as follows.

Figure 468 Console/Dial Backup Cable DB-9 End Pin Layout

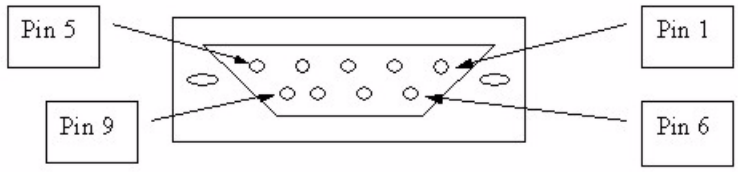


Table 257 Console Cable Pin Assignments

PIN DEFINITION	RJ-45 END	DB-9M (MALE) END
DSR	1	6
DTR	2	4
TX	3	3
RTS	4	7
GND	5	5
RX	6	2
CTS	7	8
DCD	8	1
	N/A	9

Table 258 Console Cable Pin Assignments



PIN DEFINITION	RJ-45 END	DB-9M (MALE) END
DTR	1	4
DSR	2	6

4. Pins 2,3 and 5 are used.

Table 258 Console Cable Pin Assignments

PIN DEFINITION	RJ-45 END	DB-9M (MALE) END
RX	3	2
CTS	4	8
GND	5	5
TX	6	3
RTS	7	7
DCD	8	1
	N/A	9

Table 259 Ethernet Cable Pin Assignments

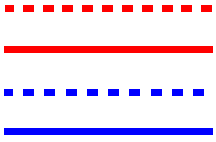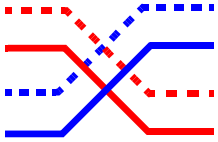WAN / LAN ETHERNET CABLE PIN LAYOUT					
Straight-through			**Crossover**		
(Switch)		(Adapter)	(Switch)		(Switch)
1 IRD +		1 OTD +	1 IRD +		1 IRD +
2 IRD -		2 OTD -	2 IRD -		2 IRD -
3 OTD +		3 IRD +	3 OTD +		3 OTD +
6 OTD -		6 IRD -	6 OTD -		6 OTD -

PART VIII Appendices and Index



The appendices provide general information. Some details may not apply to your ZyWALL.

Pop-up Windows, JavaScripts and Java Permissions (705)

Setting up Your Computer's IP Address (713)

IP Addresses and Subnetting (729)

Common Services (737)

Wireless LANs (741)

Importing Certificates (755)

Legal Information (765)

Customer Support (769)

Index (775)

A

Pop-up Windows, JavaScripts and Java Permissions

In order to use the web configurator you need to allow:

- Web browser pop-up windows from your device.
- JavaScripts (enabled by default).
- Java permissions (enabled by default).

Internet Explorer 6 screens are used here. Screens for other Internet Explorer versions may vary.

Internet Explorer Pop-up Blockers


You may have to disable pop-up blocking to log into your device.

Either disable pop-up blocking (enabled by default in Windows XP SP (Service Pack) 2) or allow pop-up blocking and create an exception for your device's IP address.

Disable Pop-up Blockers

1 In Internet Explorer, select **Tools**, **Pop-up Blocker** and then select **Turn Off Pop-up Blocker**.

Figure 469 Pop-up Blocker

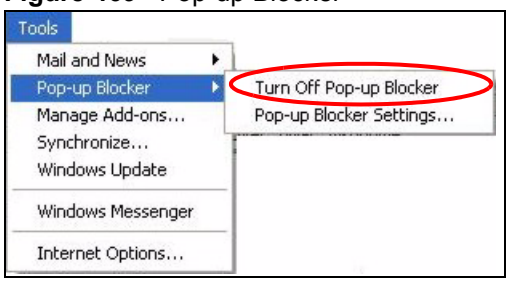


You can also check if pop-up blocking is disabled in the **Pop-up Blocker** section in the **Privacy** tab.

1 In Internet Explorer, select **Tools**, **Internet Options**, **Privacy**.

2 Clear the **Block pop-ups** check box in the **Pop-up Blocker** section of the screen. This disables any web pop-up blockers you may have enabled.

Figure 470 Internet Options: Privacy

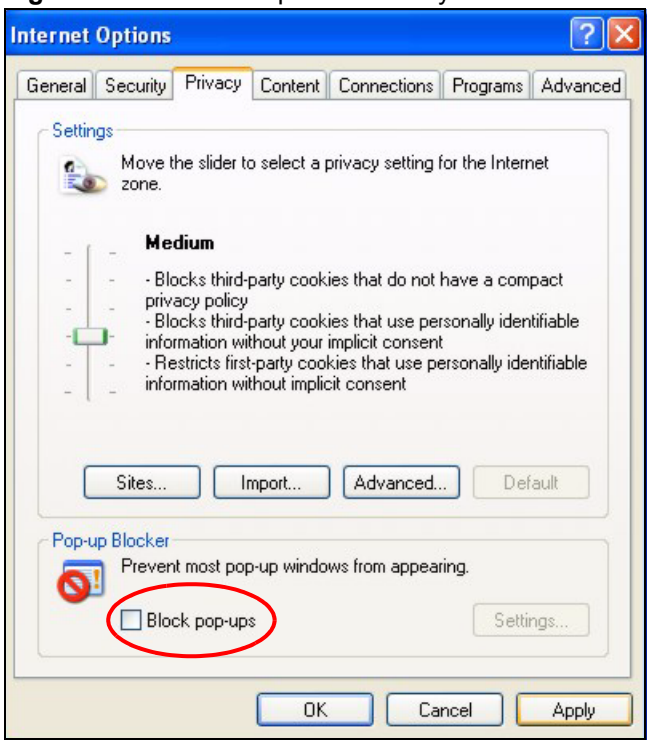

3 Click **Apply** to save this setting.


Enable Pop-up Blockers with Exceptions

Alternatively, if you only want to allow pop-up windows from your device, see the following steps.

1 In Internet Explorer, select **Tools**, **Internet Options** and then the **Privacy** tab.

2 Select **Settings…**to open the **Pop-up Blocker Settings** screen.


Figure 471 Internet Options: Privacy

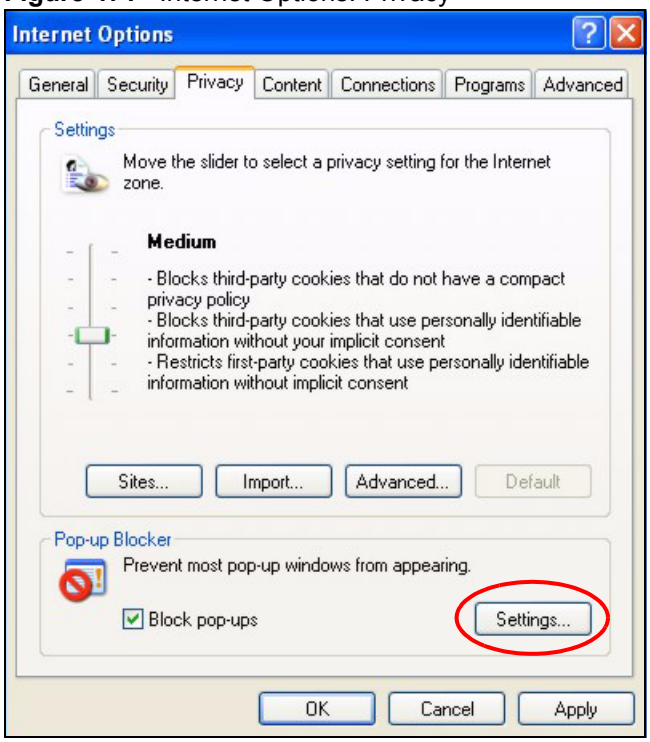

3 Type the IP address of your device (the web page that you do not want to have blocked) with the prefix "http://". For example, http://192.168.167.1.

4 Click **Add** to move the IP address to the list of **Allowed sites**.

Figure 472 Pop-up Blocker Settings

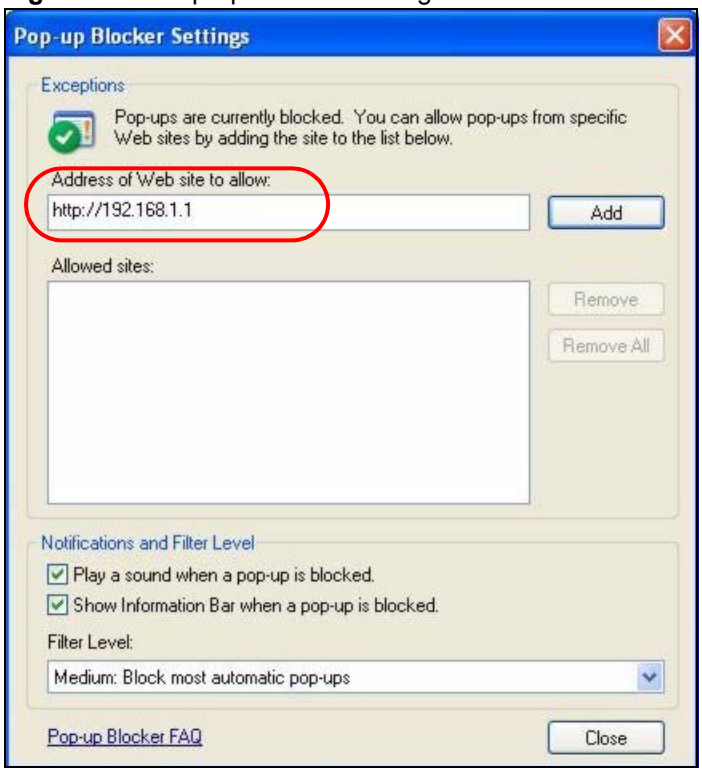


5 Click **Close** to return to the **Privacy** screen.
6 Click **Apply** to save this setting.

JavaScripts

If pages of the web configurator do not display properly in Internet Explorer, check that JavaScripts are allowed.


1 In Internet Explorer, click **Tools**, **Internet Options** and then the **Security** tab.

Figure 473 Internet Options: Security

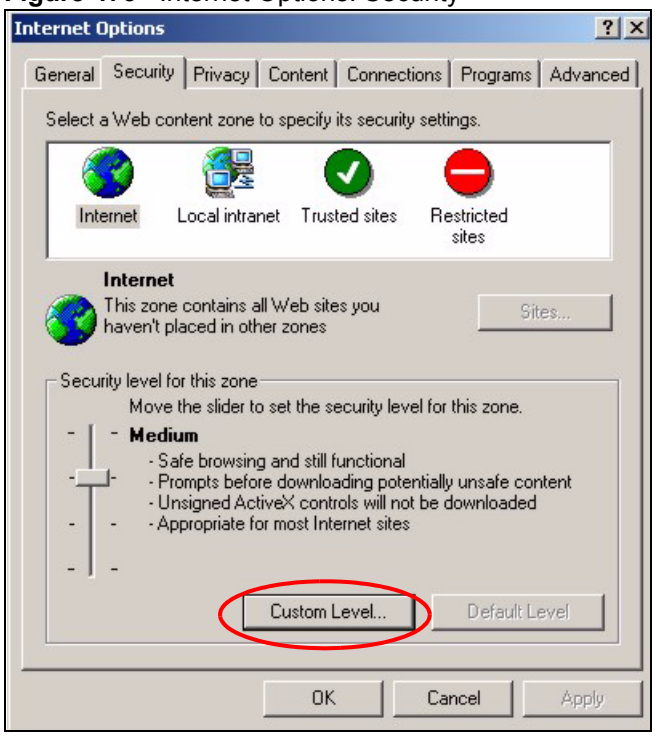

2 Click the **Custom Level...** button.
3 Scroll down to **Scripting**.
4 Under **Active scripting** make sure that **Enable** is selected (the default).
5 Under **Scripting of Java applets** make sure that **Enable** is selected (the default).
6 Click **OK** to close the window.


Figure 474 Security Settings - Java Scripting

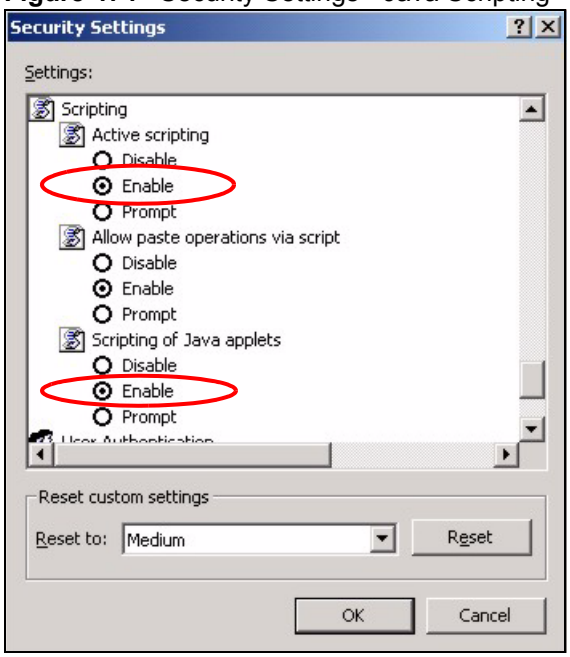

Java Permissions

1. From Internet Explorer, click **Tools**, **Internet Options** and then the **Security** tab.
2. Click the **Custom Level...** button.
3. Scroll down to **Microsoft VM**.
4. Under **Java permissions** make sure that a safety level is selected.
5. Click **OK** to close the window.


Figure 475 Security Settings - Java

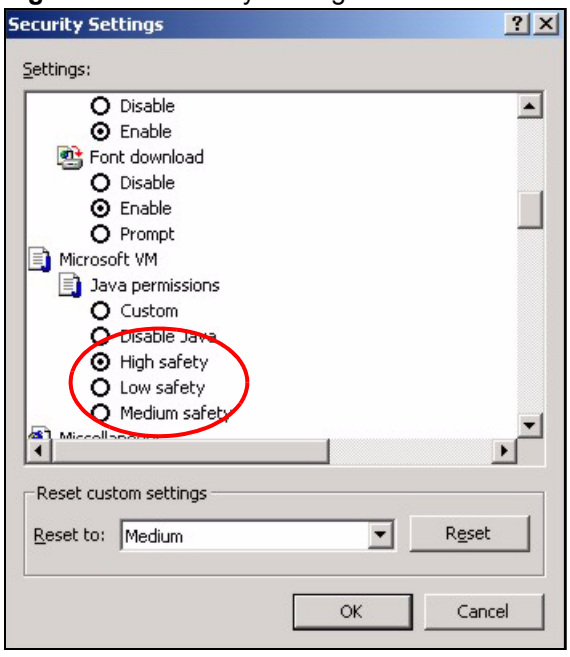

JAVA (Sun)

1 From Internet Explorer, click **Tools**, **Internet Options** and then the **Advanced** tab.
2 Make sure that **Use Java 2 for <applet>** under **Java (Sun)** is selected.
3 Click **OK** to close the window.

Figure 476 Java (Sun)

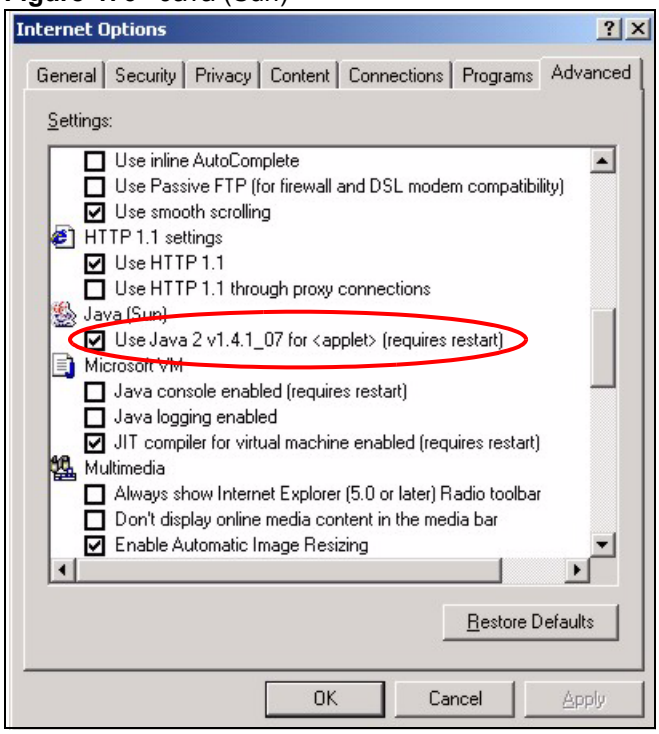


Mozilla Firefox

Mozilla Firefox 2.0 screens are used here. Screens for other versions may vary.


You can enable Java, Javascripts and pop-ups in one screen. Click **Tools,** then click **Options** in the screen that appears.

Figure 477 Mozilla Firefox: Tools > Options

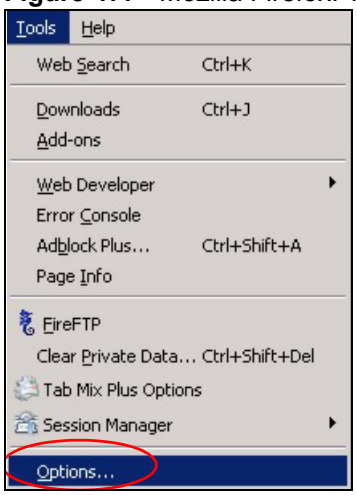

Click **Content**.to show the screen below. Select the check boxes as shown in the following screen.

Figure 478 Mozilla Firefox Content Security

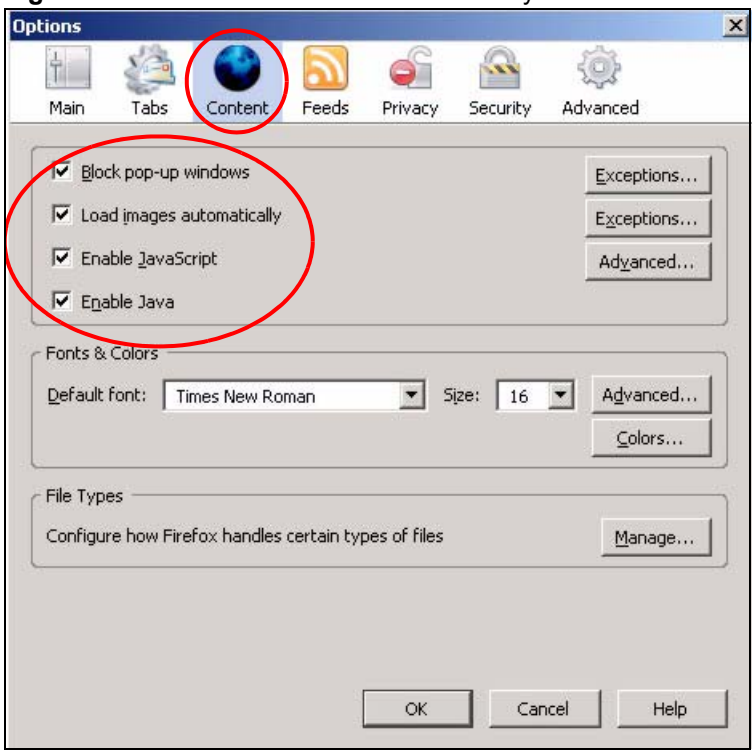

B

Setting up Your Computer's IP Address

All computers must have a 10M or 100M Ethernet adapter card and TCP/IP installed.

Windows 95/98/Me/NT/2000/XP, Macintosh OS 7 and later operating systems and all versions of UNIX/LINUX include the software components you need to install and use TCP/IP on your computer. Windows 3.1 requires the purchase of a third-party TCP/IP application package.

TCP/IP should already be installed on computers using Windows NT/2000/XP, Macintosh OS 7 and later operating systems.


After the appropriate TCP/IP components are installed, configure the TCP/IP settings in order to "communicate" with your network.

If you manually assign IP information instead of using dynamic assignment, make sure that your computers have IP addresses that place them in the same subnet as the ZyWALL's LAN port.

Windows 95/98/Me

Click **Start**, **Settings**, **Control Panel** and double-click the **Network** icon to open the **Network** window.

Figure 479 WIndows 95/98/Me: Network: Configuration

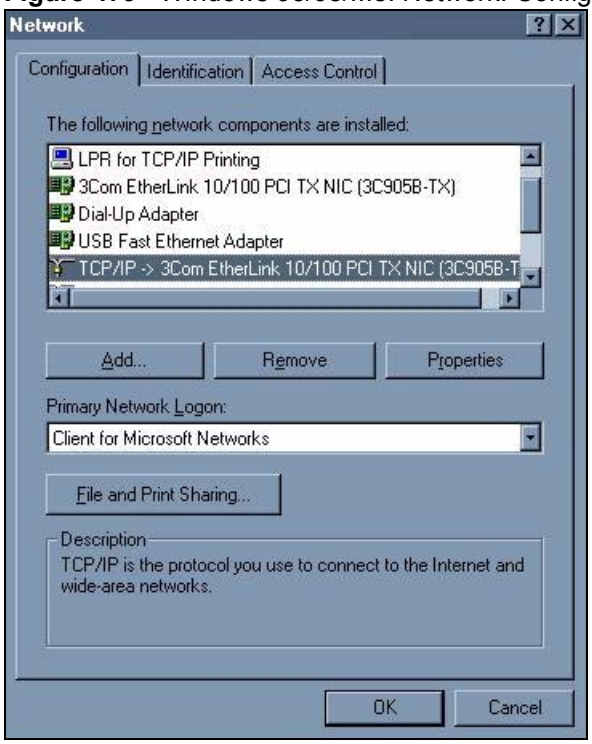

Installing Components

The **Network** window **Configuration** tab displays a list of installed components. You need a network adapter, the TCP/IP protocol and Client for Microsoft Networks.

If you need the adapter:

1. In the **Network** window, click **Add**.
2. Select **Adapter** and then click **Add**.
3. Select the manufacturer and model of your network adapter and then click **OK**.

If you need TCP/IP:

1. In the **Network** window, click **Add**.
2. Select **Protocol** and then click **Add**.
3. Select **Microsoft** from the list of **manufacturers**.
4. Select **TCP/IP** from the list of network protocols and then click **OK**.


If you need Client for Microsoft Networks:

1. Click **Add**.
2. Select **Client** and then click **Add**.
3. Select **Microsoft** from the list of manufacturers.
4. Select **Client for Microsoft Networks** from the list of network clients and then click **OK**.
5. Restart your computer so the changes you made take effect.

Configuring


1. In the **Network** window **Configuration** tab, select your network adapter's TCP/IP entry and click **Properties**
2. Click the **IP Address** tab.
   - If your IP address is dynamic, select **Obtain an IP address automatically**.
   - If you have a static IP address, select **Specify an IP address** and type your information into the **IP Address** and **Subnet Mask** fields.

Figure 480 Windows 95/98/Me: TCP/IP Properties: IP Address

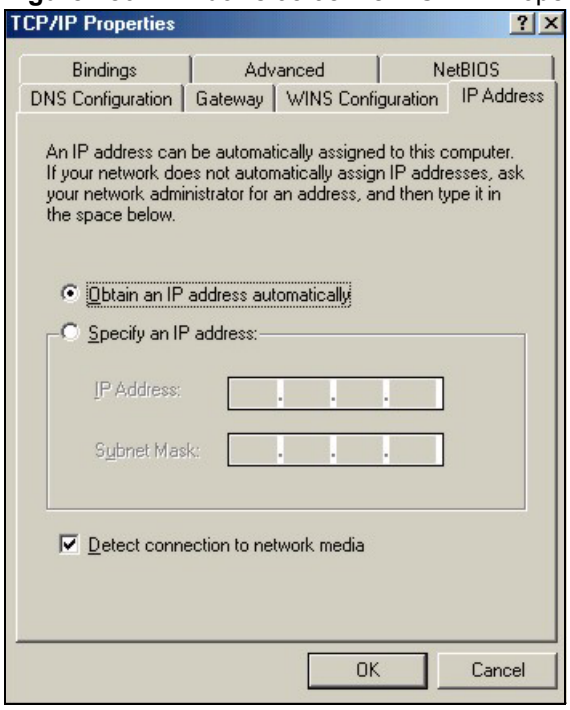

3. Click the **DNS** Configuration tab.
   - If you do not know your DNS information, select **Disable DNS**.
   - If you know your DNS information, select **Enable DNS** and type the information in the fields below (you may not need to fill them all in).

Figure 481 Windows 95/98/Me: TCP/IP Properties: DNS Configuration

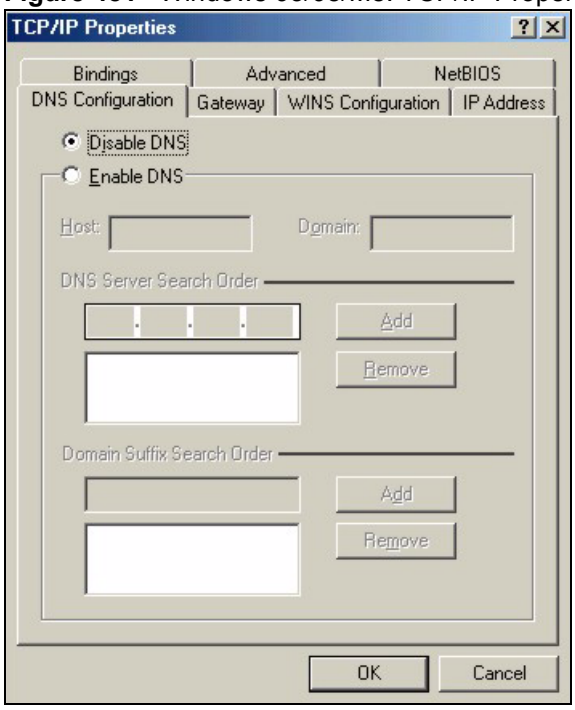

4 Click the **Gateway** tab.
   - If you do not know your gateway's IP address, remove previously installed gateways.
   - If you have a gateway IP address, type it in the **New gateway field** and click **Add**.
5 Click **OK** to save and close the **TCP/IP Properties** window.
6 Click **OK** to close the **Network** window. Insert the Windows CD if prompted.
7 Turn on your ZyWALL and restart your computer when prompted.

Verifying Settings


1 Click **Start** and then **Run**.
2 In the **Run** window, type "winipcfg" and then click **OK** to open the **IP Configuration** window.
3 Select your network adapter. You should see your computer's IP address, subnet mask and default gateway.

Windows 2000/NT/XP

The following example figures use the default Windows XP GUI theme.

1 Click **start** (**Start** in Windows 2000/NT), **Settings**, **Control Panel**.

Figure 482 Windows XP: Start Menu

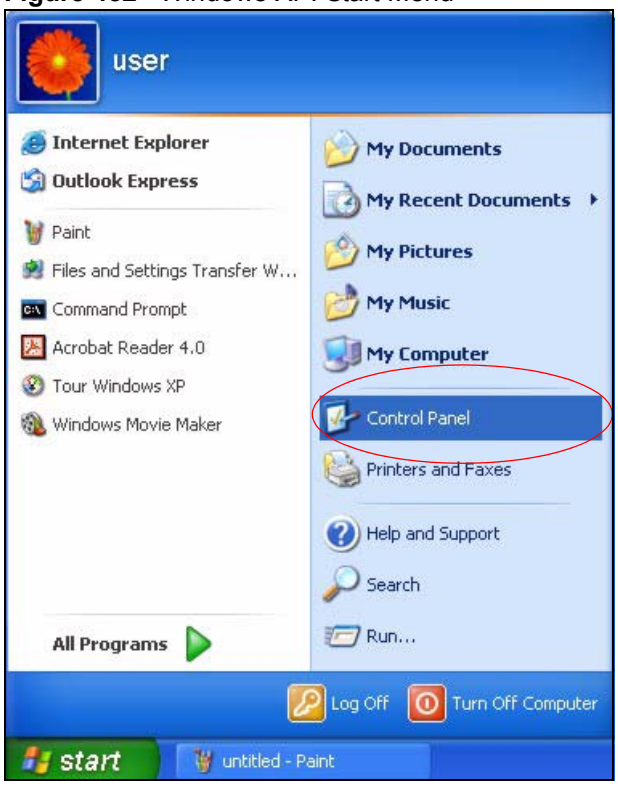


2 In the **Control Panel**, double-click **Network Connections** (**Network and Dial-up Connections** in Windows 2000/NT).

Figure 483 Windows XP: Control Panel




3 Right-click **Local Area Connection** and then click **Properties**.

Figure 484 Windows XP: Control Panel: Network Connections: Properties

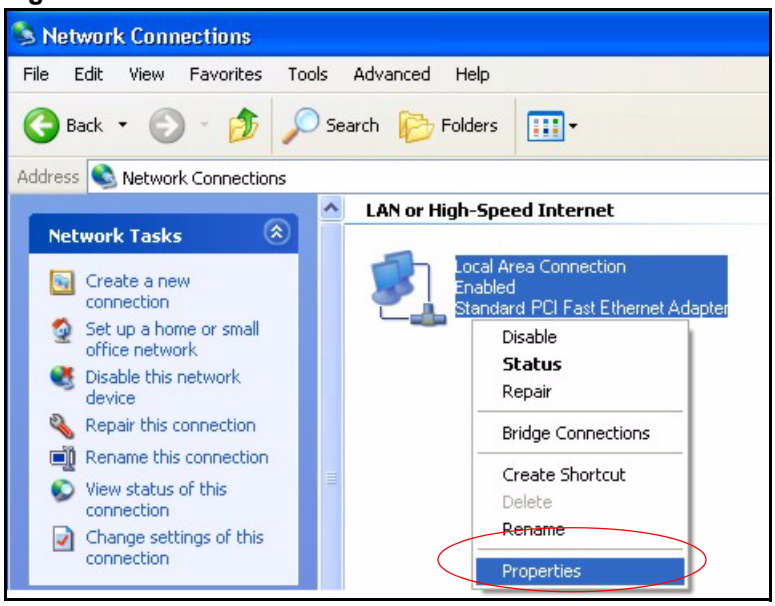

4 Select **Internet Protocol (TCP/IP)** (under the **General** tab in Win XP) and then click **Properties**.


Figure 485 Windows XP: Local Area Connection Properties

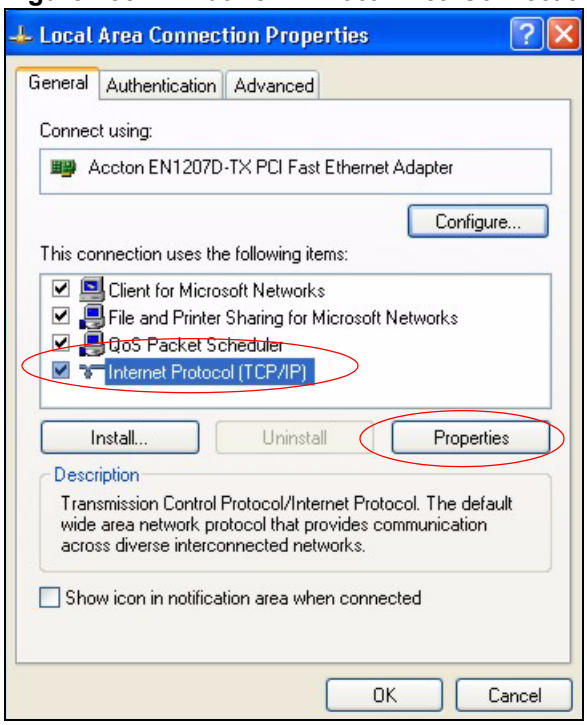

5 The **Internet Protocol TCP/IP Properties** window opens (the **General tab** in Windows XP).

- If you have a dynamic IP address click **Obtain an IP address automatically**.
- If you have a static IP address click **Use the following IP Address** and fill in the **IP address**, **Subnet mask**, and **Default gateway** fields.
- Click **Advanced**.

Figure 486 Windows XP: Internet Protocol (TCP/IP) Properties

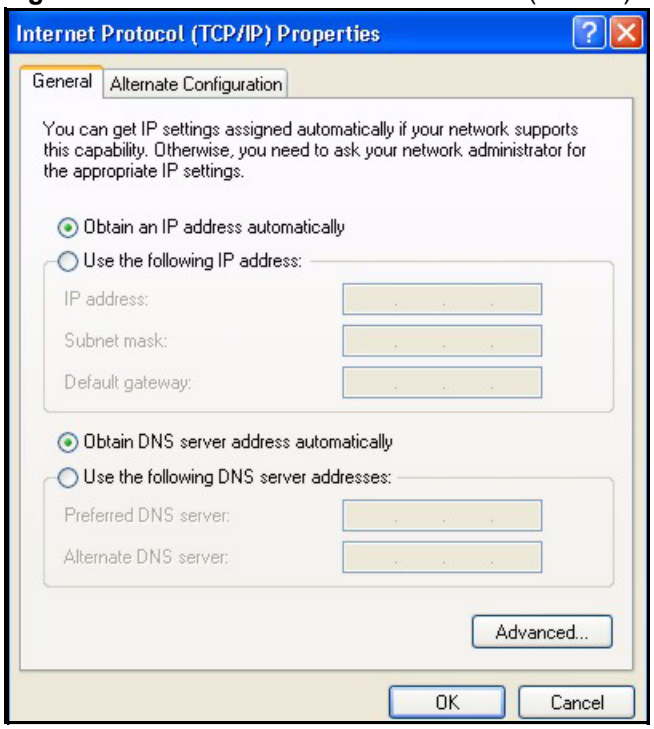


6 If you do not know your gateway's IP address, remove any previously installed gateways in the **IP Settings** tab and click **OK**.

Do one or more of the following if you want to configure additional IP addresses:

- In the **IP Settings** tab, in IP addresses, click **Add**.
- In **TCP/IP Address**, type an IP address in **IP address** and a subnet mask in **Subnet mask**, and then click **Add**.
- Repeat the above two steps for each IP address you want to add.
- Configure additional default gateways in the **IP Settings** tab by clicking **Add** in **Default gateways**.
- In **TCP/IP Gateway Address**, type the IP address of the default gateway in **Gateway**. To manually configure a default metric (the number of transmission hops), clear the **Automatic metric** check box and type a metric in **Metric**.
- Click **Add**.
- Repeat the previous three steps for each default gateway you want to add.
- Click **OK** when finished.

Figure 487 Windows XP: Advanced TCP/IP Properties

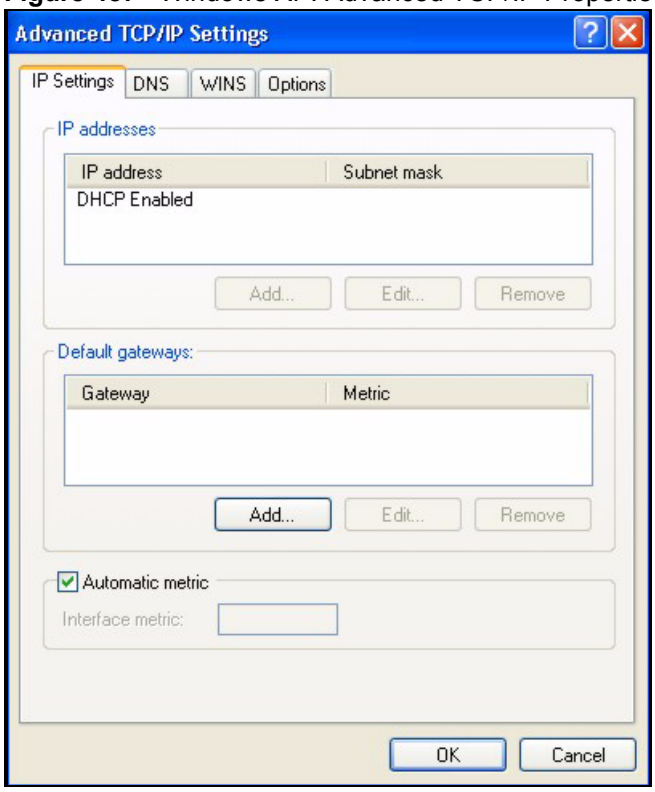


7 In the **Internet Protocol TCP/IP Properties** window (the **General** tab in Windows XP):

- Click **Obtain DNS server address automatically** if you do not know your DNS server IP address(es).
- If you know your DNS server IP address(es), click **Use the following DNS server addresses**, and type them in the **Preferred DNS server** and **Alternate DNS server** fields.

  If you have previously configured DNS servers, click **Advanced** and then the **DNS** tab to order them.

Figure 488 Windows XP: Internet Protocol (TCP/IP) Properties

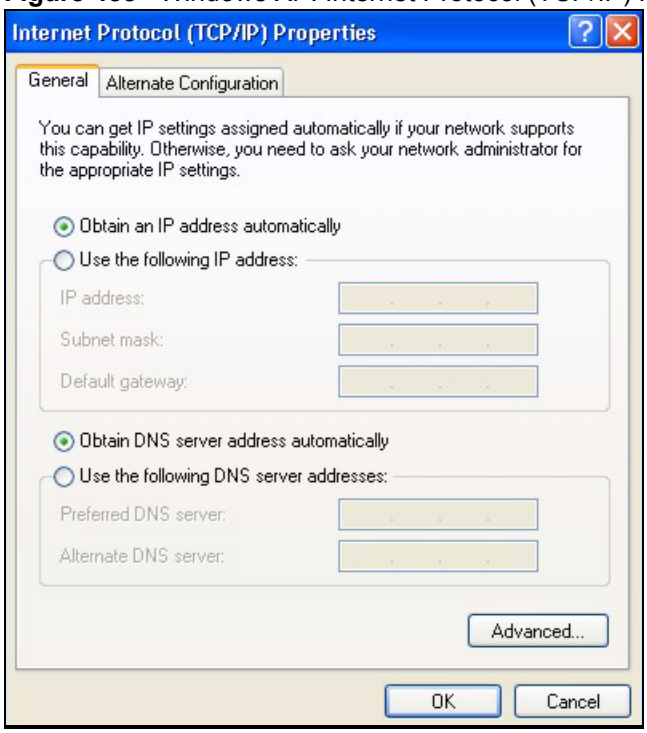

8 Click **OK** to close the **Internet Protocol (TCP/IP) Properties** window.

9 Click **Close** (**OK** in Windows 2000/NT) to close the **Local Area Connection Properties** window.

10 Close the **Network Connections** window (**Network and Dial-up Connections** in Windows 2000/NT).

11 Turn on your ZyWALL and restart your computer (if prompted).

Verifying Settings


1 Click **Start**, **All Programs**, **Accessories** and then **Command Prompt**.

2 In the **Command Prompt** window, type "ipconfig" and then press [ENTER]. You can also open **Network Connections**, right-click a network connection, click **Status** and then click the **Support** tab.

Macintosh OS 8/9


1 Click the **Apple** menu, **Control Panel** and double-click **TCP/IP** to open the **TCP/IP Control Panel**.

Figure 489 Macintosh OS 8/9: Apple Menu

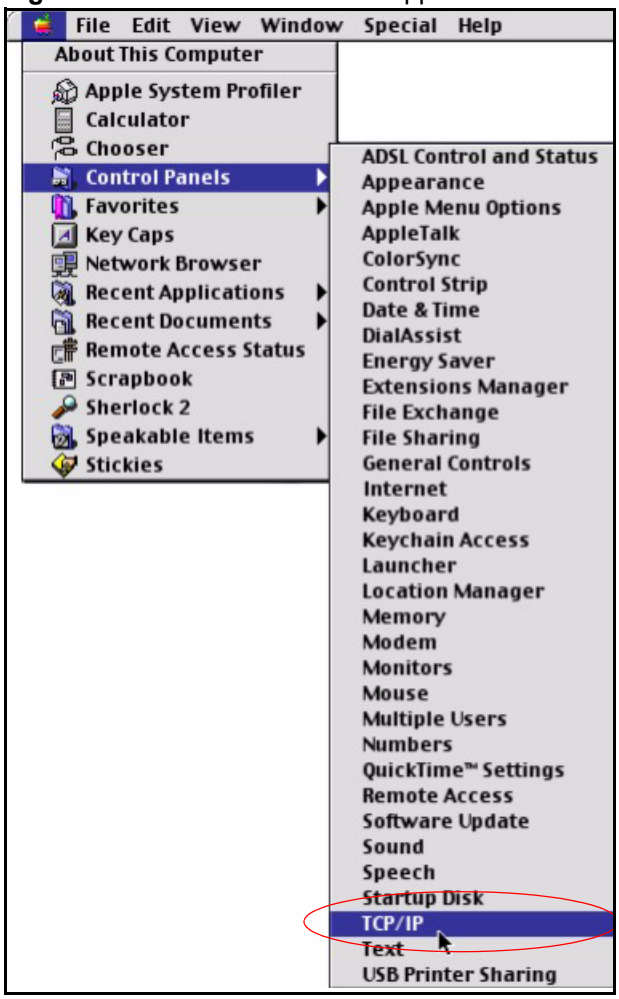

2 Select **Ethernet built-in** from the **Connect via** list.

Figure 490 Macintosh OS 8/9: TCP/IP

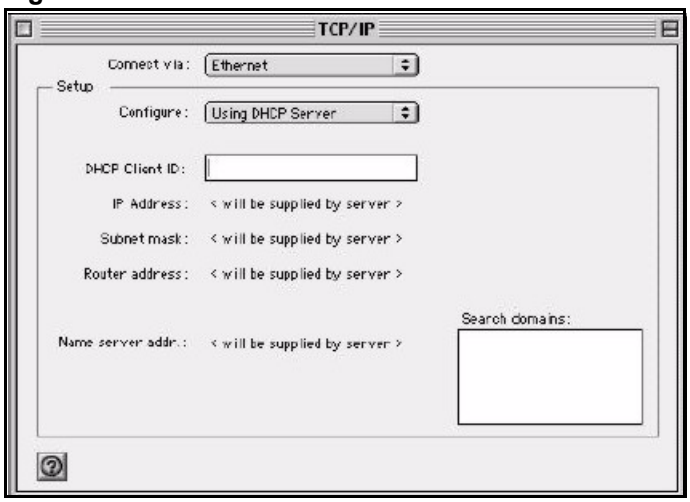

3 For dynamically assigned settings, select **Using DHCP Server** from the **Configure:** list.

4 For statically assigned settings, do the following:

- From the **Configure** box, select **Manually**.

- Type your IP address in the **IP Address** box.
- Type your subnet mask in the **Subnet mask** box.
- Type the IP address of your ZyWALL in the **Router address** box.

5 Close the **TCP/IP Control Panel**.

6 Click **Save** if prompted, to save changes to your configuration.

7 Turn on your ZyWALL and restart your computer (if prompted).


Verifying Settings

Check your TCP/IP properties in the **TCP/IP Control Panel** window.

Macintosh OS X

1 Click the **Apple** menu, and click **System Preferences** to open the **System Preferences** window.

Figure 491 Macintosh OS X: Apple Menu

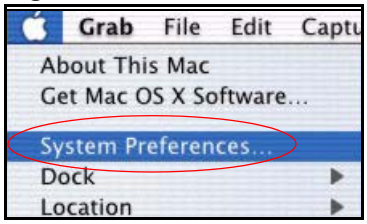


2 Click **Network** in the icon bar.

- Select **Automatic** from the **Location** list.
- Select **Built-in Ethernet** from the **Show** list.
- Click the **TCP/IP** tab.

3 For dynamically assigned settings, select **Using DHCP** from the **Configure** list.

Figure 492 Macintosh OS X: Network

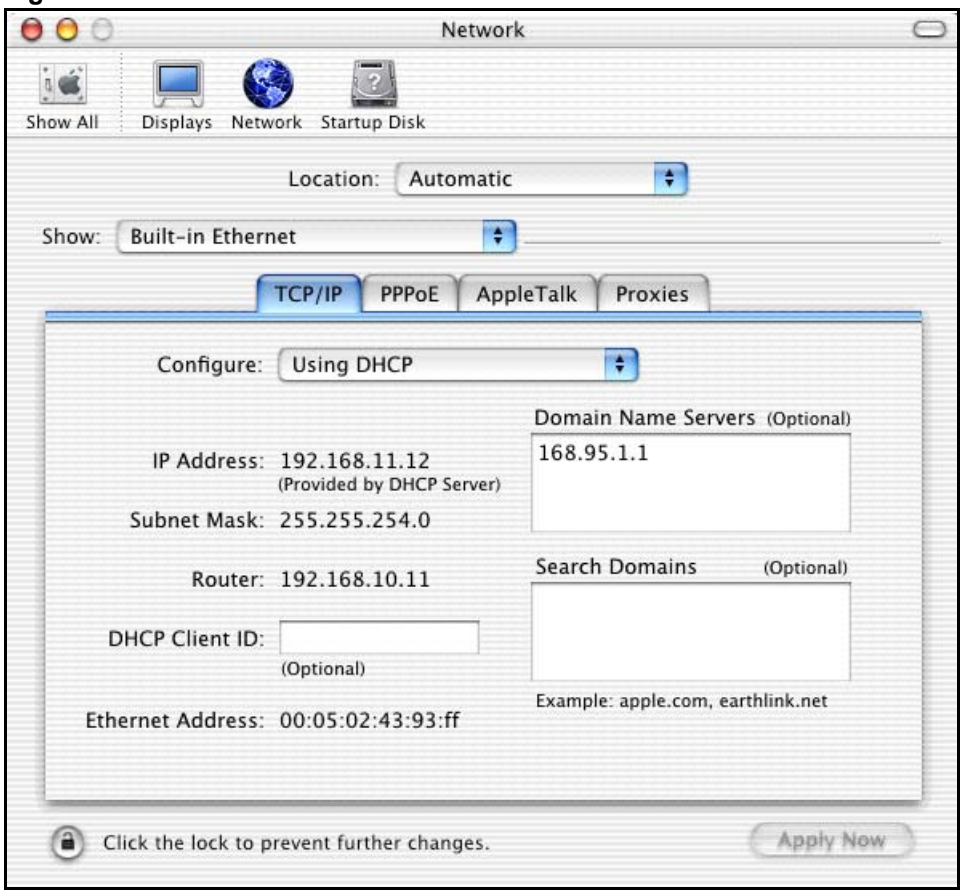

4 For statically assigned settings, do the following:
   - From the **Configure** box, select **Manually**.
   - Type your IP address in the **IP Address** box.
   - Type your subnet mask in the **Subnet mask** box.
   - Type the IP address of your ZyWALL in the **Router address** box.
5 Click **Apply Now** and close the window.
6 Turn on your ZyWALL and restart your computer (if prompted).

Verifying Settings

Check your TCP/IP properties in the **Network** window.

Linux

This section shows you how to configure your computer's TCP/IP settings in Red Hat Linux 9.0. Procedure, screens and file location may vary depending on your Linux distribution and release version.


Make sure you are logged in as the root administrator.

Using the K Desktop Environment (KDE)

Follow the steps below to configure your computer IP address using the KDE.

1 Click the Red Hat button (located on the bottom left corner), select **System Setting** and click **Network**.

Figure 493 Red Hat 9.0: KDE: Network Configuration: Devices

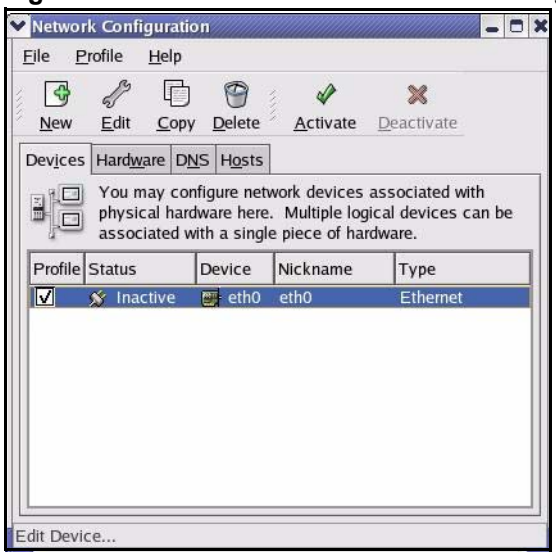

2 Double-click on the profile of the network card you wish to configure. The **Ethernet Device General** screen displays as shown.

Figure 494 Red Hat 9.0: KDE: Ethernet Device: General




- If you have a dynamic IP address, click **Automatically obtain IP address settings with** and select **dhcp** from the drop down list.
- If you have a static IP address, click **Statically set IP Addresses** and fill in the **Address**, **Subnet mask**, and **Default Gateway Address** fields.

3 Click **OK** to save the changes and close the **Ethernet Device General** screen.

4 If you know your DNS server IP address(es), click the **DNS** tab in the **Network Configuration** screen. Enter the DNS server information in the fields provided.

Figure 495 Red Hat 9.0: KDE: Network Configuration: DNS

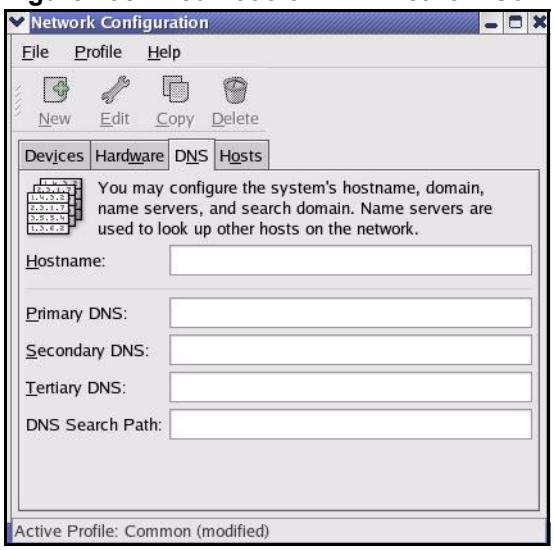

5 Click the **Devices** tab.

6 Click the **Activate** button to apply the changes. The following screen displays. Click **Yes to save the changes in all screens.**

Figure 496 Red Hat 9.0: KDE: Network Configuration: Activate



7 After the network card restart process is complete, make sure the **Status** is **Active** in the **Network Configuration** screen.

Using Configuration Files

Follow the steps below to edit the network configuration files and set your computer IP address.

1 Assuming that you have only one network card on the computer, locate the `ifconfig-eth0` configuration file (where `eth0` is the name of the Ethernet card). Open the configuration file with any plain text editor.

- If you have a dynamic IP address, enter **`dhcp`** in the `BOOTPROTO=` field. The following figure shows an example.

Figure 497 Red Hat 9.0: Dynamic IP Address Setting in ifconfig-eth0

```
DEVICE=eth0
ONBOOT=yes
BOOTPROTO=dhcp
USERCTL=no
PEERDNS=yes
TYPE=Ethernet
```

- If you have a static IP address, enter **static** in the BOOTPROTO= field. Type IPADDR= followed by the IP address (in dotted decimal notation) and type NETMASK= followed by the subnet mask. The following example shows an example where the static IP address is 192.168.1.10 and the subnet mask is 255.255.255.0.

Figure 498 Red Hat 9.0: Static IP Address Setting in ifconfig-eth0

```
DEVICE=eth0
ONBOOT=yes
BOOTPROTO=static
IPADDR=192.168.1.10
NETMASK=255.255.255.0
USERCTL=no
PEERDNS=yes
TYPE=Ethernet
```

2 If you know your DNS server IP address(es), enter the DNS server information in the `resolv.conf` file in the `/etc` directory. The following figure shows an example where two DNS server IP addresses are specified.

Figure 499 Red Hat 9.0: DNS Settings in resolv.conf

```
nameserver 172.23.5.1
nameserver 172.23.5.2
```

3 After you edit and save the configuration files, you must restart the network card. Enter `./network restart` in the `/etc/rc.d/init.d` directory. The following figure shows an example.

Figure 500 Red Hat 9.0: Restart Ethernet Card

```
[root@localhost init.d]# network restart

Shutting down interface eth0:                [OK]
Shutting down loopback interface:            [OK]
Setting network parameters:                  [OK]
Bringing up loopback interface:              [OK]
Bringing up interface eth0:                  [OK]
```

Verifying Settings

Enter `ifconfig` in a terminal screen to check your TCP/IP properties.

Figure 501 Red Hat 9.0: Checking TCP/IP Properties

```
[root@localhost]# ifconfig
eth0      Link encap:Ethernet  HWaddr 00:50:BA:72:5B:44
          inet addr:172.23.19.129  Bcast:172.23.19.255  Mask:255.255.255.0
          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          RX packets:717 errors:0 dropped:0 overruns:0 frame:0
          TX packets:13 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:100
          RX bytes:730412 (713.2 Kb)  TX bytes:1570 (1.5 Kb)
          Interrupt:10 Base address:0x1000
[root@localhost]#
```

C

IP Addresses and Subnetting

This appendix introduces IP addresses and subnet masks.

IP addresses identify individual devices on a network. Every networking device (including computers, servers, routers, printers, etc.) needs an IP address to communicate across the network. These networking devices are also known as hosts.

Subnet masks determine the maximum number of possible hosts on a network. You can also use subnet masks to divide one network into multiple sub-networks.

Introduction to IP Addresses

One part of the IP address is the network number, and the other part is the host ID. In the same way that houses on a street share a common street name, the hosts on a network share a common network number. Similarly, as each house has its own house number, each host on the network has its own unique identifying number - the host ID. Routers use the network number to send packets to the correct network, while the host ID determines to which host on the network the packets are delivered.


Structure

An IP address is made up of four parts, written in dotted decimal notation (for example, 192.168.1.1). Each of these four parts is known as an octet. An octet is an eight-digit binary number (for example 11000000, which is 192 in decimal notation).

Therefore, each octet has a possible range of 00000000 to 11111111 in binary, or 0 to 255 in decimal.

The following figure shows an example IP address in which the first three octets (192.168.1) are the network number, and the fourth octet (16) is the host ID.

Figure 502 Network Number and Host ID

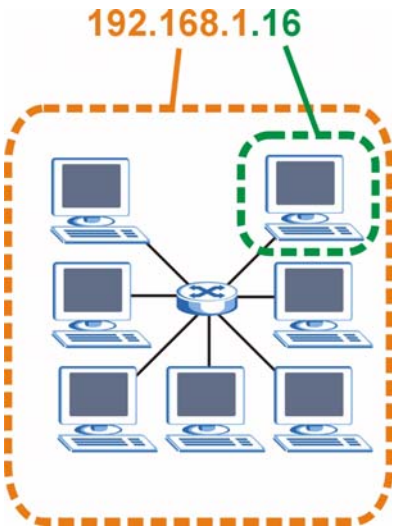

How much of the IP address is the network number and how much is the host ID varies according to the subnet mask.

Subnet Masks

A subnet mask is used to determine which bits are part of the network number, and which bits are part of the host ID (using a logical AND operation). The term "subnet" is short for "sub-network".

A subnet mask has 32 bits. If a bit in the subnet mask is a "1" then the corresponding bit in the IP address is part of the network number. If a bit in the subnet mask is "0" then the corresponding bit in the IP address is part of the host ID.

The following example shows a subnet mask identifying the network number (in bold text) and host ID of an IP address (192.168.1.2 in decimal).

Table 260 IP Address Network Number and Host ID Example

	1ST OCTET: (192)	2ND OCTET: (168)	3RD OCTET: (1)	4TH OCTET (2)
IP Address (Binary)	11000000	10101000	00000001	00000010
Subnet Mask (Binary)	**11111111**	**11111111**	**11111111**	00000000
Network Number	**11000000**	**10101000**	**00000001**	
Host ID				00000010

By convention, subnet masks always consist of a continuous sequence of ones beginning from the leftmost bit of the mask, followed by a continuous sequence of zeros, for a total number of 32 bits.

Subnet masks can be referred to by the size of the network number part (the bits with a "1" value). For example, an "8-bit mask" means that the first 8 bits of the mask are ones and the remaining 24 bits are zeroes.

Subnet masks are expressed in dotted decimal notation just like IP addresses. The following examples show the binary and decimal notation for 8-bit, 16-bit, 24-bit and 29-bit subnet masks.

Table 261 Subnet Masks

	BINARY				DECIMAL
	1ST OCTET	2ND OCTET	3RD OCTET	4TH OCTET	
8-bit mask	11111111	00000000	00000000	00000000	255.0.0.0
16-bit mask	11111111	11111111	00000000	00000000	255.255.0.0
24-bit mask	11111111	11111111	11111111	00000000	255.255.255.0
29-bit mask	11111111	11111111	11111111	11111000	255.255.255.248

Network Size

The size of the network number determines the maximum number of possible hosts you can have on your network. The larger the number of network number bits, the smaller the number of remaining host ID bits.

An IP address with host IDs of all zeros is the IP address of the network (192.168.1.0 with a 24-bit subnet mask, for example). An IP address with host IDs of all ones is the broadcast address for that network (192.168.1.255 with a 24-bit subnet mask, for example).

As these two IP addresses cannot be used for individual hosts, calculate the maximum number of possible hosts in a network as follows:

Table 262 Maximum Host Numbers

SUBNET MASK		HOST ID SIZE		MAXIMUM NUMBER OF HOSTS
8 bits	255.0.0.0	24 bits	$2^{24} - 2$	16777214
16 bits	255.255.0.0	16 bits	$2^{16} - 2$	65534
24 bits	255.255.255.0	8 bits	$2^{8} - 2$	254
29 bits	255.255.255.248	3 bits	$2^{3} - 2$	6

Notation

Since the mask is always a continuous number of ones beginning from the left, followed by a continuous number of zeros for the remainder of the 32 bit mask, you can simply specify the number of ones instead of writing the value of each octet. This is usually specified by writing a "/" followed by the number of bits in the mask after the address.

For example, 192.1.1.0 /25 is equivalent to saying 192.1.1.0 with subnet mask 255.255.255.128.

The following table shows some possible subnet masks using both notations.

Table 263 Alternative Subnet Mask Notation

SUBNET MASK	ALTERNATIVE NOTATION	LAST OCTET (BINARY)	LAST OCTET (DECIMAL)
255.255.255.0	/24	0000 0000	0
255.255.255.128	/25	1000 0000	128

Table 263 Alternative Subnet Mask Notation (continued)

SUBNET MASK	ALTERNATIVE NOTATION	LAST OCTET (BINARY)	LAST OCTET (DECIMAL)
255.255.255.192	/26	1100 0000	192
255.255.255.224	/27	1110 0000	224
255.255.255.240	/28	1111 0000	240
255.255.255.248	/29	1111 1000	248
255.255.255.252	/30	1111 1100	252


Subnetting

You can use subnetting to divide one network into multiple sub-networks. In the following example a network administrator creates two sub-networks to isolate a group of servers from the rest of the company network for security reasons.

In this example, the company network address is 192.168.1.0. The first three octets of the address (192.168.1) are the network number, and the remaining octet is the host ID, allowing a maximum of $2^8 - 2$ or 254 possible hosts.

The following figure shows the company network before subnetting.

Figure 503 Subnetting Example: Before Subnetting

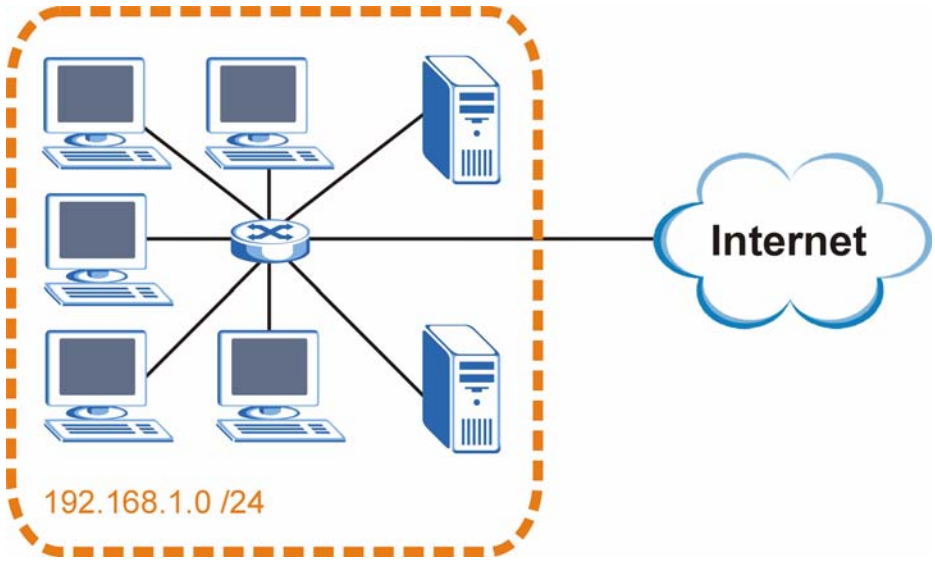


You can "borrow" one of the host ID bits to divide the network 192.168.1.0 into two separate sub-networks. The subnet mask is now 25 bits (255.255.255.128 or /25).

The "borrowed" host ID bit can have a value of either 0 or 1, allowing two subnets; 192.168.1.0 /25 and 192.168.1.128 /25.

The following figure shows the company network after subnetting. There are now two sub-networks, **A** and **B**.

Figure 504 Subnetting Example: After Subnetting

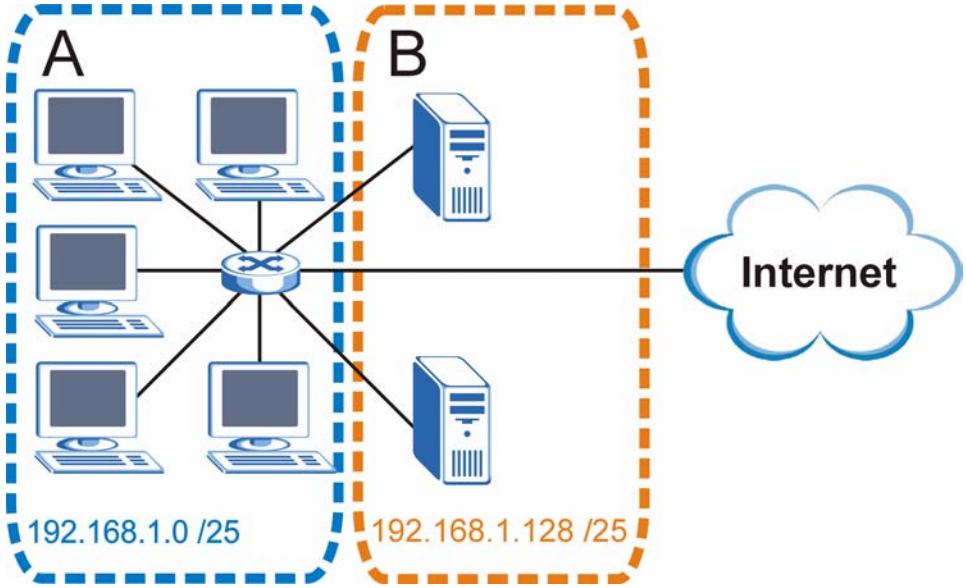

In a 25-bit subnet the host ID has 7 bits, so each sub-network has a maximum of $2^7 - 2$ or 126 possible hosts (a host ID of all zeroes is the subnet's address itself, all ones is the subnet's broadcast address).

192.168.1.0 with mask 255.255.255.128 is subnet **A** itself, and 192.168.1.127 with mask 255.255.255.128 is its broadcast address. Therefore, the lowest IP address that can be assigned to an actual host for subnet **A** is 192.168.1.1 and the highest is 192.168.1.126.

Similarly, the host ID range for subnet **B** is 192.168.1.129 to 192.168.1.254.

Example: Four Subnets

The previous example illustrated using a 25-bit subnet mask to divide a 24-bit address into two subnets. Similarly, to divide a 24-bit address into four subnets, you need to "borrow" two host ID bits to give four possible combinations (00, 01, 10 and 11). The subnet mask is 26 bits (11111111.11111111.11111111.**11**000000) or 255.255.255.192.

Each subnet contains 6 host ID bits, giving 2^6 - 2 or 62 hosts for each subnet (a host ID of all zeroes is the subnet itself, all ones is the subnet's broadcast address).

Table 264 Subnet 1

IP/SUBNET MASK	NETWORK NUMBER	LAST OCTET BIT VALUE
IP Address (Decimal)	192.168.1.	0
IP Address (Binary)	11000000.10101000.00000001.	**00**000000
Subnet Mask (Binary)	11111111.11111111.11111111.	**11**000000
Subnet Address: 192.168.1.0	Lowest Host ID: 192.168.1.1	
Broadcast Address: 192.168.1.63	Highest Host ID: 192.168.1.62	

Table 265 Subnet 2

IP/SUBNET MASK	NETWORK NUMBER	LAST OCTET BIT VALUE
IP Address	192.168.1.	64
IP Address (Binary)	11000000.10101000.00000001.	**01**000000
Subnet Mask (Binary)	11111111.11111111.11111111.	**11**000000
Subnet Address: 192.168.1.64	Lowest Host ID: 192.168.1.65	
Broadcast Address: 192.168.1.127	Highest Host ID: 192.168.1.126	

Table 266 Subnet 3

IP/SUBNET MASK	NETWORK NUMBER	LAST OCTET BIT VALUE
IP Address	192.168.1.	128
IP Address (Binary)	11000000.10101000.00000001.	**10**000000
Subnet Mask (Binary)	11111111.11111111.11111111.	**11**000000
Subnet Address: 192.168.1.128	Lowest Host ID: 192.168.1.129	
Broadcast Address: 192.168.1.191	Highest Host ID: 192.168.1.190	

Table 267 Subnet 4

IP/SUBNET MASK	NETWORK NUMBER	LAST OCTET BIT VALUE
IP Address	192.168.1.	192
IP Address (Binary)	11000000.10101000.00000001.	**11**000000
Subnet Mask (Binary)	11111111.11111111.11111111.	**11**000000
Subnet Address: 192.168.1.192	Lowest Host ID: 192.168.1.193	
Broadcast Address: 192.168.1.255	Highest Host ID: 192.168.1.254	

Example: Eight Subnets

Similarly, use a 27-bit mask to create eight subnets (000, 001, 010, 011, 100, 101, 110 and 111).

The following table shows IP address last octet values for each subnet.

Table 268 Eight Subnets

SUBNET	SUBNET ADDRESS	FIRST ADDRESS	LAST ADDRESS	BROADCAST ADDRESS
1	0	1	30	31
2	32	33	62	63
3	64	65	94	95
4	96	97	126	127

Table 268 Eight Subnets (continued)

SUBNET	SUBNET ADDRESS	FIRST ADDRESS	LAST ADDRESS	BROADCAST ADDRESS
5	128	129	158	159
6	160	161	190	191
7	192	193	222	223
8	224	225	254	255

Subnet Planning

The following table is a summary for subnet planning on a network with a 24-bit network number.

Table 269 24-bit Network Number Subnet Planning

NO. "BORROWED" HOST BITS	SUBNET MASK	NO. SUBNETS	NO. HOSTS PER SUBNET
1	255.255.255.128 (/25)	2	126
2	255.255.255.192 (/26)	4	62
3	255.255.255.224 (/27)	8	30
4	255.255.255.240 (/28)	16	14
5	255.255.255.248 (/29)	32	6
6	255.255.255.252 (/30)	64	2
7	255.255.255.254 (/31)	128	1

The following table is a summary for subnet planning on a network with a 16-bit network number.

Table 270 16-bit Network Number Subnet Planning

NO. "BORROWED" HOST BITS	SUBNET MASK	NO. SUBNETS	NO. HOSTS PER SUBNET
1	255.255.128.0 (/17)	2	32766
2	255.255.192.0 (/18)	4	16382
3	255.255.224.0 (/19)	8	8190
4	255.255.240.0 (/20)	16	4094
5	255.255.248.0 (/21)	32	2046
6	255.255.252.0 (/22)	64	1022
7	255.255.254.0 (/23)	128	510
8	255.255.255.0 (/24)	256	254
9	255.255.255.128 (/25)	512	126
10	255.255.255.192 (/26)	1024	62
11	255.255.255.224 (/27)	2048	30
12	255.255.255.240 (/28)	4096	14
13	255.255.255.248 (/29)	8192	6

Table 270 16-bit Network Number Subnet Planning (continued)

NO. "BORROWED" HOST BITS	SUBNET MASK	NO. SUBNETS	NO. HOSTS PER SUBNET
14	255.255.255.252 (/30)	16384	2
15	255.255.255.254 (/31)	32768	1

Configuring IP Addresses

Where you obtain your network number depends on your particular situation. If the ISP or your network administrator assigns you a block of registered IP addresses, follow their instructions in selecting the IP addresses and the subnet mask.

If the ISP did not explicitly give you an IP network number, then most likely you have a single user account and the ISP will assign you a dynamic IP address when the connection is established. If this is the case, it is recommended that you select a network number from 192.168.0.0 to 192.168.255.0. The Internet Assigned Number Authority (IANA) reserved this block of addresses specifically for private use; please do not use any other number unless you are told otherwise. You must also enable Network Address Translation (NAT) on the ZyWALL.

Once you have decided on the network number, pick an IP address for your ZyWALL that is easy to remember (for instance, 192.168.1.1) but make sure that no other device on your network is using that IP address.

The subnet mask specifies the network number portion of an IP address. Your ZyWALL will compute the subnet mask automatically based on the IP address that you entered. You don't need to change the subnet mask computed by the ZyWALL unless you are instructed to do otherwise.

Private IP Addresses

Every machine on the Internet must have a unique address. If your networks are isolated from the Internet (running only between two branch offices, for example) you can assign any IP addresses to the hosts without problems. However, the Internet Assigned Numbers Authority (IANA) has reserved the following three blocks of IP addresses specifically for private networks:

- 10.0.0.0 — 10.255.255.255
- 172.16.0.0 — 172.31.255.255
- 192.168.0.0 — 192.168.255.255

You can obtain your IP address from the IANA, from an ISP, or it can be assigned from a private network. If you belong to a small organization and your Internet access is through an ISP, the ISP can provide you with the Internet addresses for your local networks. On the other hand, if you are part of a much larger organization, you should consult your network administrator for the appropriate IP addresses.

Regardless of your particular situation, do not create an arbitrary IP address; always follow the guidelines above. For more information on address assignment, please refer to RFC 1597, *Address Allocation for Private Internets* and RFC 1466, *Guidelines for Management of IP Address Space.*

D

Common Services

The following table lists some commonly-used services and their associated protocols and port numbers. For a comprehensive list of port numbers, ICMP type/code numbers and services, visit the IANA (Internet Assigned Number Authority) web site.

- **Name**: This is a short, descriptive name for the service. You can use this one or create a different one, if you like.
- **Protocol**: This is the type of IP protocol used by the service. If this is **TCP/UDP**, then the service uses the same port number with TCP and UDP. If this is **USER-DEFINED**, the **Port(s)** is the IP protocol number, not the port number.
- **Port(s)**: This value depends on the **Protocol**. Please refer to RFC 1700 for further information about port numbers.
  - If the **Protocol** is **TCP**, **UDP**, or **TCP/UDP**, this is the IP port number.
  - If the **Protocol** is **USER**, this is the IP protocol number.
- **Description**: This is a brief explanation of the applications that use this service or the situations in which this service is used.

Table 271 Commonly Used Services

NAME	PROTOCOL	PORT(S)	DESCRIPTION
AH (IPSEC_TUNNEL)	User-Defined	51	The IPSEC AH (Authentication Header) tunneling protocol uses this service.
AIM/New-ICQ	TCP	5190	AOL's Internet Messenger service. It is also used as a listening port by ICQ.
AUTH	TCP	113	Authentication protocol used by some servers.
BGP	TCP	179	Border Gateway Protocol.
BOOTP_CLIENT	UDP	68	DHCP Client.
BOOTP_SERVER	UDP	67	DHCP Server.
CU-SEEME	TCP UDP	7648 24032	A popular videoconferencing solution from White Pines Software.
DNS	TCP/UDP	53	Domain Name Server, a service that matches web names (e.g. www.zyxel.com) to IP numbers.
ESP (IPSEC_TUNNEL)	User-Defined	50	The IPSEC ESP (Encapsulation Security Protocol) tunneling protocol uses this service.
FINGER	TCP	79	Finger is a UNIX or Internet related command that can be used to find out if a user is logged on.

Table 271 Commonly Used Services (continued)

NAME	PROTOCOL	PORT(S)	DESCRIPTION
FTP	TCP TCP	20 21	File Transfer Program, a program to enable fast transfer of files, including large files that may not be possible by e-mail.
H.323	TCP	1720	NetMeeting uses this protocol.
HTTP	TCP	80	Hyper Text Transfer Protocol - a client/ server protocol for the world wide web.
HTTPS	TCP	443	HTTPS is a secured http session often used in e-commerce.
ICMP	User-Defined	1	Internet Control Message Protocol is often used for diagnostic or routing purposes.
ICQ	UDP	4000	This is a popular Internet chat program.
IGMP (MULTICAST)	User-Defined	2	Internet Group Multicast Protocol is used when sending packets to a specific group of hosts.
IKE	UDP	500	The Internet Key Exchange algorithm is used for key distribution and management.
IRC	TCP/UDP	6667	This is another popular Internet chat program.
MSN Messenger	TCP	1863	Microsoft Networks' messenger service uses this protocol.
NEW-ICQ	TCP	5190	An Internet chat program.
NEWS	TCP	144	A protocol for news groups.
NFS	UDP	2049	Network File System - NFS is a client/ server distributed file service that provides transparent file sharing for network environments.
NNTP	TCP	119	Network News Transport Protocol is the delivery mechanism for the USENET newsgroup service.
PING	User-Defined	1	Packet INternet Groper is a protocol that sends out ICMP echo requests to test whether or not a remote host is reachable.
POP3	TCP	110	Post Office Protocol version 3 lets a client computer get e-mail from a POP3 server through a temporary connection (TCP/IP or other).
PPTP	TCP	1723	Point-to-Point Tunneling Protocol enables secure transfer of data over public networks. This is the control channel.
PPTP_TUNNEL (GRE)	User-Defined	47	PPTP (Point-to-Point Tunneling Protocol) enables secure transfer of data over public networks. This is the data channel.
RCMD	TCP	512	Remote Command Service.
REAL_AUDIO	TCP	7070	A streaming audio service that enables real time sound over the web.
REXEC	TCP	514	Remote Execution Daemon.
RLOGIN	TCP	513	Remote Login.

Table 271 Commonly Used Services (continued)

NAME	PROTOCOL	PORT(S)	DESCRIPTION
RTELNET	TCP	107	Remote Telnet.
RTSP	TCP/UDP	554	The Real Time Streaming (media control) Protocol (RTSP) is a remote control for multimedia on the Internet.
SFTP	TCP	115	Simple File Transfer Protocol.
SMTP	TCP	25	Simple Mail Transfer Protocol is the message-exchange standard for the Internet. SMTP enables you to move messages from one e-mail server to another.
SNMP	TCP/UDP	161	Simple Network Management Program.
SNMP-TRAPS	TCP/UDP	162	Traps for use with the SNMP (RFC:1215).
SQL-NET	TCP	1521	Structured Query Language is an interface to access data on many different types of database systems, including mainframes, midrange systems, UNIX systems and network servers.
SSH	TCP/UDP	22	Secure Shell Remote Login Program.
STRM WORKS	UDP	1558	Stream Works Protocol.
SYSLOG	UDP	514	Syslog allows you to send system logs to a UNIX server.
TACACS	UDP	49	Login Host Protocol used for (Terminal Access Controller Access Control System).
TELNET	TCP	23	Telnet is the login and terminal emulation protocol common on the Internet and in UNIX environments. It operates over TCP/IP networks. Its primary function is to allow users to log into remote host systems.
TFTP	UDP	69	Trivial File Transfer Protocol is an Internet file transfer protocol similar to FTP, but uses the UDP (User Datagram Protocol) rather than TCP (Transmission Control Protocol).
VDOLIVE	TCP	7000	Another videoconferencing solution.

E

Wireless LANs


Wireless LAN Topologies

This section discusses ad-hoc and infrastructure wireless LAN topologies.

Ad-hoc Wireless LAN Configuration

The simplest WLAN configuration is an independent (Ad-hoc) WLAN that connects a set of computers with wireless adapters (A, B, C). Any time two or more wireless adapters are within range of each other, they can set up an independent network, which is commonly referred to as an ad-hoc network or Independent Basic Service Set (IBSS). The following diagram shows an example of notebook computers using wireless adapters to form an ad-hoc wireless LAN.

Figure 505 Peer-to-Peer Communication in an Ad-hoc Network

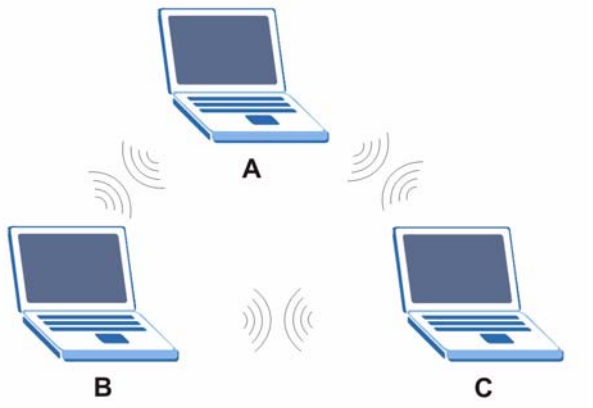


BSS

A Basic Service Set (BSS) exists when all communications between wireless clients or between a wireless client and a wired network client go through one access point (AP).

Intra-BSS traffic is traffic between wireless clients in the BSS. When Intra-BSS is enabled, wireless client **A** and **B** can access the wired network and communicate with each other. When Intra-BSS is disabled, wireless client **A** and **B** can still access the wired network but cannot communicate with each other.

Figure 506 Basic Service Set

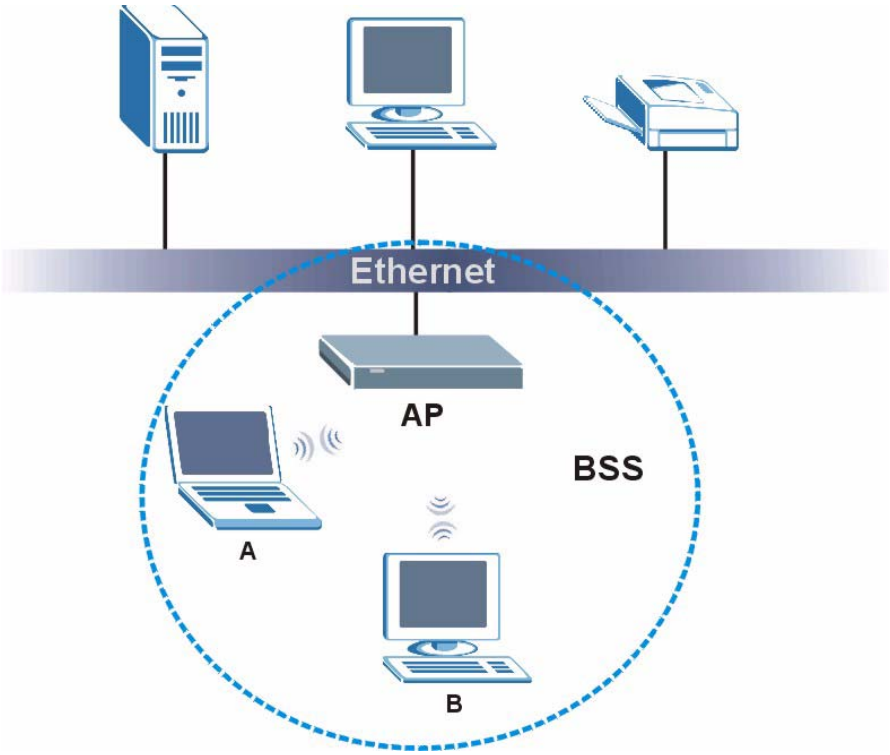


ESS

An Extended Service Set (ESS) consists of a series of overlapping BSSs, each containing an access point, with each access point connected together by a wired network. This wired connection between APs is called a Distribution System (DS).

This type of wireless LAN topology is called an Infrastructure WLAN. The Access Points not only provide communication with the wired network but also mediate wireless network traffic in the immediate neighborhood.

An ESSID (ESS IDentification) uniquely identifies each ESS. All access points and their associated wireless clients within the same ESS must have the same ESSID in order to communicate.

Figure 507 Infrastructure WLAN

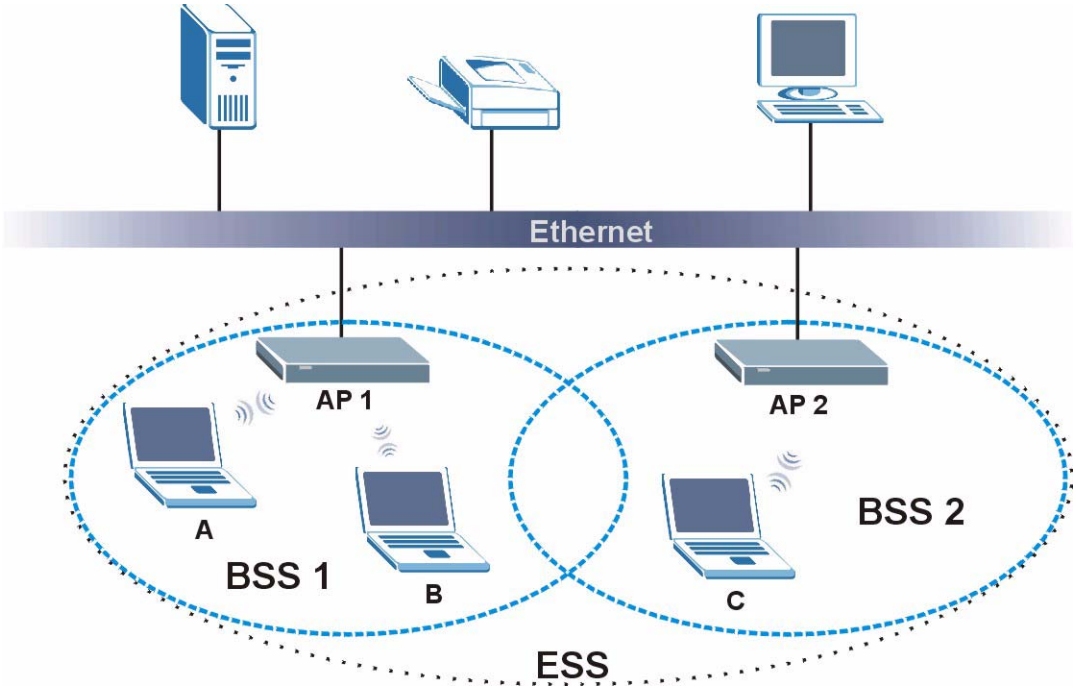

Channel


A channel is the radio frequency(ies) used by wireless devices to transmit and receive data. Channels available depend on your geographical area. You may have a choice of channels (for your region) so you should use a channel different from an adjacent AP (access point) to reduce interference. Interference occurs when radio signals from different access points overlap causing interference and degrading performance.

Adjacent channels partially overlap however. To avoid interference due to overlap, your AP should be on a channel at least five channels away from a channel that an adjacent AP is using. For example, if your region has 11 channels and an adjacent AP is using channel 1, then you need to select a channel between 6 or 11.

RTS/CTS

A hidden node occurs when two stations are within range of the same access point, but are not within range of each other. The following figure illustrates a hidden node. Both stations (STA) are within range of the access point (AP) or wireless gateway, but out-of-range of each other, so they cannot "hear" each other, that is they do not know if the channel is currently being used. Therefore, they are considered hidden from each other.

Figure 508 RTS/CTS

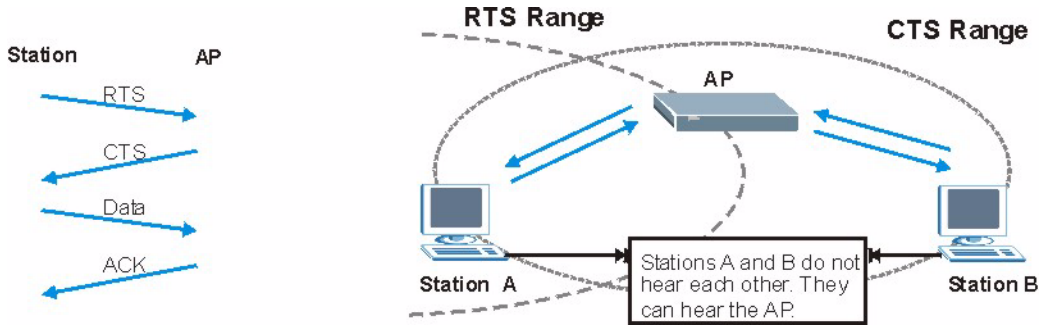

When station **A** sends data to the AP, it might not know that the station **B** is already using the channel. If these two stations send data at the same time, collisions may occur when both sets of data arrive at the AP at the same time, resulting in a loss of messages for both stations.

RTS/CTS is designed to prevent collisions due to hidden nodes. An **RTS/CTS** defines the biggest size data frame you can send before an RTS (Request To Send)/CTS (Clear to Send) handshake is invoked.

When a data frame exceeds the **RTS/CTS** value you set (between 0 to 2432 bytes), the station that wants to transmit this frame must first send an RTS (Request To Send) message to the AP for permission to send it. The AP then responds with a CTS (Clear to Send) message to all other stations within its range to notify them to defer their transmission. It also reserves and confirms with the requesting station the time frame for the requested transmission.

Stations can send frames smaller than the specified **RTS/CTS** directly to the AP without the RTS (Request To Send)/CTS (Clear to Send) handshake.

You should only configure **RTS/CTS** if the possibility of hidden nodes exists on your network and the "cost" of resending large frames is more than the extra network overhead involved in the RTS (Request To Send)/CTS (Clear to Send) handshake.

If the **RTS/CTS** value is greater than the **Fragmentation Threshold** value (see next), then the RTS (Request To Send)/CTS (Clear to Send) handshake will never occur as data frames will be fragmented before they reach **RTS/CTS** size.

Enabling the RTS Threshold causes redundant network overhead that could negatively affect the throughput performance instead of providing a remedy.

Fragmentation Threshold

A **Fragmentation Threshold** is the maximum data fragment size (between 256 and 2432 bytes) that can be sent in the wireless network before the AP will fragment the packet into smaller data frames.

A large **Fragmentation Threshold** is recommended for networks not prone to interference while you should set a smaller threshold for busy networks or networks that are prone to interference.

If the **Fragmentation Threshold** value is smaller than the **RTS/CTS** value (see previously) you set then the RTS (Request To Send)/CTS (Clear to Send) handshake will never occur as data frames will be fragmented before they reach **RTS/CTS** size.

Preamble Type

Preamble is used to signal that data is coming to the receiver. Short and long refer to the length of the synchronization field in a packet.

Short preamble increases performance as less time sending preamble means more time for sending data. All IEEE 802.11 compliant wireless adapters support long preamble, but not all support short preamble.

Use long preamble if you are unsure what preamble mode other wireless devices on the network support, and to provide more reliable communications in busy wireless networks.

Use short preamble if you are sure all wireless devices on the network support it, and to provide more efficient communications.

Use the dynamic setting to automatically use short preamble when all wireless devices on the network support it, otherwise the ZyWALL uses long preamble.



The wireless devices MUST use the same preamble mode in order to communicate.

IEEE 802.11g Wireless LAN

IEEE 802.11g is fully compatible with the IEEE 802.11b standard. This means an IEEE 802.11b adapter can interface directly with an IEEE 802.11g access point (and vice versa) at 11 Mbps or lower depending on range. IEEE 802.11g has several intermediate rate steps between the maximum and minimum data rates. The IEEE 802.11g data rate and modulation are as follows:

Table 272 IEEE 802.11g

DATA RATE (MBPS)	MODULATION
1	DBPSK (Differential Binary Phase Shift Keyed)
2	DQPSK (Differential Quadrature Phase Shift Keying)
5.5 / 11	CCK (Complementary Code Keying)
6/9/12/18/24/36/48/54	OFDM (Orthogonal Frequency Division Multiplexing)

Wireless Security Overview

Wireless security is vital to your network to protect wireless communication between wireless clients, access points and the wired network.

Wireless security methods available on the ZyWALL are data encryption, wireless client authentication, restricting access by device MAC address and hiding the ZyWALL identity.

The following figure shows the relative effectiveness of these wireless security methods available on your ZyWALL.

Table 273 Wireless Security Levels

SECURITY LEVEL	SECURITY TYPE
Least Secure	Unique SSID (Default)
	Unique SSID with Hide SSID Enabled
	MAC Address Filtering
	WEP Encryption
	IEEE802.1x EAP with RADIUS Server Authentication
	Wi-Fi Protected Access (WPA)
Most Secure	WPA2



You must enable the same wireless security settings on the ZyWALL and on all wireless clients that you want to associate with it.

IEEE 802.1x

In June 2001, the IEEE 802.1x standard was designed to extend the features of IEEE 802.11 to support extended authentication as well as providing additional accounting and control features. It is supported by Windows XP and a number of network devices. Some advantages of IEEE 802.1x are:

- User based identification that allows for roaming.
- Support for RADIUS (Remote Authentication Dial In User Service, RFC 2138, 2139) for centralized user profile and accounting management on a network RADIUS server.
- Support for EAP (Extensible Authentication Protocol, RFC 2486) that allows additional authentication methods to be deployed with no changes to the access point or the wireless clients.

RADIUS

RADIUS is based on a client-server model that supports authentication, authorization and accounting. The access point is the client and the server is the RADIUS server. The RADIUS server handles the following tasks:

- Authentication
  Determines the identity of the users.
- Authorization

Determines the network services available to authenticated users once they are connected to the network.

- Accounting
  Keeps track of the client's network activity.

RADIUS is a simple package exchange in which your AP acts as a message relay between the wireless client and the network RADIUS server.

Types of RADIUS Messages

The following types of RADIUS messages are exchanged between the access point and the RADIUS server for user authentication:

- Access-Request
  Sent by an access point requesting authentication.
- Access-Reject
  Sent by a RADIUS server rejecting access.
- Access-Accept
  Sent by a RADIUS server allowing access.
- Access-Challenge
  Sent by a RADIUS server requesting more information in order to allow access. The access point sends a proper response from the user and then sends another Access-Request message.

The following types of RADIUS messages are exchanged between the access point and the RADIUS server for user accounting:

- Accounting-Request
  Sent by the access point requesting accounting.
- Accounting-Response
  Sent by the RADIUS server to indicate that it has started or stopped accounting.

In order to ensure network security, the access point and the RADIUS server use a shared secret key, which is a password, they both know. The key is not sent over the network. In addition to the shared key, password information exchanged is also encrypted to protect the network from unauthorized access.

Types of EAP Authentication

This section discusses some popular authentication types: EAP-MD5, EAP-TLS, EAP-TTLS, PEAP and LEAP. Your wireless LAN device may not support all authentication types.

EAP (Extensible Authentication Protocol) is an authentication protocol that runs on top of the IEEE 802.1x transport mechanism in order to support multiple types of user authentication. By using EAP to interact with an EAP-compatible RADIUS server, an access point helps a wireless station and a RADIUS server perform authentication.

The type of authentication you use depends on the RADIUS server and an intermediary AP(s) that supports IEEE 802.1x. .

For EAP-TLS authentication type, you must first have a wired connection to the network and obtain the certificate(s) from a certificate authority (CA). A certificate (also called digital IDs) can be used to authenticate users and a CA issues certificates and guarantees the identity of each certificate owner.

EAP-MD5 (Message-Digest Algorithm 5)

MD5 authentication is the simplest one-way authentication method. The authentication server sends a challenge to the wireless client. The wireless client 'proves' that it knows the password by encrypting the password with the challenge and sends back the information. Password is not sent in plain text.

However, MD5 authentication has some weaknesses. Since the authentication server needs to get the plaintext passwords, the passwords must be stored. Thus someone other than the authentication server may access the password file. In addition, it is possible to impersonate an authentication server as MD5 authentication method does not perform mutual authentication. Finally, MD5 authentication method does not support data encryption with dynamic session key. You must configure WEP encryption keys for data encryption.

EAP-TLS (Transport Layer Security)

With EAP-TLS, digital certifications are needed by both the server and the wireless clients for mutual authentication. The server presents a certificate to the client. After validating the identity of the server, the client sends a different certificate to the server. The exchange of certificates is done in the open before a secured tunnel is created. This makes user identity vulnerable to passive attacks. A digital certificate is an electronic ID card that authenticates the sender's identity. However, to implement EAP-TLS, you need a Certificate Authority (CA) to handle certificates, which imposes a management overhead.

EAP-TTLS (Tunneled Transport Layer Service)

EAP-TTLS is an extension of the EAP-TLS authentication that uses certificates for only the server-side authentications to establish a secure connection. Client authentication is then done by sending username and password through the secure connection, thus client identity is protected. For client authentication, EAP-TTLS supports EAP methods and legacy authentication methods such as PAP, CHAP, MS-CHAP and MS-CHAP v2.

PEAP (Protected EAP)

Like EAP-TTLS, server-side certificate authentication is used to establish a secure connection, then use simple username and password methods through the secured connection to authenticate the clients, thus hiding client identity. However, PEAP only supports EAP methods, such as EAP-MD5, EAP-MSCHAPv2 and EAP-GTC (EAP-Generic Token Card), for client authentication. EAP-GTC is implemented only by Cisco.

LEAP

LEAP (Lightweight Extensible Authentication Protocol) is a Cisco implementation of IEEE 802.1x.

Dynamic WEP Key Exchange

The AP maps a unique key that is generated with the RADIUS server. This key expires when the wireless connection times out, disconnects or reauthentication times out. A new WEP key is generated each time reauthentication is performed.

If this feature is enabled, it is not necessary to configure a default encryption key in the wireless security configuration screen. You may still configure and store keys, but they will not be used while dynamic WEP is enabled.



EAP-MD5 cannot be used with Dynamic WEP Key Exchange

For added security, certificate-based authentications (EAP-TLS, EAP-TTLS and PEAP) use dynamic keys for data encryption. They are often deployed in corporate environments, but for public deployment, a simple user name and password pair is more practical. The following table is a comparison of the features of authentication types.

Table 274 Comparison of EAP Authentication Types

	EAP-MD5	EAP-TLS	EAP-TTLS	PEAP	LEAP
Mutual Authentication	No	Yes	Yes	Yes	Yes
Certificate – Client	No	Yes	Optional	Optional	No
Certificate – Server	No	Yes	Yes	Yes	No
Dynamic Key Exchange	No	Yes	Yes	Yes	Yes
Credential Integrity	None	Strong	Strong	Strong	Moderate
Deployment Difficulty	Easy	Hard	Moderate	Moderate	Moderate
Client Identity Protection	No	No	Yes	Yes	No

WPA and WPA2

Wi-Fi Protected Access (WPA) is a subset of the IEEE 802.11i standard. WPA2 (IEEE 802.11i) is a wireless security standard that defines stronger encryption, authentication and key management than WPA.

Key differences between WPA or WPA2 and WEP are improved data encryption and user authentication.

If both an AP and the wireless clients support WPA2 and you have an external RADIUS server, use WPA2 for stronger data encryption. If you don't have an external RADIUS server, you should use WPA2-PSK (WPA2-Pre-Shared Key) that only requires a single (identical) password entered into each access point, wireless gateway and wireless client. As long as the passwords match, a wireless client will be granted access to a WLAN.

If the AP or the wireless clients do not support WPA2, just use WPA or WPA-PSK depending on whether you have an external RADIUS server or not.

Select WEP only when the AP and/or wireless clients do not support WPA or WPA2. WEP is less secure than WPA or WPA2.

Encryption

Both WPA and WPA2 improve data encryption by using Temporal Key Integrity Protocol (TKIP), Message Integrity Check (MIC) and IEEE 802.1x. WPA and WPA2 use Advanced Encryption Standard (AES) in the Counter mode with Cipher block chaining Message authentication code Protocol (CCMP) to offer stronger encryption than TKIP.

TKIP uses 128-bit keys that are dynamically generated and distributed by the authentication server. AES (Advanced Encryption Standard) is a block cipher that uses a 256-bit mathematical algorithm called Rijndael. They both include a per-packet key mixing function, a Message Integrity Check (MIC) named Michael, an extended initialization vector (IV) with sequencing rules, and a re-keying mechanism.

WPA and WPA2 regularly change and rotate the encryption keys so that the same encryption key is never used twice.

The RADIUS server distributes a Pairwise Master Key (PMK) key to the AP that then sets up a key hierarchy and management system, using the PMK to dynamically generate unique data encryption keys to encrypt every data packet that is wirelessly communicated between the AP and the wireless clients. This all happens in the background automatically.

The Message Integrity Check (MIC) is designed to prevent an attacker from capturing data packets, altering them and resending them. The MIC provides a strong mathematical function in which the receiver and the transmitter each compute and then compare the MIC. If they do not match, it is assumed that the data has been tampered with and the packet is dropped.

By generating unique data encryption keys for every data packet and by creating an integrity checking mechanism (MIC), with TKIP and AES it is more difficult to decrypt data on a Wi-Fi network than WEP and difficult for an intruder to break into the network.

The encryption mechanisms used for WPA(2) and WPA(2)-PSK are the same. The only difference between the two is that WPA(2)-PSK uses a simple common password, instead of user-specific credentials. The common-password approach makes WPA(2)-PSK susceptible to brute-force password-guessing attacks but it's still an improvement over WEP as it employs a consistent, single, alphanumeric password to derive a PMK which is used to generate unique temporal encryption keys. This prevent all wireless devices sharing the same encryption keys. (a weakness of WEP)

User Authentication

WPA and WPA2 apply IEEE 802.1x and Extensible Authentication Protocol (EAP) to authenticate wireless clients using an external RADIUS database. WPA2 reduces the number of key exchange messages from six to four (CCMP 4-way handshake) and shortens the time required to connect to a network. Other WPA2 authentication features that are different from WPA include key caching and pre-authentication. These two features are optional and may not be supported in all wireless devices.

Key caching allows a wireless client to store the PMK it derived through a successful authentication with an AP. The wireless client uses the PMK when it tries to connect to the same AP and does not need to go with the authentication process again.

Pre-authentication enables fast roaming by allowing the wireless client (already connecting to an AP) to perform IEEE 802.1x authentication with another AP before connecting to it.

Wireless Client WPA Supplicants

A wireless client supplicant is the software that runs on an operating system instructing the wireless client how to use WPA. At the time of writing, the most widely available supplicant is the WPA patch for Windows XP, Funk Software's Odyssey client.


The Windows XP patch is a free download that adds WPA capability to Windows XP's built-in "Zero Configuration" wireless client. However, you must run Windows XP to use it.

WPA(2) with RADIUS Application Example

To set up WPA(2), you need the IP address of the RADIUS server, its port number (default is 1812), and the RADIUS shared secret. A WPA(2) application example with an external RADIUS server looks as follows. "A" is the RADIUS server. "DS" is the distribution system.

1. The AP passes the wireless client's authentication request to the RADIUS server.
2. The RADIUS server then checks the user's identification against its database and grants or denies network access accordingly.
3. A 256-bit Pairwise Master Key (PMK) is derived from the authentication process by the RADIUS server and the client.
4. The RADIUS server distributes the PMK to the AP. The AP then sets up a key hierarchy and management system, using the PMK to dynamically generate unique data encryption keys. The keys are used to encrypt every data packet that is wirelessly communicated between the AP and the wireless clients.

Figure 509 WPA(2) with RADIUS Application Example

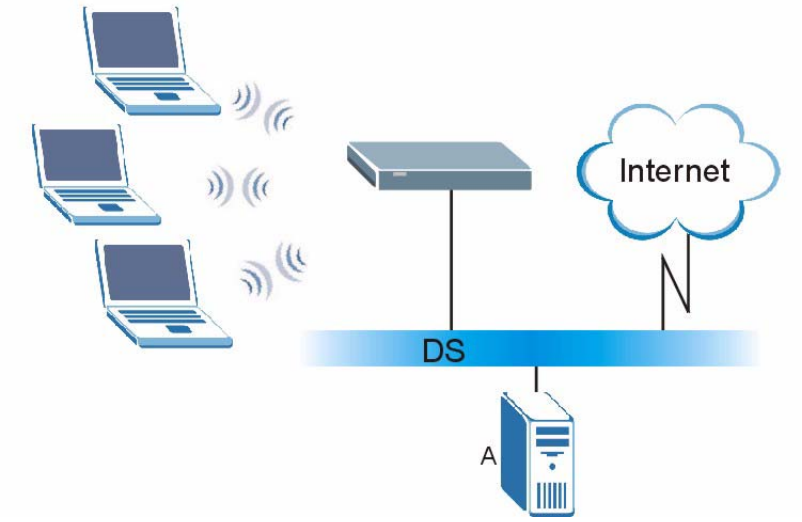

WPA(2)-PSK Application Example


A WPA(2)-PSK application looks as follows.

1. First enter identical passwords into the AP and all wireless clients. The Pre-Shared Key (PSK) must consist of between 8 and 63 ASCII characters or 64 hexadecimal characters (including spaces and symbols).
2. The AP checks each wireless client's password and allows it to join the network only if the password matches.

3 The AP and wireless clients generate a common PMK (Pairwise Master Key). The key itself is not sent over the network, but is derived from the PSK and the SSID.

4 The AP and wireless clients use the TKIP or AES encryption process, the PMK and information exchanged in a handshake to create temporal encryption keys. They use these keys to encrypt data exchanged between them.

Figure 510 WPA(2)-PSK Authentication

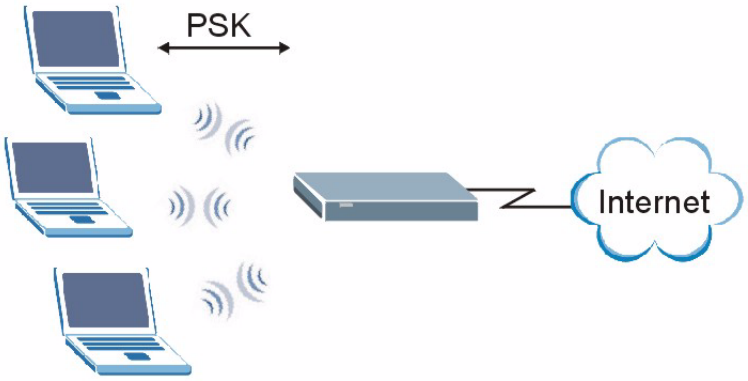

Security Parameters Summary

Refer to this table to see what other security parameters you should configure for each authentication method or key management protocol type. MAC address filters are not dependent on how you configure these security features.

Table 275 Wireless Security Relational Matrix

AUTHENTICATION METHOD/ KEY MANAGEMENT PROTOCOL	ENCRYPTION METHOD	ENTER MANUAL KEY	IEEE 802.1X
Open	None	No	Disable
			Enable without Dynamic WEP Key
Open	WEP	No	Enable with Dynamic WEP Key
		Yes	Enable without Dynamic WEP Key
		Yes	Disable
Shared	WEP	No	Enable with Dynamic WEP Key
		Yes	Enable without Dynamic WEP Key
		Yes	Disable
WPA	TKIP/AES	No	Enable
WPA-PSK	TKIP/AES	Yes	Disable
WPA2	TKIP/AES	No	Enable
WPA2-PSK	TKIP/AES	Yes	Disable

Antenna Overview

An antenna couples RF signals onto air. A transmitter within a wireless device sends an RF signal to the antenna, which propagates the signal through the air. The antenna also operates in reverse by capturing RF signals from the air.

Positioning the antennas properly increases the range and coverage area of a wireless LAN.

Antenna Characteristics

Frequency

An antenna in the frequency of 2.4GHz (IEEE 802.11b and IEEE 802.11g) or 5GHz (IEEE 802.11a) is needed to communicate efficiently in a wireless LAN

Radiation Pattern

A radiation pattern is a diagram that allows you to visualize the shape of the antenna's coverage area.

Antenna Gain

Antenna gain, measured in dB (decibel), is the increase in coverage within the RF beam width. Higher antenna gain improves the range of the signal for better communications.

For an indoor site, each 1 dB increase in antenna gain results in a range increase of approximately 2.5%. For an unobstructed outdoor site, each 1dB increase in gain results in a range increase of approximately 5%. Actual results may vary depending on the network environment.

Antenna gain is sometimes specified in dBi, which is how much the antenna increases the signal power compared to using an isotropic antenna. An isotropic antenna is a theoretical perfect antenna that sends out radio signals equally well in all directions. dBi represents the true gain that the antenna provides.

Types of Antennas for WLAN

There are two types of antennas used for wireless LAN applications.

- Omni-directional antennas send the RF signal out in all directions on a horizontal plane. The coverage area is torus-shaped (like a donut) which makes these antennas ideal for a room environment. With a wide coverage area, it is possible to make circular overlapping coverage areas with multiple access points.
- Directional antennas concentrate the RF signal in a beam, like a flashlight does with the light from its bulb. The angle of the beam determines the width of the coverage pattern. Angles typically range from 20 degrees (very directional) to 120 degrees (less directional). Directional antennas are ideal for hallways and outdoor point-to-point applications.

Positioning Antennas

In general, antennas should be mounted as high as practically possible and free of obstructions. In point-to–point application, position both antennas at the same height and in a direct line of sight to each other to attain the best performance.

For omni-directional antennas mounted on a table, desk, and so on, point the antenna up. For omni-directional antennas mounted on a wall or ceiling, point the antenna down. For a single AP application, place omni-directional antennas as close to the center of the coverage area as possible.

For directional antennas, point the antenna in the direction of the desired coverage area.

F

Importing Certificates


This appendix shows importing certificates examples using Internet Explorer 5.

Import ZyWALL Certificates into Netscape Navigator

In Netscape Navigator, you can permanently trust the ZyWALL's server certificate by importing it into your operating system as a trusted certification authority.

Select **Accept This Certificate Permanently** in the following screen to do this.

Figure 511 Security Certificate

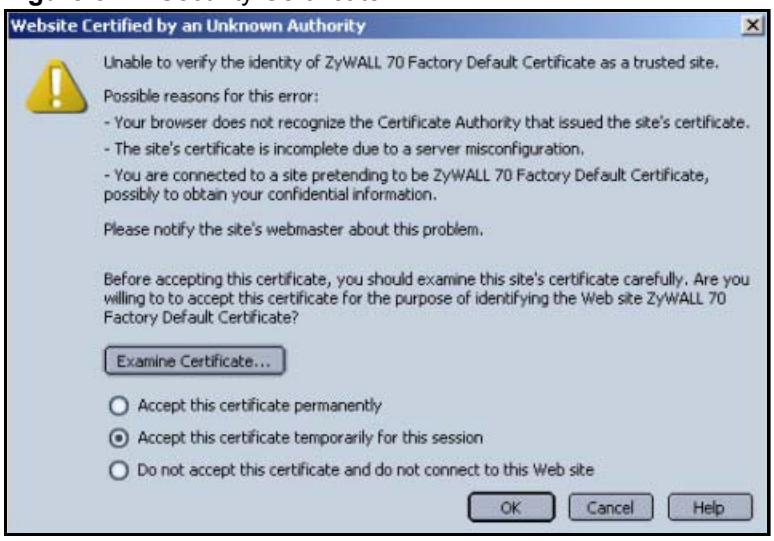

Importing the ZyWALL's Certificate into Internet Explorer

For Internet Explorer to trust a self-signed certificate from the ZyWALL, simply import the self-signed certificate into your operating system as a trusted certification authority.

To have Internet Explorer trust a ZyWALL certificate issued by a certificate authority, import the certificate authority's certificate into your operating system as a trusted certification authority.

The following example procedure shows how to import the ZyWALL's (self-signed) server certificate into your operating system as a trusted certification authority.


1 In Internet Explorer, double click the lock shown in the following screen.

Figure 512 Login Screen



2 Click **Install Certificate** to open the **Install Certificate** wizard.

Figure 513 Certificate General Information before Import

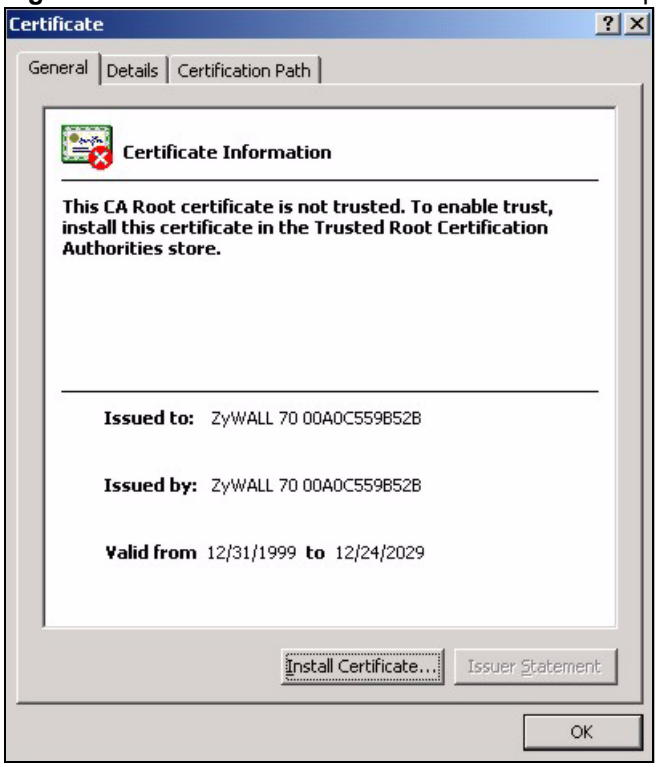

3 Click **Next** to begin the **Install Certificate** wizard.

Figure 514 Certificate Import Wizard 1



4 Select where you would like to store the certificate and then click **Next**.

Figure 515 Certificate Import Wizard 2



5 Click **Finish** to complete the **Import Certificate** wizard.

Figure 516 Certificate Import Wizard 3



6 Click **Yes** to add the ZyWALL certificate to the root store.

Figure 517 Root Certificate Store


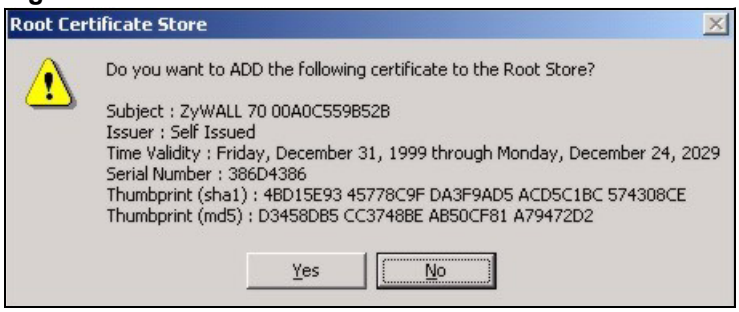


Figure 518 Certificate General Information after Import

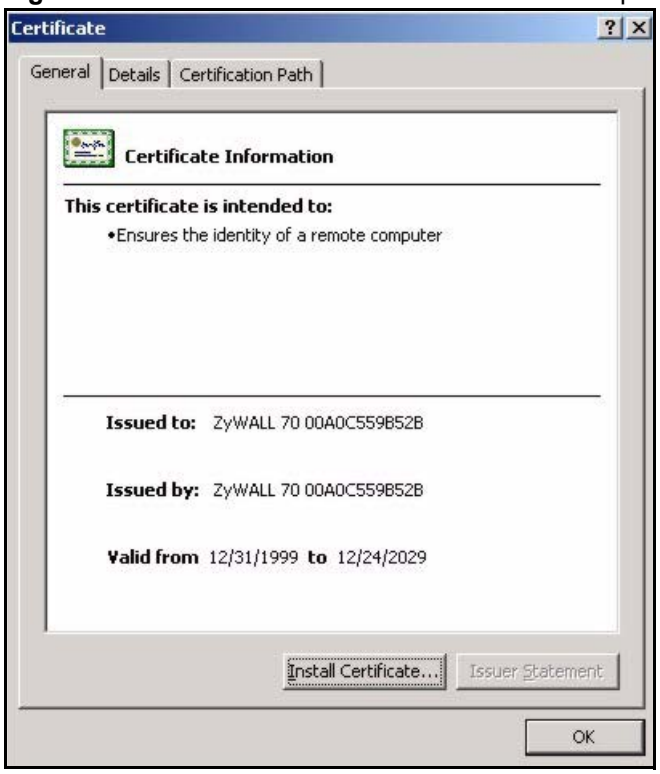


Enrolling and Importing SSL Client Certificates

The SSL client needs a certificate if **Authenticate Client Certificates** is selected on the ZyWALL.

You must have imported at least one trusted CA to the ZyWALL in order for the **Authenticate Client Certificates** to be active (see the Certificates chapter for details).

Apply for a certificate from a Certification Authority (CA) that is trusted by the ZyWALL (see the ZyWALL's **Trusted CA** web configurator screen).

Figure 519 ZyWALL Trusted CA Screen

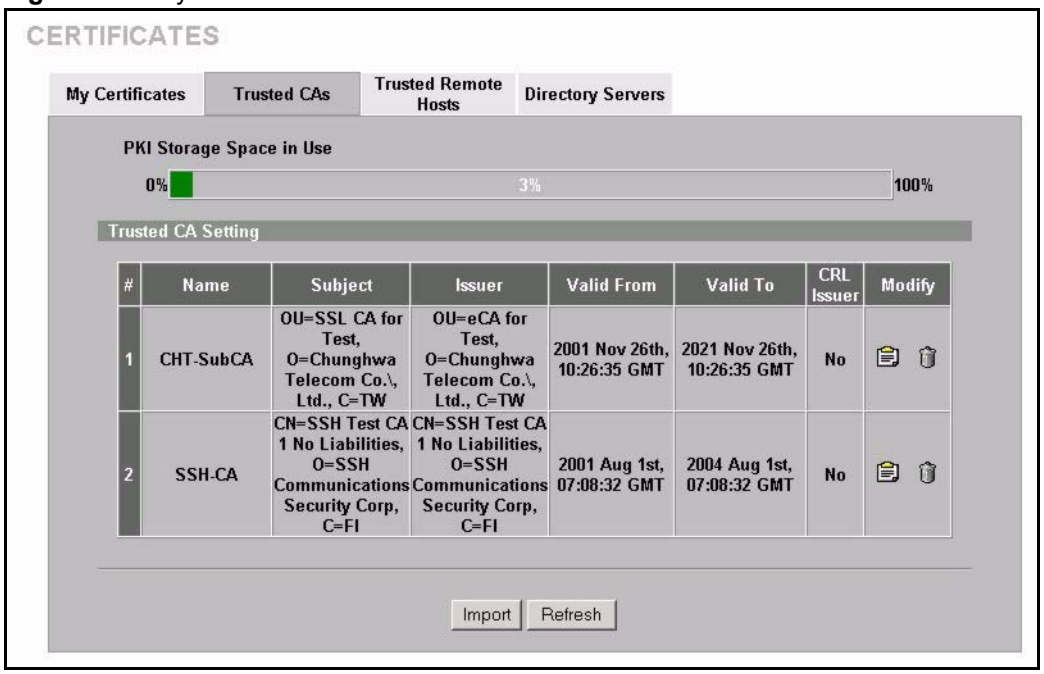


The CA sends you a package containing the CA's trusted certificate(s), your personal certificate(s) and a password to install the personal certificate(s).

Installing the CA's Certificate

1 Double click the CA's trusted certificate to produce a screen similar to the one shown next.

Figure 520 CA Certificate Example

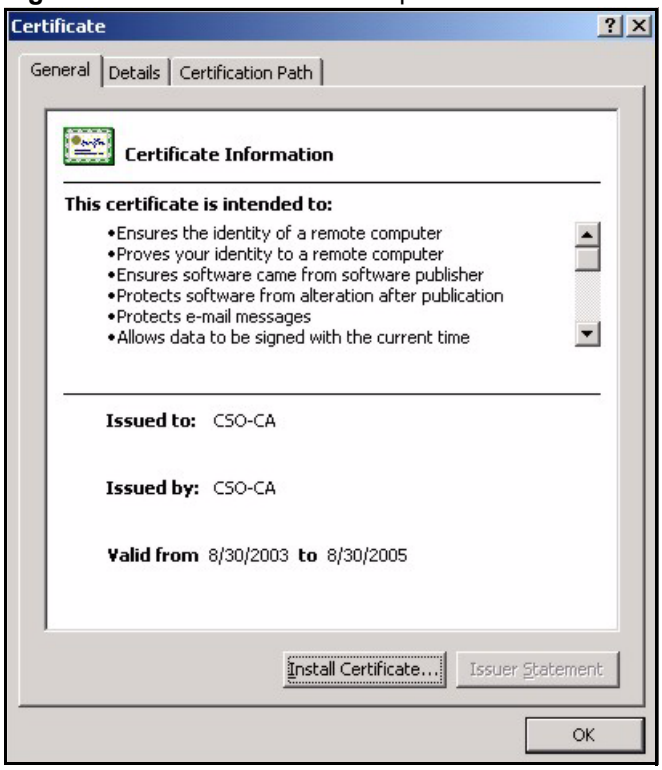

2 Click **Install Certificate** and follow the wizard as shown earlier in this appendix.

Installing Your Personal Certificate(s)

You need a password in advance. The CA may issue the password or you may have to specify it during the enrollment. Double-click the personal certificate given to you by the CA to produce a screen similar to the one shown next


1 Click **Next** to begin the wizard.

Figure 521 Personal Certificate Import Wizard 1



2 The file name and path of the certificate you double-clicked should automatically appear in the **File name** text box. Click **Browse** if you wish to import a different certificate.

Figure 522 Personal Certificate Import Wizard 2

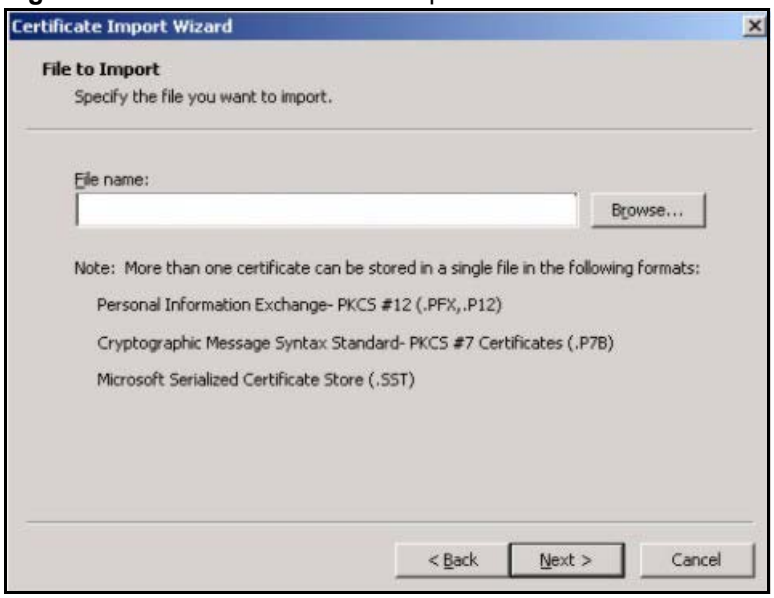


3 Enter the password given to you by the CA.

Figure 523 Personal Certificate Import Wizard 3



4 Have the wizard determine where the certificate should be saved on your computer or select **Place all certificates in the following store** and choose a different location.

Figure 524 Personal Certificate Import Wizard 4

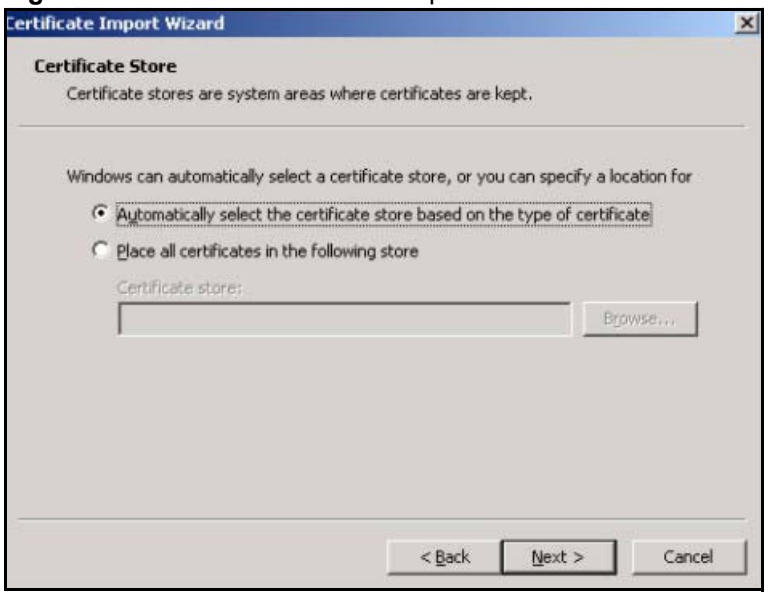

5 Click **Finish** to complete the wizard and begin the import process.

Figure 525 Personal Certificate Import Wizard 5



6 You should see the following screen when the certificate is correctly installed on your computer.

Figure 526 Personal Certificate Import Wizard 6



Using a Certificate When Accessing the ZyWALL Example

Use the following procedure to access the ZyWALL via HTTPS.

1 Enter 'https://ZyWALL IP Address/ in your browser's web address field.

Figure 527 Access the ZyWALL Via HTTPS



2 When **Authenticate Client Certificates** is selected on the ZyWALL, the following screen asks you to select a personal certificate to send to the ZyWALL. This screen displays even if you only have a single certificate as in the example.

Figure 528 SSL Client Authentication



3 You next see the ZyWALL login screen.

Figure 529 ZyWALL Secure Login Screen



G

Legal Information

Copyright

Copyright © 2007 by ZyXEL Communications Corporation.

The contents of this publication may not be reproduced in any part or as a whole, transcribed, stored in a retrieval system, translated into any language, or transmitted in any form or by any means, electronic, mechanical, magnetic, optical, chemical, photocopying, manual, or otherwise, without the prior written permission of ZyXEL Communications Corporation.

Published by ZyXEL Communications Corporation. All rights reserved.

Disclaimer

ZyXEL does not assume any liability arising out of the application or use of any products, or software described herein. Neither does it convey any license under its patent rights nor the patent rights of others. ZyXEL further reserves the right to make changes in any products described herein without notice. This publication is subject to change without notice.

Your use of the ZyWALL is subject to the terms and conditions of any related service providers.

Trademarks

ZyNOS (ZyXEL Network Operating System) is a registered trademark of ZyXEL Communications, Inc. Other trademarks mentioned in this publication are used for identification purposes only and may be properties of their respective owners.

Certifications

Federal Communications Commission (FCC) Interference Statement

The device complies with Part 15 of FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operations.

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this device does cause harmful interference to radio/television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and the receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.



FCC Radiation Exposure Statement

- This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- For operation within 5.15 ~ 5.25GHz frequency range, it is restricted to indoor environment.
- IEEE 802.11b or 802.11g operation of this product in the U.S.A. is firmware-limited to channels 1 through 11.
- To comply with FCC RF exposure compliance requirements, a separation distance of at least 20 cm must be maintained between the antenna of this device and all persons.

注意！

依據 低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。
前項合法通信，指依電信規定作業之無線電信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

在 5250MHz~5350MHz 頻帶內操作之無線資訊傳輸設備，限於室內使用。

Notices

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device has been designed for the WLAN 2.4 GHz and 5 GHz networks throughout the EC region and Switzerland, with restrictions in France.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Viewing Certifications

1. Go to http://www.zyxel.com.
2. Select your product on the ZyXEL home page to go to that product's page.
3. Select the certification you wish to view from this page.

ZyXEL Limited Warranty

ZyXEL warrants to the original end user (purchaser) that this product is free from any defects in materials or workmanship for a period of up to two years from the date of purchase. During the warranty period, and upon proof of purchase, should the product have indications of failure due to faulty workmanship and/or materials, ZyXEL will, at its discretion, repair or replace the defective products or components without charge for either parts or labor, and to whatever extent it shall deem necessary to restore the product or components to proper operating condition. Any replacement will consist of a new or re-manufactured functionally equivalent product of equal or higher value, and will be solely at the discretion of ZyXEL. This warranty shall not apply if the product has been modified, misused, tampered with, damaged by an act of God, or subjected to abnormal working conditions.

Note

Repair or replacement, as provided under this warranty, is the exclusive remedy of the purchaser. This warranty is in lieu of all other warranties, express or implied, including any implied warranty of merchantability or fitness for a particular use or purpose. ZyXEL shall in no event be held liable for indirect or consequential damages of any kind to the purchaser.

To obtain the services of this warranty, contact ZyXEL's Service Center for your Return Material Authorization number (RMA). Products must be returned Postage Prepaid. It is recommended that the unit be insured when shipped. Any returned products without proof of purchase or those with an out-dated warranty will be repaired or replaced (at the discretion of ZyXEL) and the customer will be billed for parts and labor. All repaired or replaced products will be shipped by ZyXEL to the corresponding return address, Postage Paid. This warranty gives you specific legal rights, and you may also have other rights that vary from country to country.

Registration

Register your product online to receive e-mail notices of firmware upgrades and information at www.zyxel.com for global products, or at www.us.zyxel.com for North American products.

H

Customer Support

Please have the following information ready when you contact customer support.

Required Information

- Product model and serial number.
- Warranty Information.
- Date that you received your device.
- Brief description of the problem and the steps you took to solve it.

"+" is the (prefix) number you dial to make an international telephone call.

Corporate Headquarters (Worldwide)

- Support E-mail: support@zyxel.com.tw
- Sales E-mail: sales@zyxel.com.tw
- Telephone: +886-3-578-3942
- Fax: +886-3-578-2439
- Web: www.zyxel.com, www.europe.zyxel.com
- FTP: ftp.zyxel.com, ftp.europe.zyxel.com
- Regular Mail: ZyXEL Communications Corp., 6 Innovation Road II, Science Park, Hsinchu 300, Taiwan

Costa Rica

- Support E-mail: soporte@zyxel.co.cr
- Sales E-mail: sales@zyxel.co.cr
- Telephone: +506-2017878
- Fax: +506-2015098
- Web: www.zyxel.co.cr
- FTP: ftp.zyxel.co.cr
- Regular Mail: ZyXEL Costa Rica, Plaza Roble Escazú, Etapa El Patio, Tercer Piso, San José, Costa Rica

Czech Republic

- E-mail: info@cz.zyxel.com
- Telephone: +420-241-091-350
- Fax: +420-241-091-359
- Web: www.zyxel.cz

- Regular Mail: ZyXEL Communications, Czech s.r.o., Modranská 621, 143 01 Praha 4 - Modrany, Ceská Republika

Denmark

- Support E-mail: support@zyxel.dk
- Sales E-mail: sales@zyxel.dk
- Telephone: +45-39-55-07-00
- Fax: +45-39-55-07-07
- Web: www.zyxel.dk
- Regular Mail: ZyXEL Communications A/S, Columbusvej, 2860 Soeborg, Denmark

Finland

- Support E-mail: support@zyxel.fi
- Sales E-mail: sales@zyxel.fi
- Telephone: +358-9-4780-8411
- Fax: +358-9-4780-8448
- Web: www.zyxel.fi
- Regular Mail: ZyXEL Communications Oy, Malminkaari 10, 00700 Helsinki, Finland

France

- E-mail: info@zyxel.fr
- Telephone: +33-4-72-52-97-97
- Fax: +33-4-72-52-19-20
- Web: www.zyxel.fr
- Regular Mail: ZyXEL France, 1 rue des Vergers, Bat. 1 / C, 69760 Limonest, France

Germany

- Support E-mail: support@zyxel.de
- Sales E-mail: sales@zyxel.de
- Telephone: +49-2405-6909-69
- Fax: +49-2405-6909-99
- Web: www.zyxel.de
- Regular Mail: ZyXEL Deutschland GmbH., Adenauerstr. 20/A2 D-52146, Wuerselen, Germany

Hungary

- Support E-mail: support@zyxel.hu
- Sales E-mail: info@zyxel.hu
- Telephone: +36-1-3361649
- Fax: +36-1-3259100
- Web: www.zyxel.hu
- Regular Mail: ZyXEL Hungary, 48, Zoldlomb Str., H-1025, Budapest, Hungary

India

- Support E-mail: support@zyxel.in
- Sales E-mail: sales@zyxel.in
- Telephone: +91-11-30888144 to +91-11-30888153
- Fax: +91-11-30888149, +91-11-26810715
- Web: http://www.zyxel.in
- Regular Mail: India - ZyXEL Technology India Pvt Ltd., II-Floor, F2/9 Okhla Phase -1, New Delhi 110020, India

Japan

- Support E-mail: support@zyxel.co.jp
- Sales E-mail: zyp@zyxel.co.jp
- Telephone: +81-3-6847-3700
- Fax: +81-3-6847-3705
- Web: www.zyxel.co.jp
- Regular Mail: ZyXEL Japan, 3F, Office T&U, 1-10-10 Higashi-Gotanda, Shinagawa-ku, Tokyo 141-0022, Japan

Kazakhstan

- Support: http://zyxel.kz/support
- Sales E-mail: sales@zyxel.kz
- Telephone: +7-3272-590-698
- Fax: +7-3272-590-689
- Web: www.zyxel.kz
- Regular Mail: ZyXEL Kazakhstan, 43 Dostyk Ave., Office 414, Dostyk Business Centre, 050010 Almaty, Republic of Kazakhstan

Malaysia

- Support E-mail: support@zyxel.com.my
- Sales E-mail: sales@zyxel.com.my
- Telephone: +603-8076-9933
- Fax: +603-8076-9833
- Web: http://www.zyxel.com.my
- Regular Mail: ZyXEL Malaysia Sdn Bhd., 1-02 & 1-03, Jalan Kenari 17F, Bandar Puchong Jaya, 47100 Puchong, Selangor Darul Ehsan, Malaysia

North America

- Support E-mail: support@zyxel.com
- Support Telephone: +1-800-978-7222
- Sales E-mail: sales@zyxel.com
- Sales Telephone: +1-714-632-0882
- Fax: +1-714-632-0858
- Web: www.zyxel.com

- Regular Mail: ZyXEL Communications Inc., 1130 N. Miller St., Anaheim, CA 92806-2001, U.S.A.

Norway

- Support E-mail: support@zyxel.no
- Sales E-mail: sales@zyxel.no
- Telephone: +47-22-80-61-80
- Fax: +47-22-80-61-81
- Web: www.zyxel.no
- Regular Mail: ZyXEL Communications A/S, Nils Hansens vei 13, 0667 Oslo, Norway

Poland

- E-mail: info@pl.zyxel.com
- Telephone: +48-22-333 8250
- Fax: +48-22-333 8251
- Web: www.pl.zyxel.com
- Regular Mail: ZyXEL Communications, ul. Okrzei 1A, 03-715 Warszawa, Poland

Russia

- Support: http://zyxel.ru/support
- Sales E-mail: sales@zyxel.ru
- Telephone: +7-095-542-89-29
- Fax: +7-095-542-89-25
- Web: www.zyxel.ru
- Regular Mail: ZyXEL Russia, Ostrovityanova 37a Str., Moscow 117279, Russia

Singapore

- Support E-mail: support@zyxel.com.sg
- Sales E-mail: sales@zyxel.com.sg
- Telephone: +65-6899-6678
- Fax: +65-6899-8887
- Web: http://www.zyxel.com.sg
- Regular Mail: ZyXEL Singapore Pte Ltd., No. 2 International Business Park, The Strategy #03-28, Singapore 609930

Spain

- Support E-mail: support@zyxel.es
- Sales E-mail: sales@zyxel.es
- Telephone: +34-902-195-420
- Fax: +34-913-005-345
- Web: www.zyxel.es
- Regular Mail: ZyXEL Communications, Arte, 21 5ª planta, 28033 Madrid, Spain

Sweden

- Support E-mail: support@zyxel.se
- Sales E-mail: sales@zyxel.se
- Telephone: +46-31-744-7700
- Fax: +46-31-744-7701
- Web: www.zyxel.se
- Regular Mail: ZyXEL Communications A/S, Sjöporten 4, 41764 Göteborg, Sweden

Thailand

- Support E-mail: support@zyxel.co.th
- Sales E-mail: sales@zyxel.co.th
- Telephone: +662-831-5315
- Fax: +662-831-5395
- Web: http://www.zyxel.co.th
- Regular Mail: ZyXEL Thailand Co., Ltd., 1/1 Moo 2, Ratchaphruk Road, Bangrak-Noi, Muang, Nonthaburi 11000, Thailand.

Ukraine

- Support E-mail: support@ua.zyxel.com
- Sales E-mail: sales@ua.zyxel.com
- Telephone: +380-44-247-69-78
- Fax: +380-44-494-49-32
- Web: www.ua.zyxel.com
- Regular Mail: ZyXEL Ukraine, 13, Pimonenko Str., Kiev 04050, Ukraine

United Kingdom

- Support E-mail: support@zyxel.co.uk
- Sales E-mail: sales@zyxel.co.uk
- Telephone: +44-1344-303044, 08707-555779 (UK only)
- Fax: +44-1344-303034
- Web: www.zyxel.co.uk
- FTP: ftp.zyxel.co.uk
- Regular Mail: ZyXEL Communications UK Ltd., 11 The Courtyard, Eastern Road, Bracknell, Berkshire RG12 2XB, United Kingdom (UK)

Index

Numerics

3G
  introduction 187
3G. see third generation 187
9600 baud 531

A

Access point
  See also AP.
access point 211
active protocol 320
  AH 320
  and encapsulation 320
  ESP 320
Address Assignment 427
address assignment 177
Advanced Encryption Standard
  See AES.
AES 750
AH 320
  and transport mode 321
ALG 473
  RTP 474
  SIP 476
  STUN 476
allocated budget 550, 586
alternative subnet mask notation 731
antenna
  directional 753
  gain 753
  omni-directional 753
anti-probing 260
AP 211
  See also access point.
AP (access point) 743
AP. see Access Point Name 191, 555
Application Layer Gateway. See ALG.
Applications 54
  broadband connection 54
applications 54
asymmetrical routes 250
  vs virtual interfaces 250
AT command 547, 648
authentication 586
authentication algorithms 305, 311
  and active protocol 305
Authentication Header. See AH.
authentication protocol 550, 556, 586
authentication type 191
  CHAP 191
  PAP 191

B

backup configuration 524, 648
  TFTP 650
bandwidth class 411
bandwidth filter 411
bandwidth management 411
  address type 422
  bandwidth borrowing 415
  bandwidth class 411
  bandwidth filter 411, 422
  class configuration 420
  class setup 419
  fairness-based scheduler 413
  maximize bandwidth usage 413, 418
  monitor 424
  priority-based scheduler 413
  proportional allocation 412
  root class 419
  scheduler 413, 418
  statistics 423
  sub-class layers 419
Basic Service Set, See BSS 741
baud 531
BPDU 160
bridge firewall 67, 161, 520
Bridge Protocol Data Unit. See BPDU.
broadcast 149
BSS 741
budget 586
budget management 663

C

CA 349, 748
call back delay 549
call control 663
call history 664
call scheduling 681
  max number of schedule sets 681
  PPPoE 683
  precedence 681
  setting up a schedule 682
call-triggering packet 643
certificate 315
Certificate Authority
  See CA.
certificates 349
  and IKE SA 307
  CA 349
  thumbprint algorithms 350
  thumbprints 350
  verifying fingerprints 350
Certification Authority. See CA.
certifications 765
  notices 766
  viewing 767
changing the password 537
Channel
  ID 225
channel 212, 743
  interference 743
CHAP 550, 556, 586
CNM 458
command interpreter mode 661
command line 649
commands
  FTP 649
computer names 150, 152
configuration backup 524, 648
  TFTP 650
configuration information 526
configuration restore 524, 652
  via console port 659
connection ID/name 587
console port 531, 637
  configuration upload 659
  data bits 531
  file backup 651
  file upload 658
  flow control 531
  parity 531
  restoring files 654
  settings 531
  speed 637, 638
  stop bit 531
contact information 769
content filter general 272
content filtering 271
  categories 271
  days and times 271
  filter list 271
  object 288
  policy 275
  restrict web features 271
  URL for blocked access 275
copyright 765
cost of transmission 170
CTS (Clear to Send) 744
custom ports 265
customer support 769

D

data bits 531
Data Terminal Ready. See DTR
date setting 513, 665
daylight saving 515, 667
Daytime time protocol 515
DDNS
  configuration 541
  host 543
  offline 543
  type 543
  use server detected IP 544
  wildcard 543
default configuration 59
default server IP address 394
default settings 525
Denial of Service. See DoS.
device introduction 53
DHCP 76, 149, 150, 436, 561
  Relay 561
  Server 561
  WAN 645
DHCP clients 512
DHCP table 76
diagnostic 644
diagnostics 526
dial backup
  AT command strings 197
  DTR signal 198
  response strings 198
dial timeout 549
Diffie-Hellman key group 306
  Perfect Forward Secrecy (PFS) 321

disclaimer 765
DMZ
IP alias setup 573
port filter setup 571
setup 571
TCP/IP setup 572
DNS 457
DNS Server
For VPN Host 428
DNS server address assignment 177
DNS service 395
domain name 511, 638
Domain Name System. See DNS.
DoS 239, 263
drop timeout 549
DSL modem 585
DTR 198, 548
Dynamic DNS 436, 437
Dynamic Host Configuration Protocol. See DHCP.
dynamic WEP key exchange 749
DYNDNS Wildcard 428, 436

E

EAP Authentication 747
ECHO service 395
Encapsulating Security Payload. See ESP.
encapsulation 566, 584, 587
and active protocol 320
transport mode 320
tunnel mode 320
VPN 320
encryption 222, 750
and local (user) database 223
key 223
WEP 230
encryption algorithms 305, 311
and active protocol 305
entering information 533
ESP 320
and transport mode 321
ESS 742
Ethernet
encapsulation 82, 565, 584
extended authentication 308
Extended Service Set, See ESS 742

F

F/W version 638
factory defaults 525
factory-default configuration file 59
FCC interference statement 765
feature specifications 695
file backup
console port 651
file maintenance
over WAN 650
file upload
console port 658
FTP 657
TFTP 657
Xmodem 659
filename conventions 647
filter 554, 571, 589, 617
and NAT 628
applying 629
configuration 617
configuring 620
DMZ 630
example 626
filter rule execution 618
generic filter rule 624
incoming protocol 563
IP filter logic flow 623
protocol 563
remote node 631
structure 618
Finger service 395
firewall
action for matched packets 260
activating 615
address type 259, 278
anti-probing 260
creating/editing rules 257
custom ports 265
DoS 263
Dos threshold 263
maximum incomplete high 263
maximum incomplete low 263
one minute high 263
one minute low 263
rules 239
rules for VPN 101, 105
service type 265
SMT menus 615
stateful inspection 239
TCP maximum incomplete 263
three-way handshake 261
threshold 262
VPN 105
when to use 629
firmware

file maintenance 647
upload 521
firmware upload 655
FTP 655
flow control 531
fragmentation threshold 744
FTP 436, 453
commands 649
file upload 657
firmware upload 655
GUI-based clients 650
restoring files 653
service 395

G

gateway IP address 567, 588, 593
general setup 511, 539
GMT 515
Greenwich Mean Time. See GMT.
Group Key Update Timer 234

H

H.323 474
RTP 474
Hello BPDU 161
hidden menus 533
hidden node 743
hide SSID 221
HTTP service 395
HTTPS 440
example 443
HyperTerminal 651, 654, 659, 660

I

IANA 148, 736
IBSS 741
iCard 143
idle timeout 550, 557, 586
IEEE 802.11g 745
IEEE 802.1x
installation requirements 223
IGMP 149, 150
version 149
IKE SA
aggressive mode 302, 308
and certificates 307
and RADIUS 308
authentication algorithms 305, 311
Diffie-Hellman key group 306
encryption algorithms 305, 311
extended authentication 308
ID content 307
ID type 307
IP address, remote IPSec router 303
IP address, ZyXEL device 303
local identity 307
main mode 302, 308
NAT traversal 309
negotiation mode 302
password 308
peer identity 307
pre-shared key 306
proposal 305
SA life time 310
user name 308
IKE SA. See also VPN.
incoming protocol filter 563
Independent Basic Service Set
See IBSS 741
initialization vector (IV) 750
Internet access setup 81, 565, 566
Internet Assigned Number Authority. See IANA.
Internet Assigned Numbers AuthoritySee IANA 736
Internet Protocol Security. See IPSec.
IP address
assignment 566, 588
pool 149, 152, 203, 214, 561
private 148
IP alias 563
IP alias setup 563
DMZ 573
IP policy routing 405, 673
IP protocol type 259
IP routing policy 673
IP static route 591
active 592
destination IP address 592
name 592
route number 592
IPSec 301
high availability 310
NAT over 319
IPSec SA
active protocol 320
authentication algorithms 305, 311
authentication key (manual keys) 333
encapsulation 320
encryption algorithms 305, 311
encryption key (manual keys) 333

local and remote network any 318
local policy 318
manual keys 333
misconfiguration 318
nail up 310
Perfect Forward Secrecy (PFS) 321
proposal 321
remote policy 318
SA life time 310
Security Parameter Index (SPI) (manual keys) 333
transport mode 320
tunnel mode 320
when IKE SA is disconnected 310, 318
IPSec SA. See also VPN.
IPSec. See also VPN.
ISP parameters 82

L

LAN 150
port filter setup 559
setup 559
license key 143
link type 69
load balancing 165
algorithms 166
introduction 166
load balancing method
least load first 166
spillover 168
weighted round robin 167
load sharing 165
loading a configuration file 524
local (user) database 221
and encryption 223
log 639
log and trace 639
log facility 640
login screen 532

M

MAC address 178, 221, 546
filter 235
MAC address filter 221
MAC service data unit 225
main menu commands 533
maintenance 511
Management Information Base. See MIB.
managing subscription services 141
managing the device
good habits 54
using FTP. See FTP.
using Telnet. See command interface.
using the command interface. See command interface.
Max Age 161
maximum incomplete high 263
maximum incomplete low 263
Media Access Control. See MAC address.
menu overview 535
Message Integrity Check (MIC) 750
metric 170, 404, 552, 586, 589, 593
MIB 455
MSDU. see MAC service data unit 225
multicast 149, 214, 552, 562, 589
multiple WAN 165
myZyXEL.com 141

N

nailed-up connection 586, 587
NAT 148, 385, 394, 396, 551, 567, 588, 589, 628, 736
and VPN 309
application 387
configuring 597
default server IP address 394
definitions 385
examples 605
how NAT works 386
in the SMT 595
inside global address 385
inside local address 385
Many to Many No Overload 388
Many to Many Overload 388
Many to One 388
mapping types 388
NAT unfriendly applications 610
One to One 388
ordering rules 600
over IPSec 319
port forwarding 394
port restricted cone 388
Server 389
server set 597
Single User Account 389
trigger port forwarding 612
what NAT does 386, 391
NAT traversal 309, 461
navigation panel 70
NBNS 150, 152

NetBIOS 152
NetBIOS Name Server. See NBNS.
Network Address Translation. See NAT.
Network Basic Input/Output System. See NetBIOS.
NNTP service 395
NTP time protocol 515

O

one minute high 263
one minute low 263
online services center 141
outgoing protocol filter 563
overlap in VPN 319

P

packet filtering 628
Pairwise Master Key (PMK) 750, 752
PAP 550, 556, 586
parity 531
password 57, 512, 532
path cost 160
Perfect Forward Secrecy. see PFS.
PFS 321
  Diffie-Hellman key group 321
PIN code 191, 555
PIN number 143
PIN. see Personal Identification Number 191, 555
ping 646
Point-to-Point Protocol over Ethernet 181
Point-to-Point Protocol over Ethernet. See PPPoE
Point-to-Point Tunneling Protocol. See PPTP.
policy routing 405, 673
  benefits 405
  cost savings 405
  criteria 405
  load sharing 405
policy-based routing 405
pool of IP addresses 149, 152
POP3 service 395
port filter setup
  DMZ 571
  LAN 559
port forwarding 394
port restricted cone NAT 388
port statistics 74
PPPoE
  client 568
  encapsulation 83, 181, 565, 569, 584, 585, 586
  idle timeout 569
PPTP 84, 184
  Client 567
  configuring a client 567
  encapsulation 84, 184, 586
  idle timeout 568
  service 395
preamble mode 745
precedence 405
pre-shared key 234
private 404, 552, 589, 593
private IP address 148, 177
product overview 53
product registration 767
protocol filter 563
  incoming 563
  outgoing 563
PSK 750

Q

QoS 405
Quality of Service. See QoS.

R

RADIUS 746
  and IKE SA 308
  message types 747
  messages 747
  shared secret key 747
RADIUS server 221
Rapid Spanning Tree Protocol. See Rapid STP.
Rapid STP 160
Real time Transport Protocol. See RTP.
registering your ZyWALL 142
registration
  product 767
related documentation 3
reload factory-default configuration file 59
remote management 440, 669
  CNM 458
  DNS 457
  FTP 453
  how SSH works 447
  HTTPS 440

HTTPS example 443
limitations 440, 671
secure FTP using SSH 451
secure telnet using SSH 450
SNMP 454
SSH 447
SSH implementation 448
system timeout 440
Telnet 452
WWW 441
remote node 583
filter 554, 589
reports 487
host IP address 488, 489
protocol/port 488, 490
web site hits 488, 489
required fields 533
reset button 59
resetting the time 516
resetting the ZyWALL 59
restore configuration 524, 652
via console port 659
restoring factory defaults 525
restoring files
via console port 654
via FTP 653
retry count 549
retry interval 549
RFC 1058. See RIP.
RFC 1305. See NTP time protocol.
RFC 1389. See RIP.
RFC 1466. See IP address.
RFC 1597. See private IP address.
RFC 1631. See NAT.
RFC 1889. See RTP.
RFC 2131. See DHCP.
RFC 2132. See DHCP
RFC 2402. See AH.
RFC 2406. See ESP.
RFC 3489. See STUN.
RFC 867. See Daytime time protocol.
RFC 868. See Time protocol.
RIP 149, 552, 562, 563, 589
direction 149, 563
version 149, 563, 589
route priority 170
routing 405
Routing Information Protocol. See RIP.
routing policy 405, 673
RSTP 160
RTC 513, 665
RTP 474
RTS (Request To Send) 744
threshold 743, 744
RTS/CTS handshake 225

S

SA
life time 310
safety warnings 6
schedule 585, 587
duration 682
scheduler 413
screws 697
secure FTP using SSH 451
secure Telnet using SSH 450
security associations. See VPN.
security settings for VPN traffic 101
server set 597
Service Set 225
Service Set IDentification. see SSID 225
Service Set IDentity. See SSID.
service type 265, 566, 584
services 141, 395
Session Initiation Protocol. See SIP.
Simple Traversal of User Datagram Protocol (UDP) through Network Address Translators. See STUN.
Single User Account. See SUA.
SIP 476
RTP 474
SIP ALG 473
skip VPN overlap 319
SMT 531
changing the password 537
entering information 533
general setup 539
hidden menus 533
initial screen 531
login screen 532
main menu commands 533
menu overview 535
navigation 532
password 532
required fields 533
SMTP service 395
SNMP 454
community 633
configuration 633
Get 455
GetNext 455
manager 455
MIB 455

password 633
Set 455
Trap 455
trusted host 633
SNMP service 395
source address 259, 278
source-based routing 405
Spanning Tree Protocol. See STP.
SSH 447
how SSH works 447
implementation 448
SSID 212
hide 221
SSID profile 226
stateful inspection firewall 239
static route 591
static WEPkey 229
stop bit 531
STP 160
BPDU 160
Hello BPDU 161
how it works 160
Max Age 161
port states 161
STUN 476
SUA 595
subnet 729
subnet mask 147, 730
subnetting 732
subscription services 141
syntax conventions 4
syslog logging 640
system
information 635
maintenance 635
name 511, 539
status 635
timeout 440
System Management Terminal. See SMT.

T

target market 53
TCP maximum incomplete 263
TCP/IP 587
and DHCP Ethernet setup 560
filter rule 622
setup 562
TCP/IP priority 170
Telnet 452
Temporal Key Integrity Protocol (TKIP) 750
terminal emulation 531
TFTP
configuration backup 650
file upload 657
GUI-based clients 651
threshold 262
time 513
and date setting 665
Daylight Saving Time 515
resetting 516
synchronization with server 516
zone 515, 667
Time protocol 515
time protocol 515
Daytime 515
NTP 515
Time 515
time setting 665
timeout
system 440
ToS 405
trace 639
trademarks 765
traffic
redirect 193
transparent firewall 67, 161, 520
triangle routes 250
vs virtual interfaces 250
trigger port forwarding 612
Trivial File Transfer Protocol. See TFTP.
troubleshooting 526
Type of Service. See ToS.

U

unicast 149
Universal Plug and Play. See UPnP.
upgrading firmware 521
upload 659
firmware 655
UPnP 461, 462
examples 464
forum 462
NAT traversal 461
port mapping 463
UPnP Implementers Corp. 462
user authentication 221
local (user) database 221
RADIUS server 221
weaknesses 222
user profiles 379

V

Vantage CNM 458
virtual address mapping 319
virtual address mapping over VPN 323
virtual interfaces
  vs asymmetrical routes 250
  vs triangle routes 250
Virtual Private Network. See VPN.
VPN 184, 301
  active protocol 320
  adjust TCP maximum segment size 341
  and NAT 309
  and the firewall 101
  avoiding overlap 319
  certificate 315
  established in two phases 302
  gateway policy 90, 303, 304, 312
  high availability 310
  IKE SA. See IKE SA.
  IPSec 301
  IPSec SA. See IPSec SA.
  local and remote network any 318
  local and remote overlap 319
    avoiding 319
  local network 301
  local policy 318
  misconfiguration 318
  NAT 319
  network policy 92, 303, 304, 321
  overlap 319
  pre-shared key 315
  proposal 305
  remote IPSec router 301
  remote network 301
  remote policy 318
  security associations (SA) 302
  security on traffic 101
  skip overlap 319
  virtual address mapping 319, 323
VPN. See also IKE SA, IPSec SA.
VT100 terminal emulation 531

W

WAN
  file maintenance 650
WAN DHCP 645
WAN IP address 177
WAN setup 545, 555
warranty 767
  note 767
web configurator 57
web site hits 488, 489
WEP key 229
Wi-Fi Protected Access 749
Windows Internet Naming Service. See WINS.
WINS 150, 152
WINS server 152
wireless client 211
wireless client WPA supplicants 751
wireless LAN
  introduction 211
wireless network
  basic guidelines 211
  channel 212
  encryption 222
  example 211
  MAC address filter 221
  overview 211
  security 212
  SSID 212
wireless security 212, 745
  IEEE 802.1x 230
  none 228
  overview 220
  static WEP 229
  type 220
  WPA/WPA2 232
  WPA-PSK/WPA2-PSK 233
wireless technologies comparison 188
wizard setup 81
WLAN
  interference 743
  IP alias 580
  security parameters 752
  setup 579
  TCP/IP setup 580
WPA 749
  group key update timer 234
  key caching 750
  pre-authentication 750
  user authentication 750
  vs WPA-PSK 750
  wireless client supplicant 751
  with RADIUS application example 751
WPA2 749
  user authentication 750
  vs WPA2-PSK 750
  wireless client supplicant 751
  with RADIUS application example 751
WPA2-Pre-Shared Key 749
WPA2-PSK 749, 750
  application example 751
WPA-PSK 749, 750
  application example 751
WWW 441
www.dyndns.org 543

X

Xmodem **659**
file upload **659**
protocol **648**

Z

ZyNOS **638**, **648**
ZyWALL registration **142**
ZyXEL's Network Operating System. See ZyNOS.